

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 09/26/2023

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM:181369 ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME	15 MINUTES				
PARTS IDENTIFICATION					

Α	BACKREST		1PC
В	SWIVEL PLATE WITH FRAME		1PC
С	UPPER LEG		1PC
D	LOWER LEG	The second se	1PC
Е	FOOTREST		1PC
F	SEAT CUSHION		1PC

HARDWARE IDENTIFICATION


1	BOLT (M6 x45MM - BLK)		14PCS
2	LOCK WASHER (1/4" - BLK)		14PCS
3	FLAT WASHER (1/4"x 16MM - BLK)	\bigcirc	10PCS
4	FLAT HEAD SCREW (M4 x 32MM - BLK)	Accesses	4PC
5	ALLEN WRENCH (M4 x 65MM - BLK)		1PC

NOTE:

Quantities shown are for one stool.

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



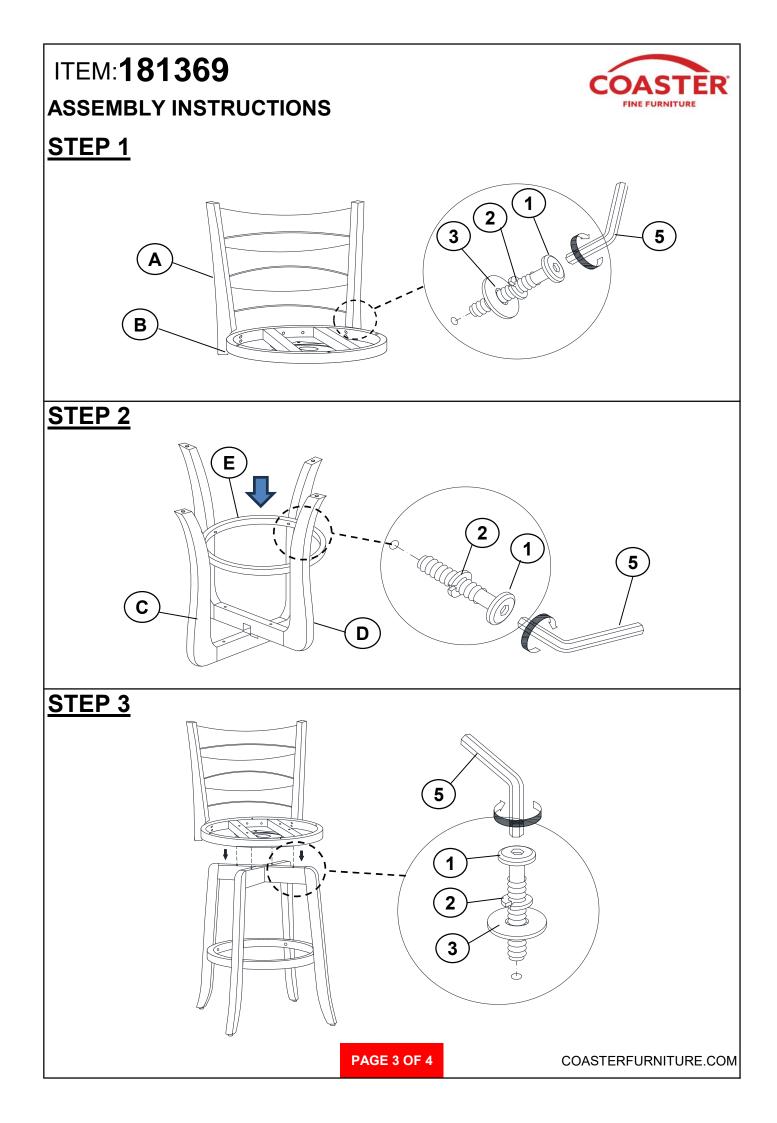


ITEM:181369


ASSEMBLY INSTRUCTIONS



<u>STEP 4</u>

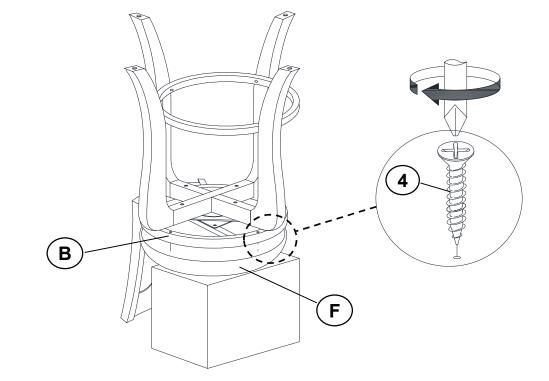


<u>STEP 5</u> COMPLETE

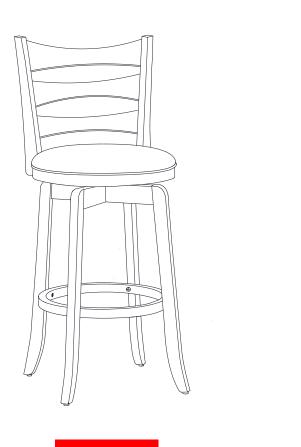



PAGE 4 OF 4

COASTERFURNITURE.COM

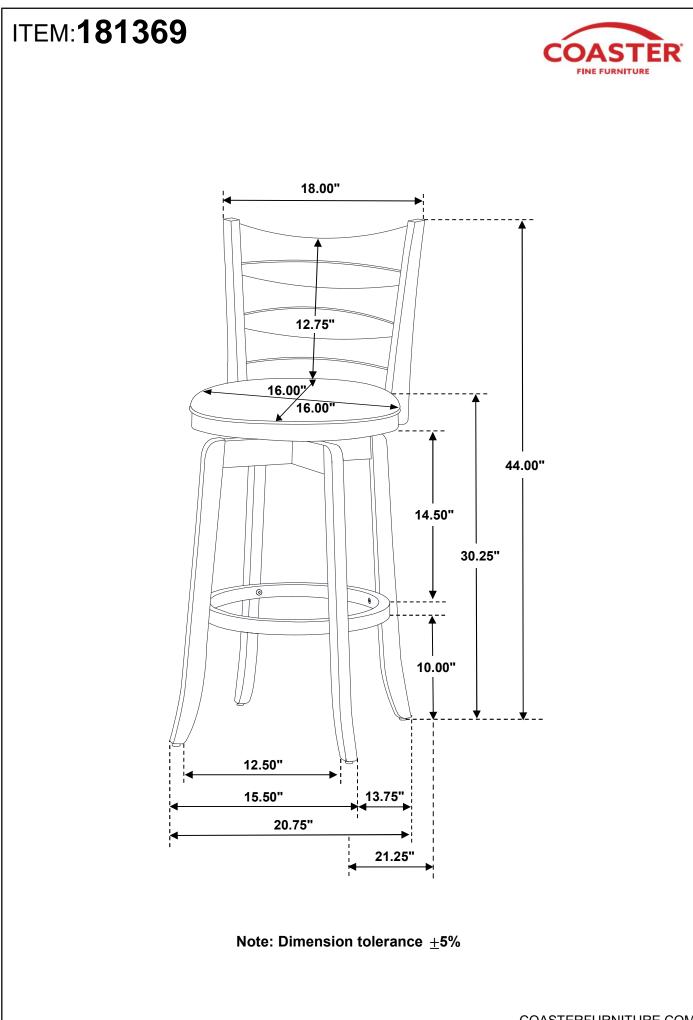

COASTERFURNITURE.COM