

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108521(B1&B2) *Dining Table*

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A TOP 1PC

B LEAF 1PC

C MOUNTING PLATE 2PCS

B2 (BOX 2)

D LEG WITH LABEL "R" 2PCS

E LEG WITH LABEL "L" 2PCS

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 108521 (B1)

1	ALLEN WRENCH	1PC
•	(M4 x 58mm - RBW)	IFC

2 BOLT (5/16" x 50mm - RBW) 24PCS

3 LOCK WASHER (5/16" - RBW) 24PCS

4 FLAT WASHER (5/16" - RBW) 24PCS

5 METAL BRACKET
(238mm x 35mm x 5mm - RBW)
2PCS


PAGE 2 OF 4

COASTERFURNITURE.COM







STEP 1

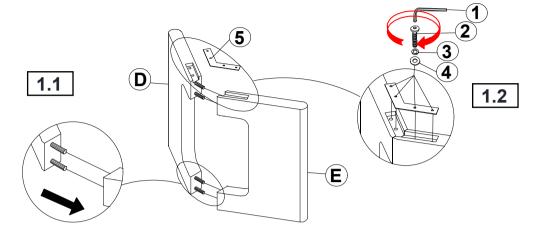

STEP 2

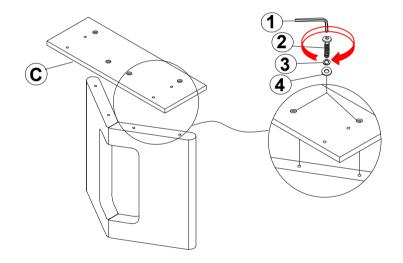

STEP 3

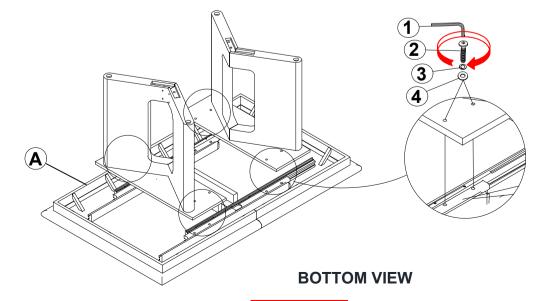


PAGE 3 OF 4

COASTERFURNITURE.COM




ASSEMBLY INSTRUCTIONS


STEP 4

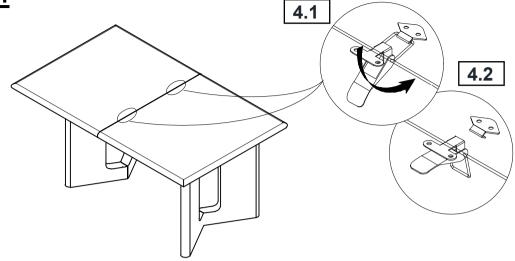

STEP 5

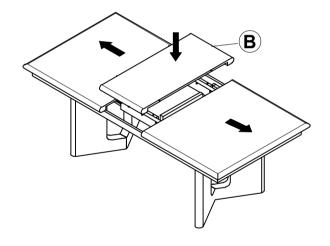


STEP 6 COMPLETE

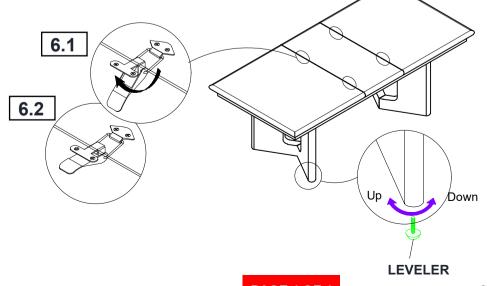

COASTERFURNITURE.COM

PAGE 4 OF 4



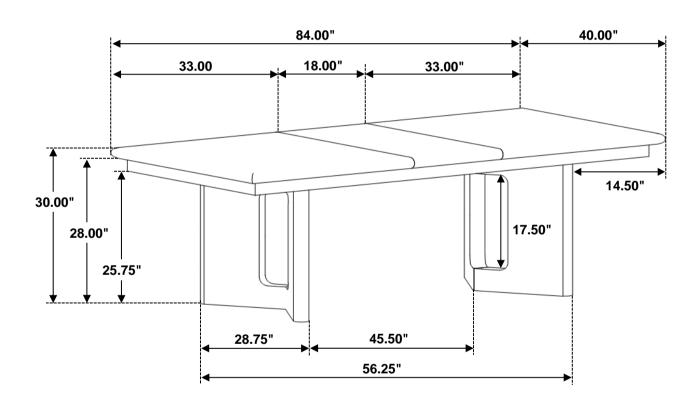

Note: Dimension tolerance ±5%