



**ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE**



Fine Furniture for every stage of life

503959

OTTOMAN

ITEM : 503959



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A	OTTOMAN		1PC
B	LEG		4PCS


HARDWARE IDENTIFICATION

1	ALLEN WRENCH - BLK	5 x 23 x 73mm		1PC
2	BOLT - BLK	M6 x 20mm		16PCS
3	WASHER - BLK	M6 16 x 16 x 1mm		16PCS


ITEM : 503959
ASSEMBLY INSTRUCTIONS
STEP 1

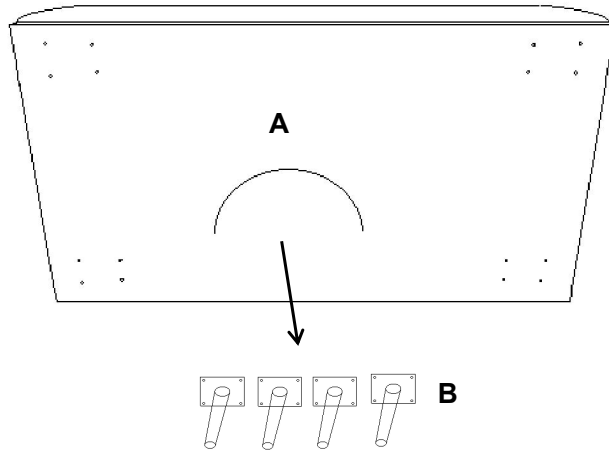


STEP 2

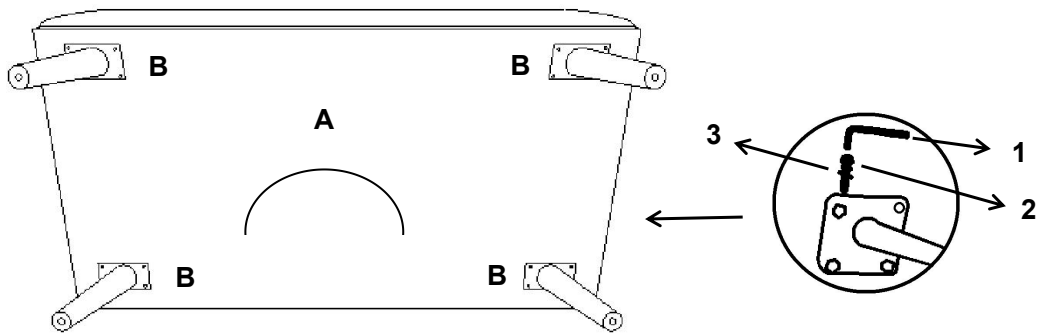

STEP 3

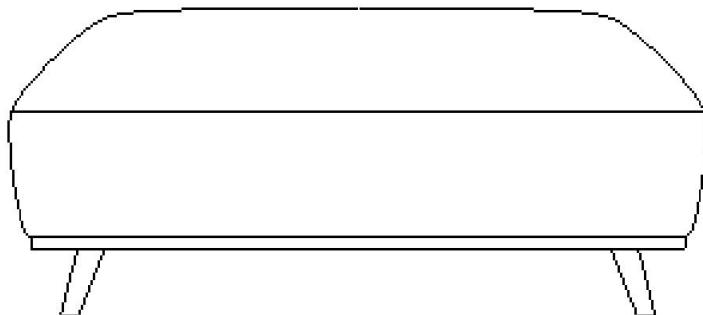

ITEM : 503959

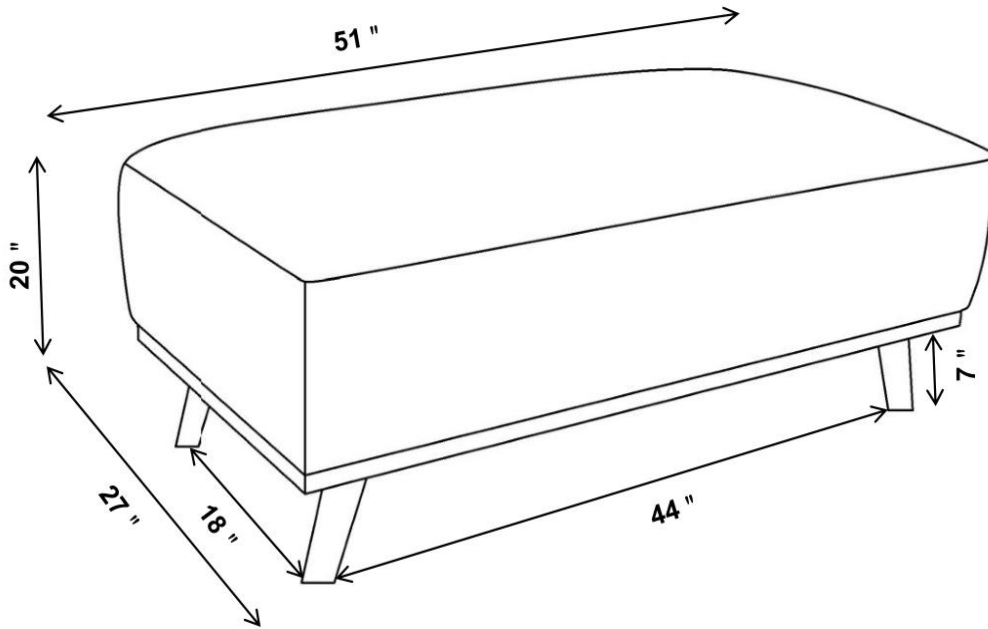

NOTE: Dimension tolerance $\pm 5\%$

