


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

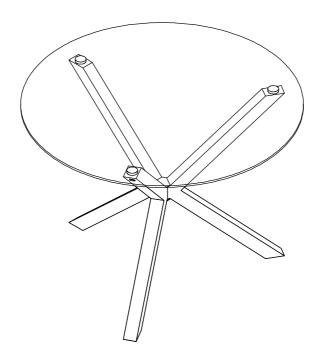

Fine Furniture for every stage of life

### 120760 DINING TABLE

REVISION 0 : 12/12/2019 REVISION 1 : 08/21/2023 REVISION 2 : 06/25/2024

PAGE 1 OF 5

COASTERFURNITURE.COM

## ITEM:120760 ASSEMBLY INSTRUCTIONS



 
#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME 15 MINUTES

#### PARTS IDENTIFICATION

B1: TOP

AN GLASS TOP

B2: BASE


BN METAL LEG

CN TRIANGLE TOP COVER

DN TRIANGLE BOTTOM COVER

1PC

#### ZN HARDWARE IDENTIFICATION

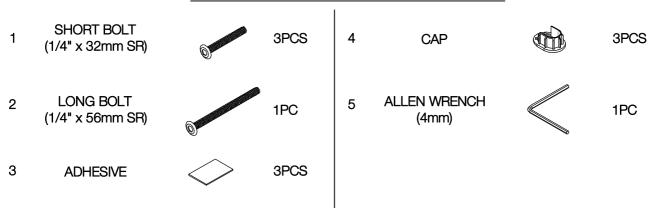

HARDWARE PACK IS LOCATED IN 120760 (B2)


PAGE 2 OF 5

COASTERFURNITURE.COM

## ITEM:120760 ASSEMBLY INSTRUCTIONS




STEP 1 Do not tighten until each step is completed or instructed.

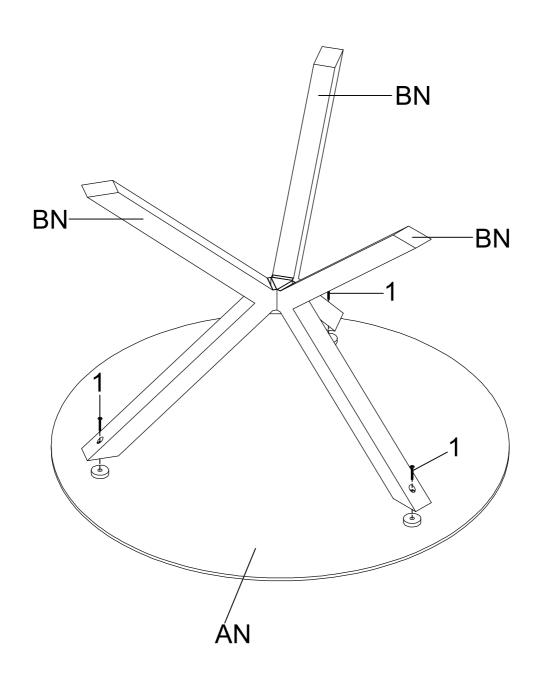

# ITEM:120760 ASSEMBLY INSTRUCTIONS STEP 2



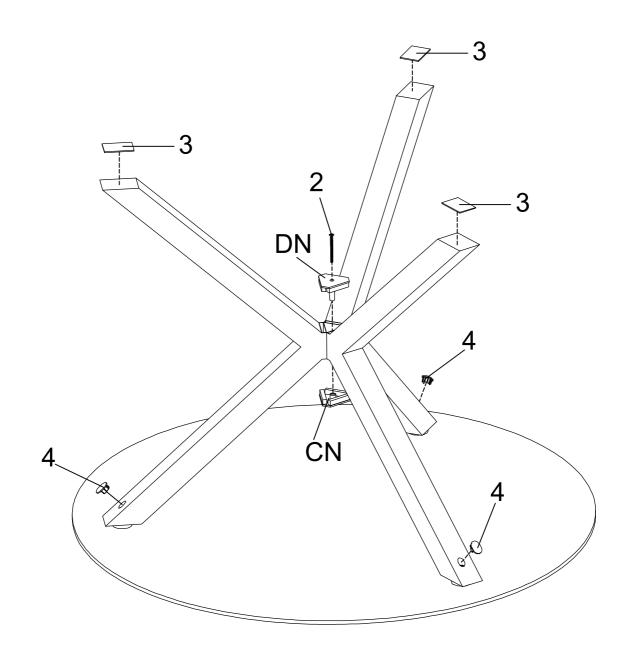




## ITEM:120760 ASSEMBLY INSTRUCTIONS



Product Size: 1048 DIA X 762H (MM)

**Product Size: 41.25" DIA X 30"** 

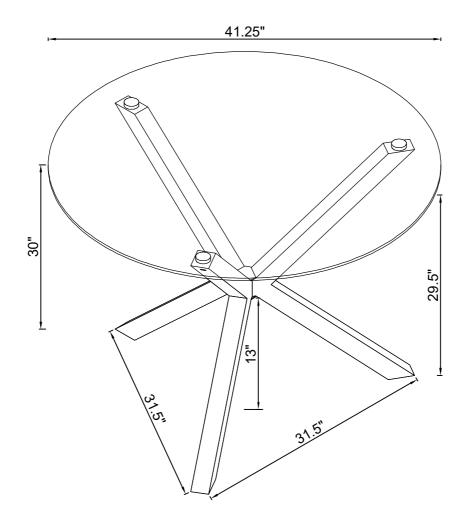

Note: Dimension tolerance ±5%