


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

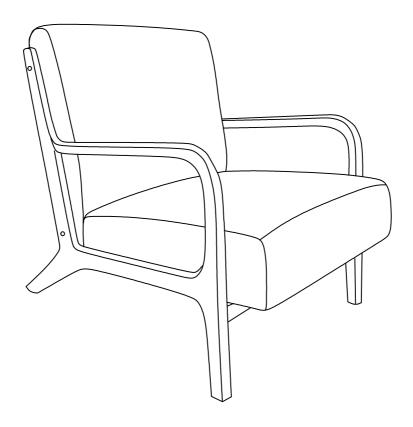

Fine Furniture for every stage of life

902272 Accent Chair

REVISION 0: 04/09/2024

PAGE 1 OF 6

COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly. WARNING!




- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

Z HARDWARE IDENTIFICATION

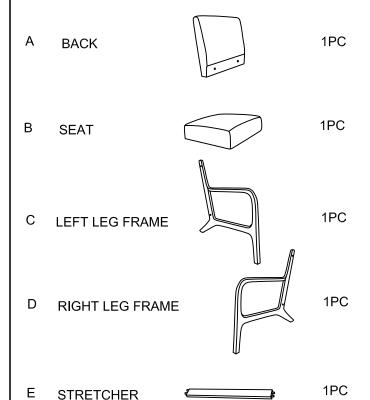


NO	DESCRIPTION	FIGURE	Q' TY
1	LOCK WASHER 5/16"	0	2PCS
2	FLAT WASHER 5/16"	0	2PCS
3	LOCK WASHER 1/4"	0	4PCS
4	FLAT WASHER 1/4"*19mm	0	4PCS
5	FLAT WASHER 1/4"*13mm	0	4PCS
6	BOLT 1/4X2"		8PCS
7	BOLT 5/16X2"		2PCS
8	ALLEN KEY 5mm		1PC
9	ALLEN KEY 4mm		1PC
10	SCREW	→	2PCS
11	WOOD CAP	0	4PCS


COASTER° FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP: 1

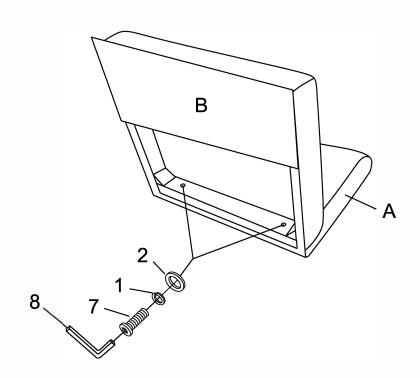


STEP: 2

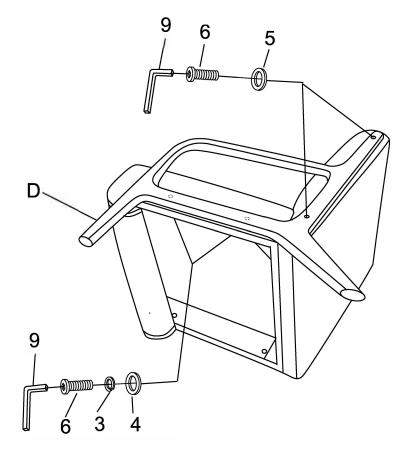


COASTER° FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP: 3

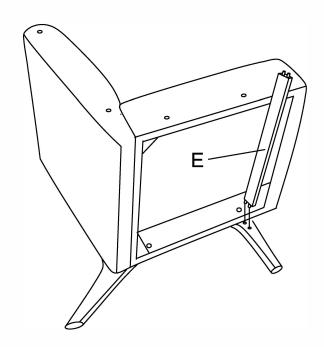

STEP: 4

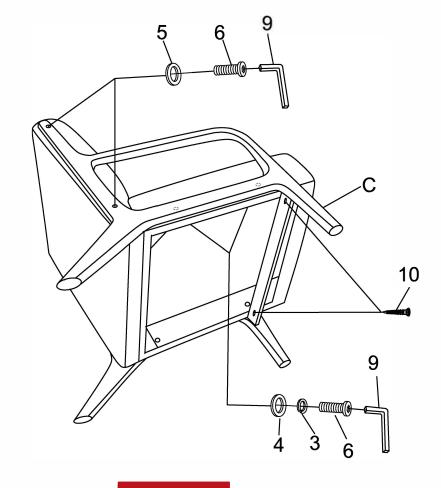


ASSEMBLY INSTRUCTIONS




STEP:5

COMPLETE

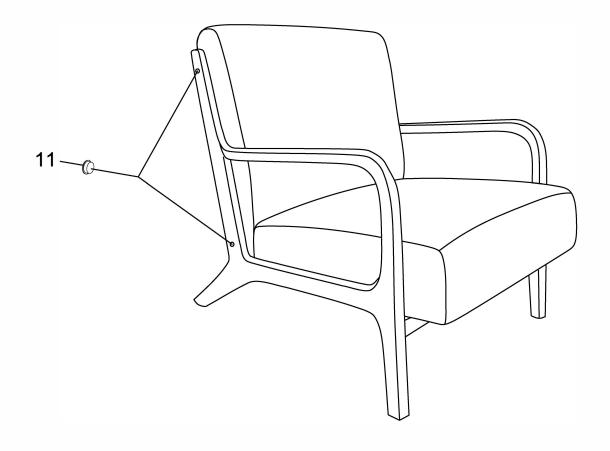

ASSEMBLY INSTRUCTIONS



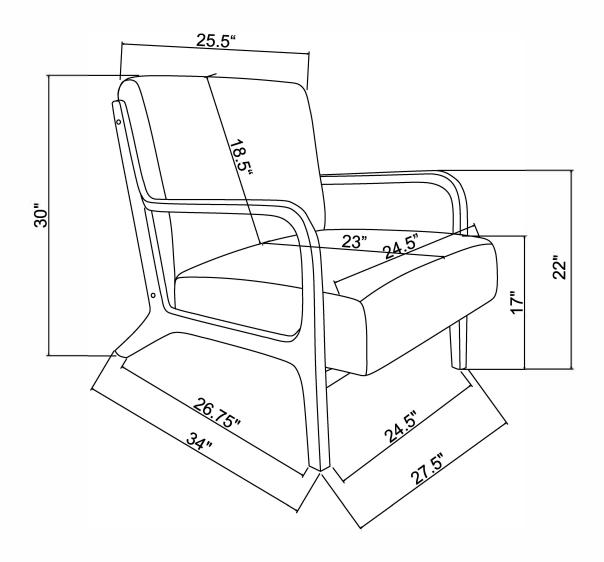

Note: Dimension tolerance ±5%