

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

## 980074 WALL SHELF

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

40 MINUTES

#### **PARTS IDENTIFICATION**

A	TOP LEFT POST	81 81 EI	1 PC
В	TOP RIGHT POST		1PC
С	BOTTOM POST		2 PCS
D	SHELF	and the second s	4 PCS
E	BOTTOM FRAME		1 PC
F	TOP PANEL		1 PC
G	BACK PANEL		1 PC
н	LEFT PANEL		1 PC
I	RIGHT PANEL		1 PC

#### **ASSEMBLY INSTRUCTIONS**



### **PARTS IDENTIFICATION**

J	BOTTOM PANEL	1 PC
K	LARGE DRAWER FRONT PANEL	1 PC
L	LARGE DRAWER LEFT SIDE PANEL	1 PC
M	LARGE DRAWER RIGHT SIDE PANEL	1 PC
N	LARGE DRAWER BACK PANEL	1 PC
0	LARGE DRAWER BOTTOM PANEL	1 PC
Р	SMALL DRAWER BOTTOM PANEL	1 PC
Q	SMALL DRAWER FRONT PANEL	1 PC
R	SMALL DRAWER LEFT SIDE PANEL	1 PC
s	SMALL DRAWER RIGHT SIDE PANEL	1 PC
Т	SMALL DRAWER BACK PANEL	1 PC
U	HANGING FILE BAR	3 PCS

**PAGE 3 OF 13** 

COASTERFURNITURE.COM

## COASTER

#### **ASSEMBLY INSTRUCTIONS**

#### Z HARDWARE IDENTIFICATION

1	SHORT BOLT (1/4" x 15mm - BLK)		24 PCS
2	SHORT PAN HEAD SCREW ( Ø8 x 26mm - BLK )		2 PCS
3	LONG PAN HEAD SCREW ( Ø8 x 52mm - BLK )		2 PCS
4	FLAT WASHER ( Ø12 x 1mm - BLK )		2 PCS
5	FLAT HEAD SCREW (Ø7 x 28mm - BLK)		16 PCS
6	PLASTIC ANCHOR ( Ø14 x 43mm - WHT )	ODD	4 PCS
7	LONG BOLT ( 1/4" x 28mm - BLK )		4 PCS
8	FLAT WASHER (Ø16 x 2mm - BLK)		4 PCS
9	LOCK WASHER ( Ø10.7 x 1.5mm - BLK )		4 PCS

#### **ASSEMBLY INSTRUCTIONS**




#### Z HARDWARE IDENTIFICATION


10	CAM BOLT (∅6.5 x 33mm - SR)	8 PCS
11	CAM NUT (∅15 x 12mm - SR)	4 PCS
12	CAM NUT (Ø11.7 x 10.5mm - SR)	4 PCS
13	WOOD DOWEL ( Ø8 x 30mm )	2 PCS
14	WOOD DOWEL ( Ø7 x 25mm )	6 PCS
15	HANDLE ( 137 x 30 x 10mm - BLK )	2 PCS
16	HANDLE WITH SCREW ( Ø8.5 x 25mm - BLK )	4 PCS
17	ALLEN WRENCH (4mm x 108mm - SR)	1 PC
18	LEVELER (Ø24 x 22mm - BLK)	2 PCS



# ASSEMBLY INSTRUCTIONS STEP 1

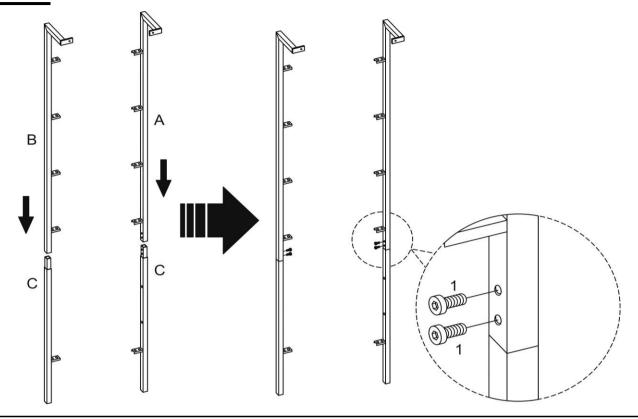



#### STEP 2

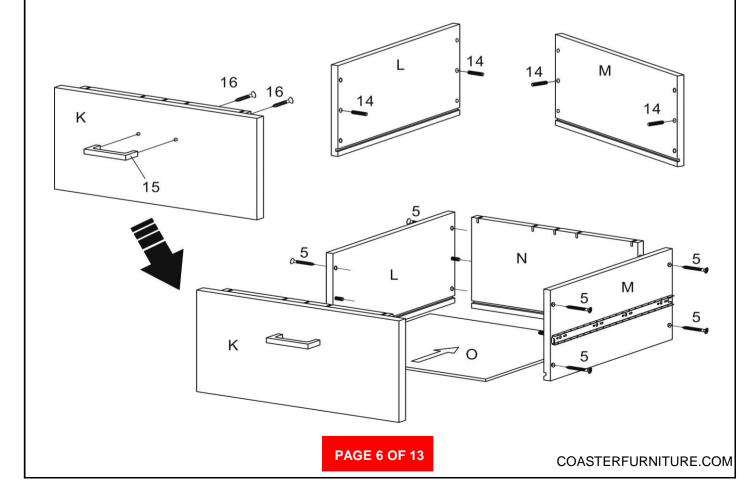

# COASTER

# ASSEMBLY INSTRUCTIONS STEP 3

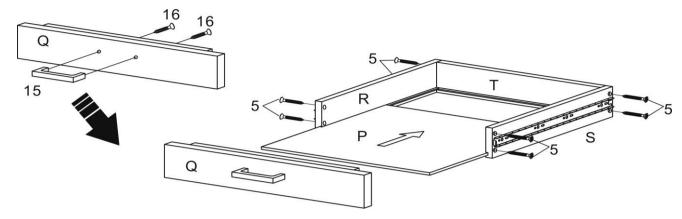


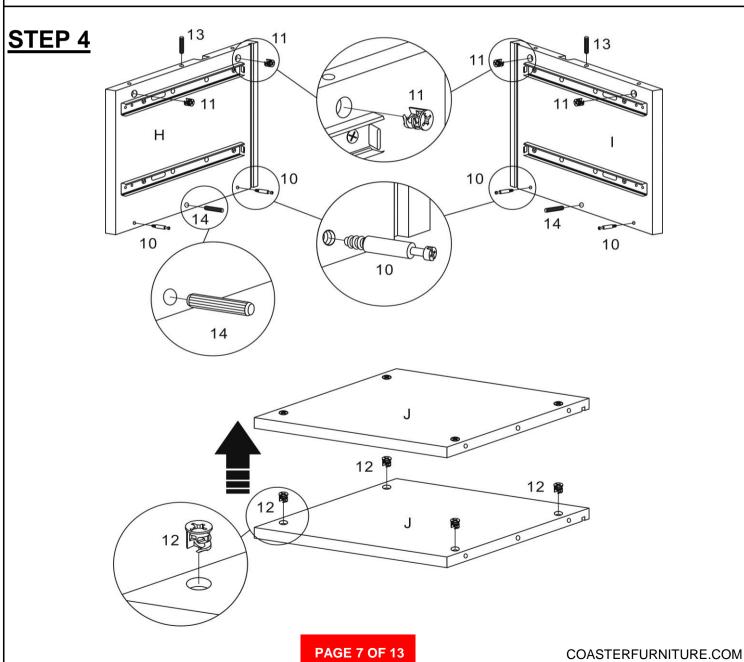

COASTER

ASSEMBLY INSTRUCTIONS

STEP 5

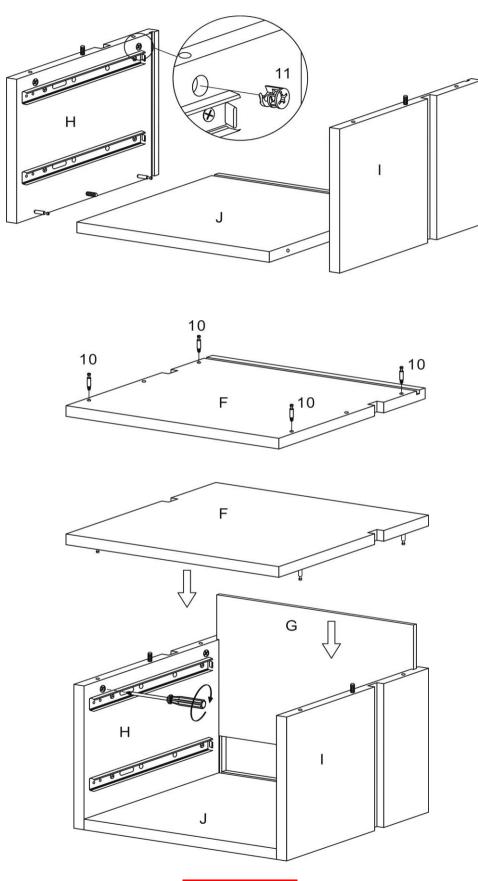


PAGE 8 OF 13


COASTERFURNITURE.COM




# ASSEMBLY INSTRUCTIONS STEP 6

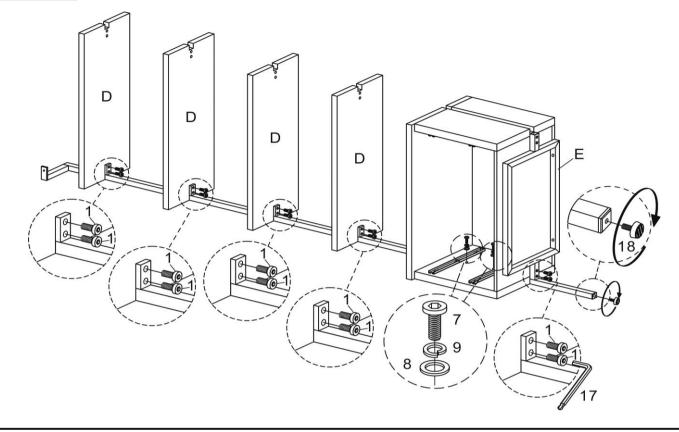



### STEP 7

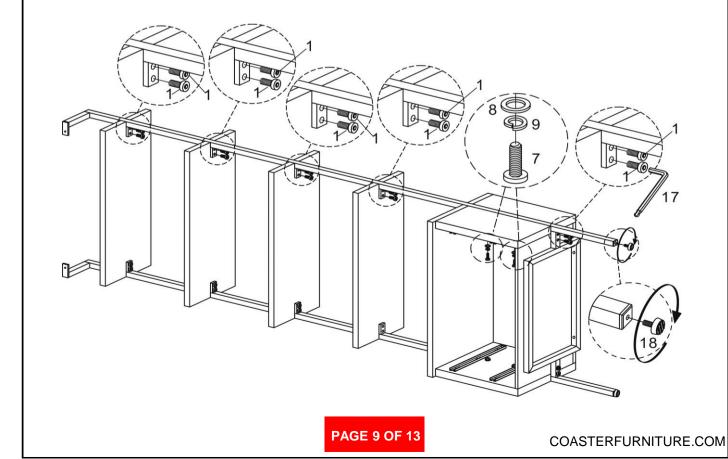

# ITEM:980074 ASSEMBLY INSTRUCTIONS STEP 8 wall

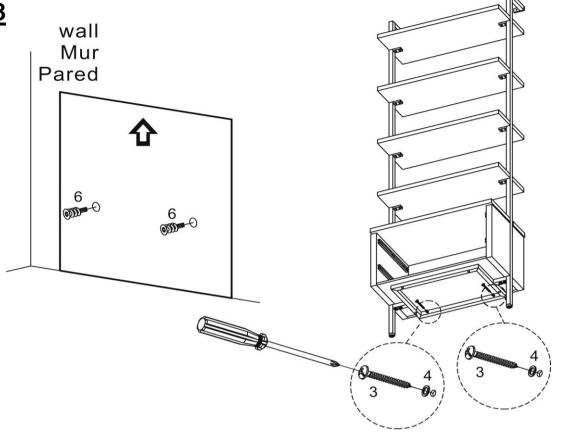


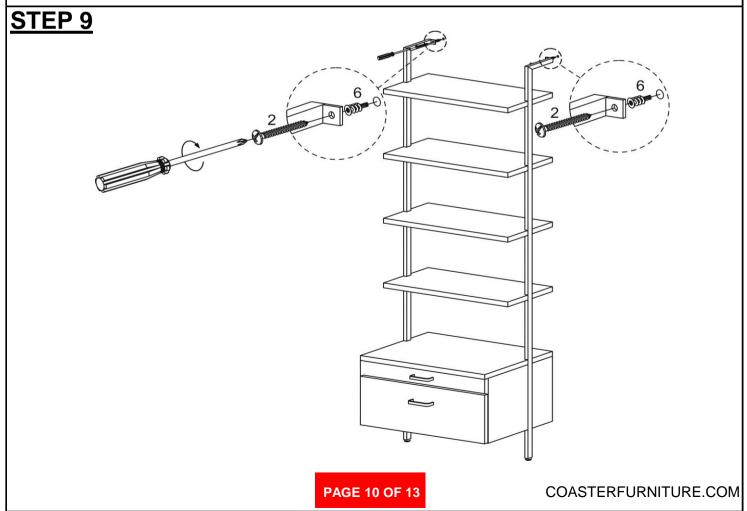

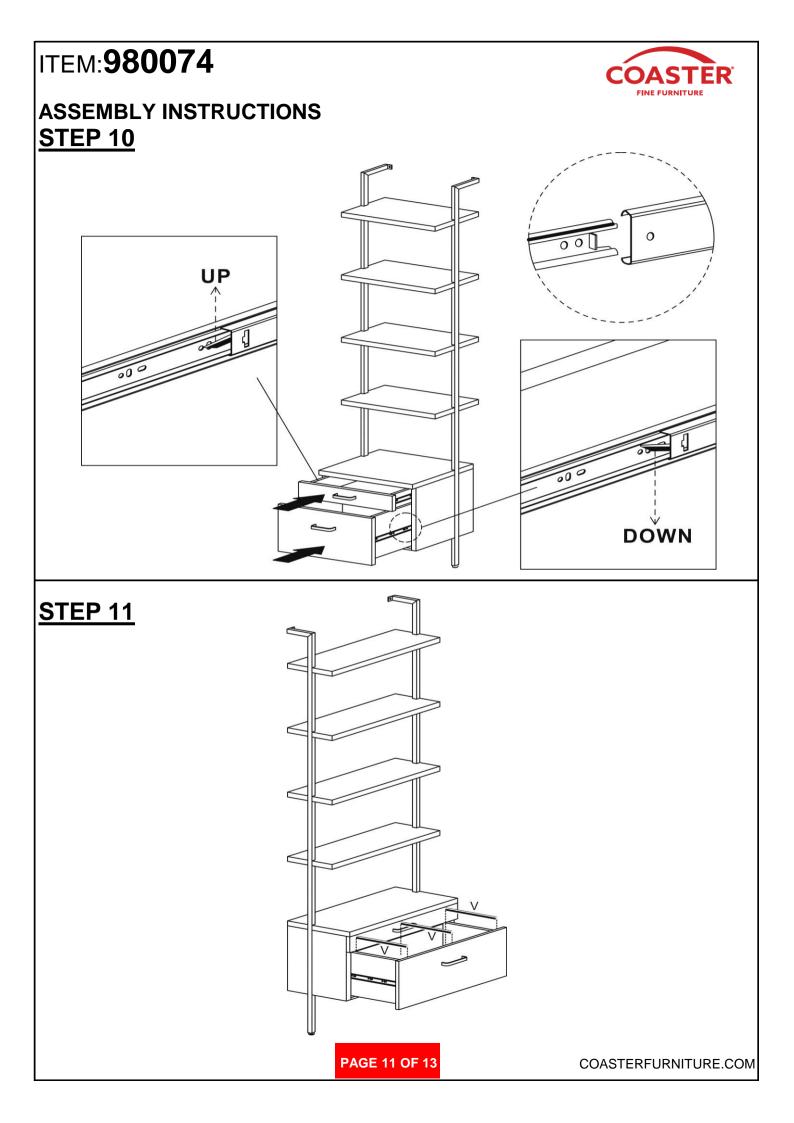


# COASTER

#### STEP 12 COMPLETE

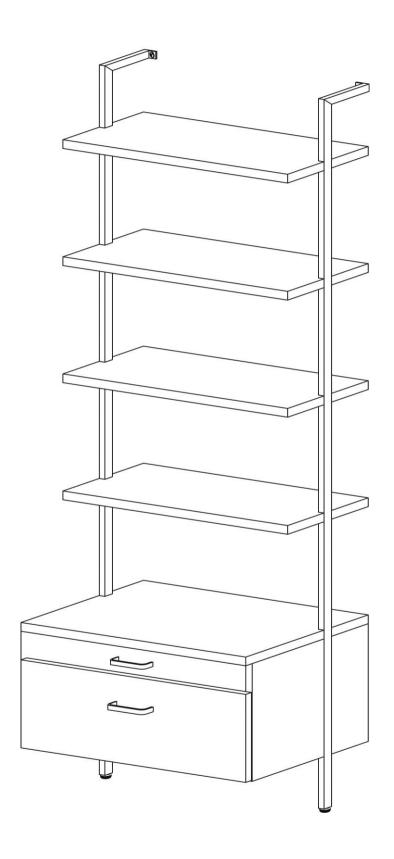





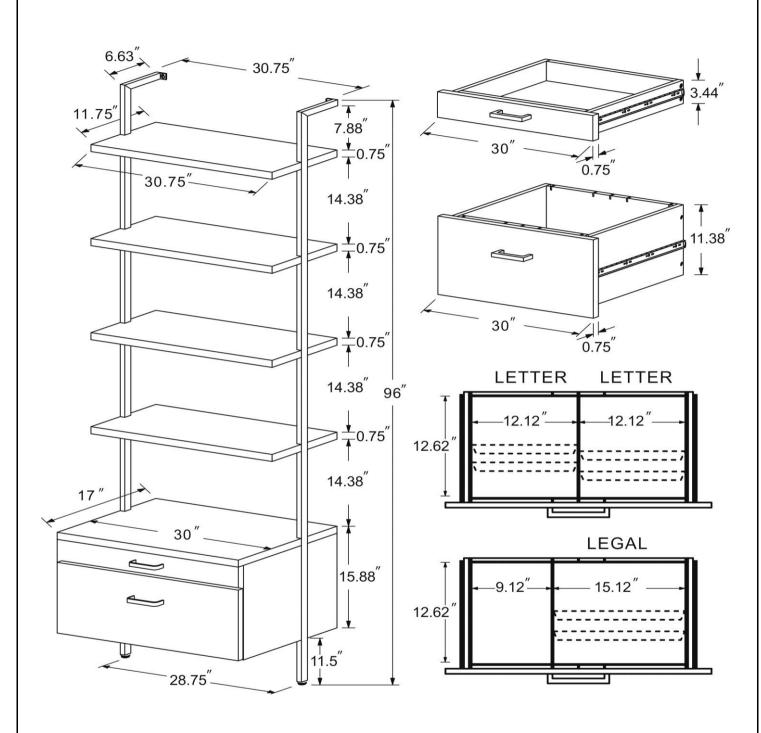

Note: Dimension tolerance ±5%

**PAGE 13 OF 13** 

COASTERFURNITURE.COM