

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108570 *Round Dining Table*

PAGE 1 OF 5

COASTERFURNITURE.COM

COASTER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME


20 MINUTES

PARTS IDENTIFICATION


Α	ТОР) 1PC
В	LEG	(<u>o</u> o)	4PCS
С	UPPER CROSSBAR	-	1PC
D	LOWER CROSSBAR		1PC
HARDWARE IDENTIFICATION			
1	ALLEN WRENCH (M5 x 65mm - BLK)		1PC
2	SHORT BOLT (M8 x 50mm - RBW)		1PC
3	LONG BOLT (M8 x 70mm - RBW)		8PCS
4	LOCK WASHER (M8 - RBW)		13PCS
5	FLAT WASHER (M8 - RBW)		12PCS
6	WRENCH (13mm)		1PC
7	HEX NUT (M8 - RBW)		4PCS
8	PLASTIC DOWEL (M8 x 30mm - BLK)		4PCS
		PAGE 2 OF 5	COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS STEP 1

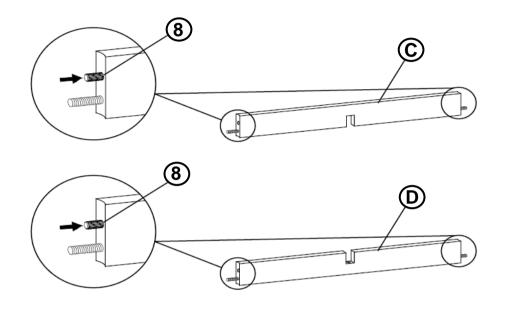


STEP 2

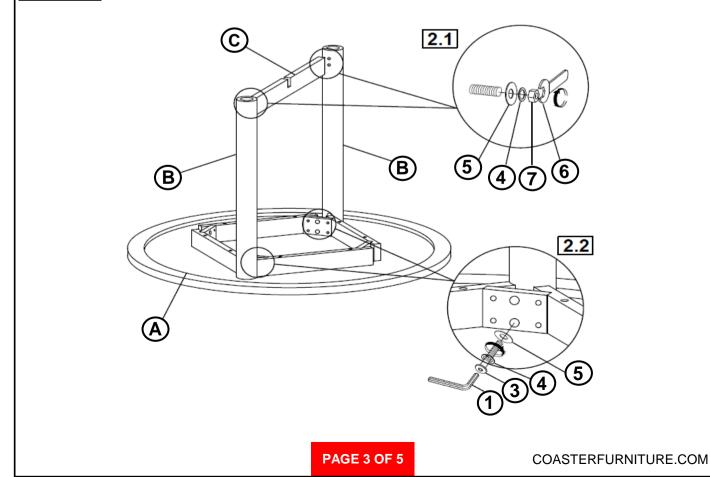




ASSEMBLY INSTRUCTIONS STEP 3

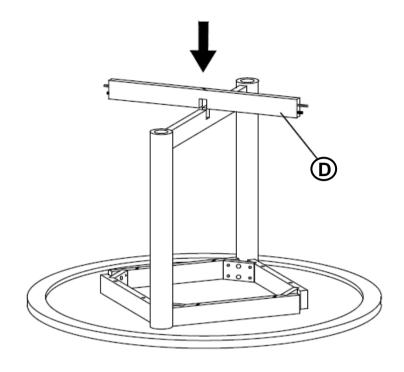


STEP 4

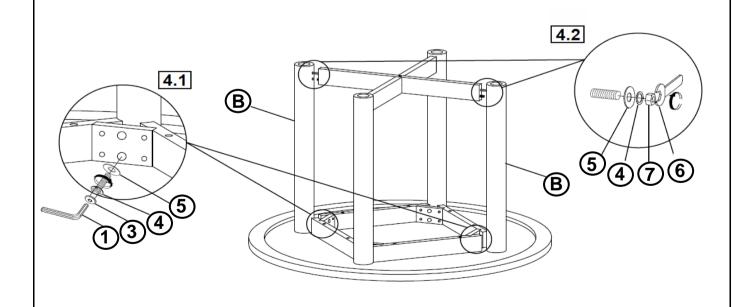




ASSEMBLY INSTRUCTIONS STEP 5

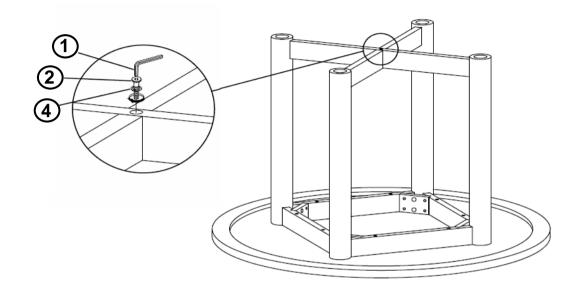


STEP 6 COMPLETE

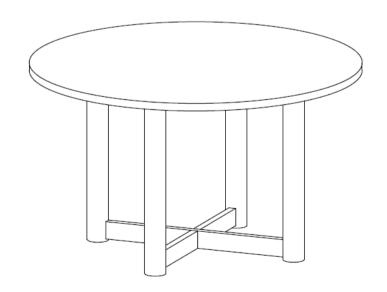





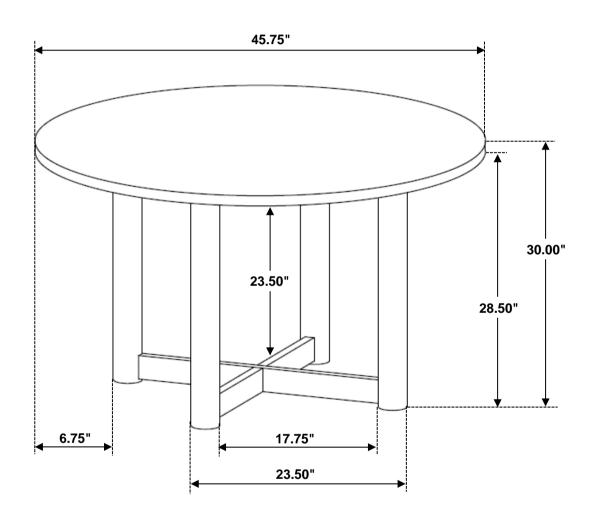

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM