

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME	
---------------	--

10 MINUTES

PARTS IDENTIFICATION

A DRESSER



1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


PAGE 2 OF 4



ASSEMBLY INSTRUCTIONS STEP 1

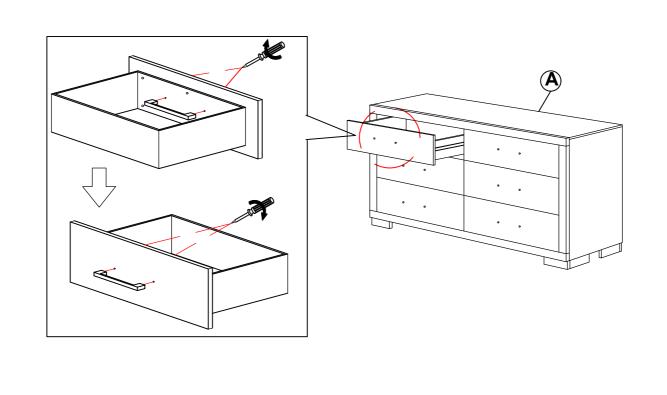

STEP 2 COMPLETE

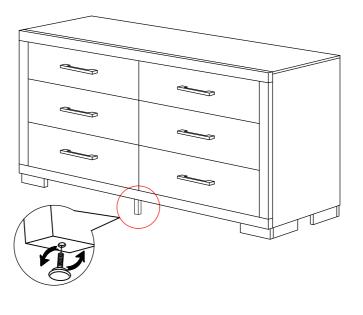






ANTI-TIPPING INSTALLMENT INSTRUCTIONS


FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture. This restraint may protect against tipping furniture. Do not allow children to climb on furniture. This restraint is not a substitute for proper adult supervision. Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

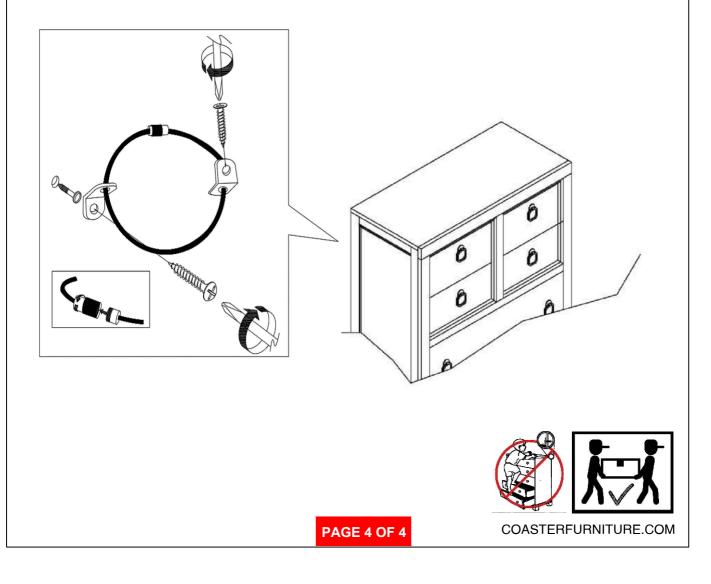

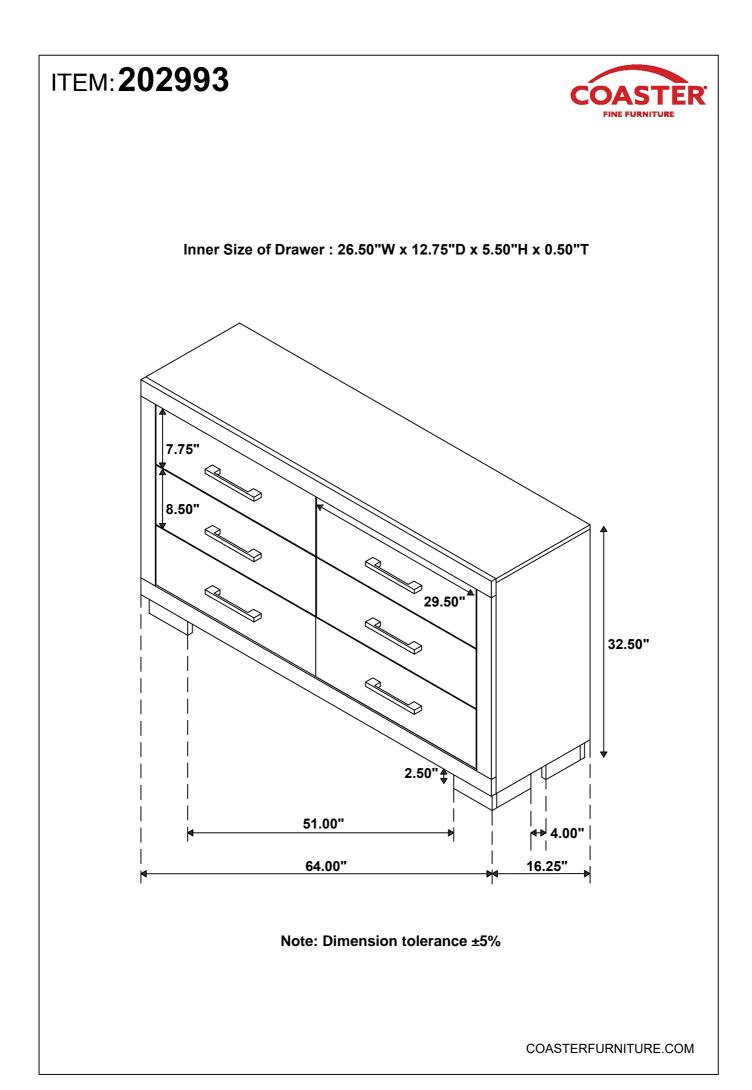



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

REVISION 0 : 06/18/2012 REVISION 1 : 09/11/2018 REVISION 2 : 12/04/2019 REVISION 3 : 08/04/2020 REVISION 4 : 09/09/2023



PAGE 1 OF 4

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



 
Α

в


С

WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



MIRROR

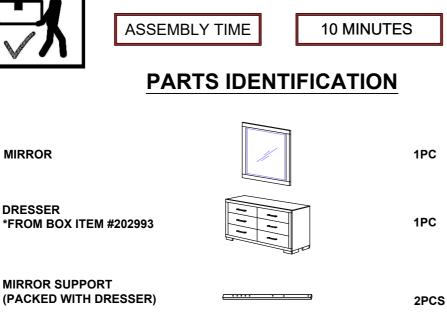

HARDWARE IDENTIFICATION

4PCS SHORT FLAT HEAD SCREW 1 (M4 x 32mm - BLK) THINK 4PCS LONG FLAT HEAD SCREW 2 (M4 x 45mm - BLK)

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

PAGE 2 OF 4

ITEM: 202994 ASSEMBLY INSTRUCTIONS STEP 1

STEP 2


(OPTIONAL)

Align and hang the mirror against the wall in landscape orientation with both left and right pre-fixed metal bracket in correct orientation.

Note : Screws or fittings to fix the mirror to the wall are not included. Choose screws or fittings that are suitable to the wall material and have sufficient holding power.


If you are uncertain, contact your local specialised retailer.


Warning : Wrong assembly can lead to the mirror topples or falls resulting in personal injury or damage.

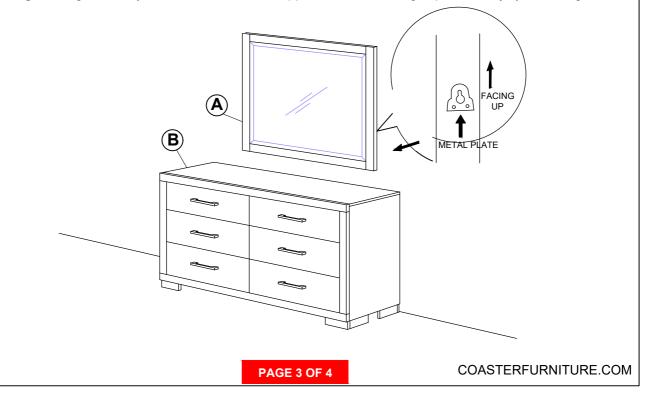

 ITEM: 202994 ASSEMBLY INSTRUCTIONS STEP 3 COMPLETE



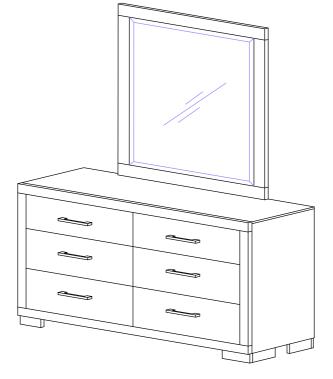



PAGE 4 OF 4

