

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

950405
ACCENT CABINET

ITEM:950405

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
 
 
 
 
 
 

 
 
 
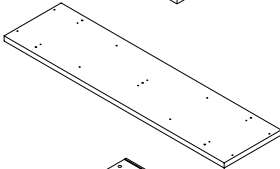 
 
 
 
 
 
 
 
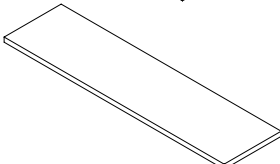 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES

 
 
 

 
 


 
 
 
 



 
 
 
 
PARTS IDENTIFICATION

A	LEFT SIDE PANEL		1 PC	L	BACK PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	M	MIDDLE UPPER BACK PANEL		1 PC
C	LEFT DIVIDER PANEL		1 PC	N	MIDDLE LOWER BACK PANEL		1 PC
D	RIGHT DIVIDER PANEL		1 PC	O	LEFT DOOR		1 PC
E	MIDDLE LEG		1 PC	P	RIGHT DOOR		1 PC
F	LEG		2 PCS	Q	DRAWER FRONT PANEL		1 PC
G	BOTTOM PANEL		1 PC	R	DRAWER BACK PANEL		1 PC
H	MIDDLE CROSS PANEL		1 PC	S	DRAWER LEFT SIDE PANEL		1 PC
I	ADJUSTABLE SHELF		2 PCS	T	DRAWER RIGHT SIDE PANEL		1 PC
J	FRONT MIDDLE TOP BAR		1 PC	U	DRAWER BOTTOM PANEL		1 PC
K	TOP PANEL		1 PC	V	DRAWER BOTTOM SUPPORT		1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	11	HINGE Ø 35mm SR		4 PCS
2	WOODEN DOWEL Ø8x30mm		34 PCS	12	HINGE SCREW Ø 4x15mm SR		16 PCS
3	CAM BOLT Ø7x35.5mm SR		21 PCS	13	FIXER		6 PCS
4	CAM LOCK Ø15x12mm SR		21 PCS	14	FIXER SCREW Ø 3x19mm SR		6 PCS
5	BOLT Ø9.5x55mm SR		8 PCS	15	GLIDES L = 350mm SR		1 SET
6	DOOR CATCH		2 PCS	16	GLIDES SCREW Ø 3x12mm SR		12 PCS
7	PLASTIC FEET Ø 15mm		5 PCS	17	SCREW Ø 4.3x35mm SR		5 PCS
8	PIN Ø4.9x15mm SR		8 PCS	18	STICKER-WHITE Ø 20mm		3 PCS
9	HANDLE		3 PCS	19	STICKER Ø20mm		1PC
10	HANDLE BOLT BLK		3 PCS				

 
 
 
 
 
 
 
 
Z9, Z11, Z15 not included in blister packaging.

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 950405


STEP 1

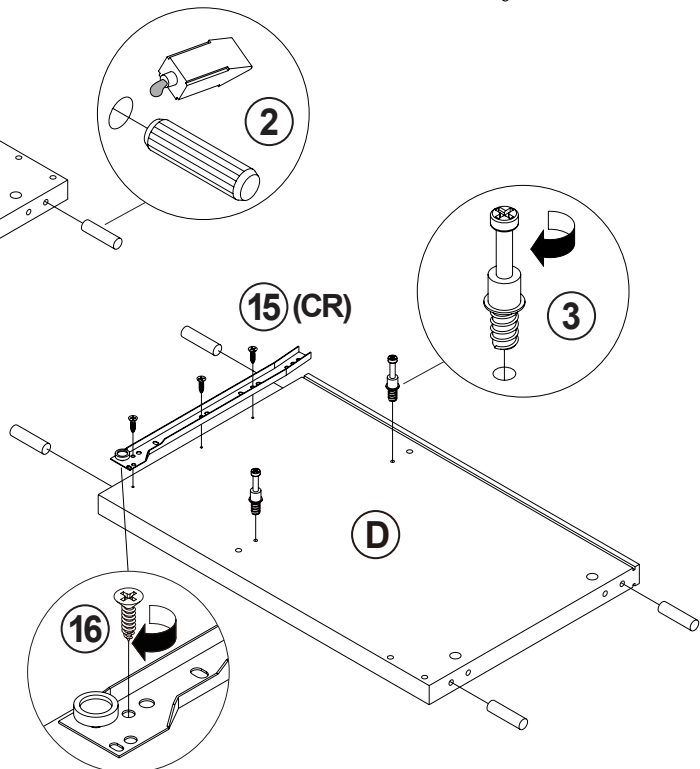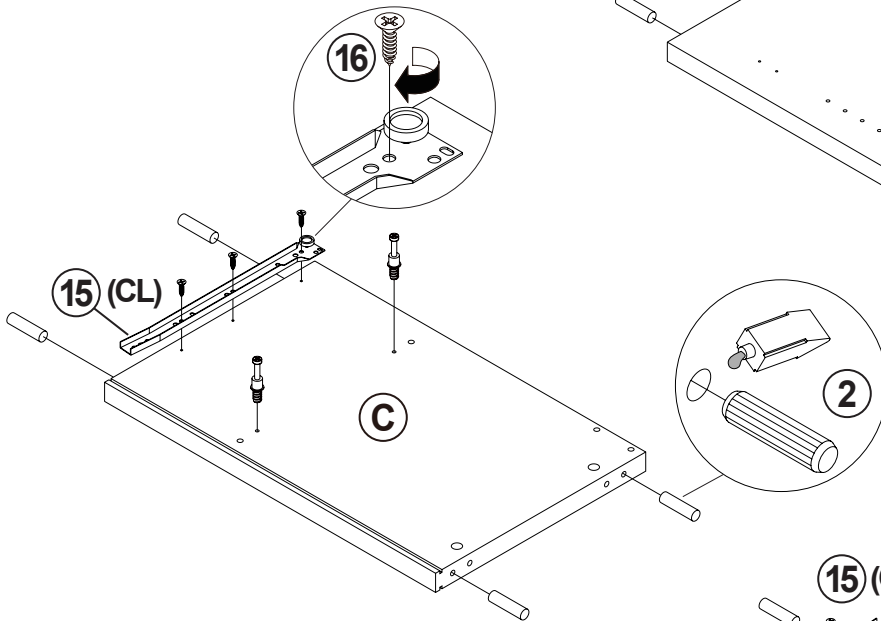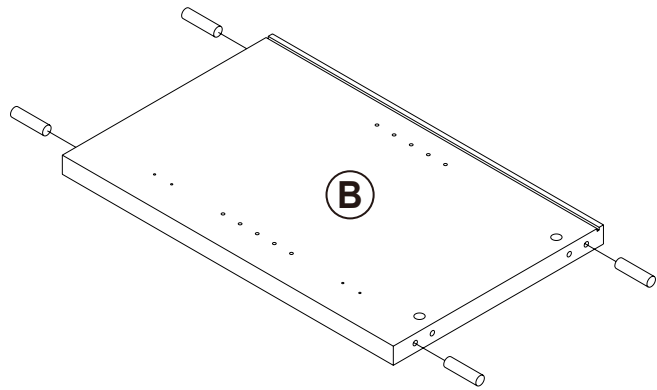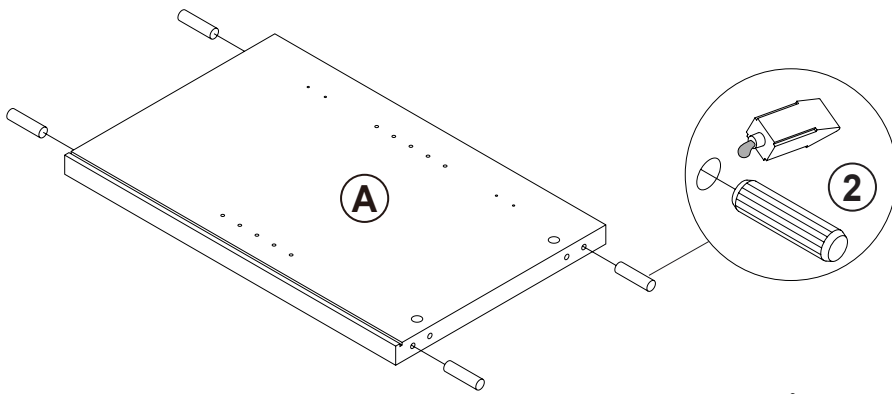

INCORRECT
CORRECT



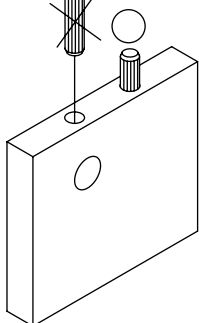 


 Apply glue on all wooden dowels to ensure integrity of the structure.

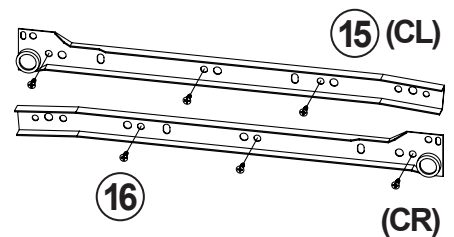

ITEM: 950405

   
STEP 2

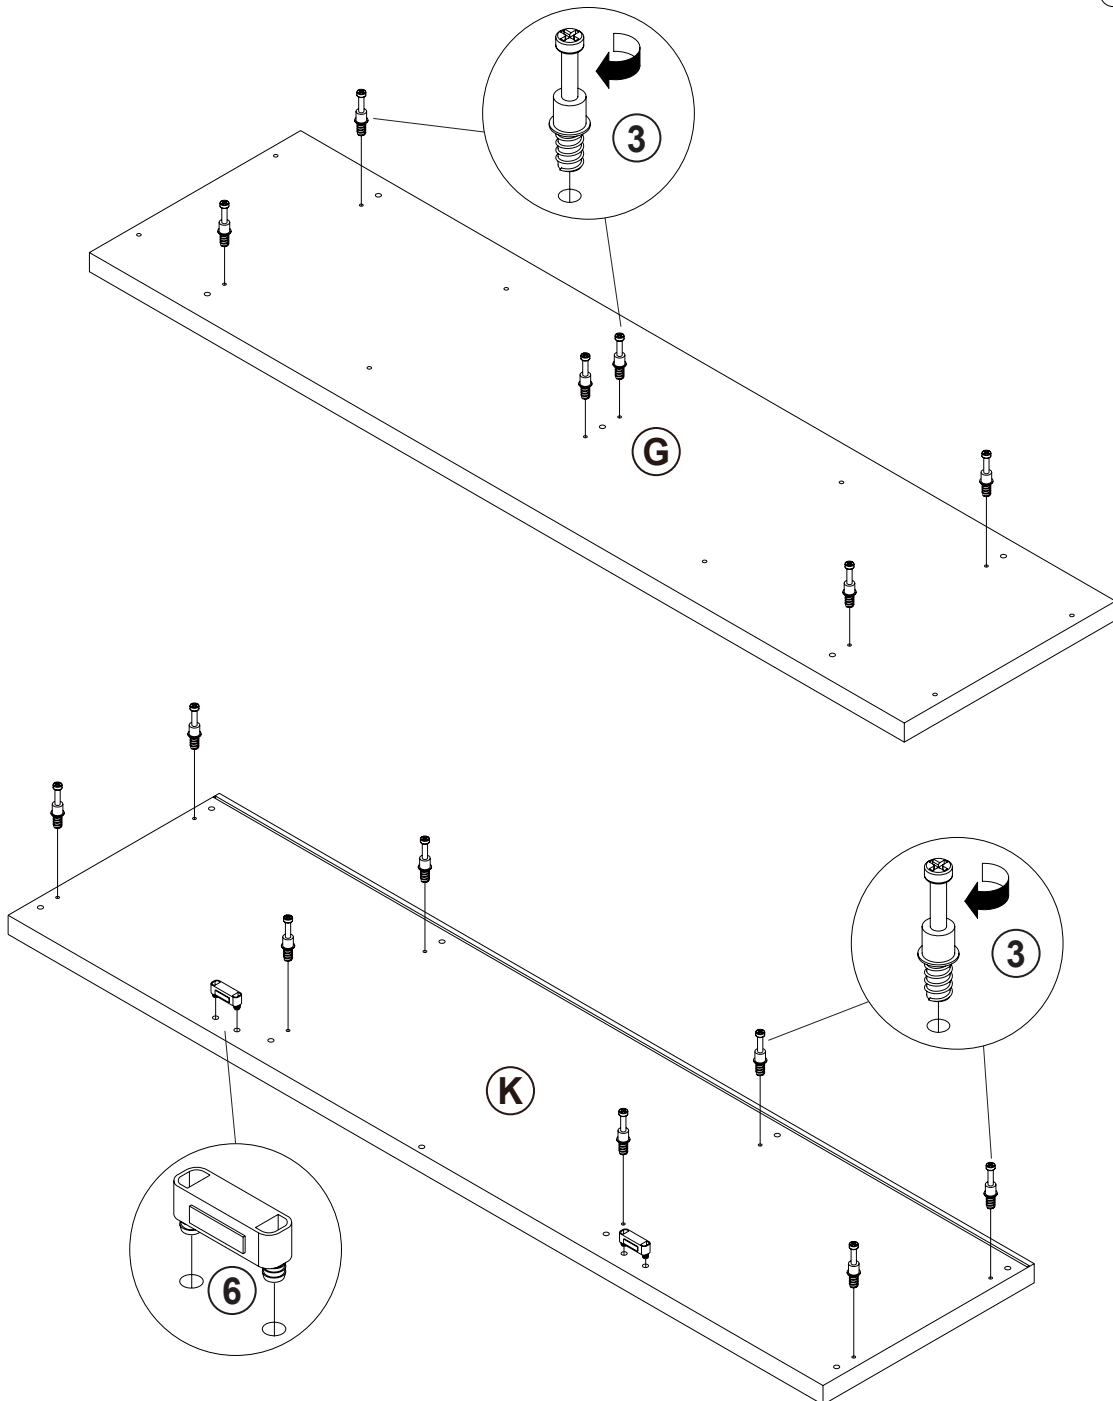

ITEM: 950405

COASTER
FINE FURNITURE

 
STEP 3

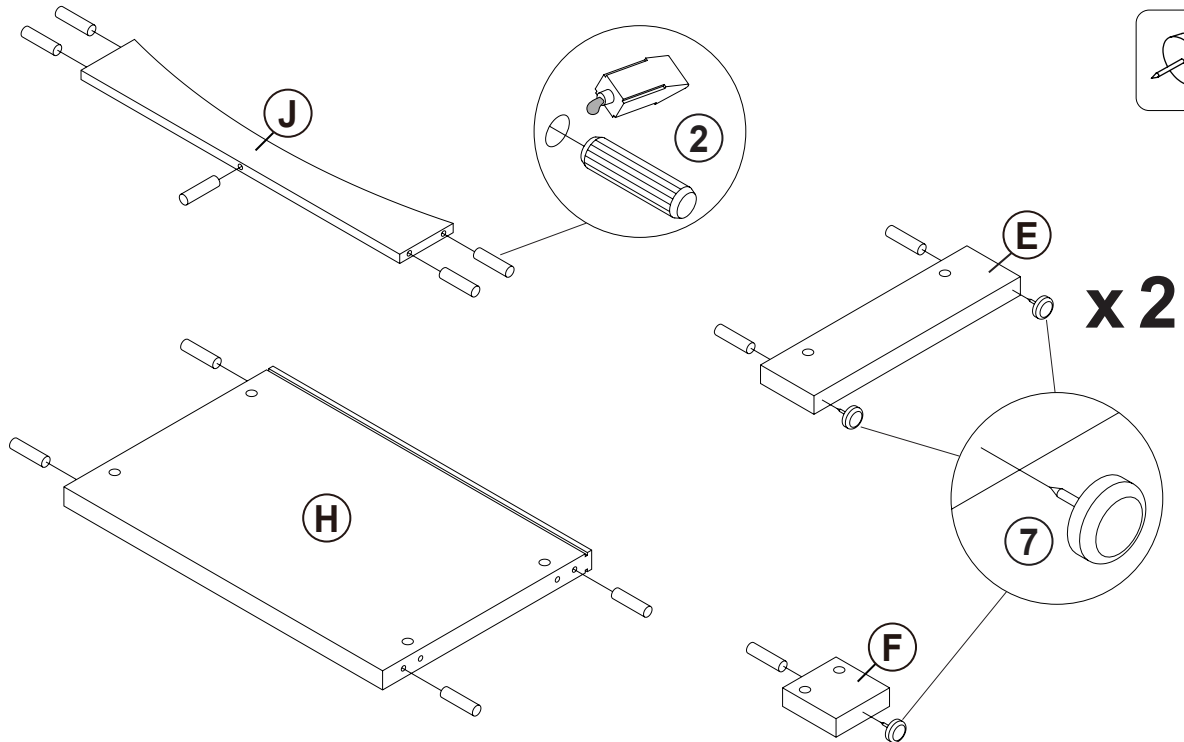

2
x 14

7
x 5

 STEP 4

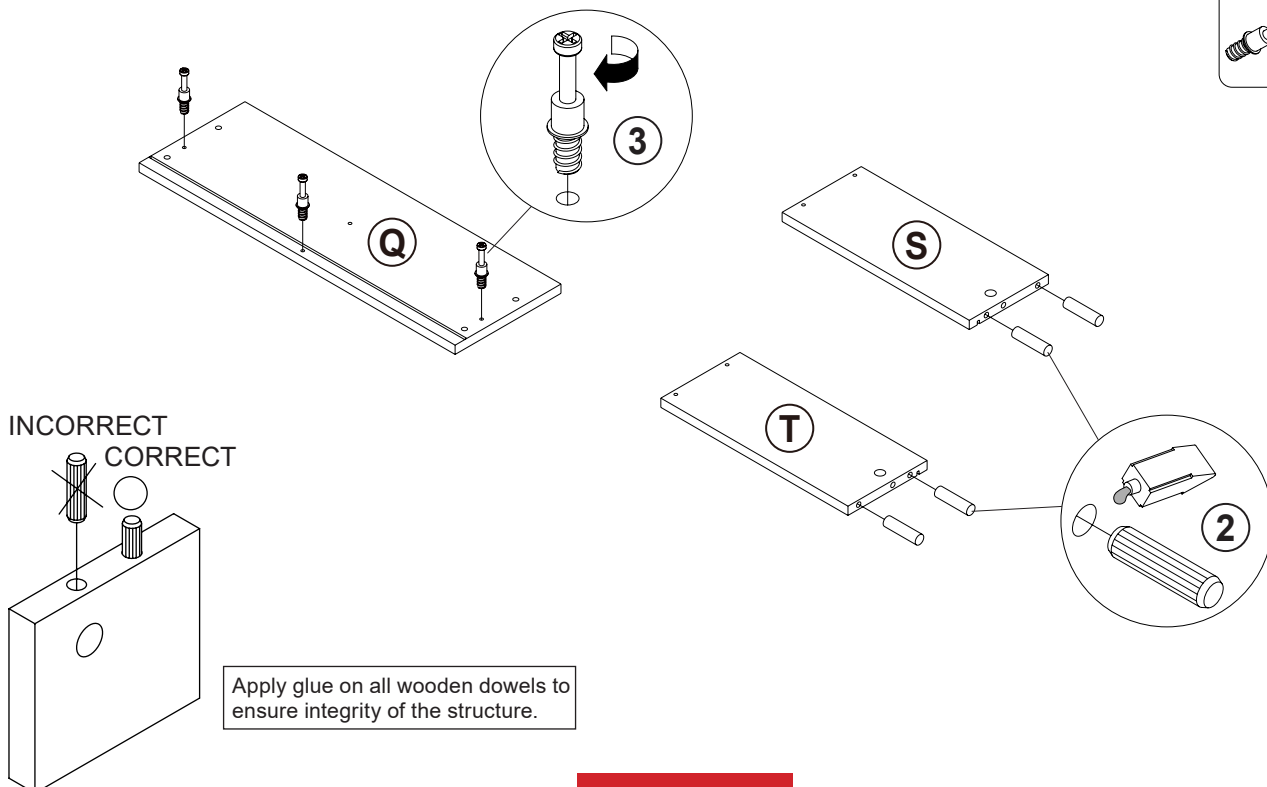

2
x 4

 
3
x 3

INCORRECT
CORRECT


Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: 950405


STEP 5

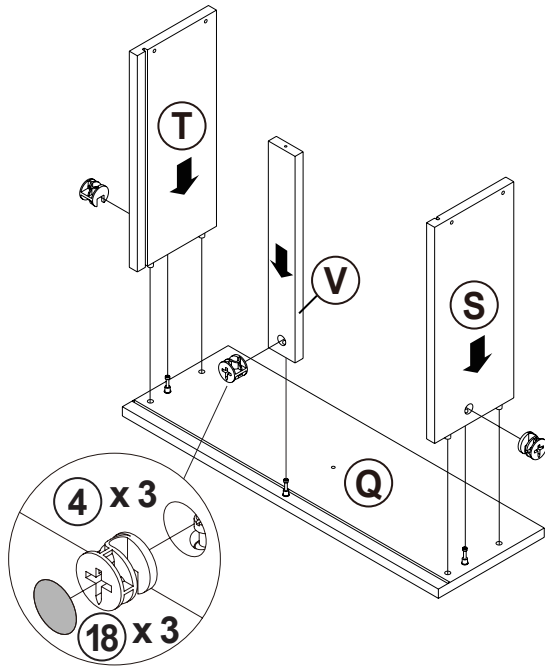

 
STEP 6

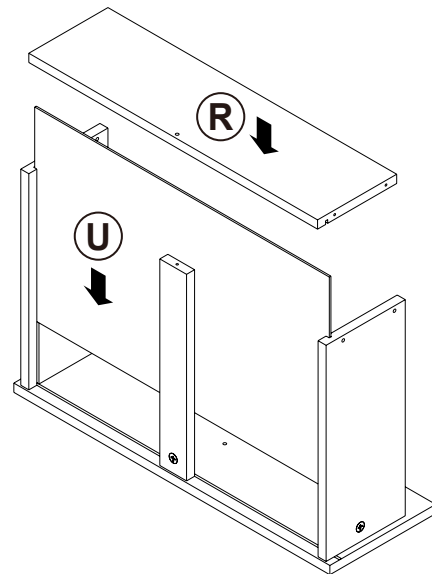

 STEP 7

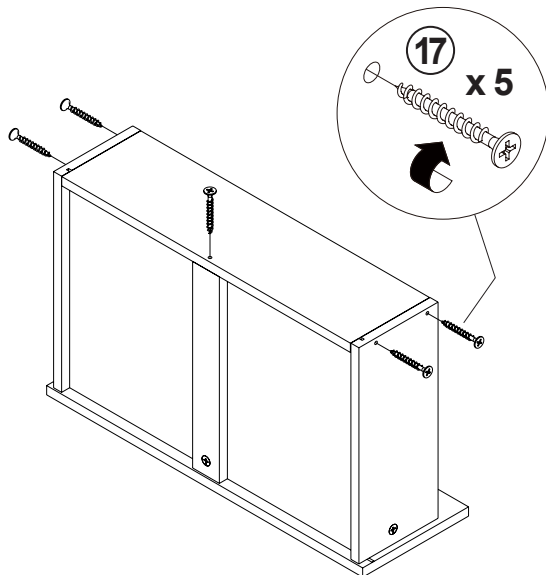




 
STEP 8

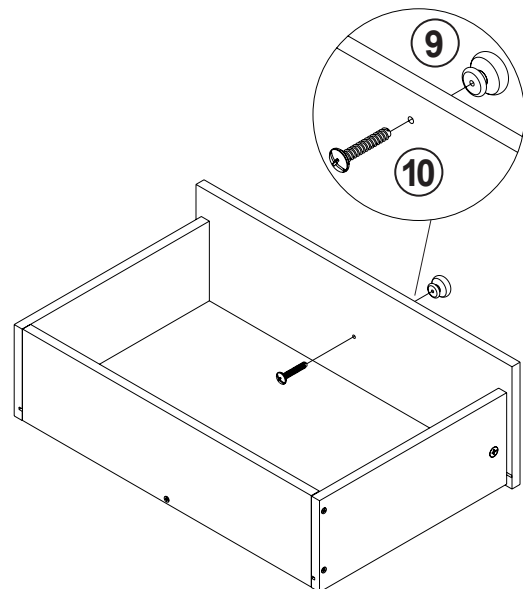




ITEM: 950405

COASTER
FINE FURNITURE

    STEP 9

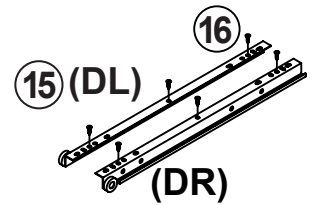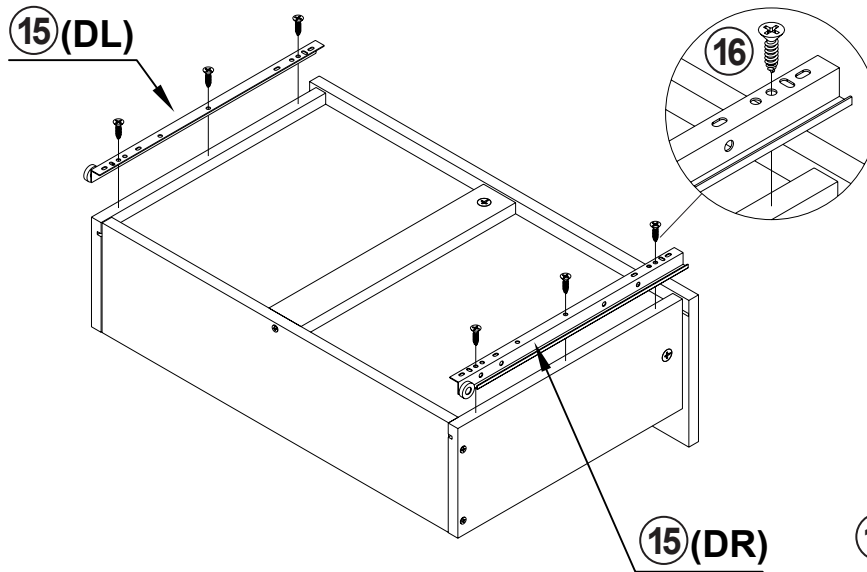

 
 
 
STEP 10

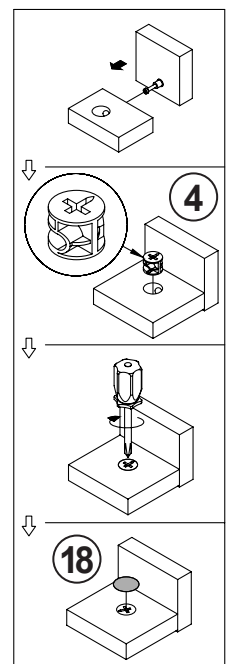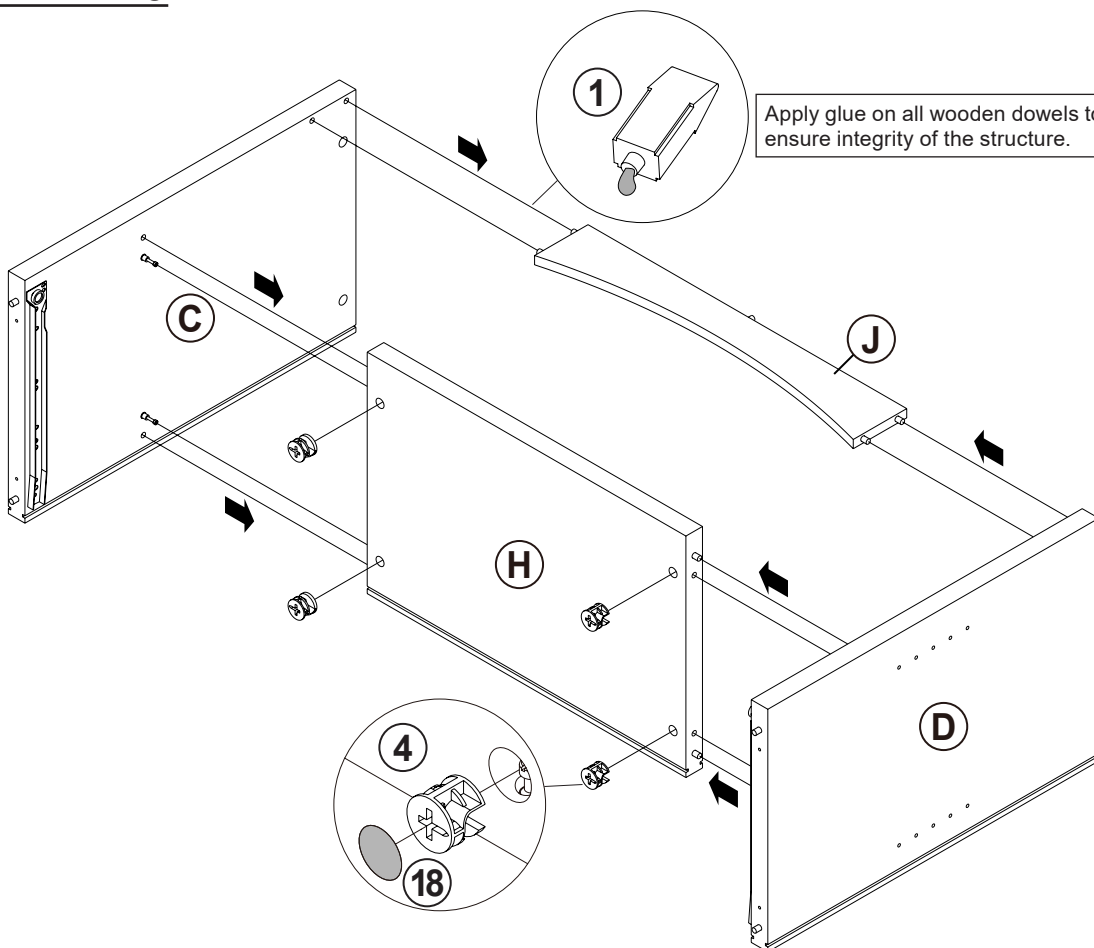

ITEM: 950405


COASTER
FINE FURNITURE

   STEP 11

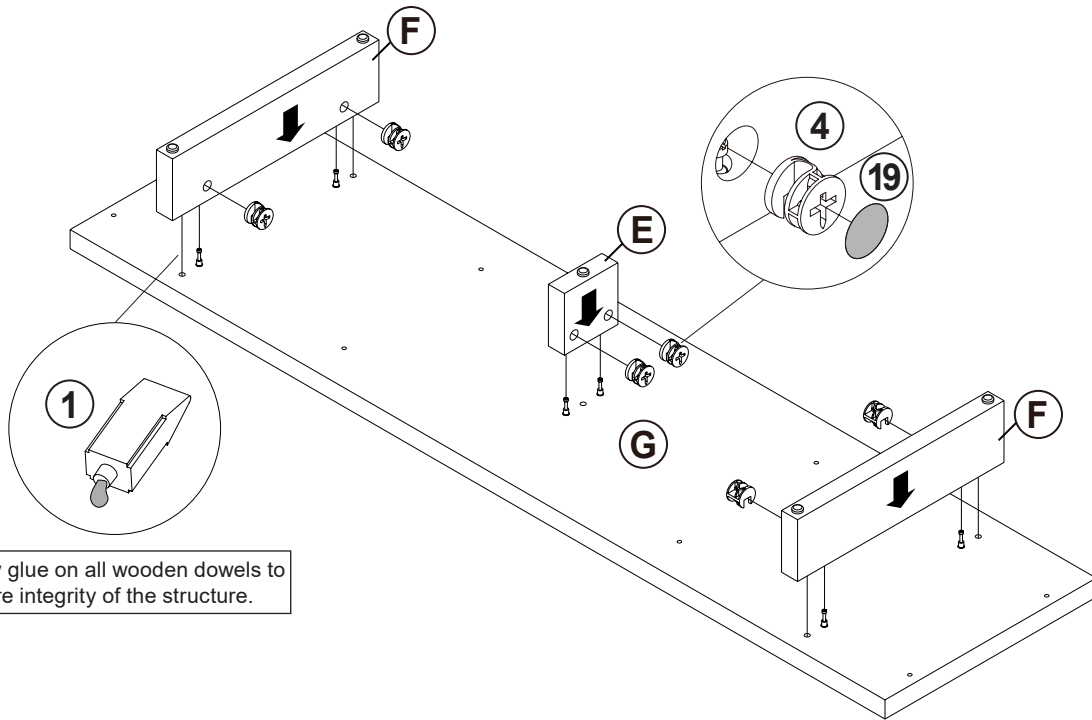


Apply glue on all wooden dowels to ensure integrity of the structure.

 STEP 12




 
Apply glue on all wooden dowels to ensure integrity of the structure.

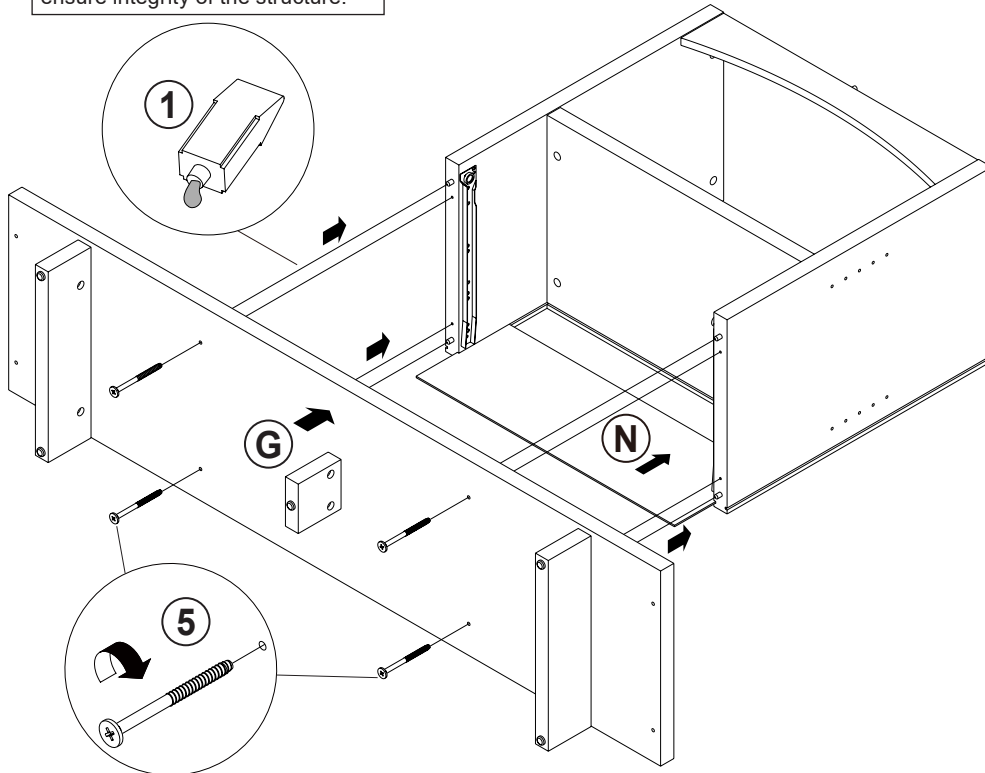


ITEM: 950405

COASTER
FINE FURNITURE

  STEP 13

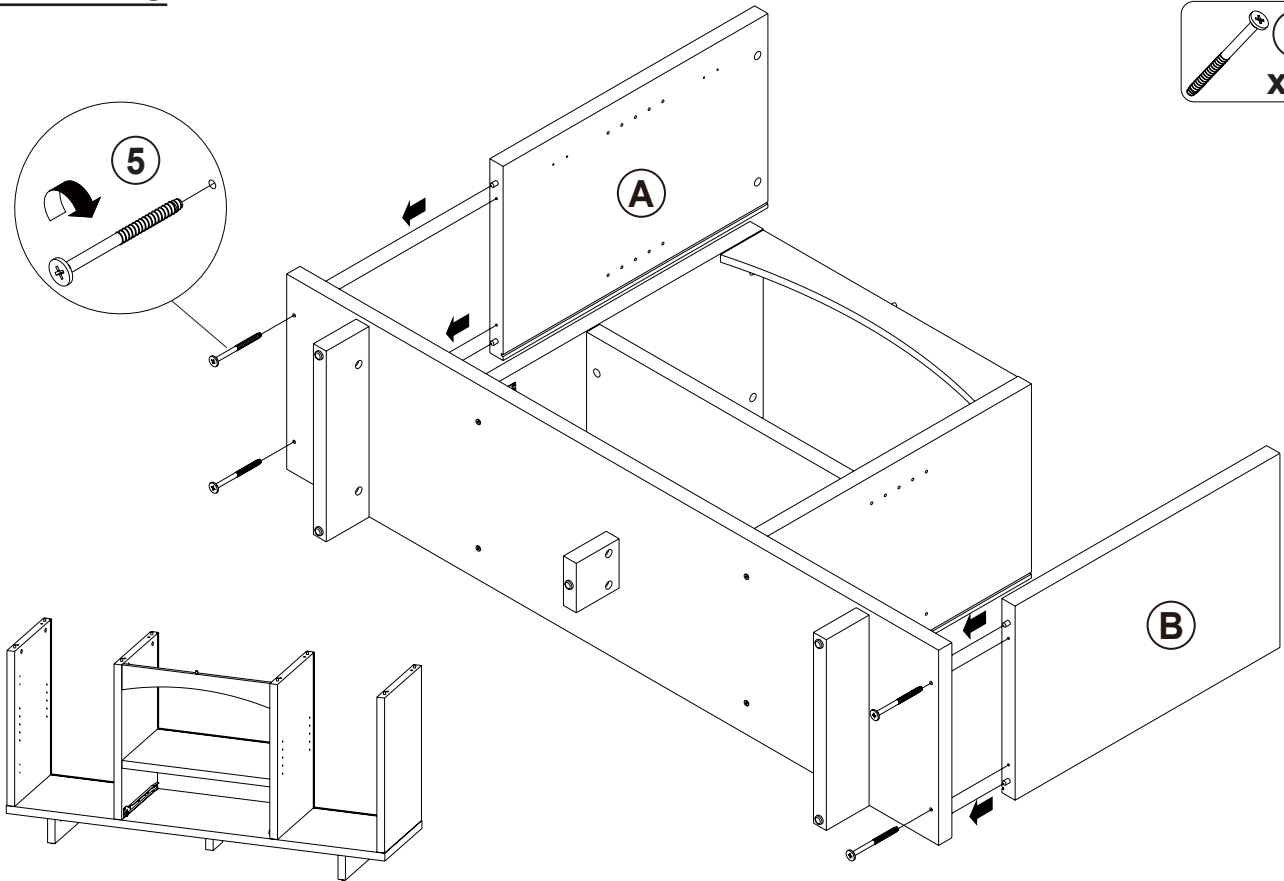

 STEP 14


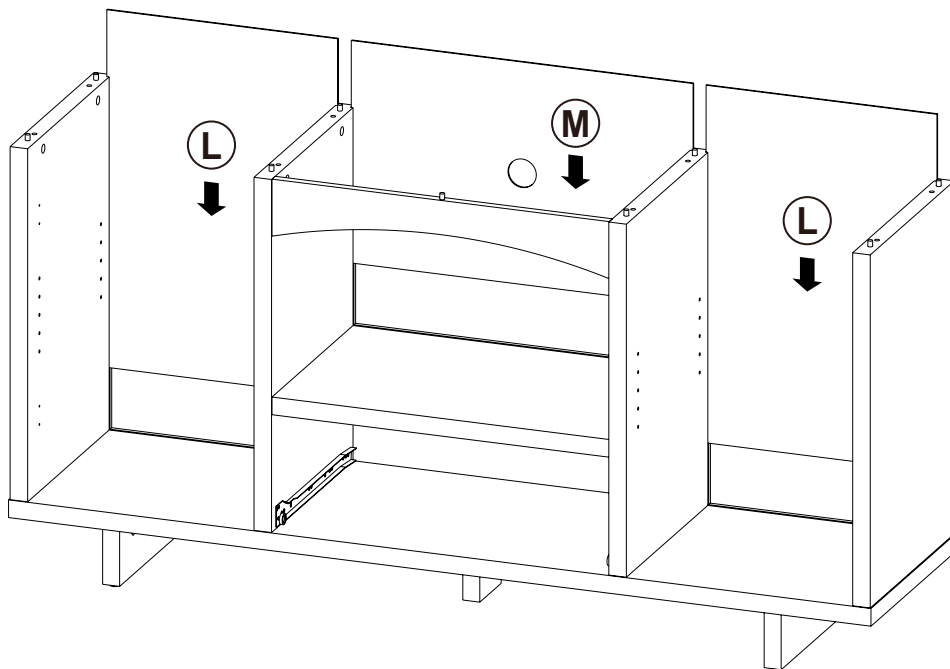


ITEM: 950405



COASTER[®]

FINE FURNITURE

  STEP 15

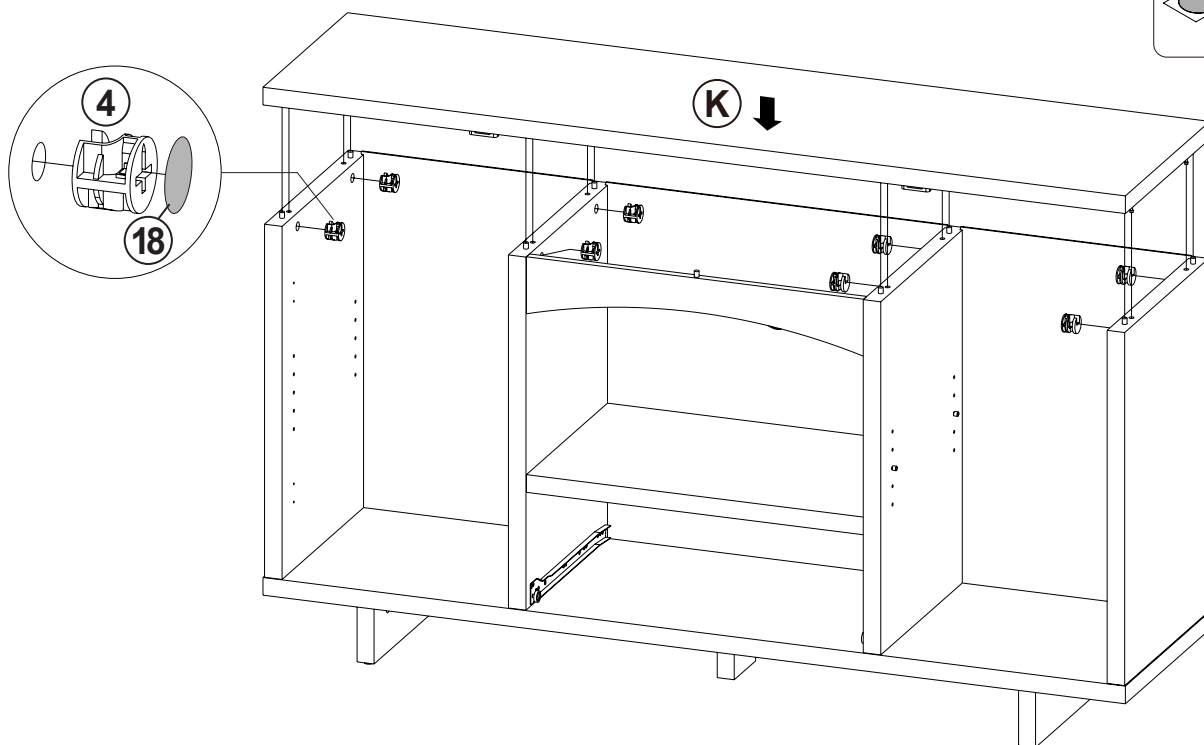

  STEP 16

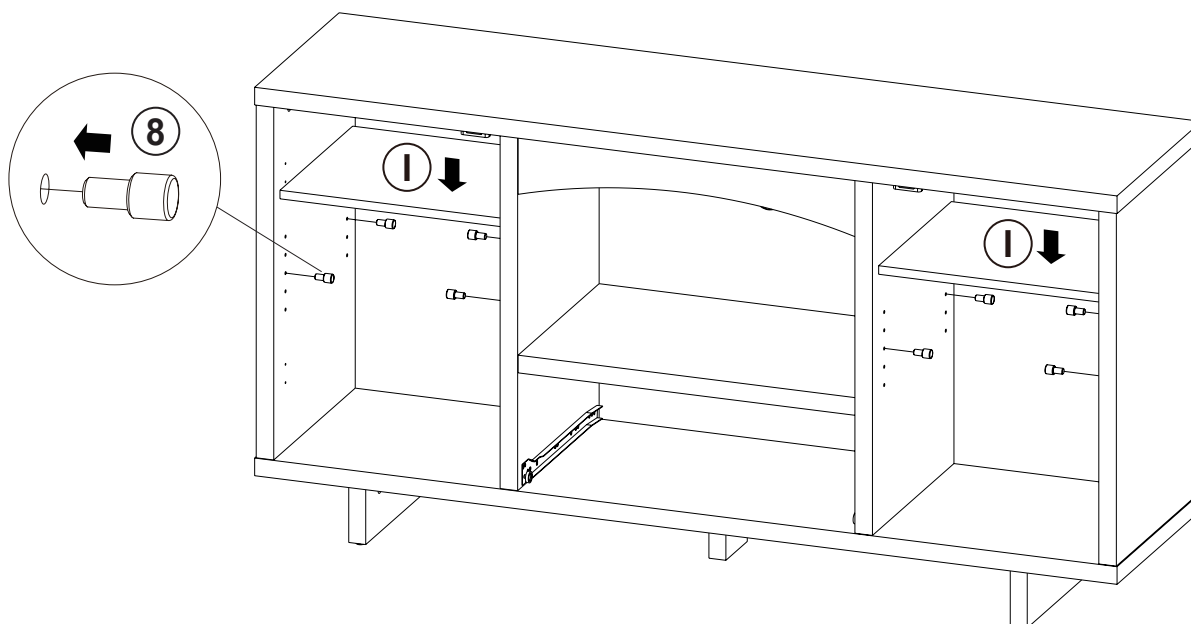



ITEM: 950405






COASTER[®]

FINE FURNITURE

  STEP 17

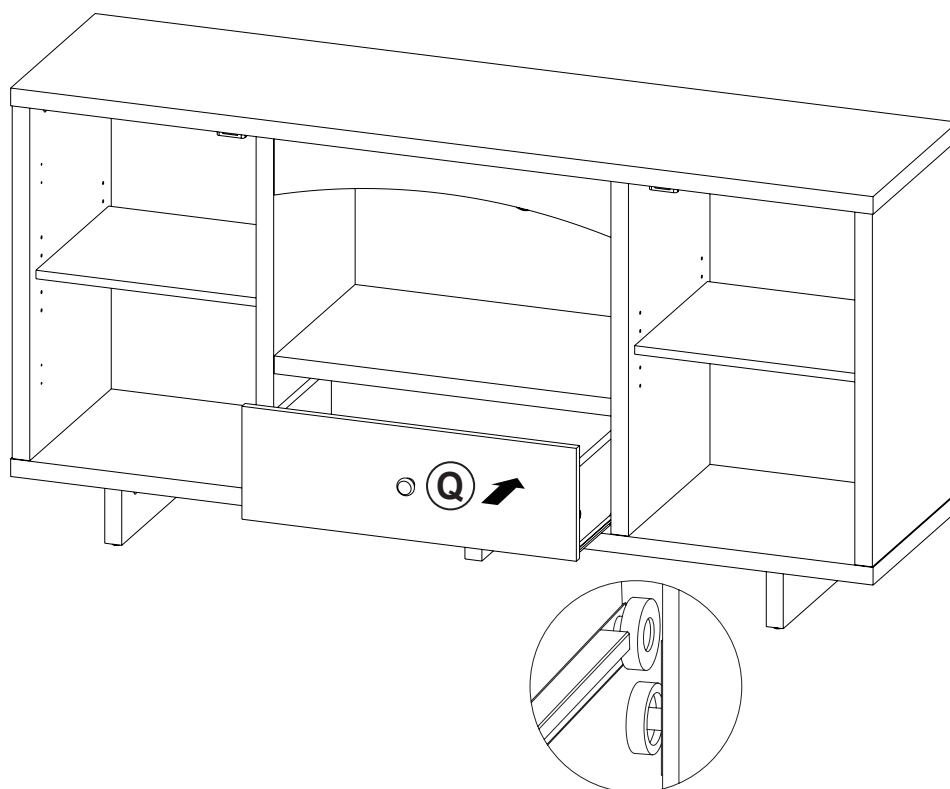

     STEP 18

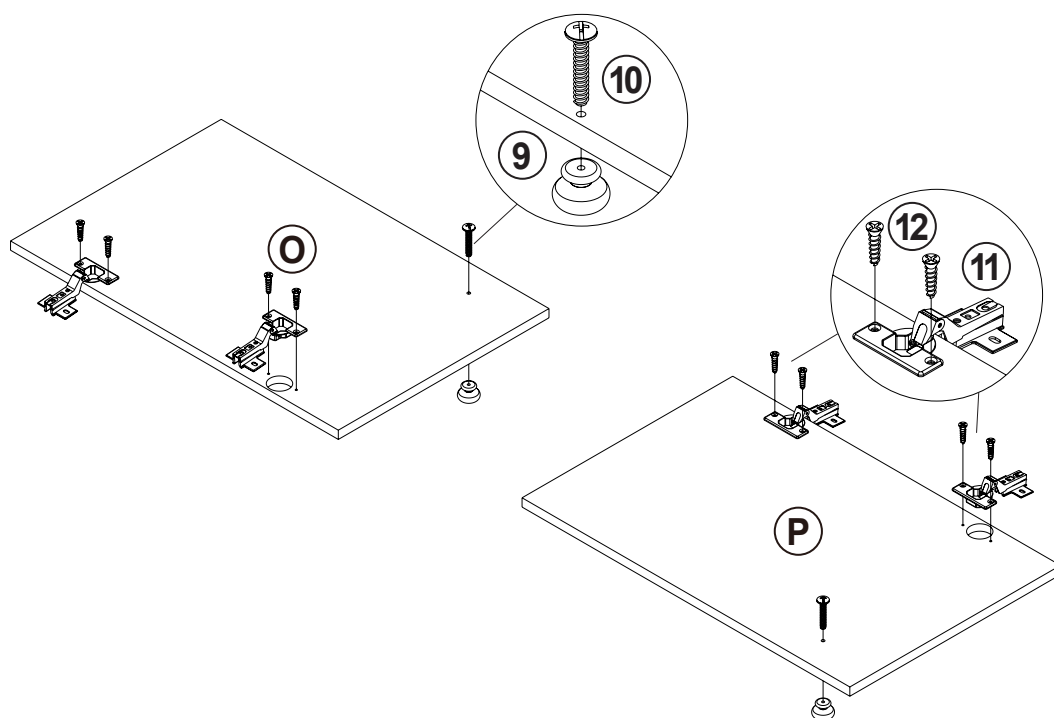


ITEM: 950405


COASTER
FINE FURNITURE

STEP 19




 
HORIZONTAL BY
SCREW A ADJUSTMENT

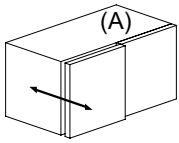





LATERAL BY
SCREW B ADJUSTMENT

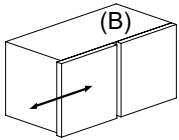 

VERTICAL BY
SCREW C ADJUSTMENT

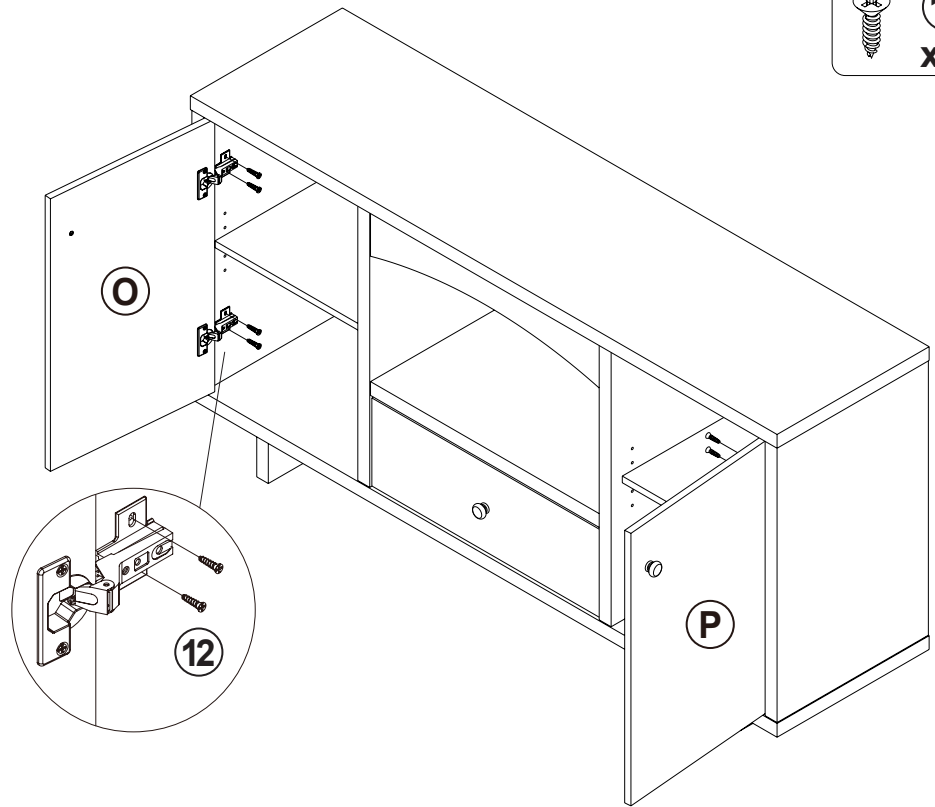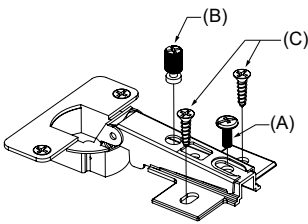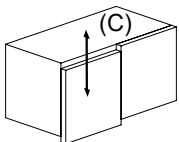    

   
 
STEP 20

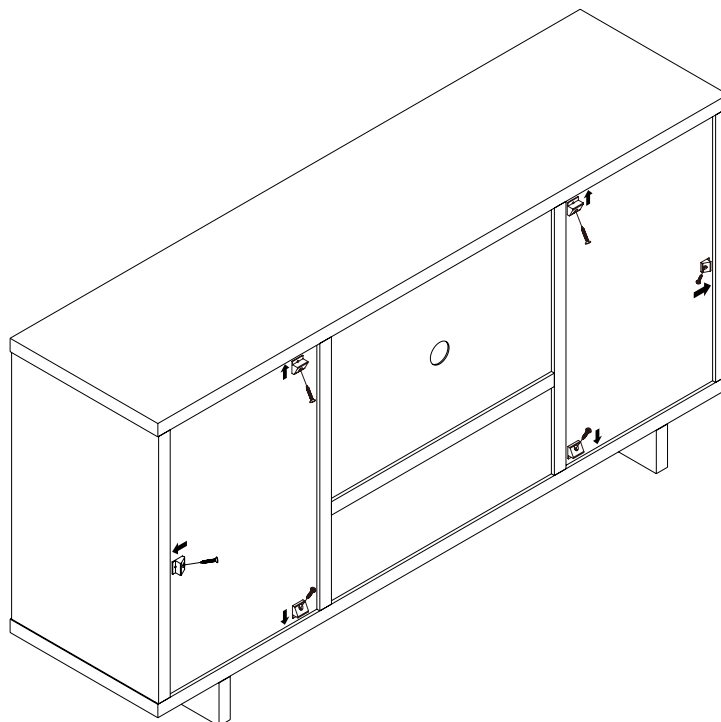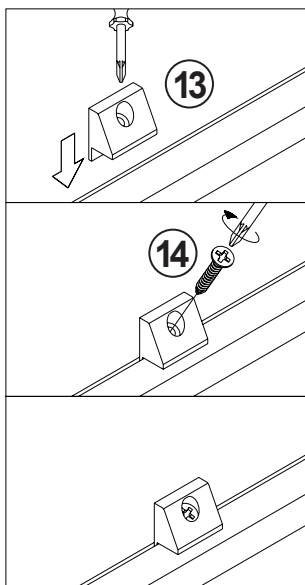



ITEM: **950405**

STEP 21

  COMPLETE

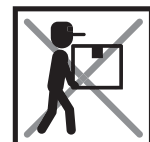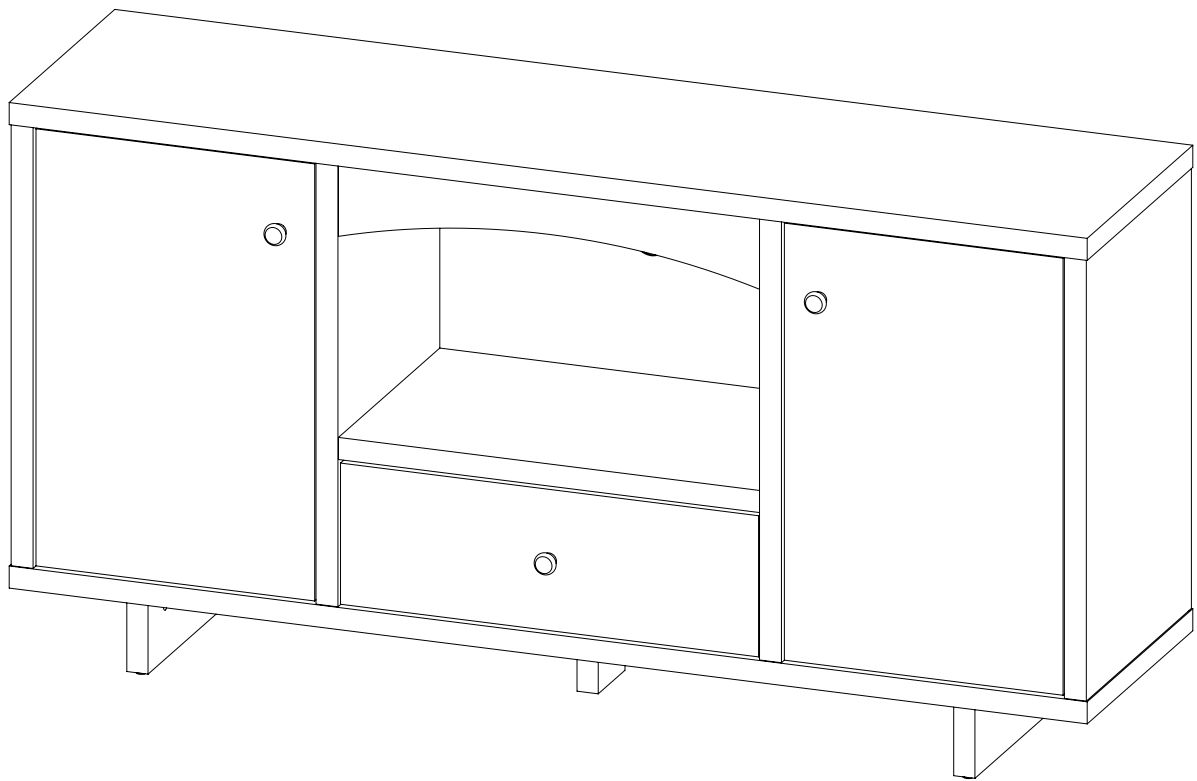

ITEM:950405

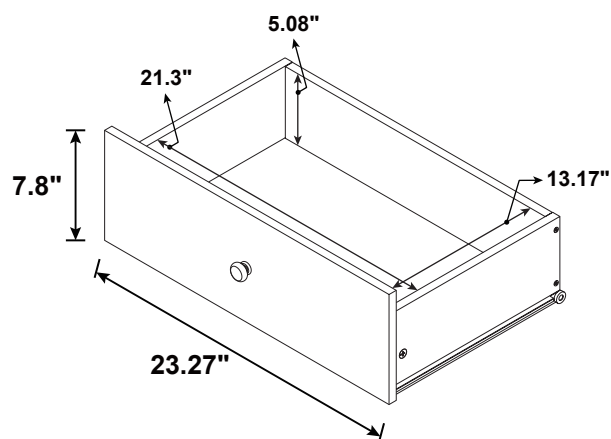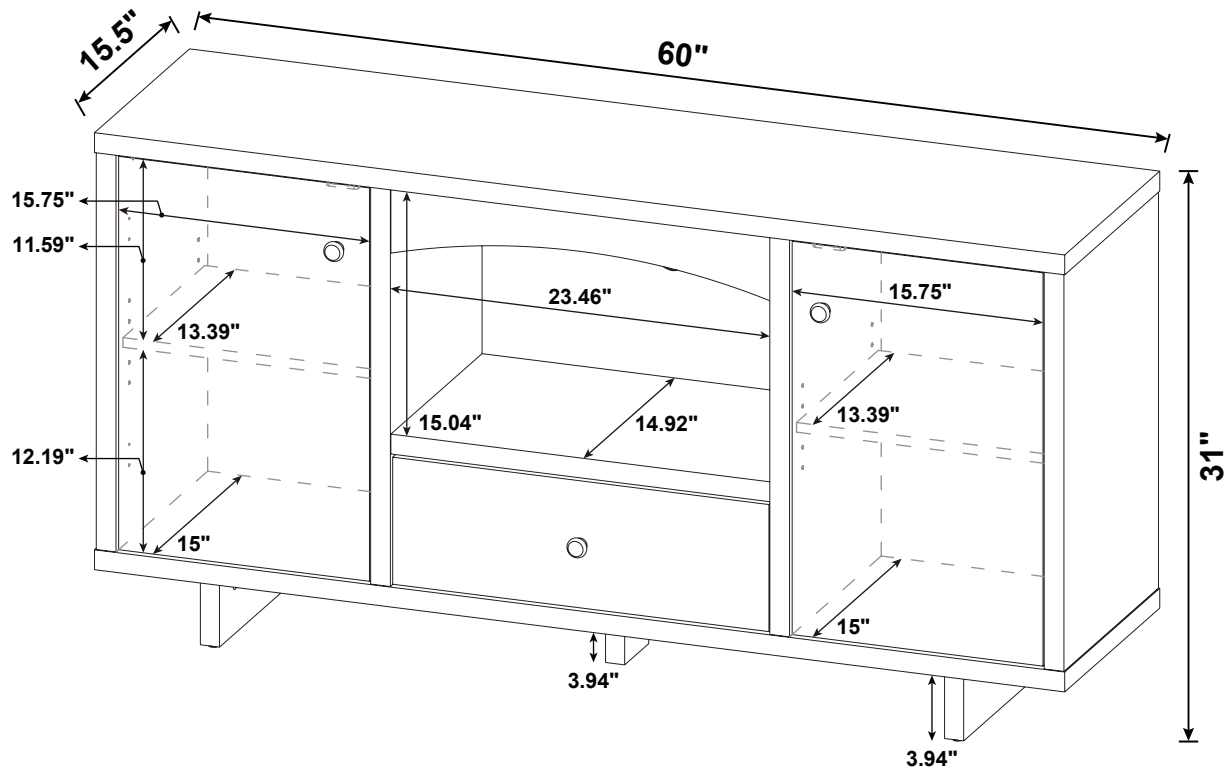  

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

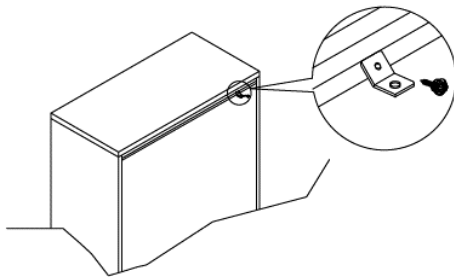

STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

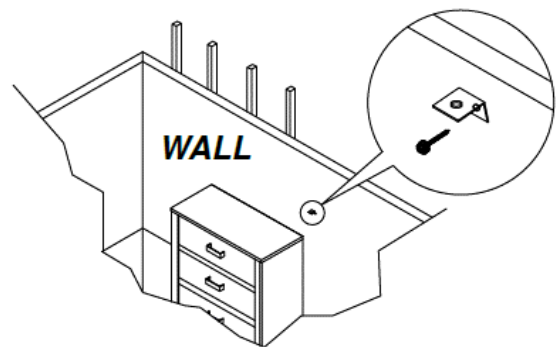

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

