

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

805675 Bookcase

REVISION 0: 08/05/2020 REVISION 1: 08/20/2024

PAGE 01 OF 09

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

COASTER

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

45 MINUTE

PARTS IDENTIFICATION

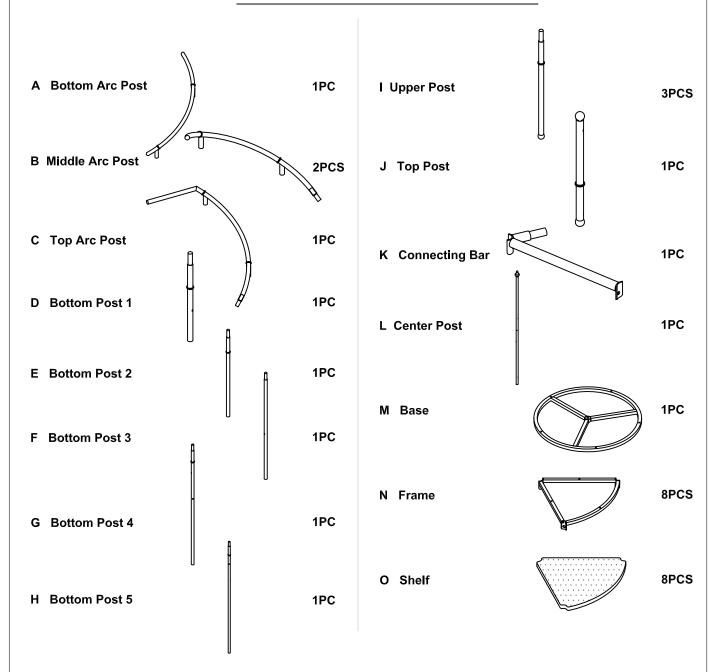



HARDWARE IDENTIFICATION

1	BOLT (3/16"x1/2"-BLK)	38PCS	5	WASHER (¢16mm-BLK)	1PC
2	BOLT (M4x19mm-BLK)	24PCS	6	ALLEN KEY (4x22x60mm-BLK)	1PC
3	BOLT (1/4"X3/4"-BLK)	1PC	7	ANTI - TIP KIT	1PC
4	BOLT (1/4"X1-1/4"-BLK)	5PCS	8	CONTROL BUTTON (Ø13mm)	5PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:**805675** C G 0 Н Ε D

M

ASSEMBLY INSTRUCTIONS

STEP 1:


ASSEMBLY


Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.





COASTERFURNITURE.COM

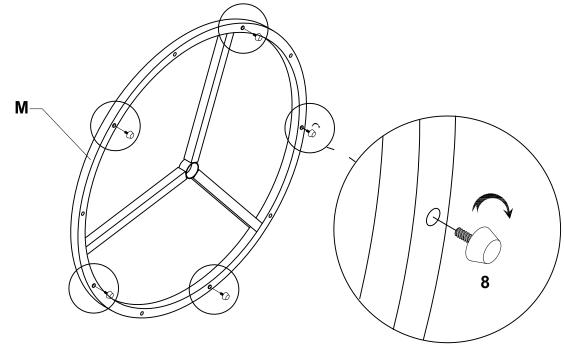

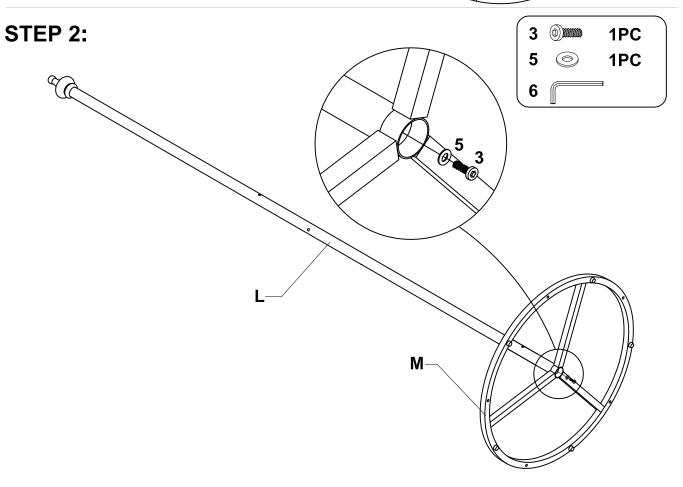

PAGE 05 OF 09




ASSEMBLY INSTRUCTIONS


STEP 3:






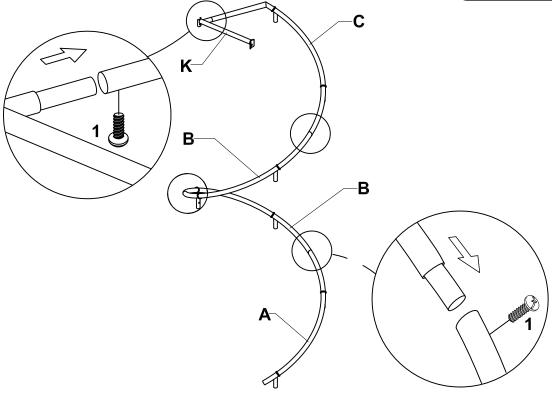


STEP 4:

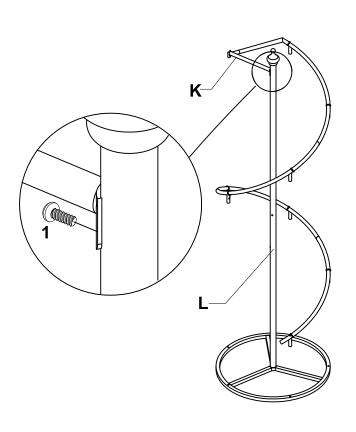

1 ()))))) 1PC

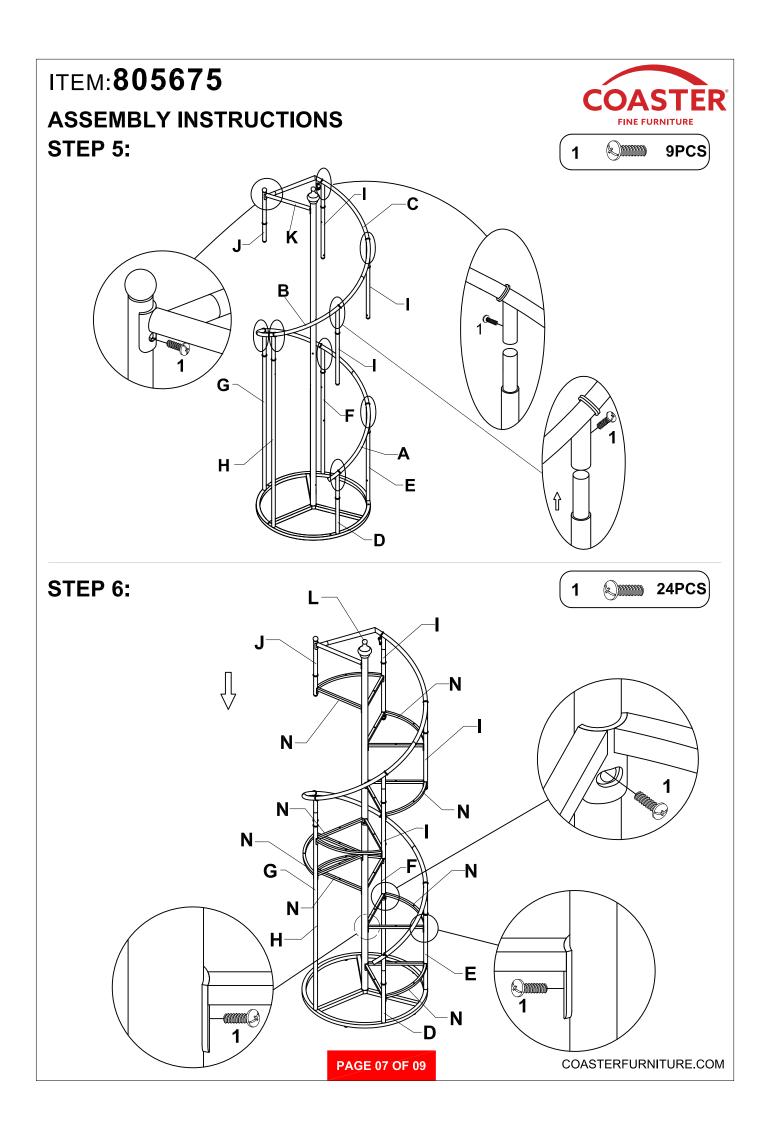

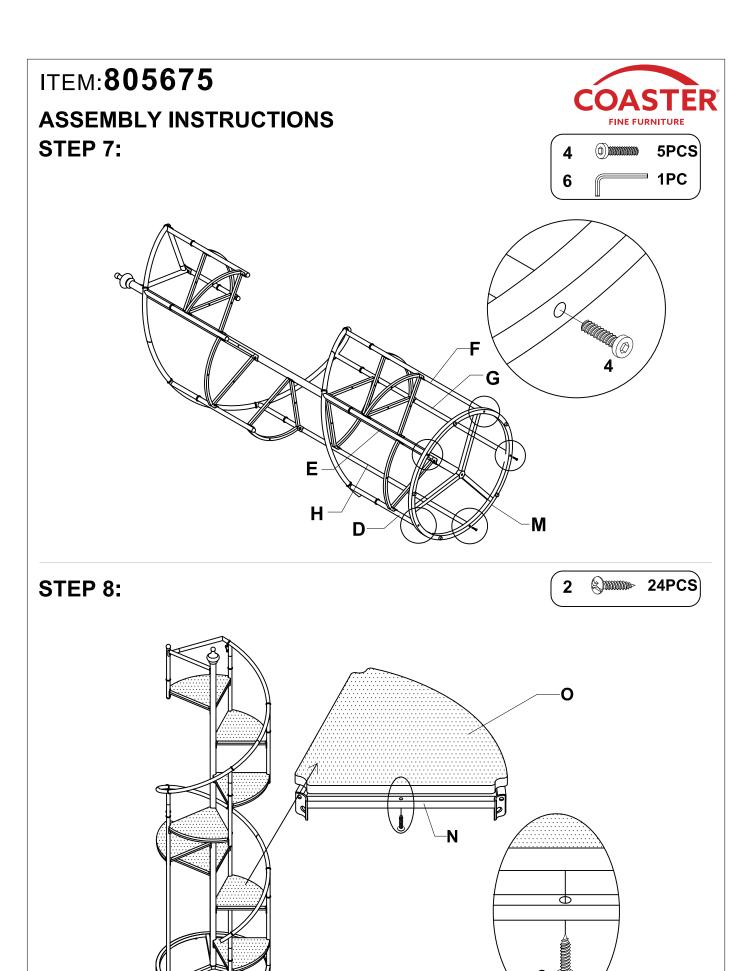


PAGE 08 OF 09


COASTERFURNITURE.COM

COASTER

COASTERFURNITURE.COM


ASSEMBLY INSTRUCTIONS STEP 9:

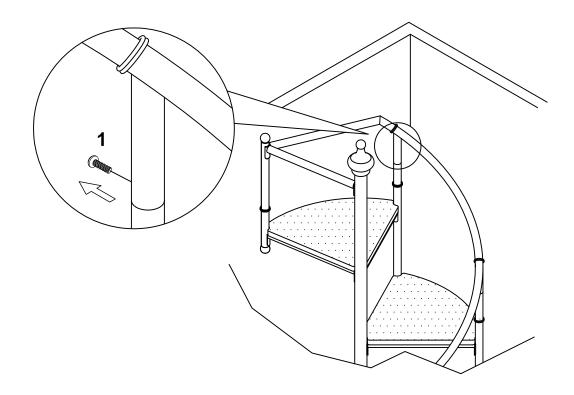

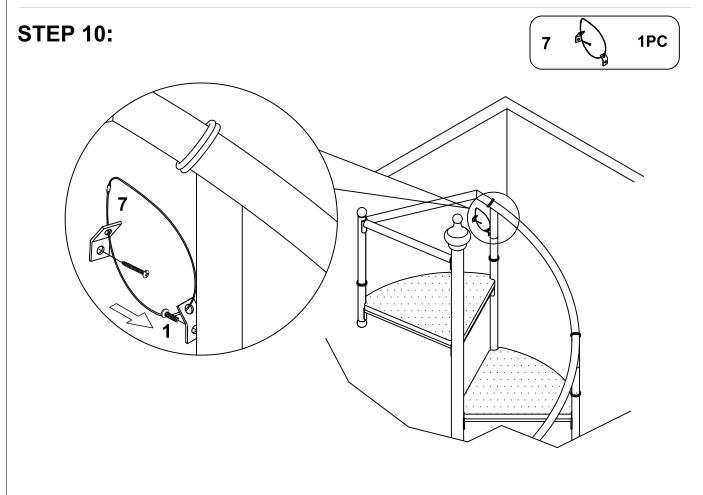

PAGE 09 OF 09



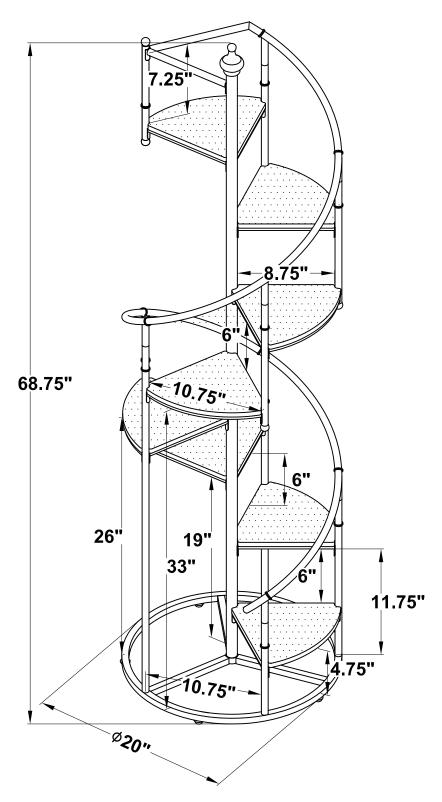

Note: Dimension tolerance ±5%