

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

182127 *Bar Unit*

PAGE 1 OF 14



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Marning!!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.






ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

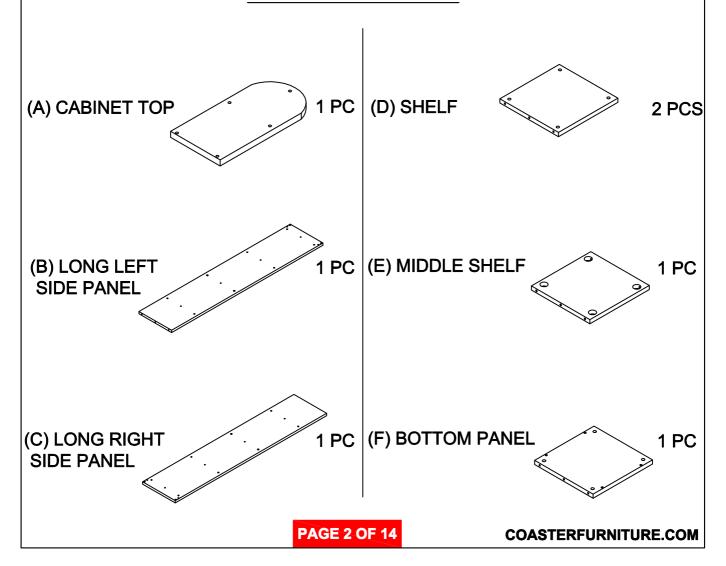



PARTS IDENTIFICATION

(G) LEG CROSSBAR

2 PCS (M) BOTTLE HOLDER PANEL1

(H) LEFT SHELF



1 PC

(N) BOTTLE HOLDER PANEL2



(I) COLUMN SUPPORT



1 PC (O) BOTTLE HOLDER PANEL3



(J) BAR TABLE TOP

(P) BOTTLE HOLDER PANEL4



(K) SHORT SIDE 1 PC **PANEL**

(Q) BOTTLE HOLDER PANEL5



(L) LEANING PANEL 1_{PC} (R) BOTTLE HOLDER ≤ PANEL6



(S) WINE RACK CROSSBAR

PAGE 3 OF 14




HARDWARE IDENTIFICATION

1	CAM BOLT	L=29mm		24pcs
2	CAM LOCK	Ø15mm		24pcs
3	DOWEL	Ø8x25mm		19pcs
4	STICKER	Ø22mm	8888	13pcs
5	FULL THREAD ROD	M8×70mm		6pcs
6	JAM WASHER	M8mm		6pcs
7	WASHER	Ø8×16×2mm	0	16pcs
8	NUT	M8mm		6pcs
9	OPEN WRENCH	M13mm		1pc
10	LARGE STICKER	Ø45mm		6pcs
11	LARGE FLATHEAD SCREW	M6x30mm		2pcs
12	SMALL FLATHEAD SCREW	M6x25mm		4pcs
13	GLASS HOLDER	L=250mm		3pcs
14	SMALL SCREW	Ø4x16mm	(8))))>	9pcs
15	SMALL SCREW	Ø4x25mm	*)	4pcs
16	THE RESTRAINT STRAP	197×5×1mm	,	1pc
17	BRACKET	12×12×1mm		2pcs
18	LARGE SCREW	Ø4×25mm	() DDDDD	1pc
19	WALL SCREW	Ø5×40mm	€	1pc
20	PLASTIC ANCHOR	Ø8×40mm		1pc
21	WOOD SCREW	M7x48mm		4pcs

ASSEMBLY INSTRUCTIONS


COASTER

STEP 1

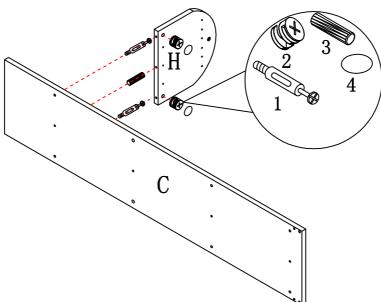

Attention please: The cam locks were installed into the keyholes, when you unpack the package please wrapped the protect paper and double check.

STEP 2

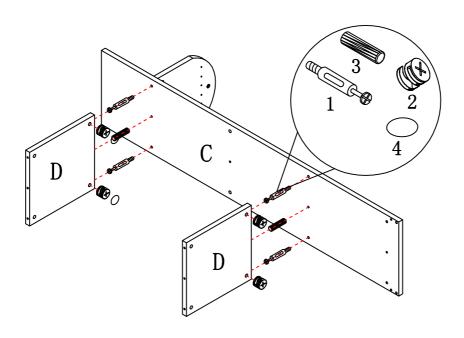


PAGE 5 OF 14


ASSEMBLY INSTRUCTIONS

COASTER

STEP 3

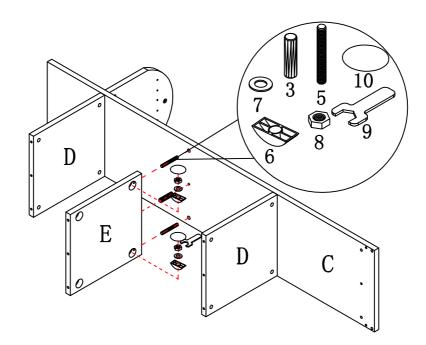

STEP 4

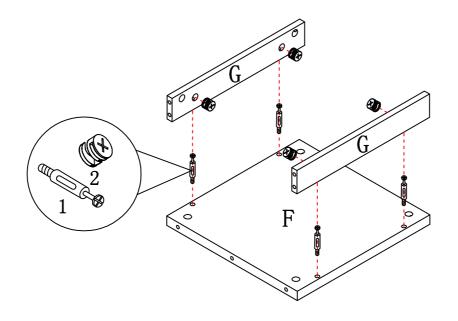


PAGE 6 OF 14


ASSEMBLY INSTRUCTIONS

COASTER

STEP 5

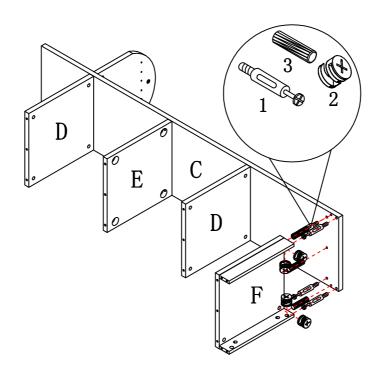


STEP 6

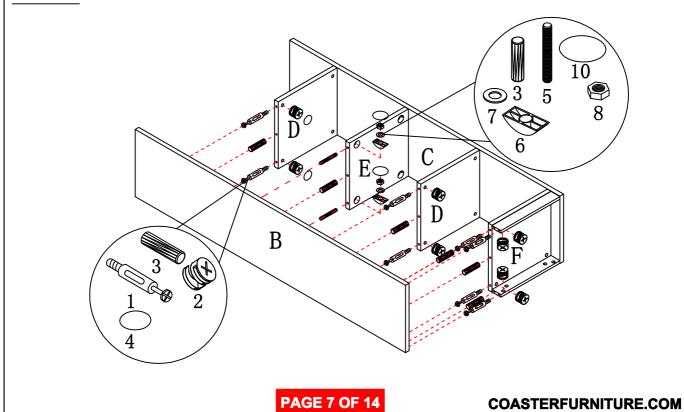


ASSEMBLY INSTRUCTIONS

COASTER

STEP 7

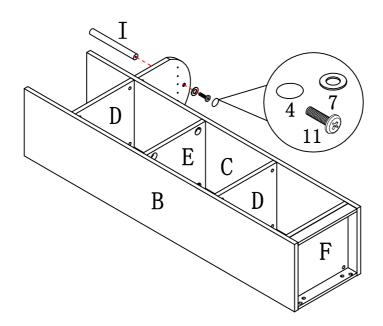

STEP 8

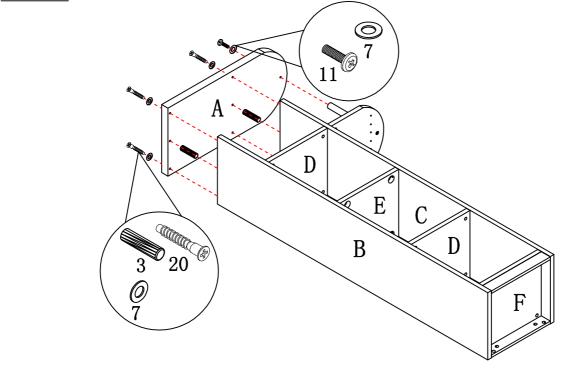


PAGE 8 OF 14


ASSEMBLY INSTRUCTIONS

COASTER

STEP 9

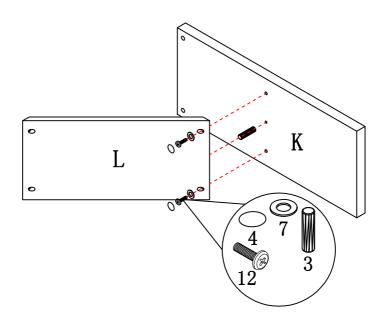

STEP 10

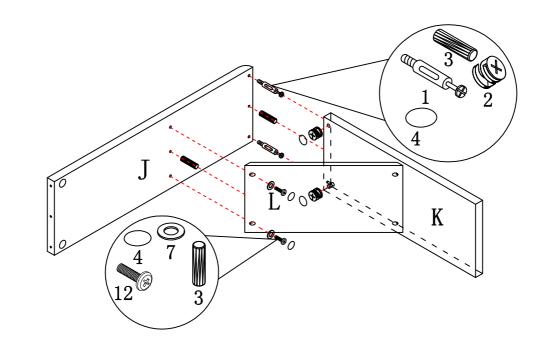


PAGE 9 OF 14


ASSEMBLY INSTRUCTIONS

COASTER

STEP 11

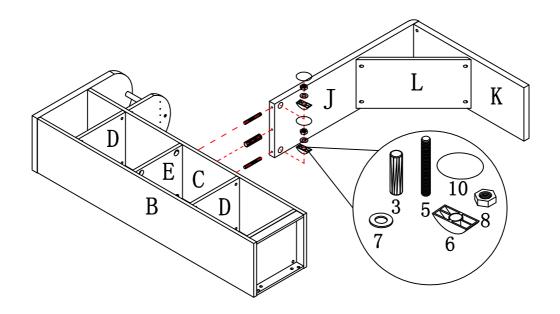

STEP 12

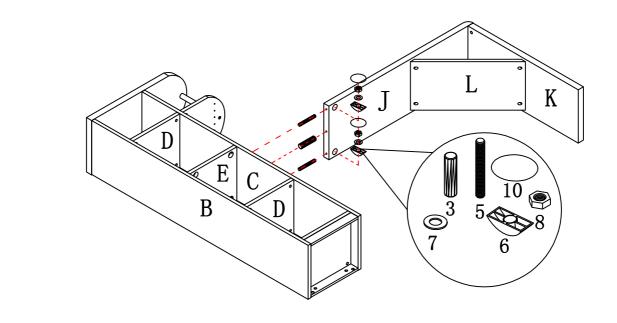


PAGE 10 OF 14


ASSEMBLY INSTRUCTIONS

COASTER

STEP 13

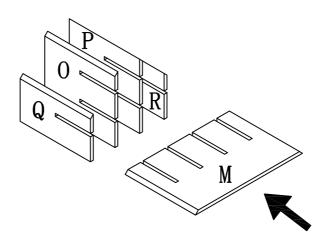


STEP 14

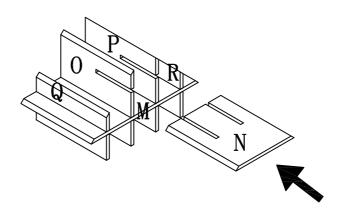


PAGE 11 OF 14


ASSEMBLY INSTRUCTIONS

STEP 15

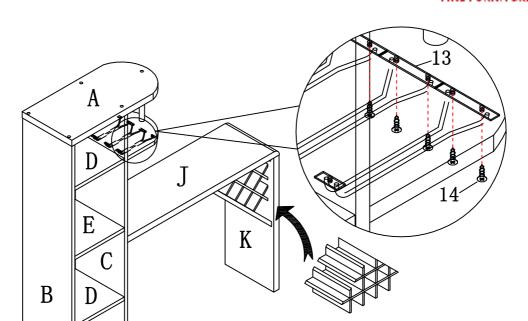

STEP 16

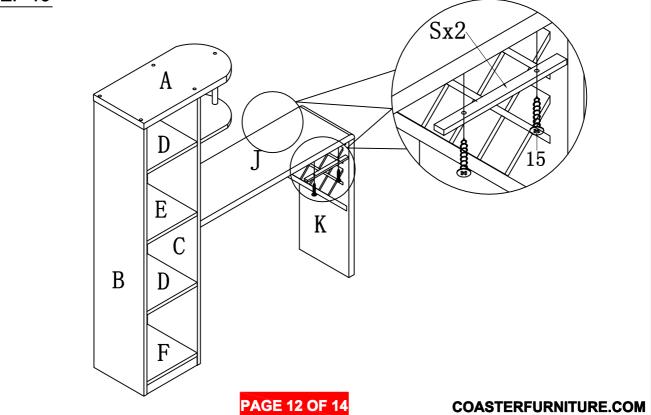

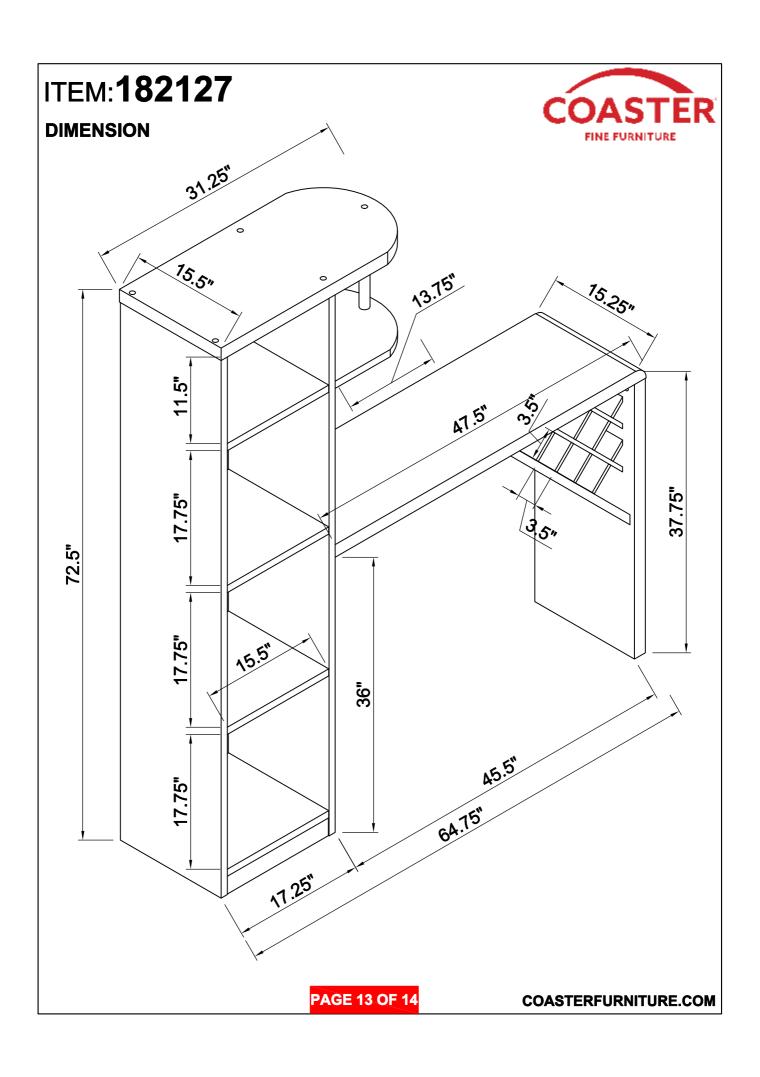



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furnituremay result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail to the furniture using short screw provided, through the smaller hole.

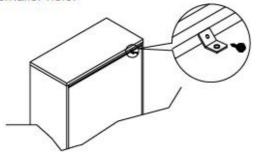


STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

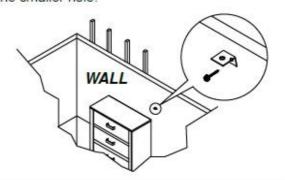

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking and draw it until all slack is removed. Confirm that the strap is securely laced and locked.

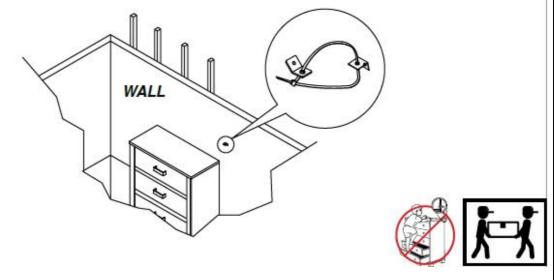

PAGE 14 OF 14