

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0:12/07/2024 REVISION 1: 21/08/2024

PAGE 1 OF 5

COASTERFURNITURE.COM



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly. Warning!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME 10 MINUTES


PARTS IDENTIFICATION

	PART NAME	FIGURE	QTY		PART NAME	FIGURE	QTY
Α	BACK		1PC	Е	FRONT LEG FRAME		1PC
В	SEAT		1PC	F	REAR LEG FRAME		1PC
С	RIGHT ARM	Contraction of the second seco	1PC	G	ROCKER		2PCS
D	LEFT ARM		1PC				

Z HARDWARE IDENTIFICATION


	HARDWARE NAME	FIGURE	QTY		HARDWARE NAME	FIGURE	QTY
1	BOLTS (M8 x 20 MM - BLK)		4PCS	6	WASHER (M6 x 18 MM - BLK)	0	4PCS
2	BOLTS (M6 x 45 MM - BLK)		4PCS	7	SPRING GASKET M8		4PCS
3	BOLTS (M6 x 20 MM - BLK)		10PCS	8	SPRING GASKET M6	Ø	4PCS
4	BOLTS (M6 x 30 MM - BLK)		2PCS	9	ALLEN KEY (M5)		1PC
5	WASHER (M8 x 22 MM - BLK)	0	4PCS				



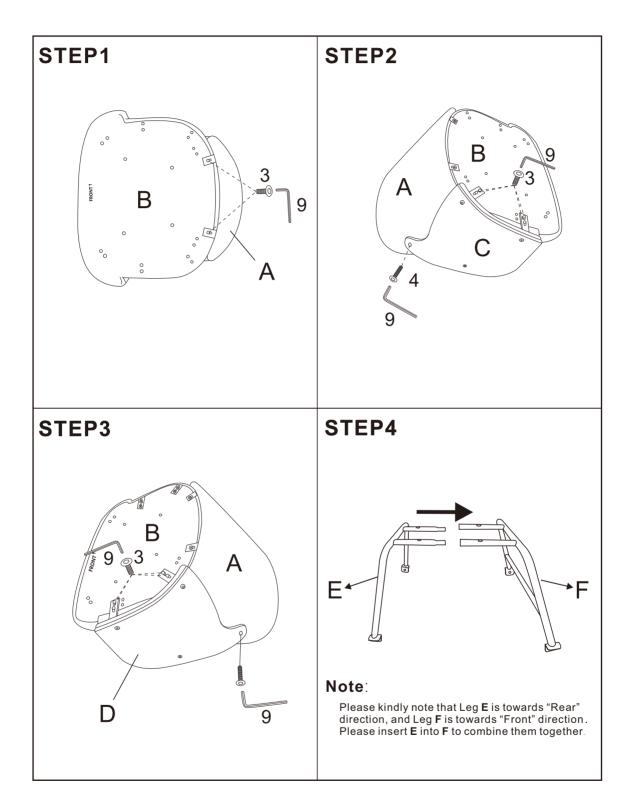


PAGE 3 OF 5



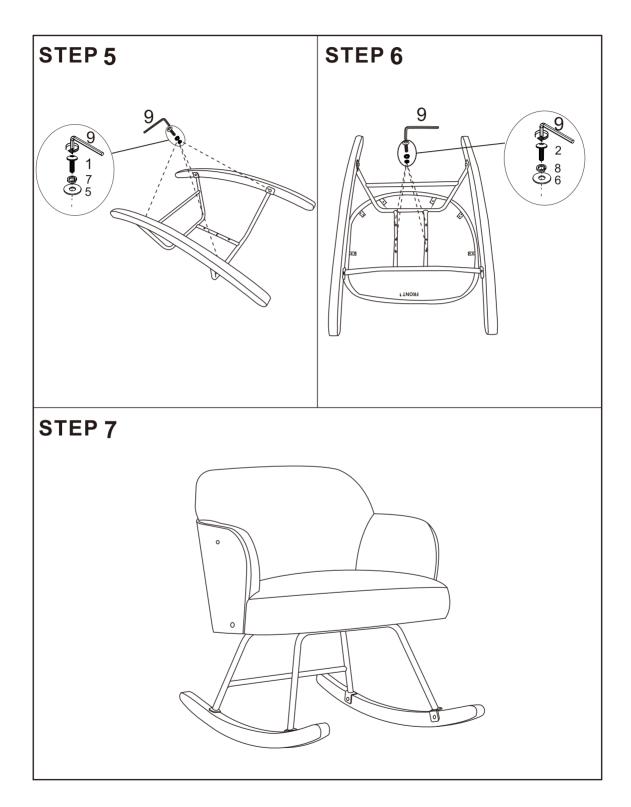

PAGE 4 OF 5



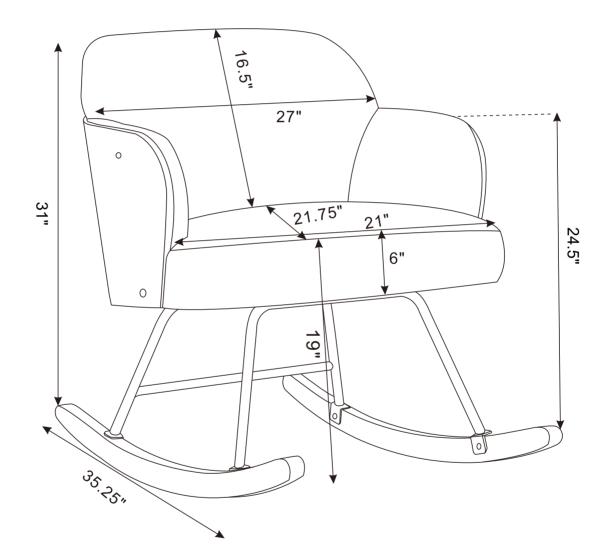

Note:Dimension tolerance±5%

PAGE 5 OF 5