

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 06/01/2020 REVISION 1 : 04/22/2021 REVISION 2 : 07/21/2022 REVISION 3 : 06/24/2024

PAGE 1 OF 20

COASTERFURNITURE.COM




ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING! 1. Don't attem 2. This produc

Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
This product is for home use only and not intended for commercial establishments.

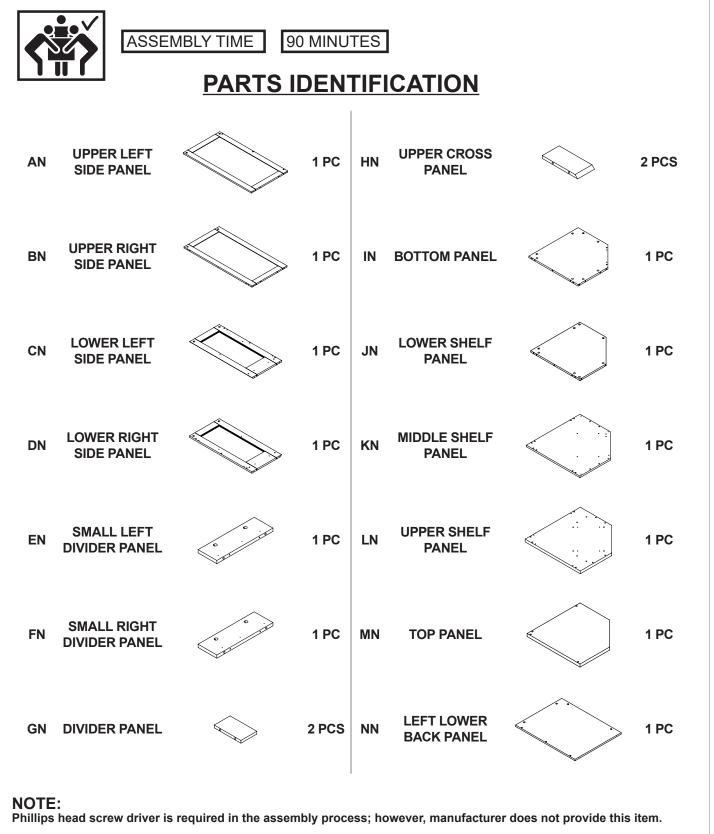

PAGE 2 OF 20

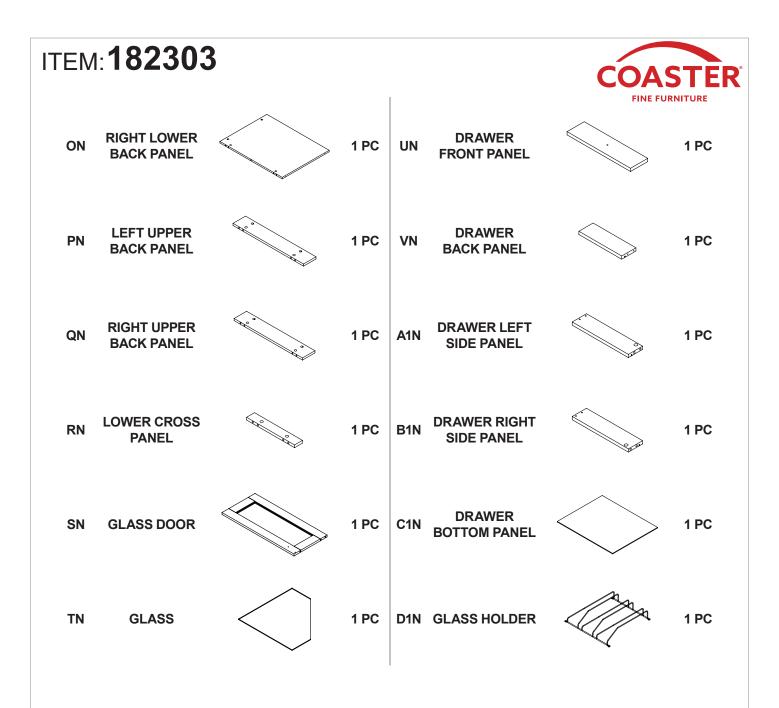

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.






HARDWARE IDENTIFICATION


ZN							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		2 PCS	12	SCREW FOR DOOR Ø6.5x10mm RBW		1 PC
2	WOODEN DOWEL Ø8x30mm		70 PCS	13	FIXED DOOR DAMPER		1 PC
3	CAM BOLT Ø7x35.5mm SR	al C-O	40 PCS	14	FLEXIBLE DOOR DAMPER		1 PC
4	CAM LOCK Ø15x12mm SR		48 PCS	15	GLASS CLAMP SR		3 PCS
5	SCREW Ø4.5x42mm SR	ATTITUTE .	14 PCS	16	SCREW Ø4x15mm SR FOR GLASS CLAMP	(Contraction)	3 PCS
6	PLASTIC FEET Ø15mm	\mathcal{D}	8 PCS	17	STICKER Ø 20mm		10 PCS
7	CAM BOLT Ø7x63mm SR	02 12	4 PCS	18	SCREW Ø4x17mm SR	E Days	4 PCS
8	WOODEN DOWEL Ø8x50mm		4 PCS	19	GLIDES L=300mm BLK	CL CR	1 SET
9	HANDLE		2 PCS	20	GLIDES SCREW Ø3x12mm BLK	A MARK	12 PCS
10	HANDLE BOLT Ø4x25mm BLK		2 PCS	21	SCREW Ø4.3x35mm SR	antitutitate @	4 PCS
11	MAGNETIC CATCH		1 PC				
ZN19 not included in blister packaging.							


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


PAGE 4 OF 20

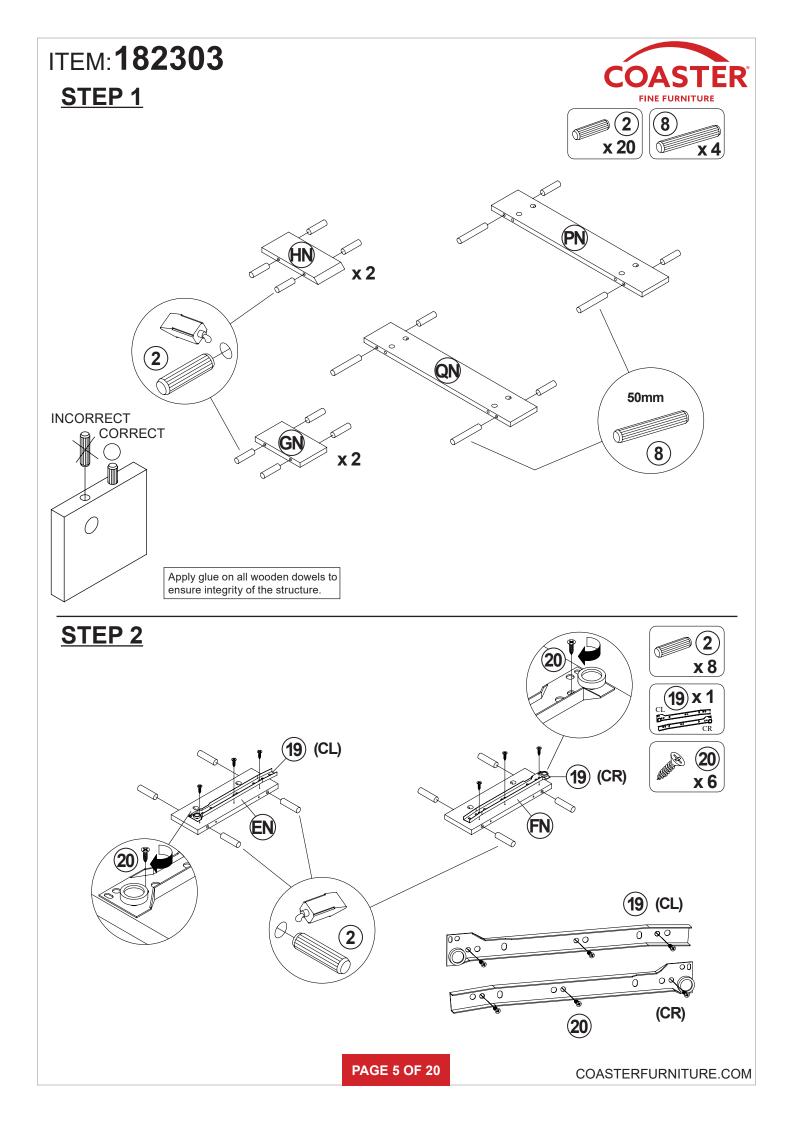


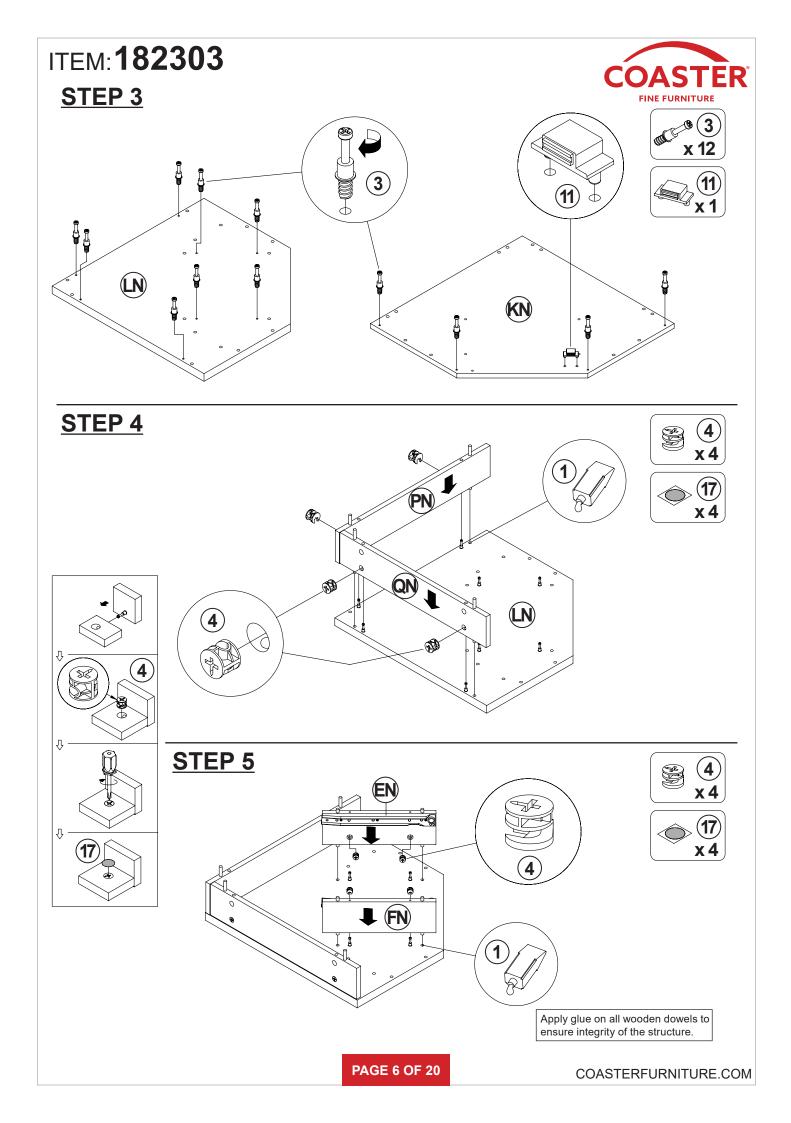


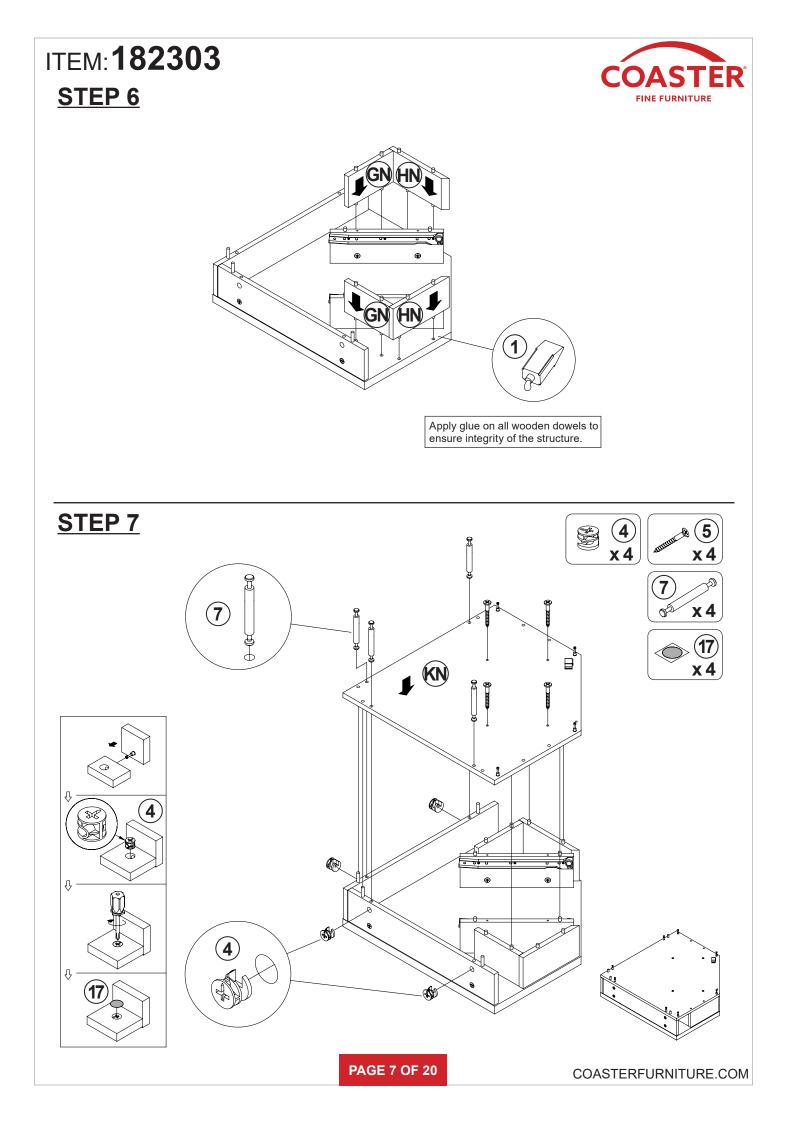


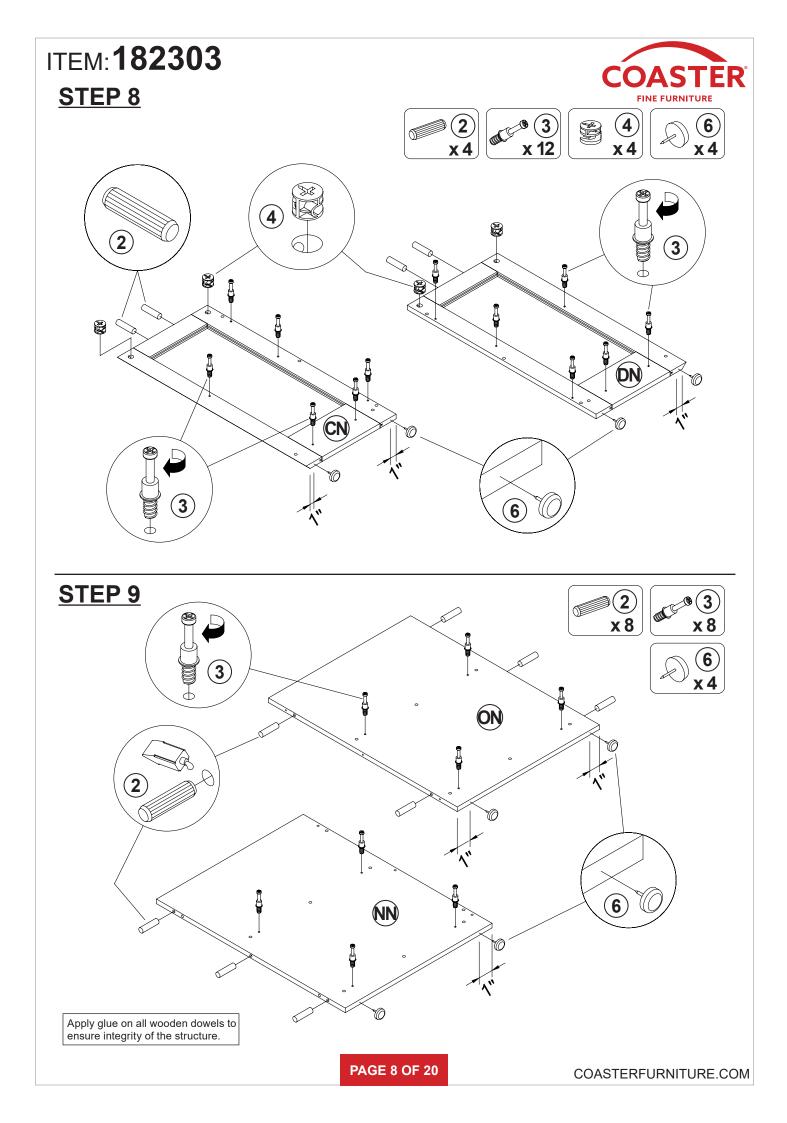


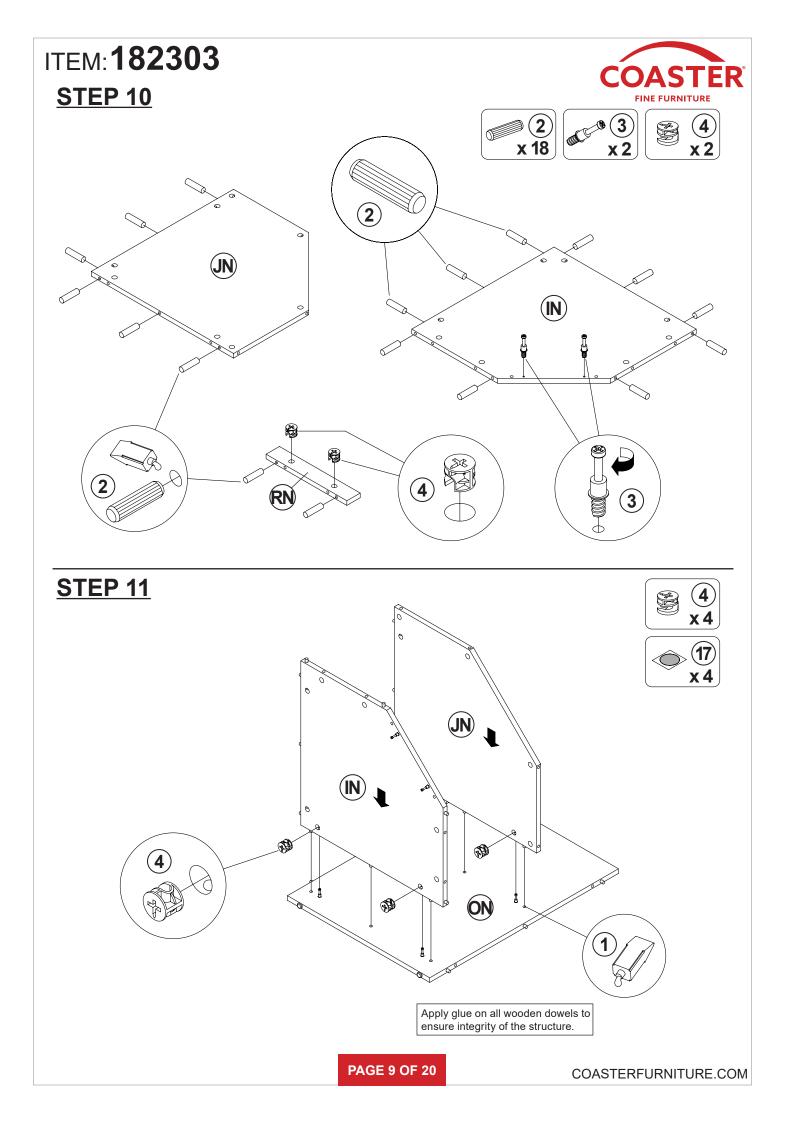


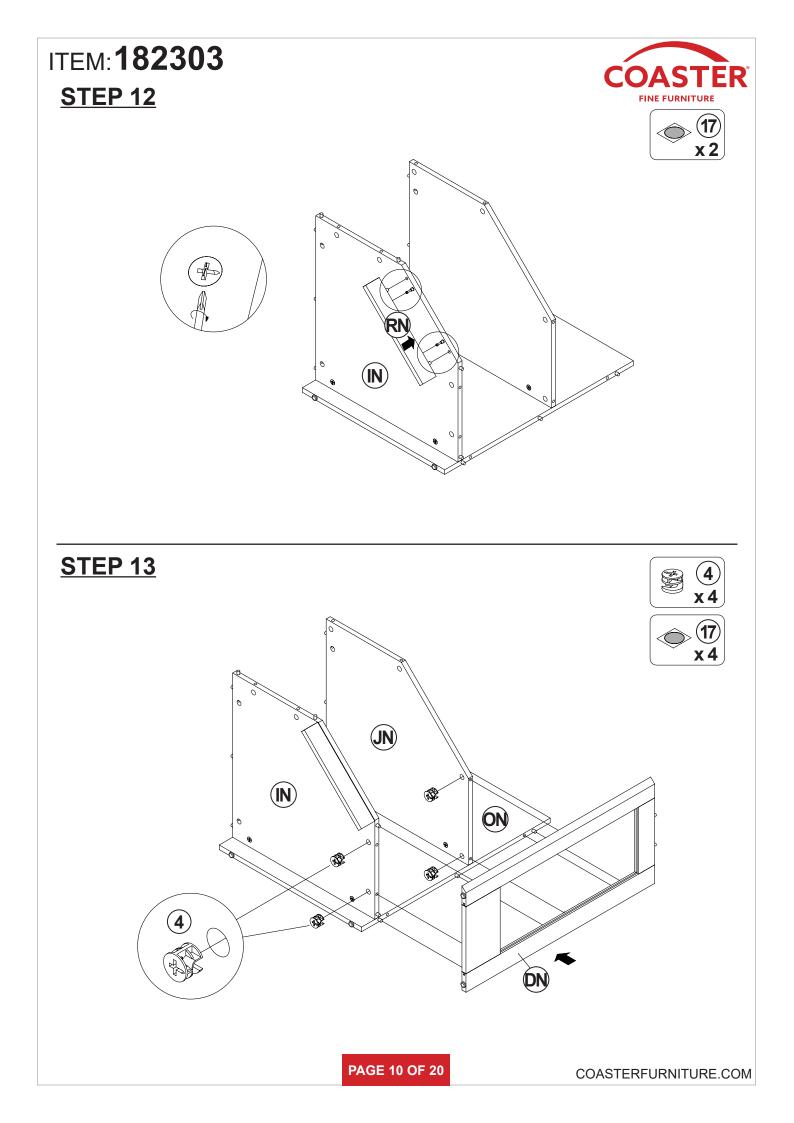


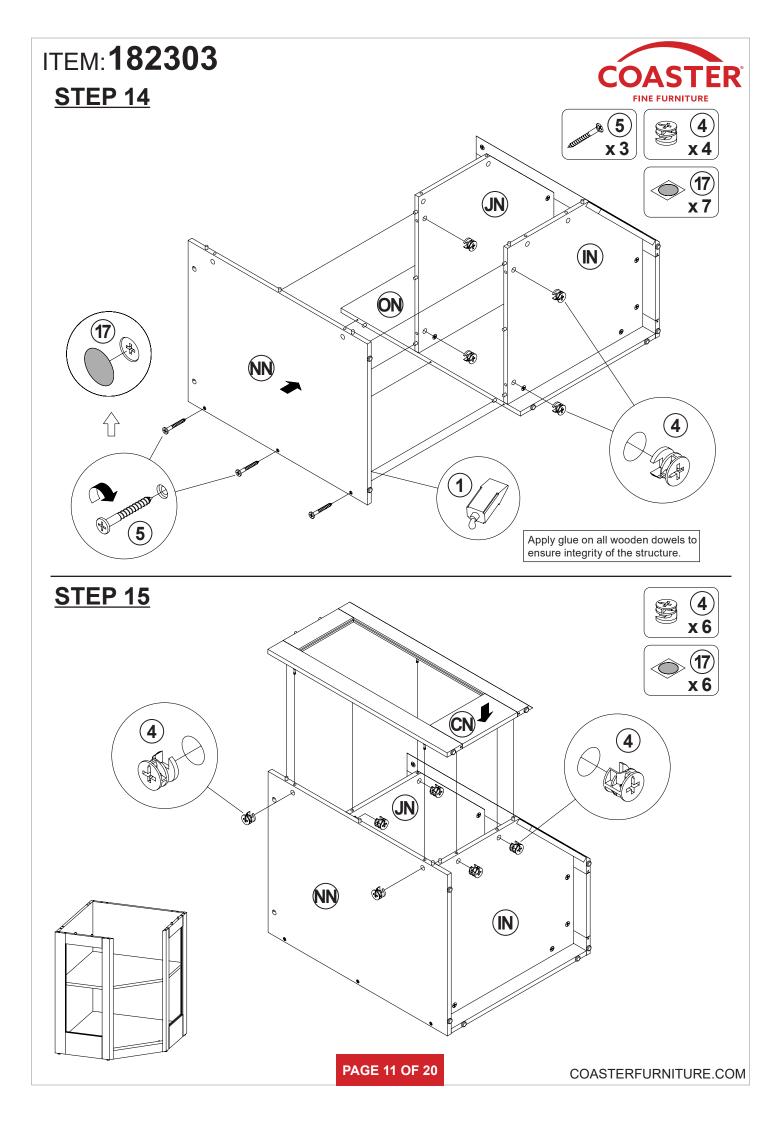


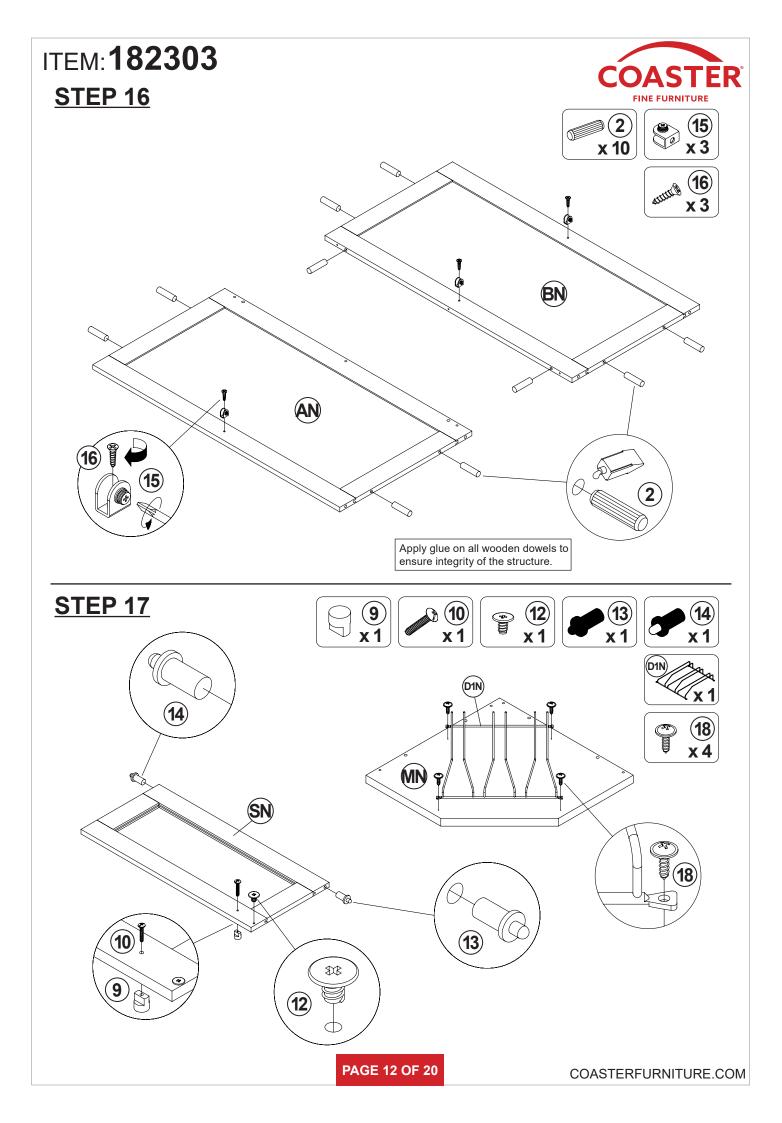


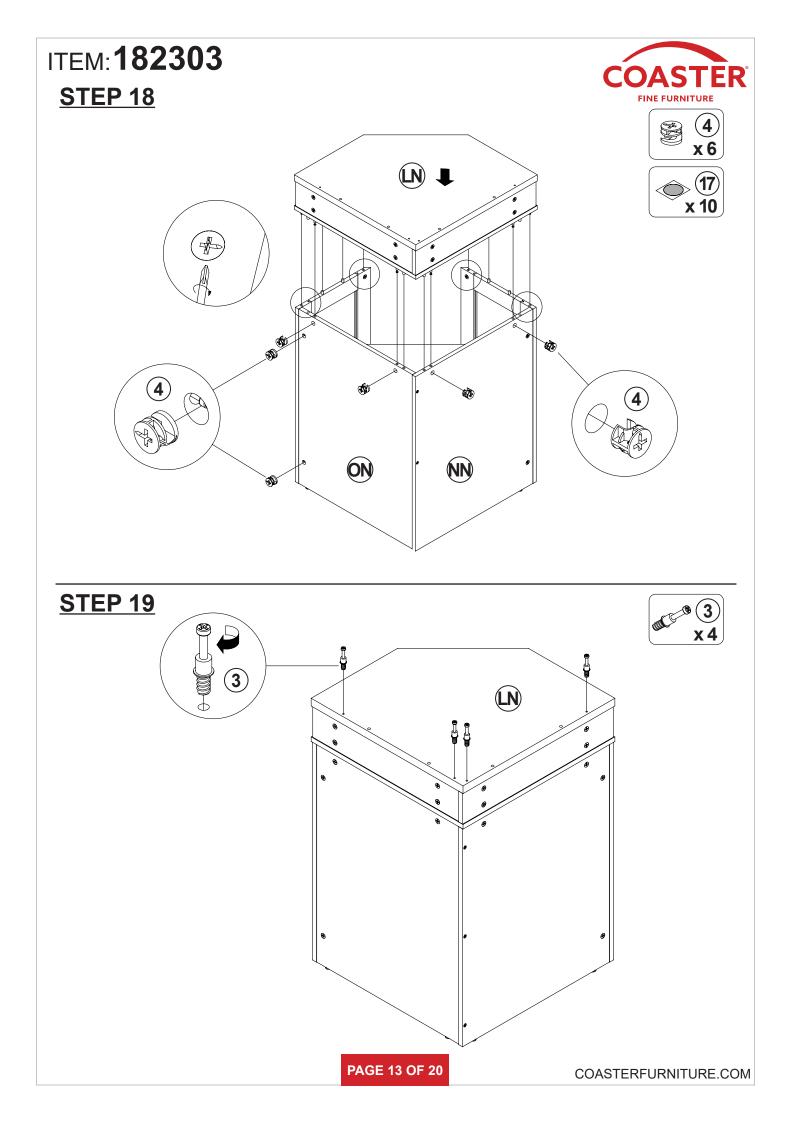


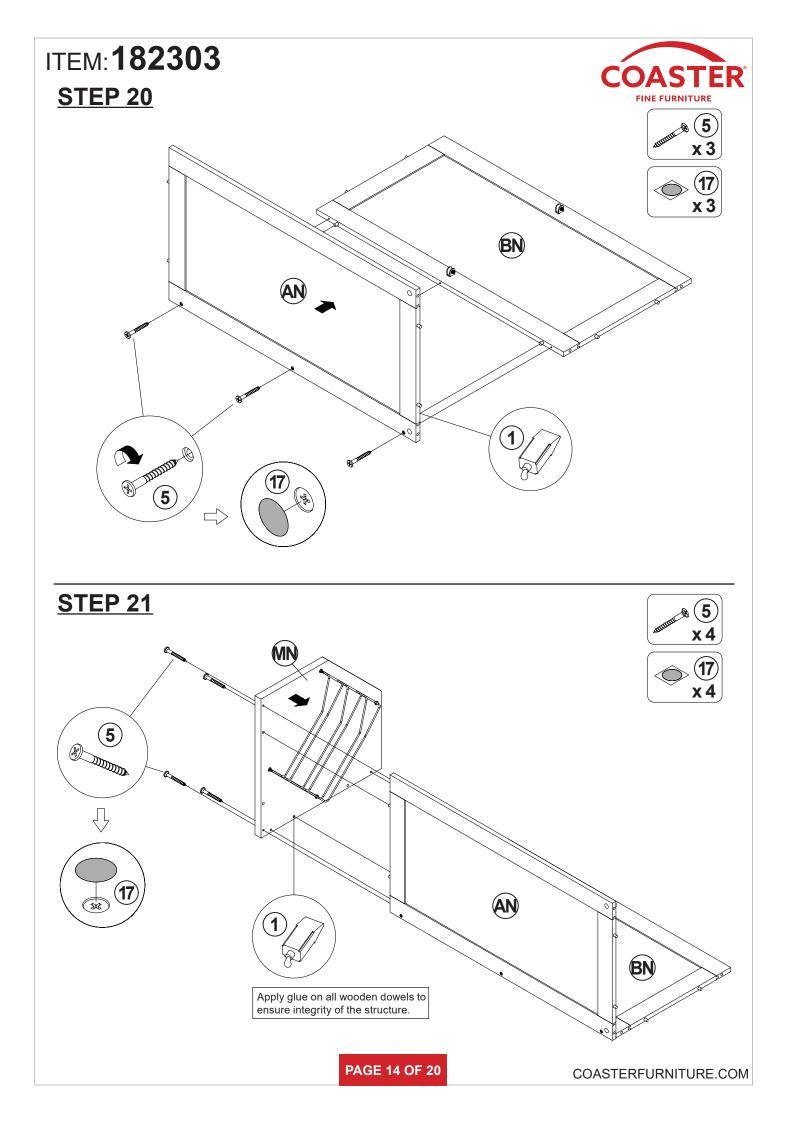

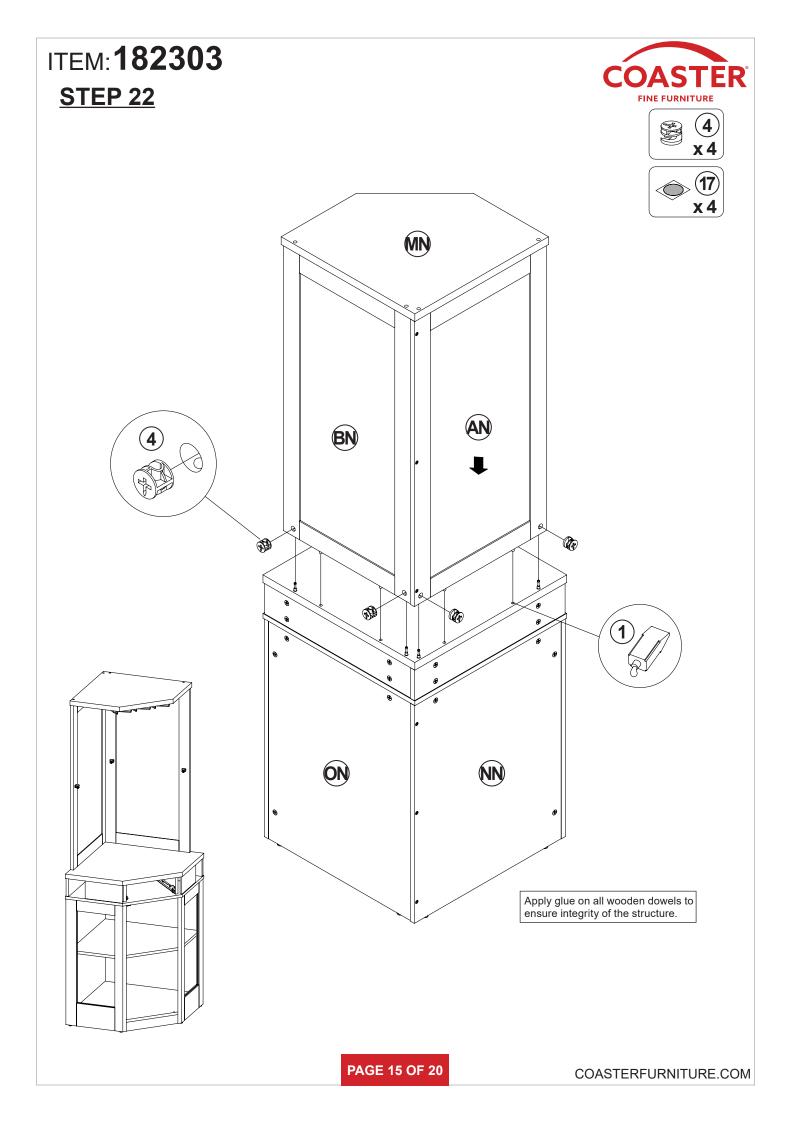


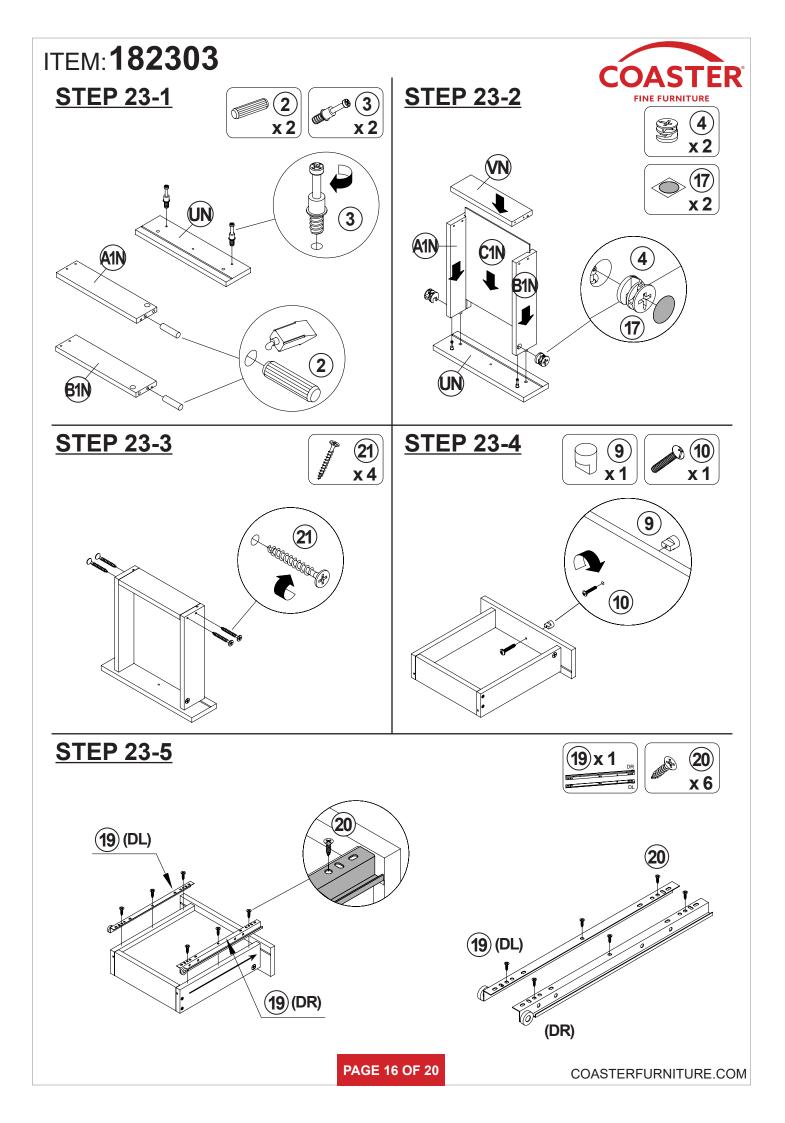

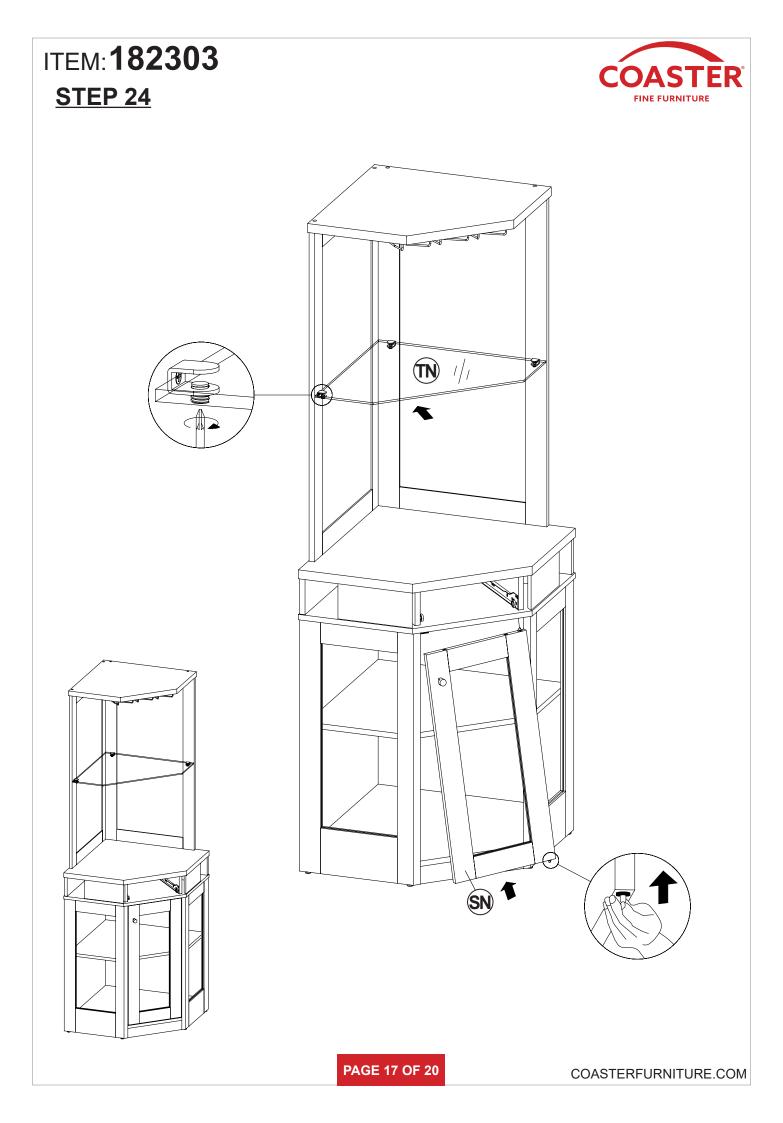

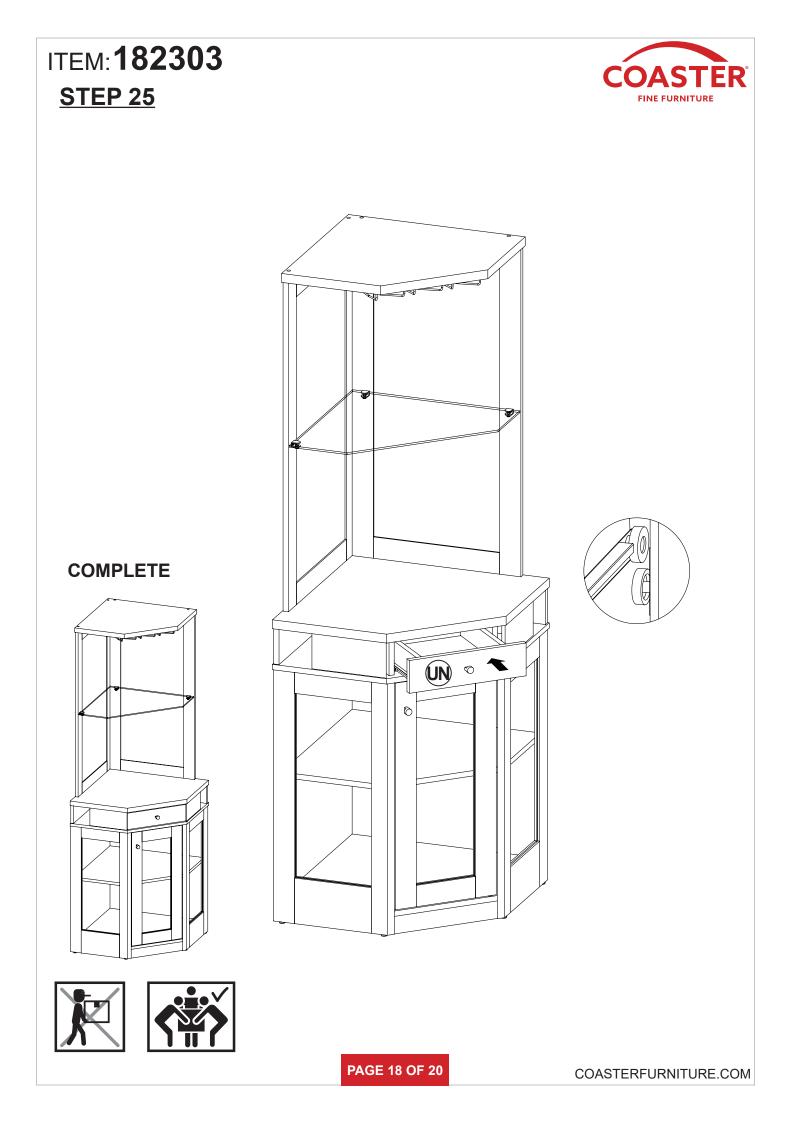



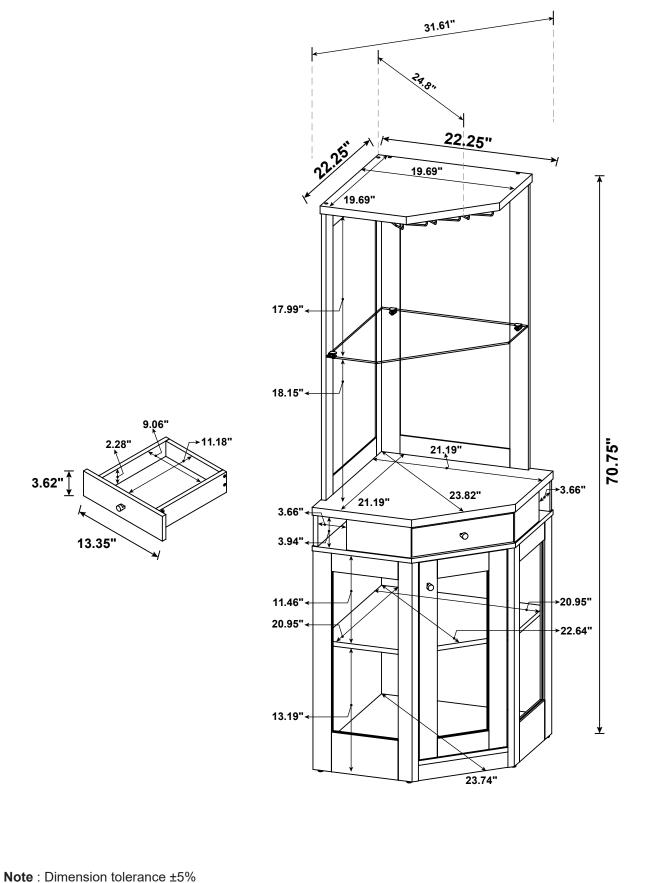



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT


WARNING

Injury may result from tipping furniture. This restraint may protect against tipping furniture. Do not allow children to climb on furniture. This restraint is not a substitute for proper adult supervision. Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

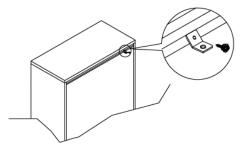

STEP 2

Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

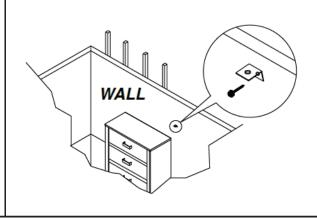

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

