

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

109400 Dining Table

REVISION 0:09/27/2024



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	ТОР	1PC
В	MOUNTING PLATE	1PC
С	LEG	4PCS
D	BASE	1PC


HARDWARE IDENTIFICATION

1	LONG BOLT (Ø5/16" x 50mm - RBW)	16PCS
2	SHORT BOLT (Ø5/16" x 32mm - RBW)	8PCS
3	LOCK WASHER (Ø5/16" x 2mm - RBW)	24PCS
4	FLAT WASHER (Ø5/16" x 2mm - RBW)	24PCS
5	ALLEN WRENCH (Ø4" x 58mm - RBW)	1PC


ASSEMBLY INSTRUCTIONS

COASTER

STEP 1

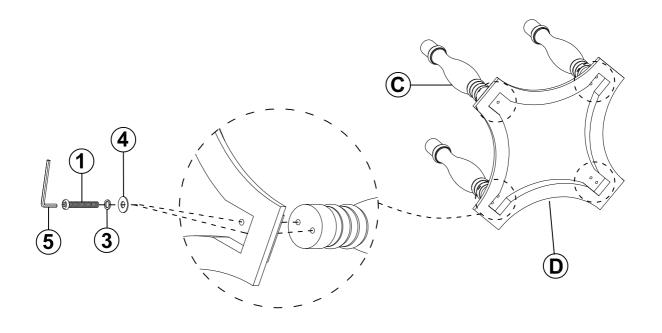


STEP 2

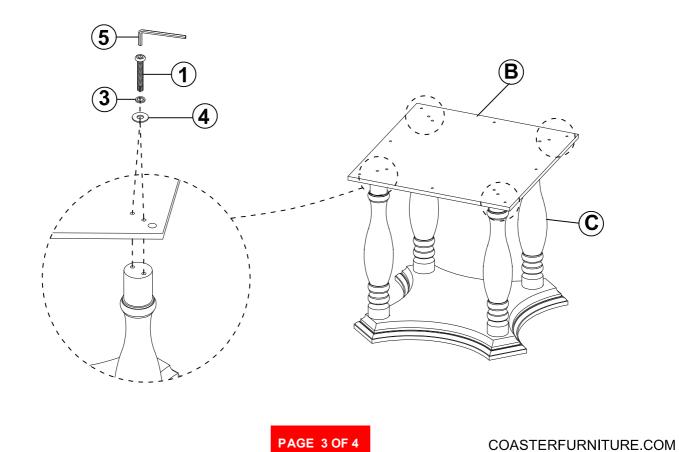

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

STEP 3

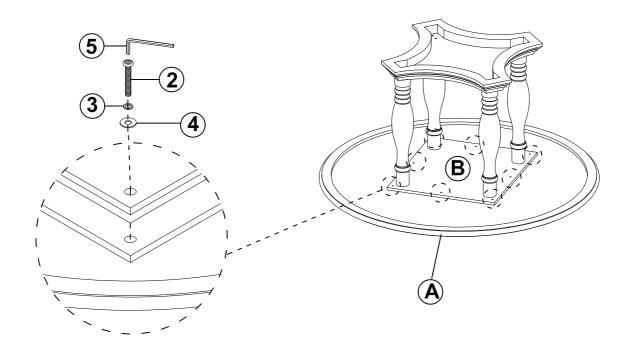


STEP 4 COMPLETE







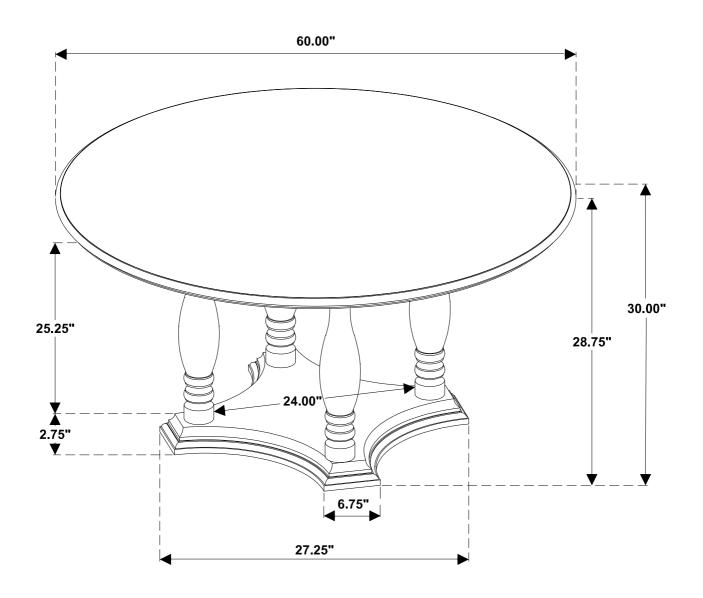

Note: Dimension tolerance ±5%