

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

204192 Nighstand

REVISION 0 : 06/17/2015 REVISION 1 : 12/17/2017 REVISION 2 : 06/04/2019

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: **204192**

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2 . Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Λ

WARNING!

- 1 . Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2 . This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

1PC

D RIGHT BACK LEG (WITH BR LABEL)

1PC

E LEFT BACK LEG (WITH BR LABEL)

1PC

C LEFT FRONT LEG (WITH FR LABEL)

1PC

HARDWARE IDENTIFICATION

1 BOLT (M6 x 35mm - BLK) 8PCS 3 FLAT WASHER (1/4" x 20mm - BLK) 8PCS
2 LOCK WASHER (1/4" - BLK) 8PCS 4 ALLEN WRENCH (M4 x 65mm - BLK) 1PC

NOTE:


Philips head screw driver in the assembly process; however, manufacturer does not provide the item

ITEM: **204192**


ASSEMBLY INSTRUCTIONS

STEP 1



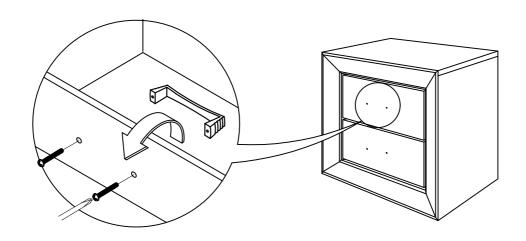


STEP 2

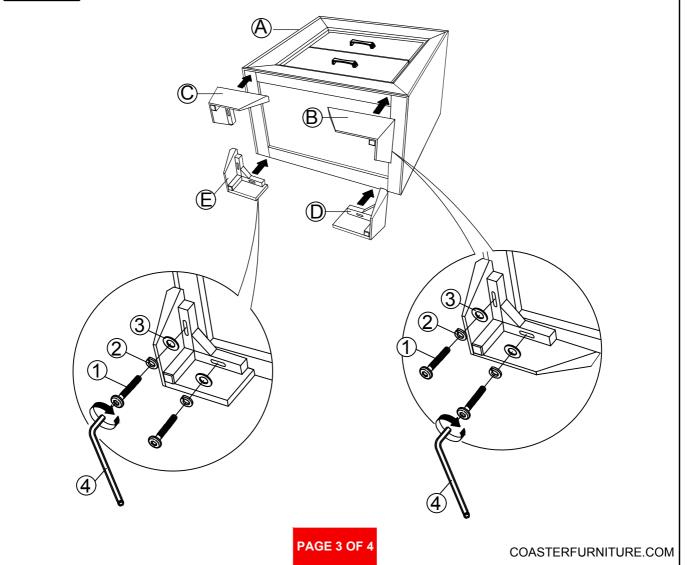

ITEM: **204192 ASSEMBLY INSTRUCTIONS**



STEP 3
COMPLETE

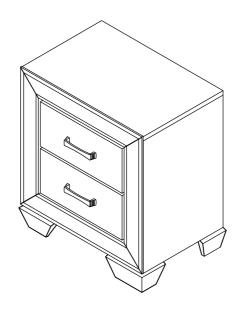




ITEM: **204192**



Inner Size Of Drawer: 12.75"W X 12.75"D X 5.00"H X 0.25"T

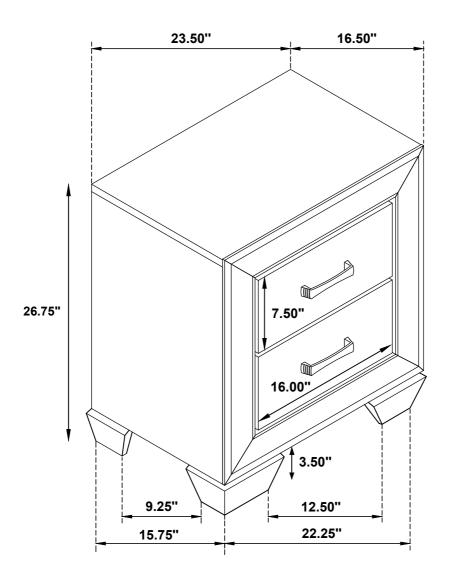

Note: Dimension tolerance ±5%