

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225063
Dresser

ITEM: **225063**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A DRESSER

1PC

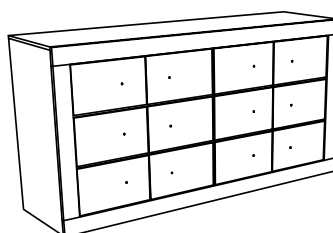

B LEG WITH LABEL "R"

2PCS



C LEG WITH LABEL "L"

2PCS



D CENTER SUPPORT LEG
WITH LEVELER

1PC



HARDWARE IDENTIFICATION

1 BOLT
(M6 x 35mm - BLK)

4PCS



2 LOCK WASHER
(1/4" - BLK)

4PCS



 
3 FLAT WASHER
(1/4"ID x 19mm - BLK)

4PCS



4 WOOD DOWEL
(8 x 20mm)

4PCS



5 ALLEN WRENCH
(M4 x 60mm - BLK)

1PC



NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **225063**


ASSEMBLY INSTRUCTIONS



STEP 1

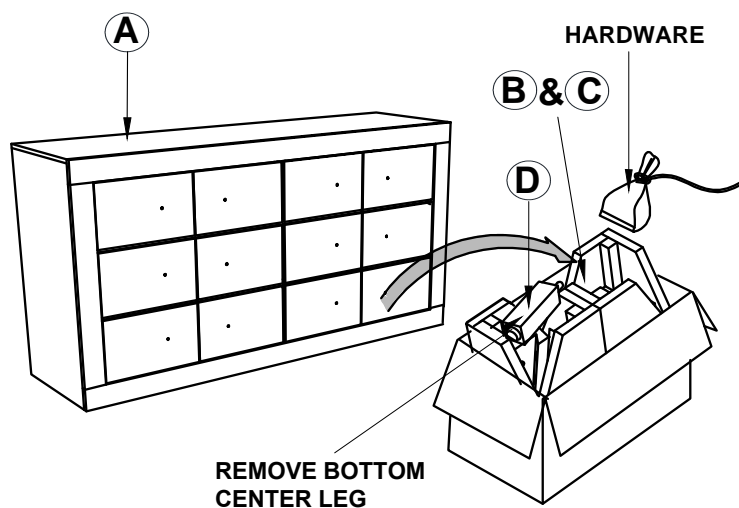


STEP 2

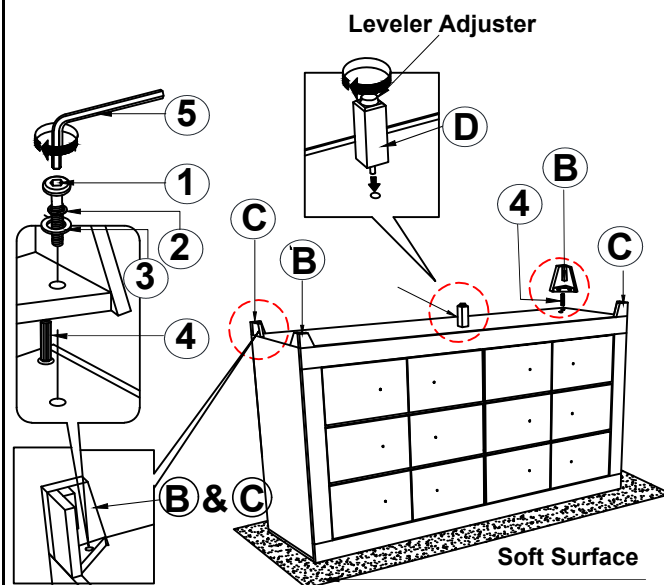

Bottom View

STEP 3

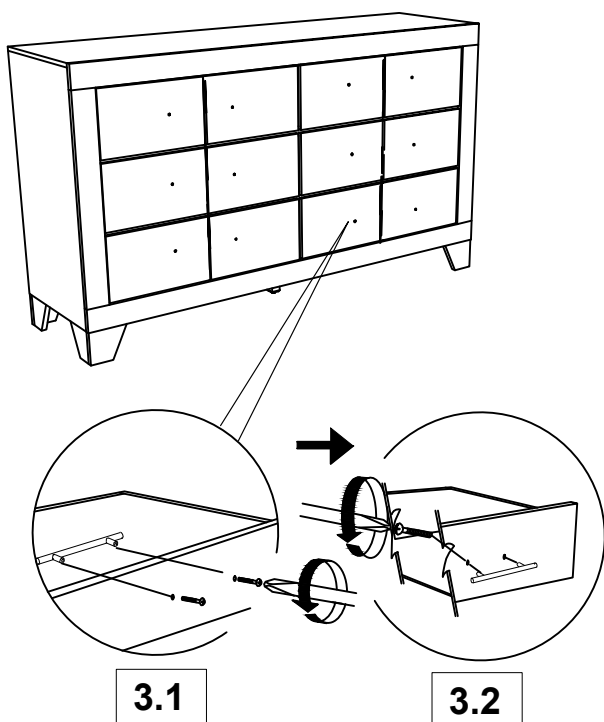


STEP 4 **COMPLETE**



ITEM:225063



Inner Size of Drawer : 23.25"W x 11.25"D x 5.25"H x 0.25"T

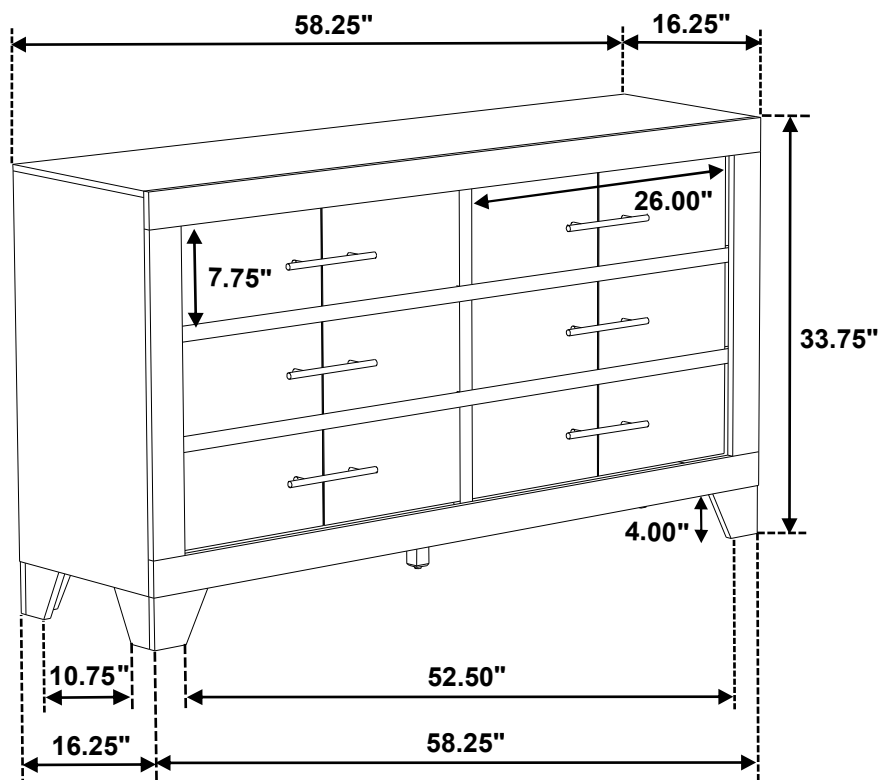

Note : Dimension tolerance $\pm 5\%$