

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

107283

ARM CHAIR

REVISION 0: 12/23/2016 REVISION 1: 05/20/2019 REVISION 2: 11/30/2019 REVISION 3: 12/14/2019

REVISION 4: 08/15/2022 REVISION 5: 12/24/2024 PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 107283

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A	

SEAT AND 1PC **BACK**

В



 
BACK RIGHT 1PC **LEG**

C



BACK LEFT 1PC **LEG**

D



2PCS **FRONT LEGS**

HARDWARE INDENTIFICATION

LARGE BOLT 4PCS (M8×65mm)

2

SMALL BOLT 4PCS (M8×60mm)

3

ALLEN KEY 1PC (M8)



LOCK WASHER 8PCS (8Φ**)**




FLAT WASHER 8PCS **(**8Φ**)**

ITEM: 107283

ASSEMBLY INSTRUCTIONS



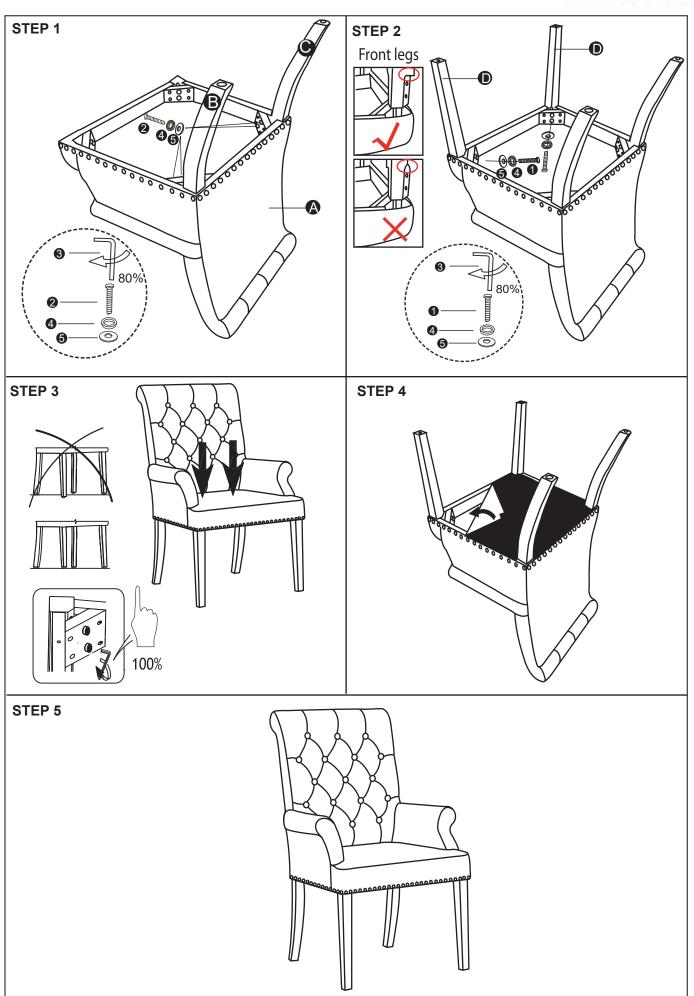

ITEM: 107283

COASTER FINE FURNITURE

ASSEMBLY INSTRUCTIONS

