

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

190163

ARM CHAIR

REVISION 0:05/21/2019 REVISION 1:11/30/2019 REVISION 2:07/28/2022

REVISION 3: 12/25/2024

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 115183

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A

SEAT AND 1PC BACK

В

BACK RIGHT 1PC LEG

C

BACK LEFT 1PC

D ...

FRONT LEGS 2PCS

HARDWARE INDENTIFICATION

1	LARGE BOLT (M8×65mm)	4PCS

ALLEN KEY 1PC (M8)


4 LOCK WASHER 8PCS (Φ8)

5 FLAT WASHER 8PCS (Φ8)

ITEM: 190163

ASSEMBLY INSTRUCTIONS



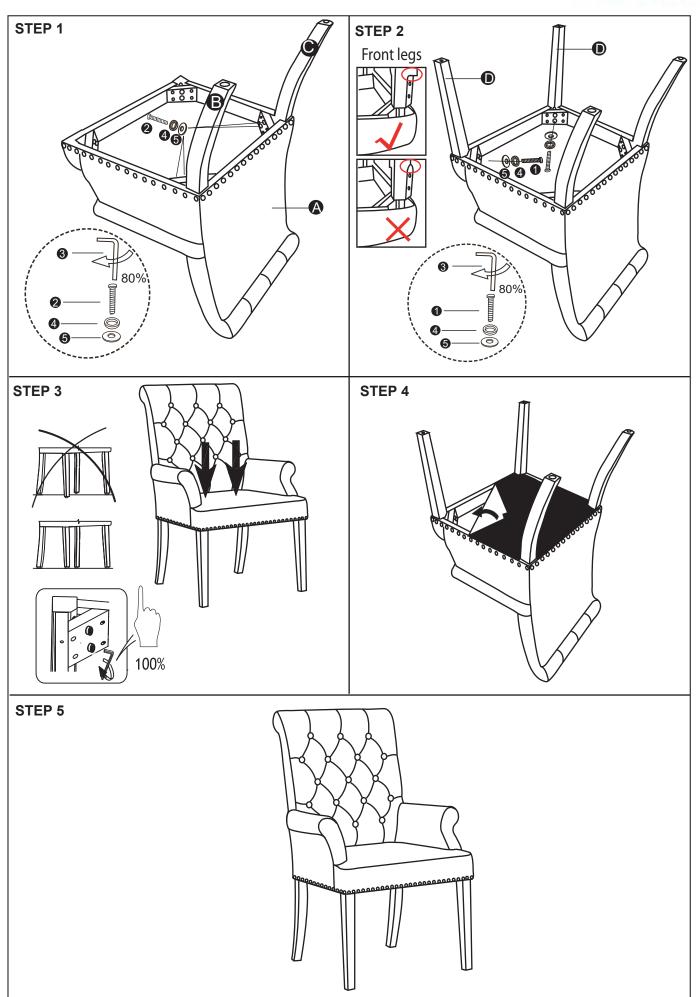

ITEM: 190163

COASTER FINE FURNITURE

ASSEMBLY INSTRUCTIONS

