


# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

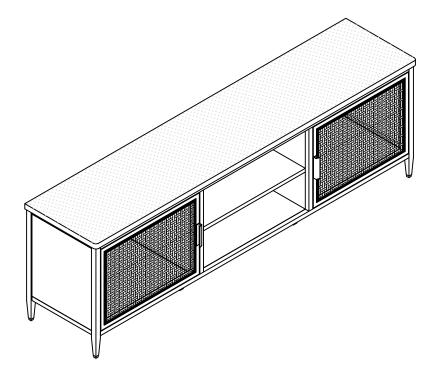

Fine Furniture for every stage of life

**710034** *TV STAND* 

REVISION 0: 07/22/2024 REVISION 1: 01/09/2025

COASTERFURNITURE.COM

# ITEM:710034

## **ASSEMBLY INSTRUCTIONS**



 
#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

20 MINUTE

MAX TV SIZE: 70"

## PARTS IDENTIFICATION

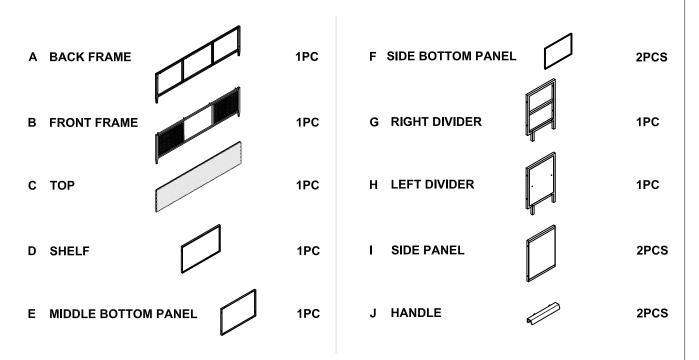

## HARDWARE IDENTIFICATION

| 1 | BOLT<br>(1/4"x1/2")   |       | 16PCS | 5 | WASHER<br>(Ø16mm)        | 24PCS |
|---|-----------------------|-------|-------|---|--------------------------|-------|
| 2 | BOLT<br>(3/16"x3/8")  | Spina | 32PCS | 6 | ALLEN KEY<br>(4x22x60mm) | 1PC   |
| 3 | BOLT<br>(1/4"x1-1/4") |       | 8PCS  |   |                          |       |
| 4 | WASHER<br>(Ø12mm)     |       | 32PCS |   |                          |       |

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM:710034

# **ASSEMBLY INSTRUCTIONS**


STEP 1: ASSEMBLY
Do not fully tighten all bolts until assembly is complete.





3 (a) 4PCS 5 (a) 4PCS

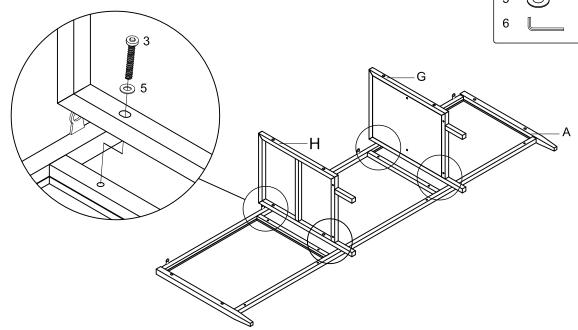


This will help all parts to assemble properly.

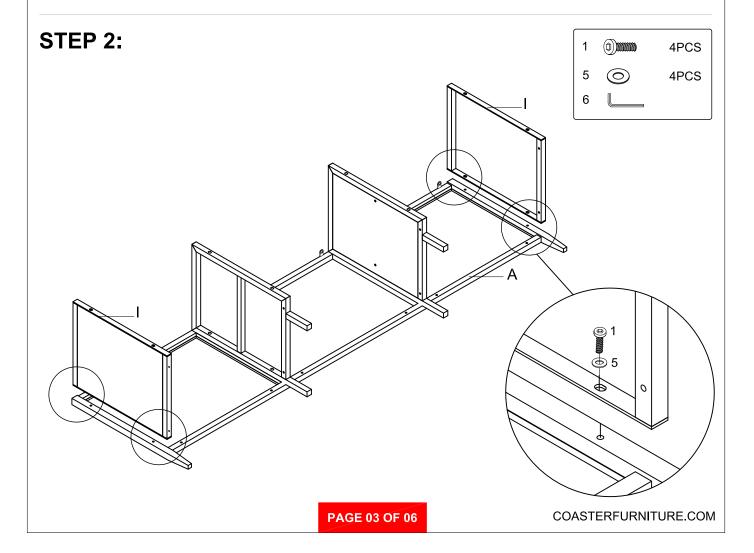

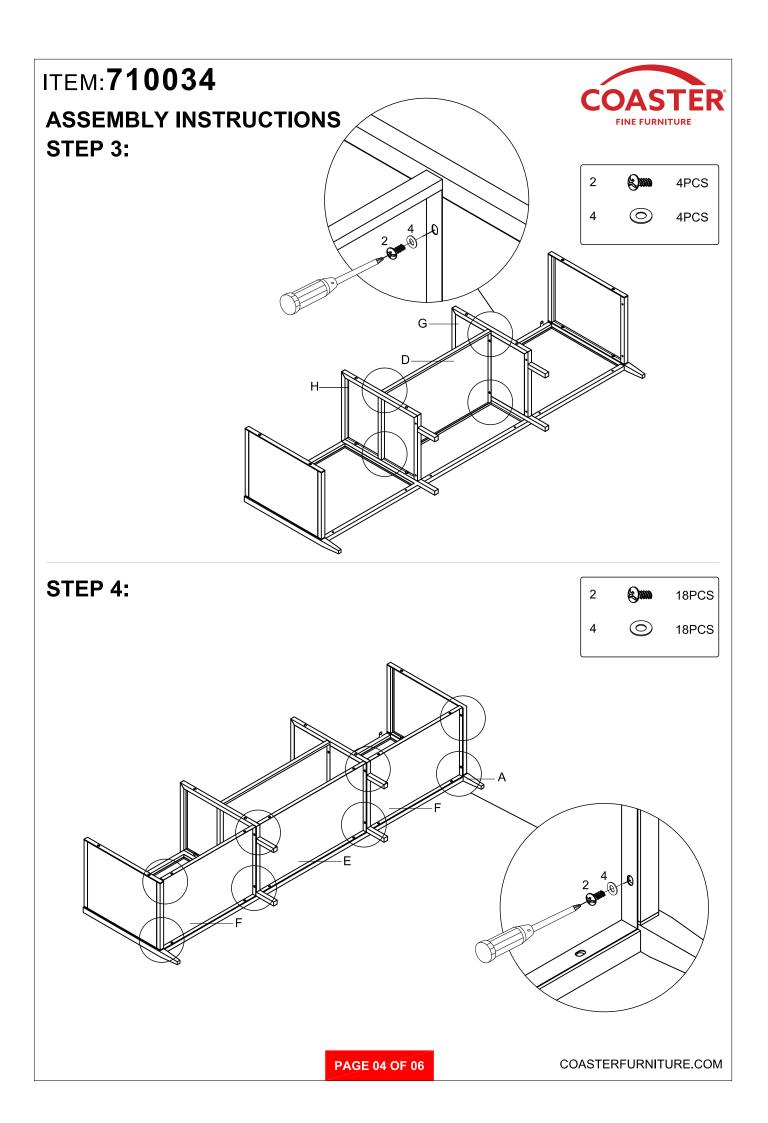


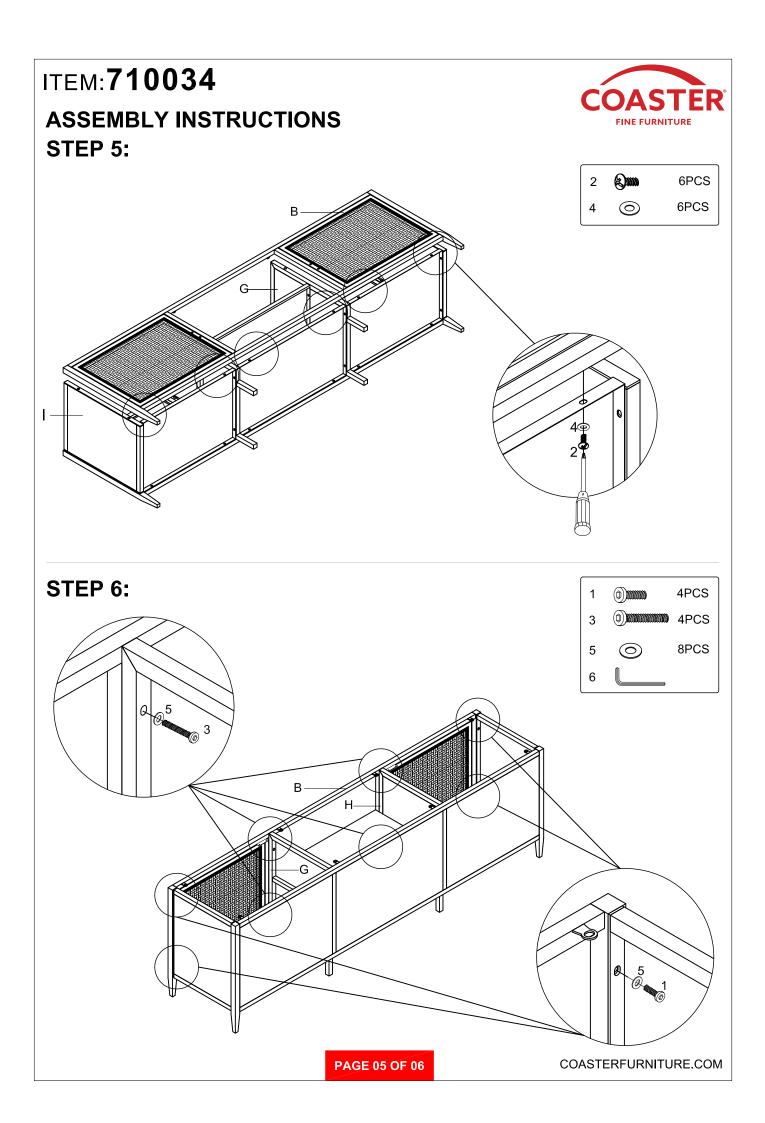

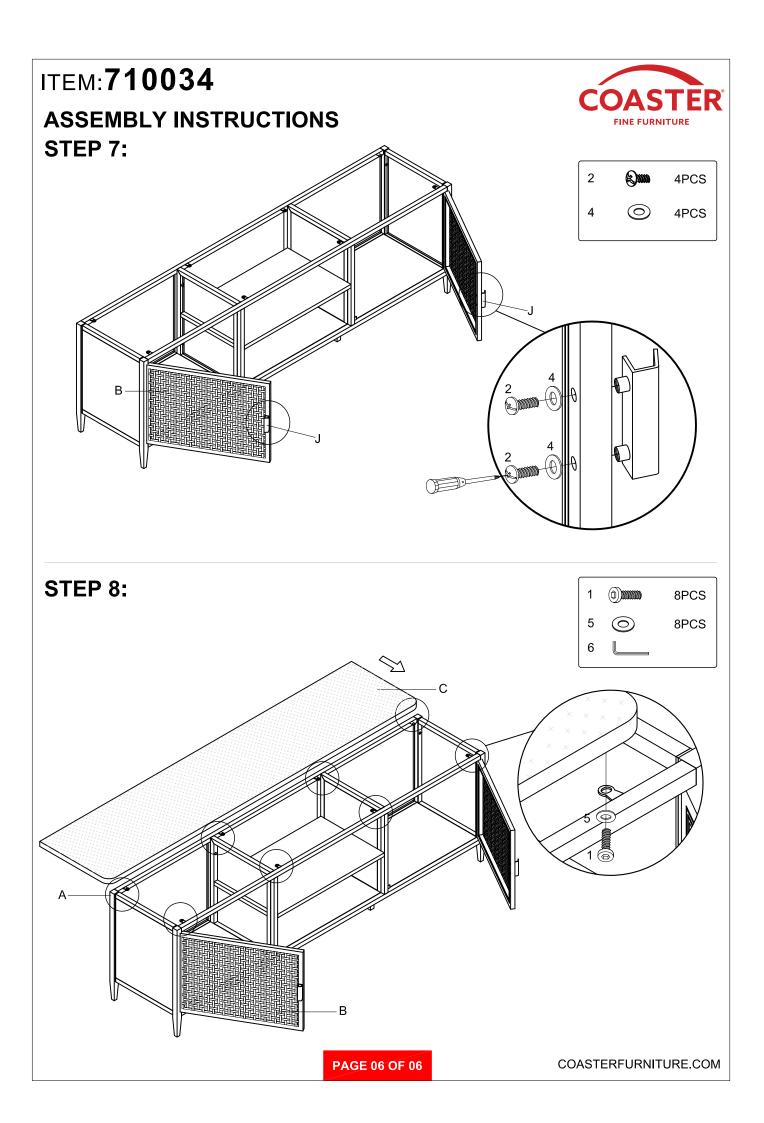

# ITEM:**710034**



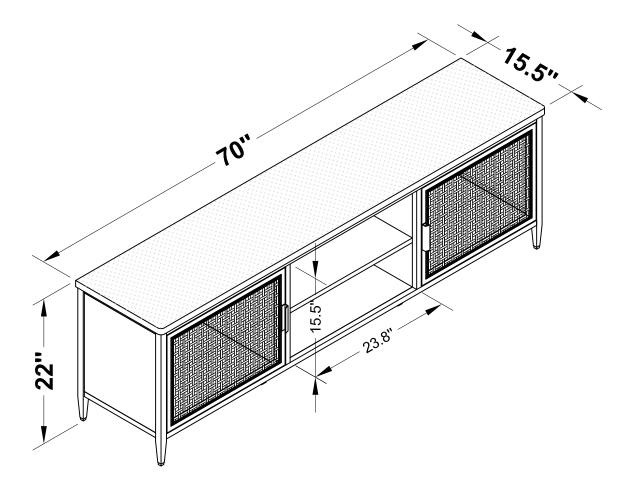

Note: Dimension tolerance ±5%