


# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

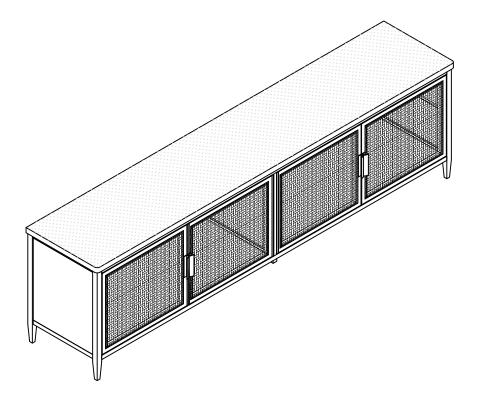

Fine Furniture for every stage of life

**710035** *TV STAND* 

REVISION 0: 07/22/2024 REVISION 1: 01/09/2025

PAGE 01 OF 06 COASTERFURNITURE.COM

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

20 MINUTE

MAX TV SIZE: 78"

### PARTS IDENTIFICATION

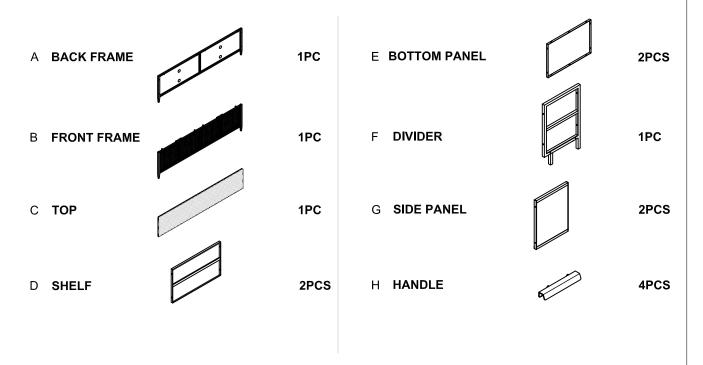

### HARDWARE IDENTIFICATION

1	BOLT (1/4"x1/2")	16PCS	4	WASHER (Ø12mm)	36PCS
2	BOLT (3/16"x3/8")	36PCS	5	WASHER (Ø16mm)	20PCS
3	BOLT (1/4"x1-1/4")	4PCS	6	ALLEN KEY (4x22x60mm)	1PC

#### NOTE:

 
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


STEP 1:


### **ASSEMBLY INSTRUCTIONS**


SSEMBLY





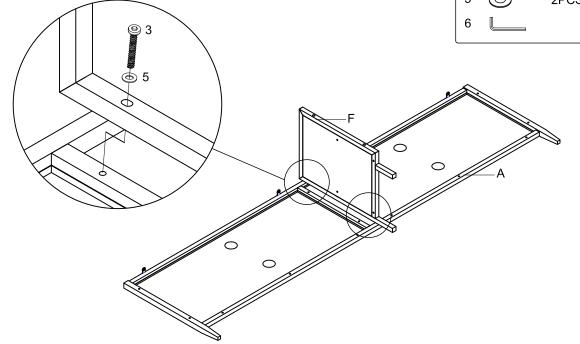

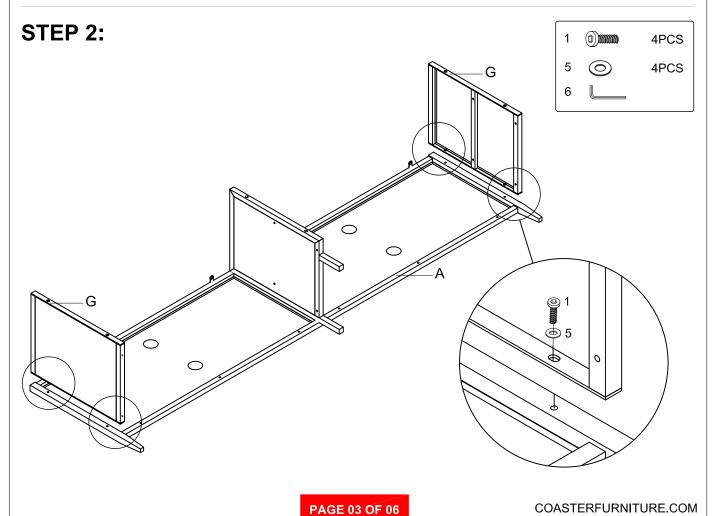

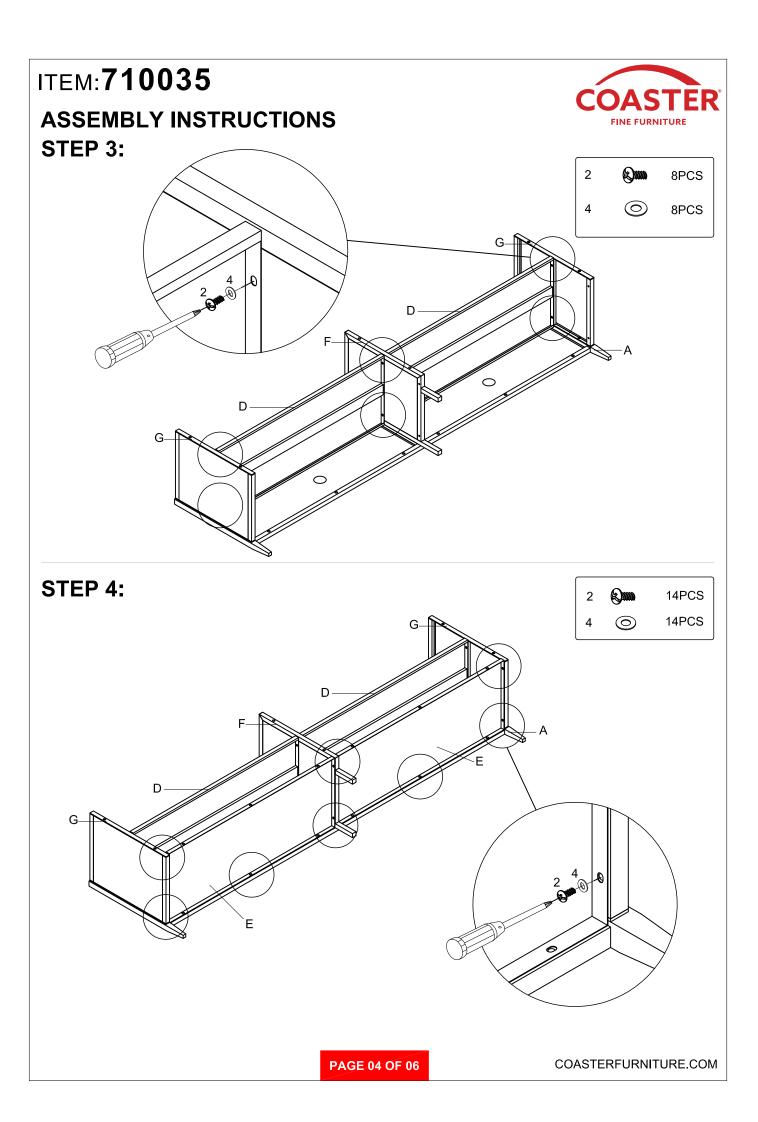

## ASSEMBLY INSTRUCTIONS

STEP 5:





2 **(2)** 


6PCS

4 🔘


6PCS

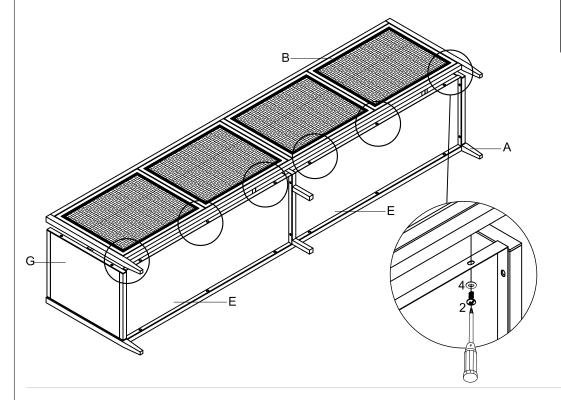

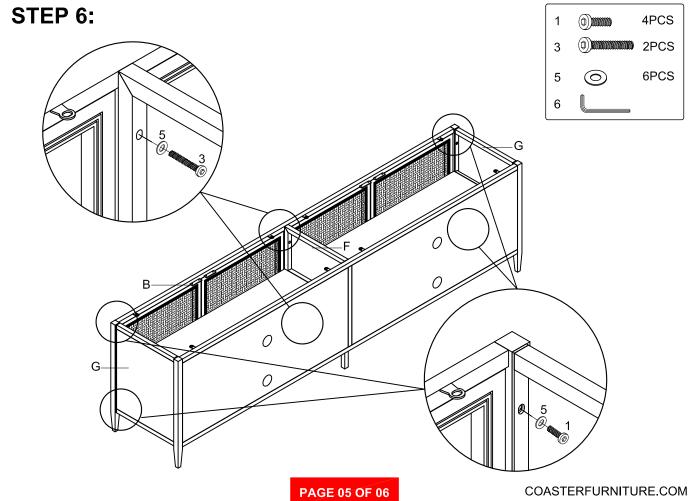

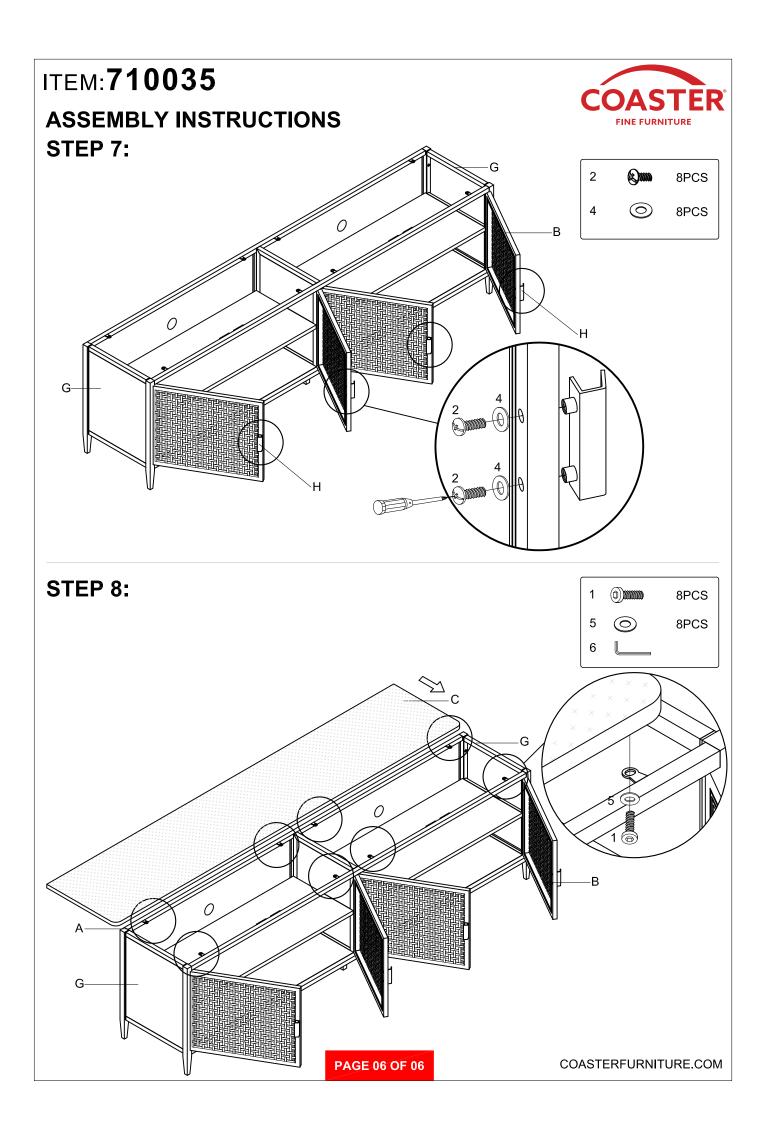



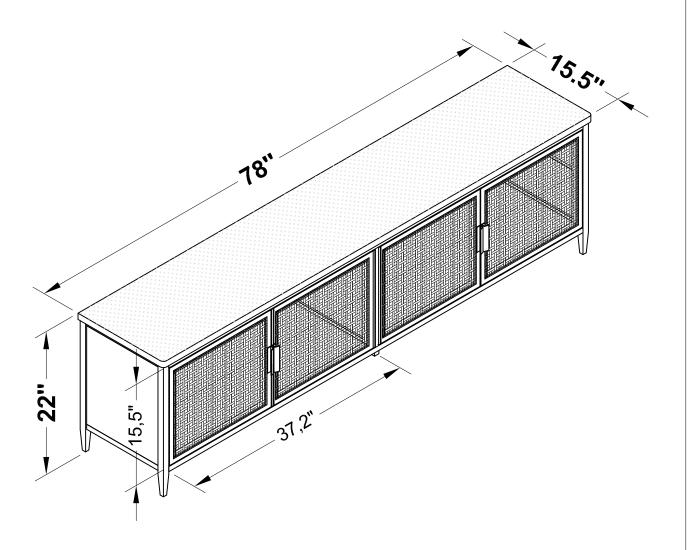

Note: Dimension tolerance ±5%