



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

701790
TV Stand

ITEM:701790



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



 
ASSEMBLY TIME

15 MINUTES

MAX TV SIZE :90"


PARTS IDENTIFICATION

A TV STAND



1PC

 B LEG FRAME



2PCS

C CENTER SUPPORT



1PC

HARDWARE IDENTIFICATION

1 BOLT
(M8 x 20mm - BLK)



10PCS

2 FLAT WASHER
(M10 x 16mm - BLK)



10PCS

3 ALLEN WRENCH
(5mm - BLK)




1PC

ITEM: **701790**




ASSEMBLY INSTRUCTIONS


STEP 1

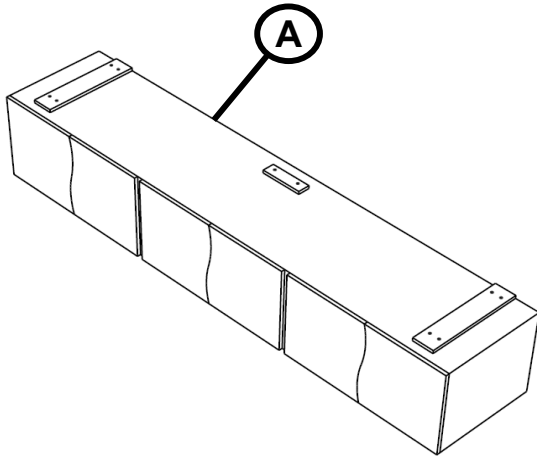


STEP 2

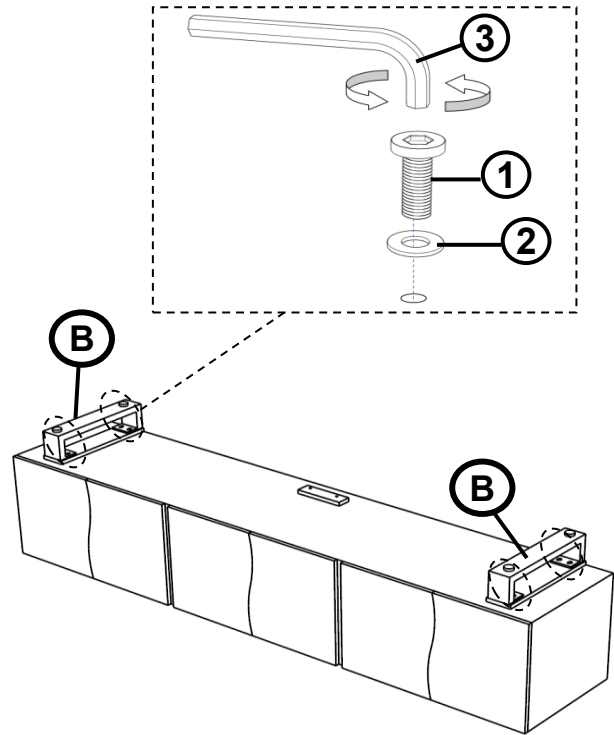


STEP 3

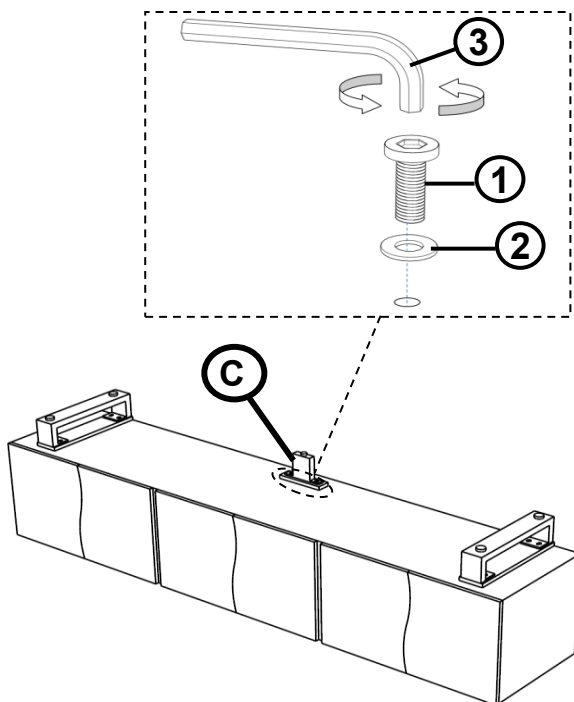

STEP 4 COMPLETE

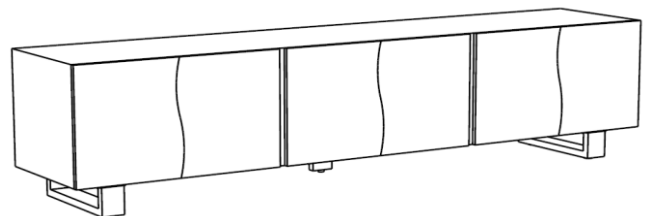

ITEM: **701790**

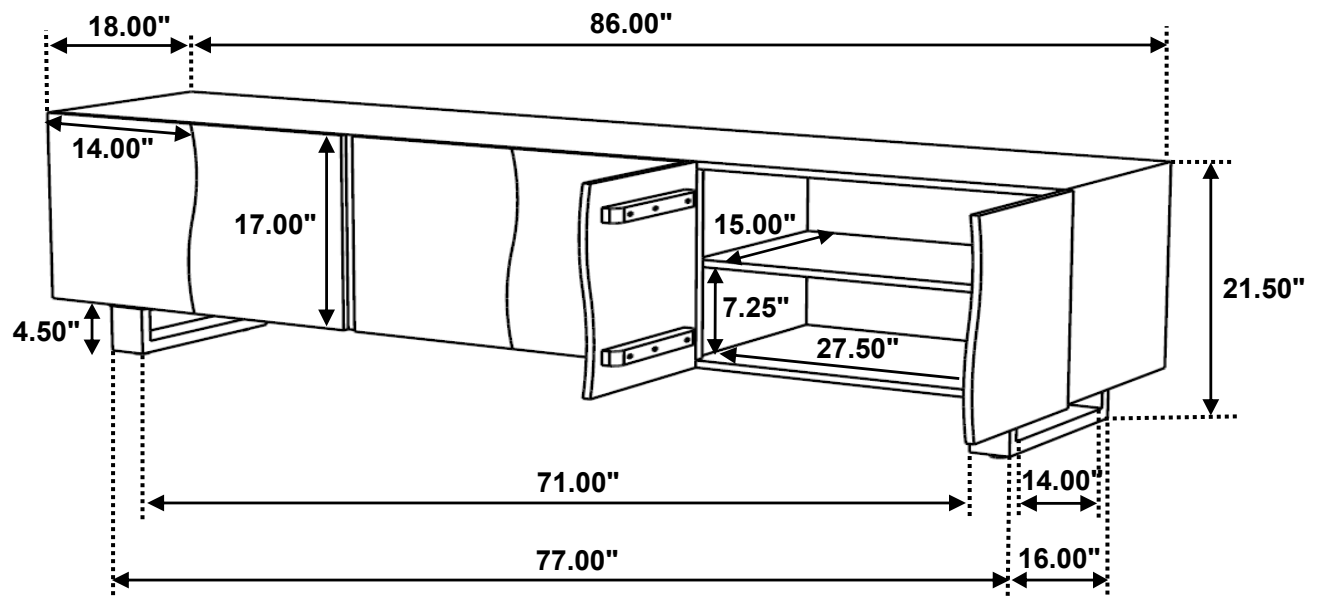

Note : Dimension tolerance $\pm 5\%$