

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

920090 *TABLE LAMP*

REVISION 0: 01/17/2025

PAGE 1 OF 3

COASTERFURNITURE.COM

ITEM: 920090

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:



- 1. Remove hardware from box and sort by size.
- Please check to see that all hardware and parts are present prior to start of assembly.
 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.



5 MINUTES

PARTS IDENTIFICATION

STEPS

A.Finial		1pc	+	A.Finial
B.Shade		1pc	+	B.Shade
C.Thread ed Rod	Microsophia Market	1pc	+ () () +	C.Threaded Rod D. Led Bulb
D. Led Bulb	000	3pc	* 1	E. Lamp Body F. Tube A
E .Lamp Body		1рс		1. Tube A
F. Tube A		3bc		——— G.Tube B
G.Tube B		3bc	U V	

NOTE:


As a safety feature, and to reduce the risk of electric shock, this portable lamp includes a polarized plug (one blade is wider than the other). The plug will fit into a polarized outlet in a single direction only. If the plug does not fit fully in the outlet, reverse the plug and try again.

If it still does not fit, contact a qualified electrician.DO NOT use with an extension cord unless, can be fully inserted.DO NOT alter the plug.

FLOOR LAMP: C35 E12 4W LED BULB

ITEM: 920090 ASSEMBLY INSTRUCTIONS



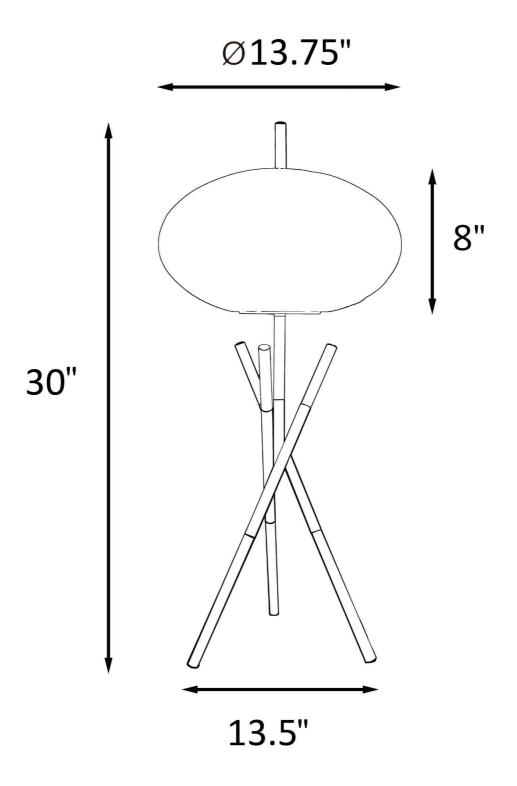

Note: Dimension tolerance ±5%.