

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

## 950422 SHOE CABINET

REVISION 0: 11/22/2024

**PAGE 1 OF 14** 

COASTERFURNITURE.COM

#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.







#### PARTS IDENTIFICATION

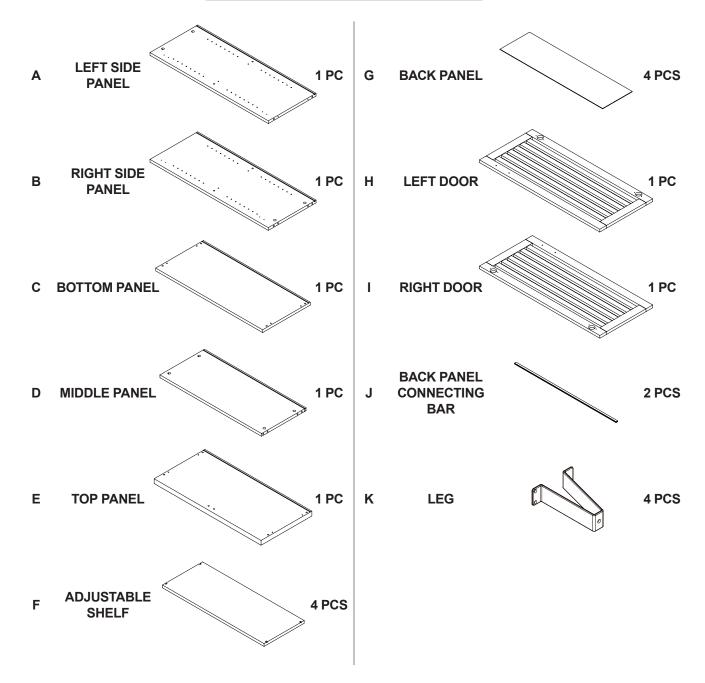

#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



#### **HARDWARE IDENTIFICATION**


Z	_						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	10	HINGE Ø35mm SR		4 PCS
2	WOODEN DOWEL Ø8x30mm		12 PCS	11	HINGE SCREW Ø4x15mm SR		16 PCS
3	CAM BOLT Ø7x35.5mm SR		8 PCS	12	STICKER Ø20mm		2 PCS
4	CAM LOCK Ø15x12mm SR		8 PCS	13	SCREW Ø 5x19mm BLK	THE STATE OF THE S	12 PCS
5	LONG SCREW Ø 4.5x42mm SR	MILLIAN (B)	4 PCS	14	PLASTIC FEET		4 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		16 PCS	15	FIXER		6 PCS
7	DOOR CATCH		1 PC	16	FIXER SCREW Ø3x19mm SR		6 PCS
8	HANDLE L= 120mm BLK		2 PCS				
9	HANDLE BOLT BLK		4 PCS				

Z8,Z9,Z10,Z11,Z12,Z13 not included in blister packaging.

#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM:950422 STEP 1 FINE FURNITURE 3 3 4 2 x 4

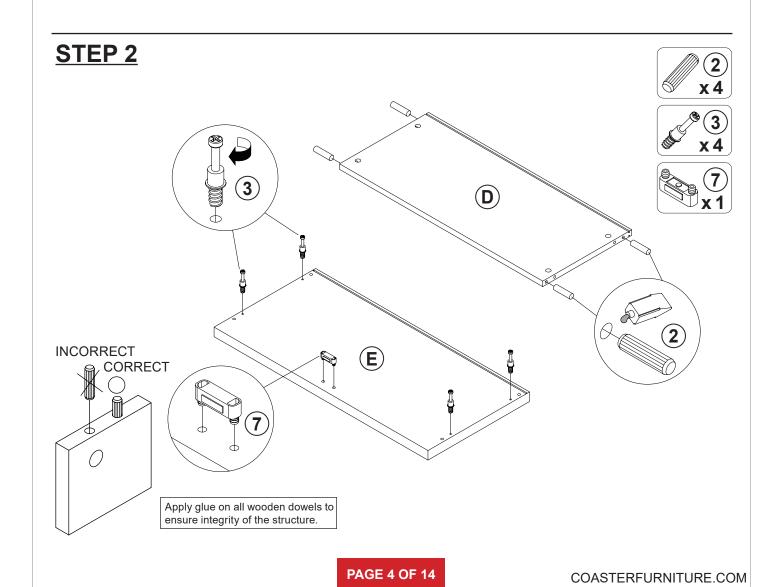



# ITEM: **950422 STEP 3**








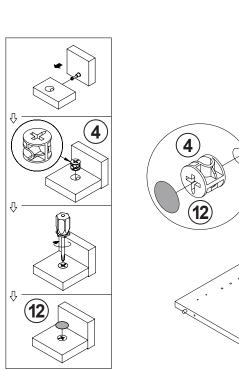

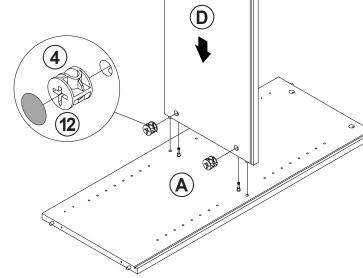

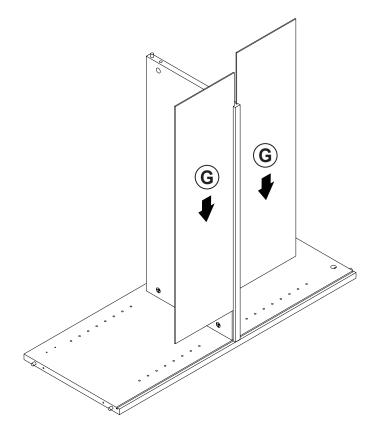



# ITEM: **950422 STEP 5**










 

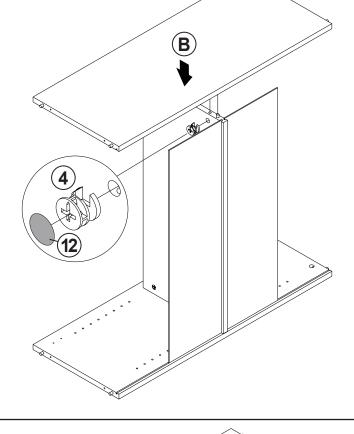

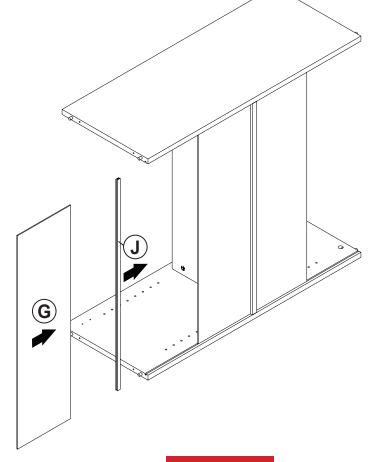


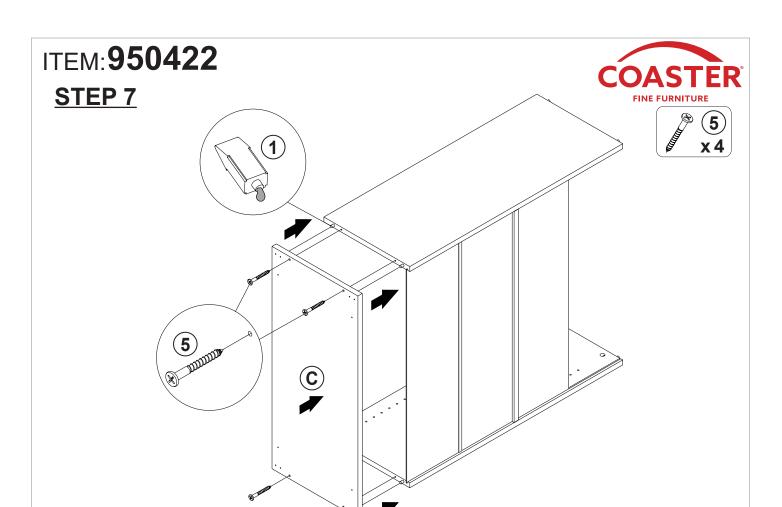


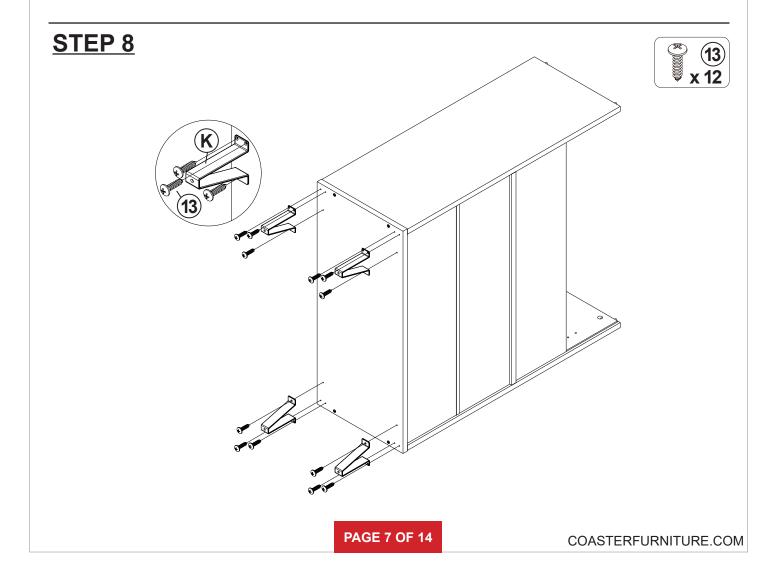


# ITEM: **950422 STEP 9**



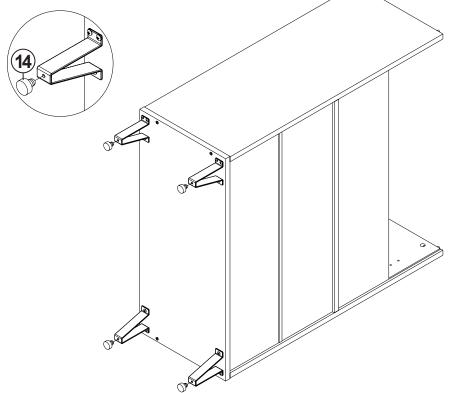

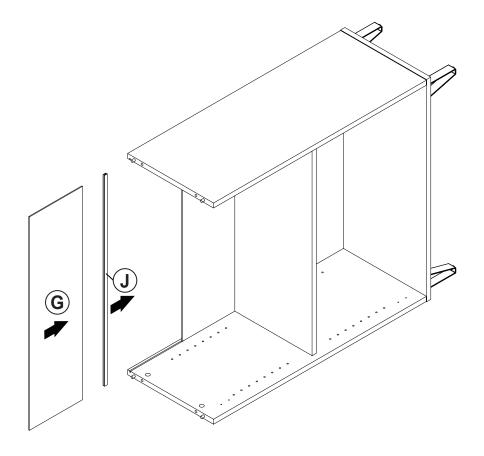


#### **STEP 11**

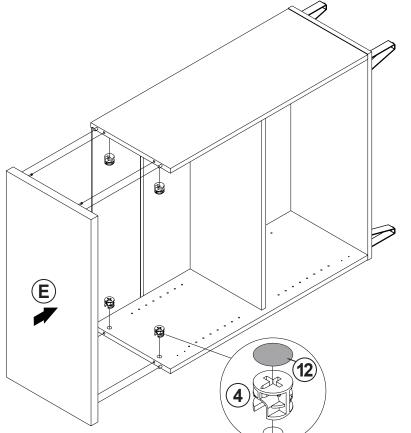






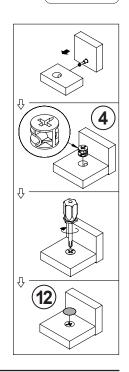

### **STEP 12**

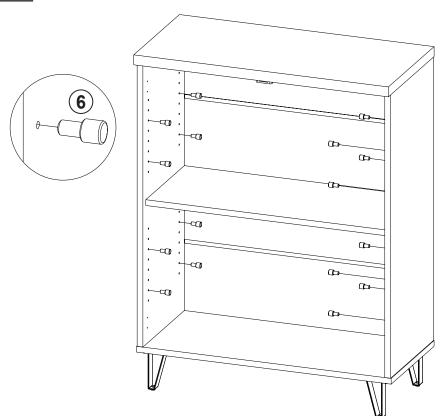





**PAGE 9 OF 14** 

COASTERFURNITURE.COM

# ITEM:**950422 STEP 13**



 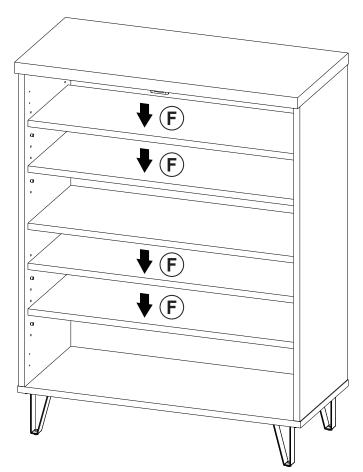


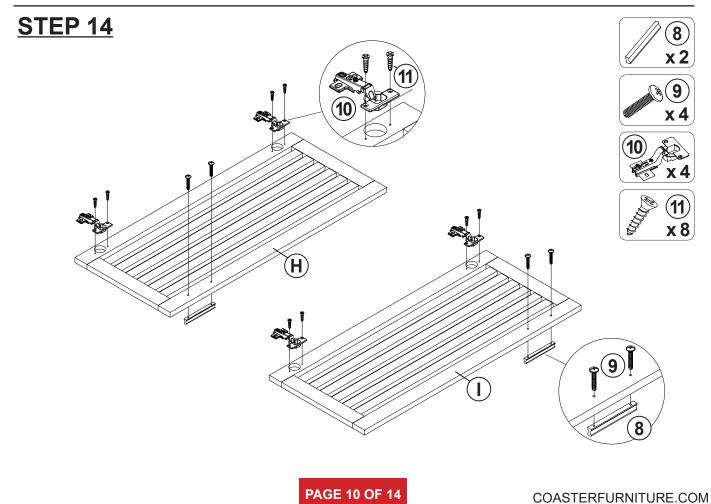









HORIZONTAL BY SCREW AADJUSTMENT





LATERAL BY SCREW B ADJUSTMENT



VERTICAL BY SCREW C ADJUSTMENT



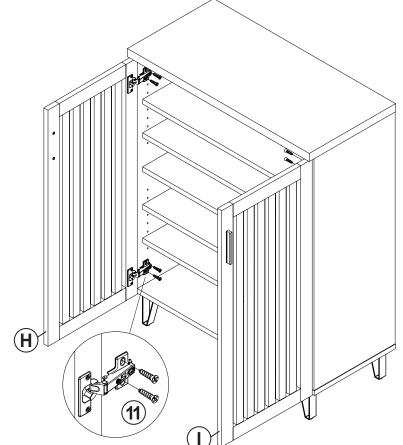

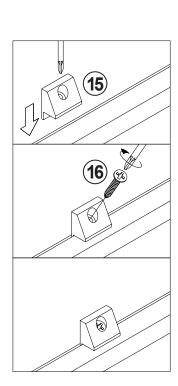










#### **STEP 17**

**COMPLETE** 




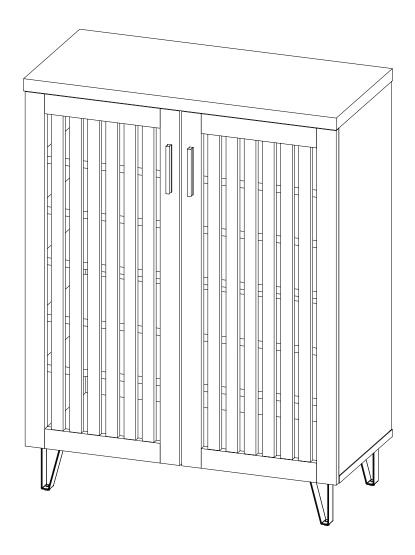







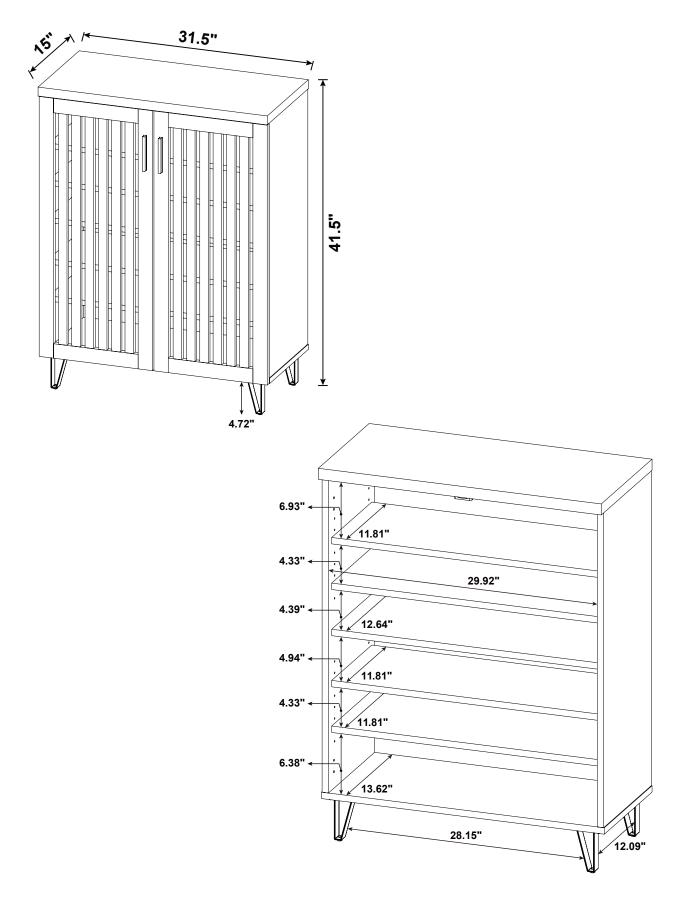

Note: Dimension tolerance ±5%



# ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

#### **WARNING**

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


#### STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

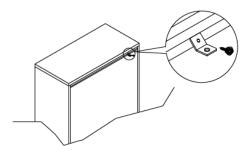

#### STEP 2

Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

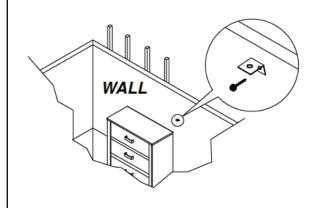

#### STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

