

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

950440
SHOE CABINET

ITEM:950440

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
 
 
 
 
 
 
 
 
 
 
 

 
 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES

PARTS IDENTIFICATION

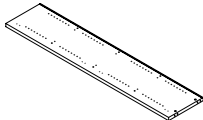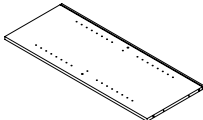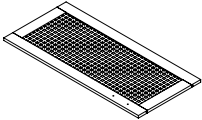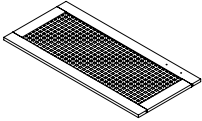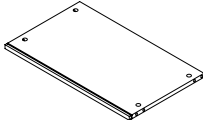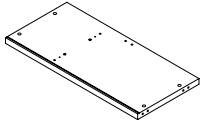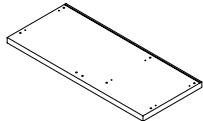
A	LEFT SIDE PANEL		1 PC	J	LEFT UPPER BACK PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	K	LEFT LOWER BACK PANEL		2 PCS
C	MIDDLE DIVIDER PANEL		2 PCS	L	RIGHT BACK PANEL		8 PCS
D	BOTTOM PANEL		1 PC	M	LEFT DOOR		2 PCS
E	LEFT CROSS PANEL		2 PCS	N	RIGHT DOOR		2 PCS
F	RIGHT CROSS PANEL		2 PCS	O	MIDDLE CROSS PANEL		1 PC
G	TOP PANEL		1 PC	P	BACK VERTICAL BAR		4 PCS
H	SMALL ADJUSTABLE SHELF		6 PCS	Q	LEG FRAME		2 PCS
I	LARGE ADJUSTABLE SHELF		8 PCS	R	CROSSBAR		1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:950440

 HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	10	HINGE Ø35mm SR		8 PCS
2	WOODEN DOWEL Ø8x30mm		36 PCS	11	HINGE SCREW Ø4x15mm SR		32 PCS
3	CAM BOLT Ø7x35.5mm SR		28 PCS	12	BOLT M6x58mm BLK		2 PCS
4	CAM LOCK Ø15x12mm SR		28 PCS	13	BOLT Ø7x50mm BLK		6 PCS
5	BOLT Ø9.5x55mm SR		8 PCS	14	FLOOR PROTECTOR 30x30mm		4 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		56 PCS	15	ALLEN WRENCH 4mm SR		1 PC
7	DOOR CATCH		4 PCS	16	BACK PANEL SUPPORT		12 PCS
8	HANDLE L= 120mm BLK		4 PCS	17	BACK PANEL SUPPORT SCREW Ø3x19mm SR		12 PCS
9	HANDLE BOLT BLK		8 PCS	18	STICKER Ø20mm		5 PCS

 
Z8,Z9,Z10 not included in blister packaging.

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **950440**


STEP 1

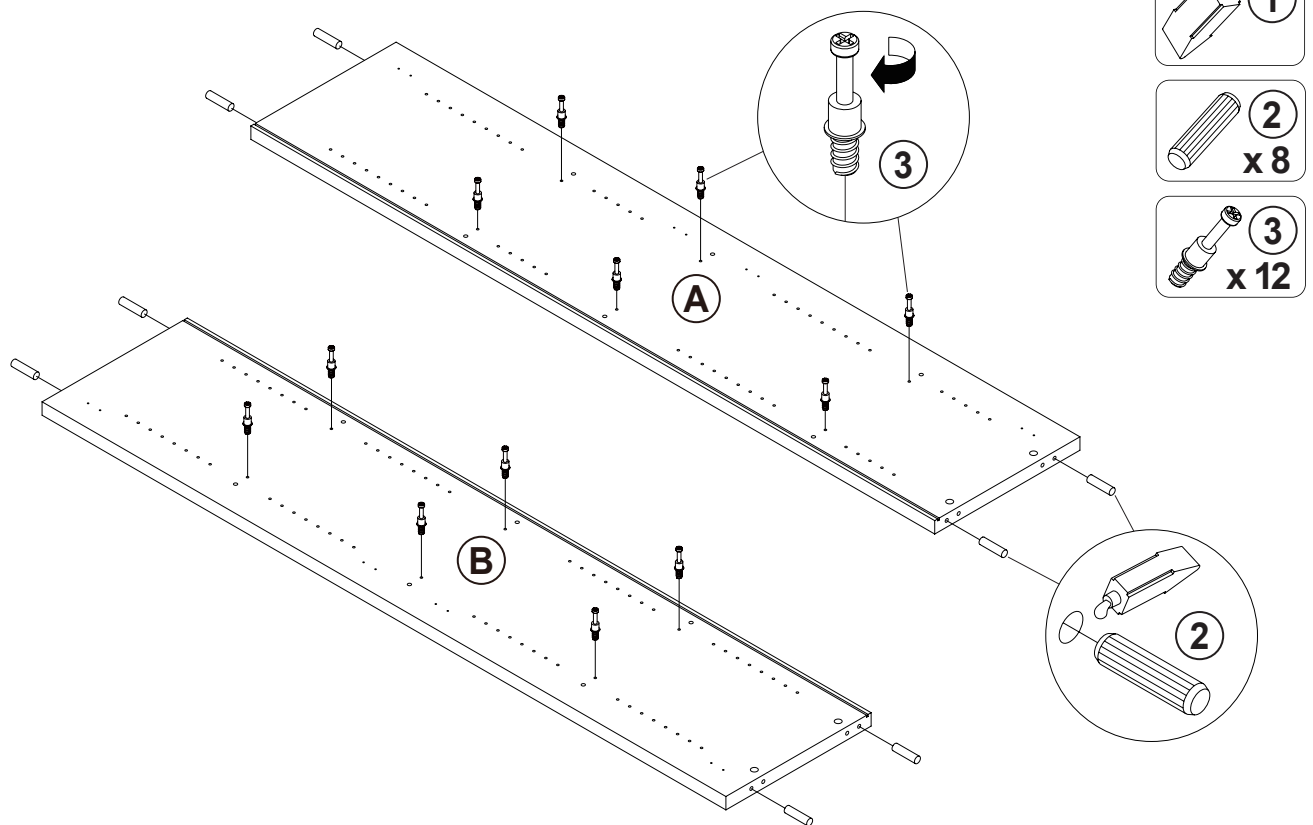

 STEP 2

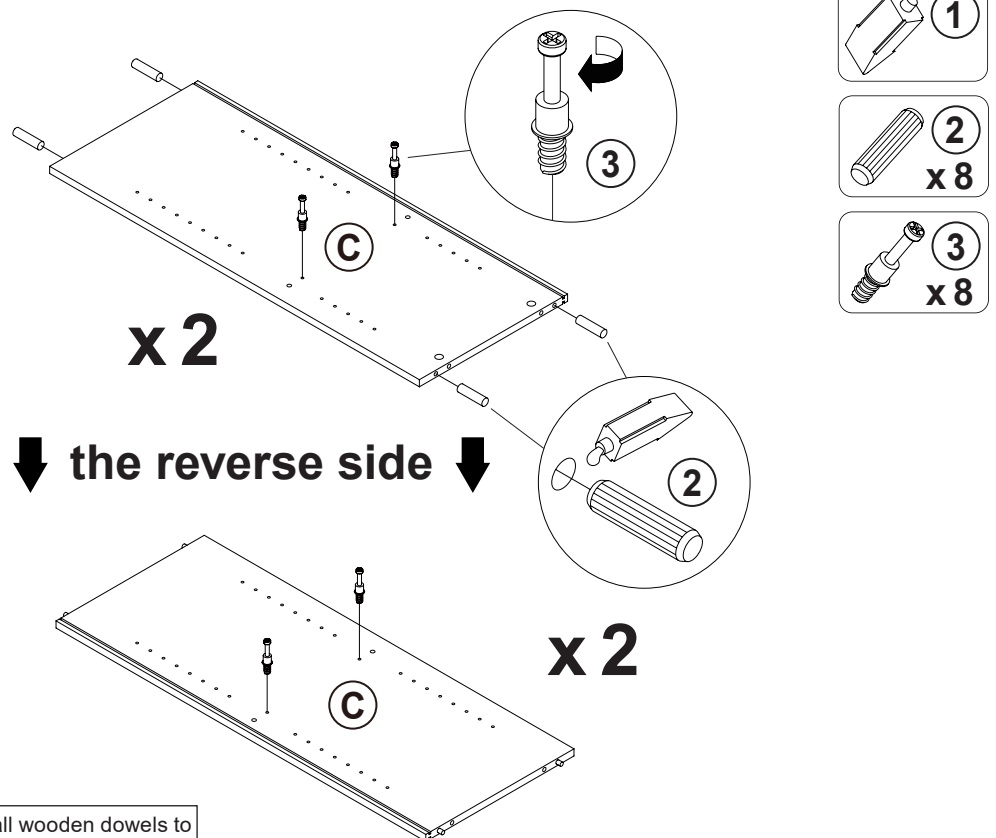


INCORRECT
CORRECT

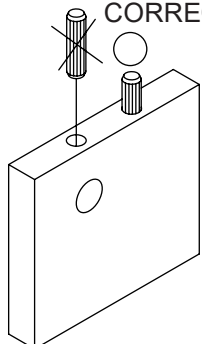 


Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM:950440

 STEP 3

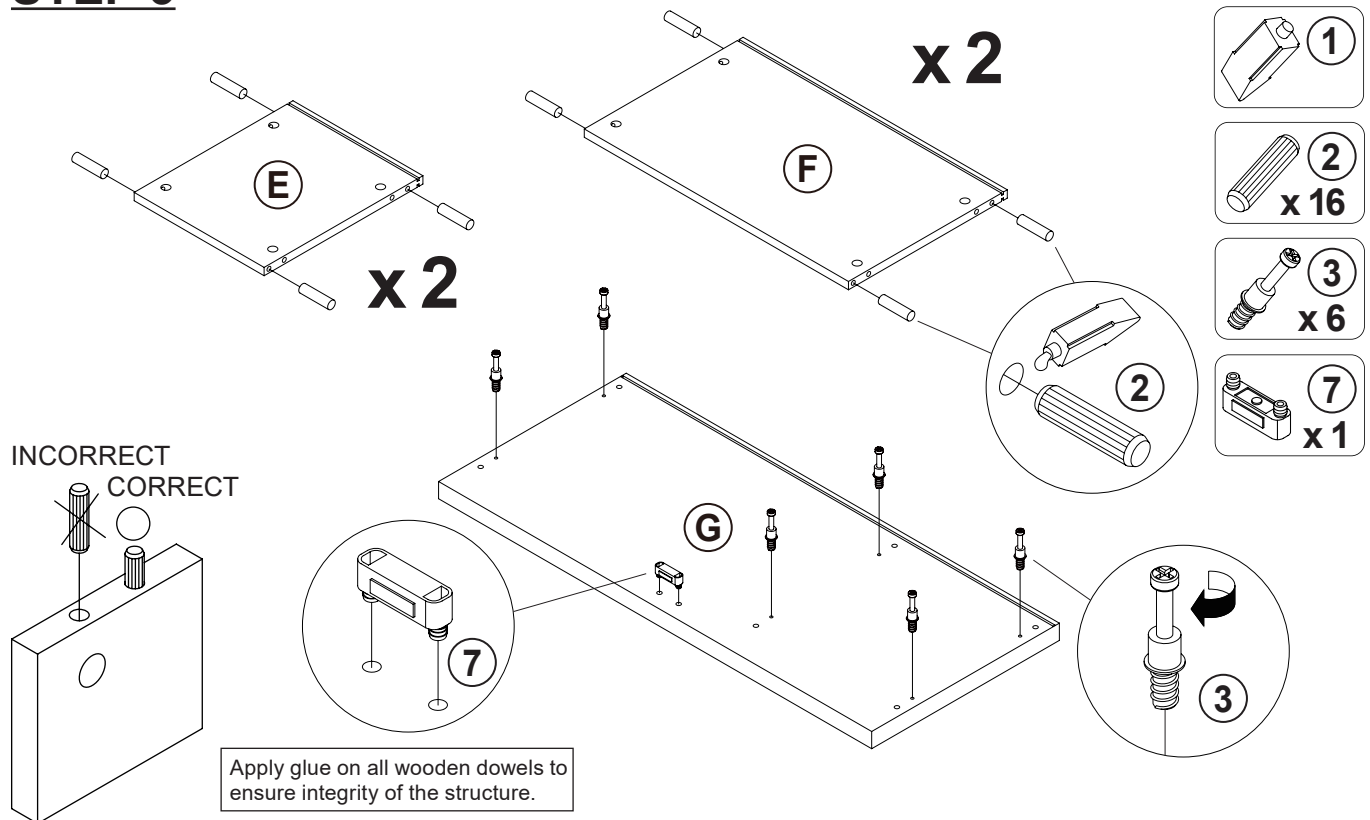



 
STEP 4

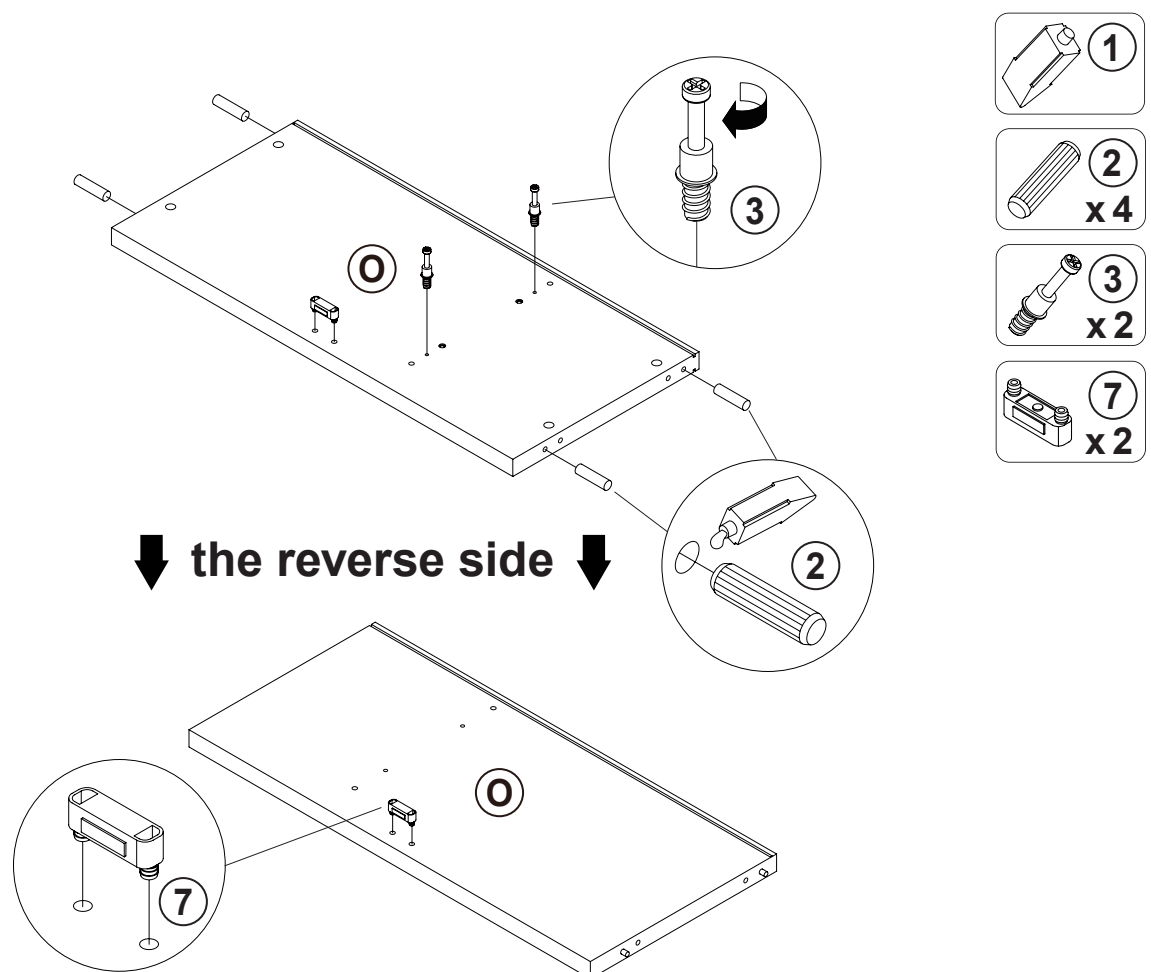


ITEM: **950440**

STEP 5

   COASTER
FINE FURNITURE

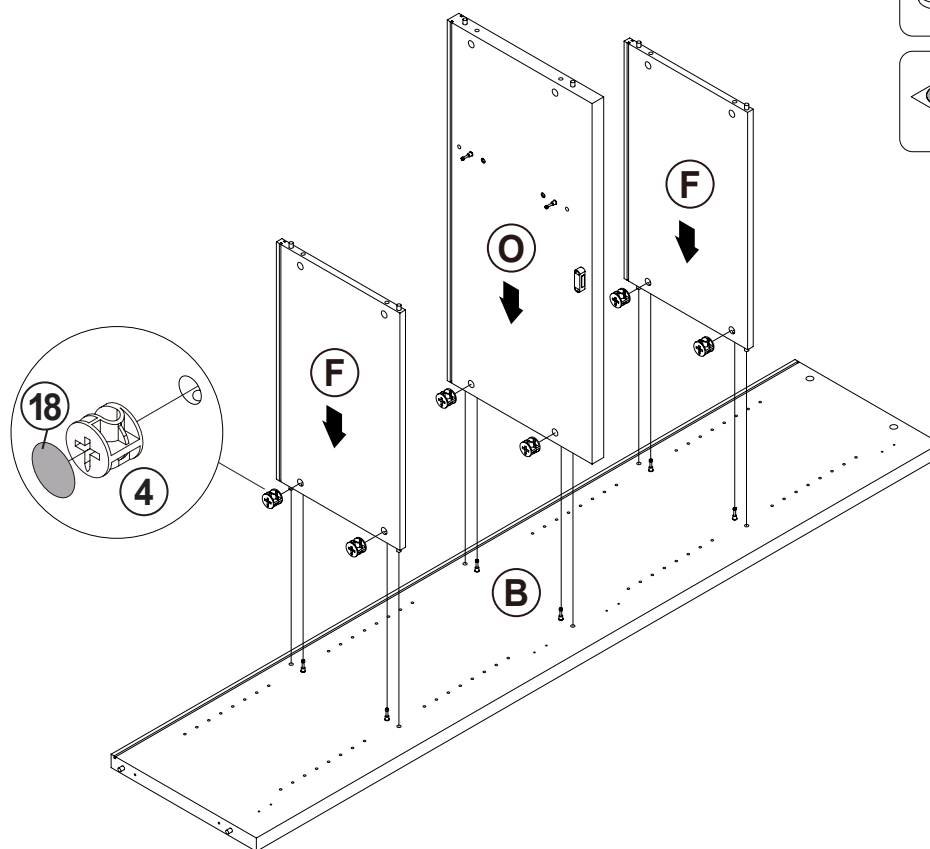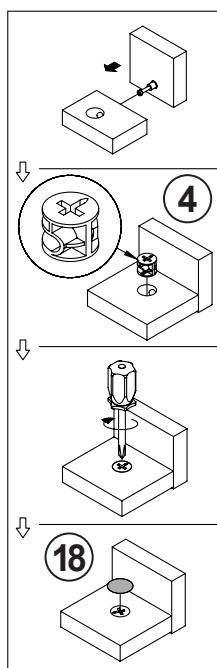


 STEP 6



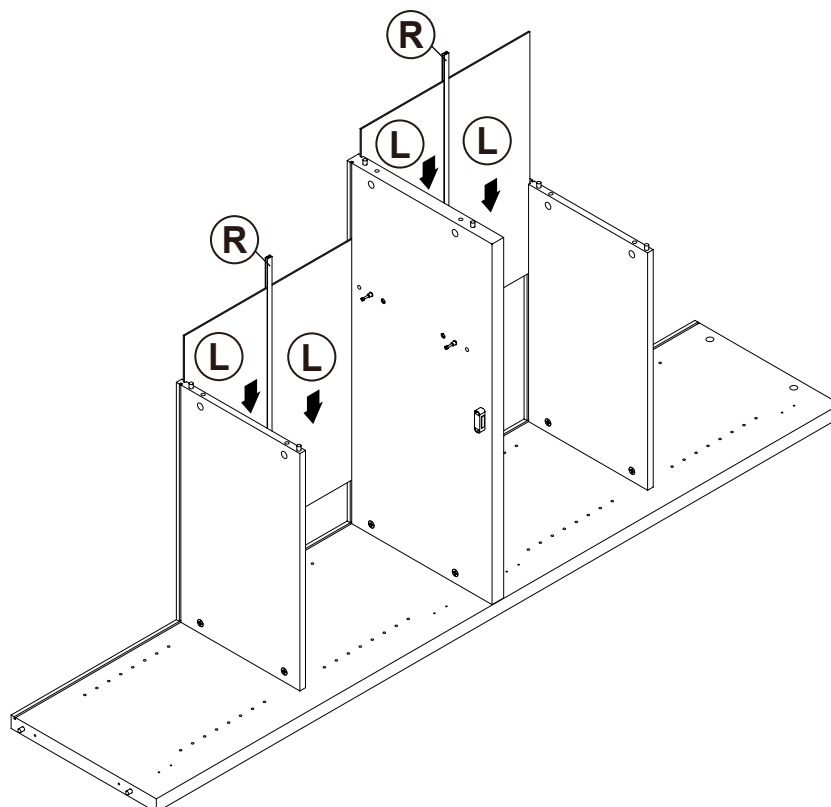


ITEM: **950440**

 STEP 7

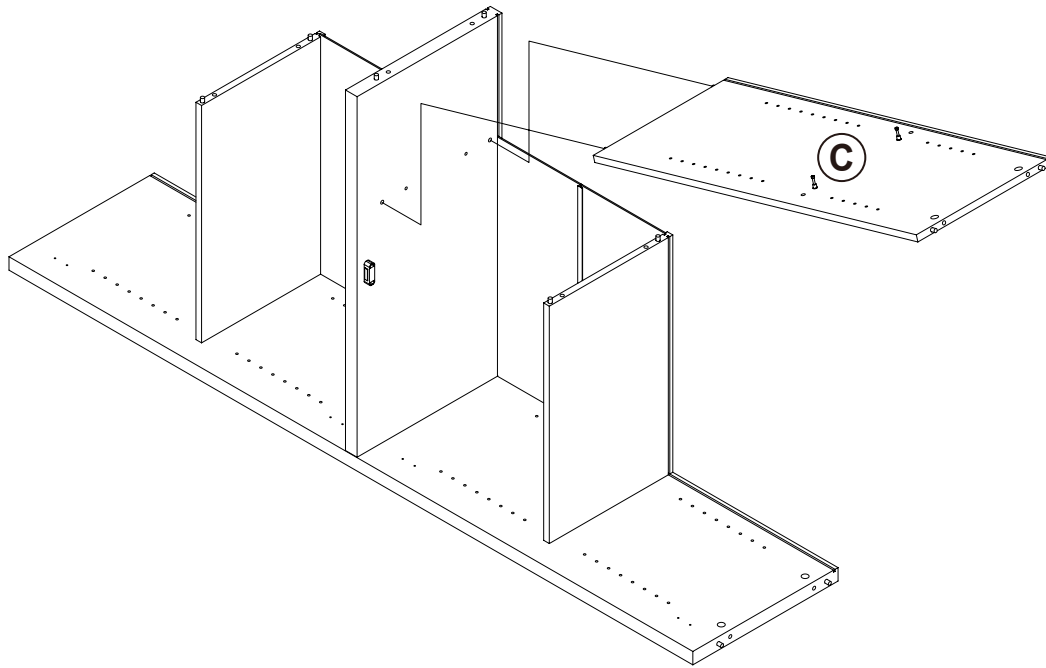


   STEP 8



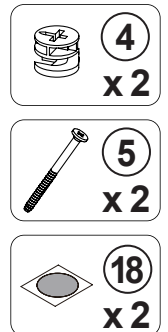
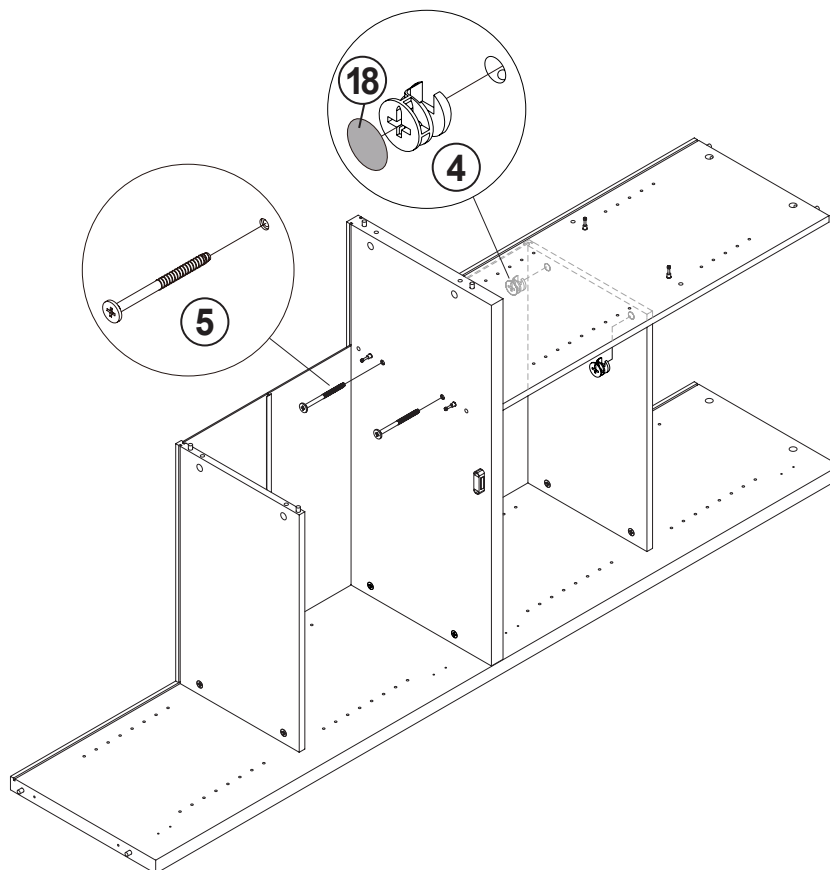
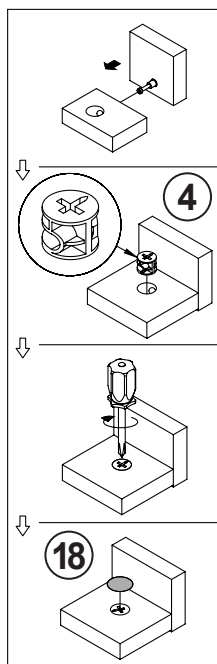


ITEM: **950440**

 STEP 9

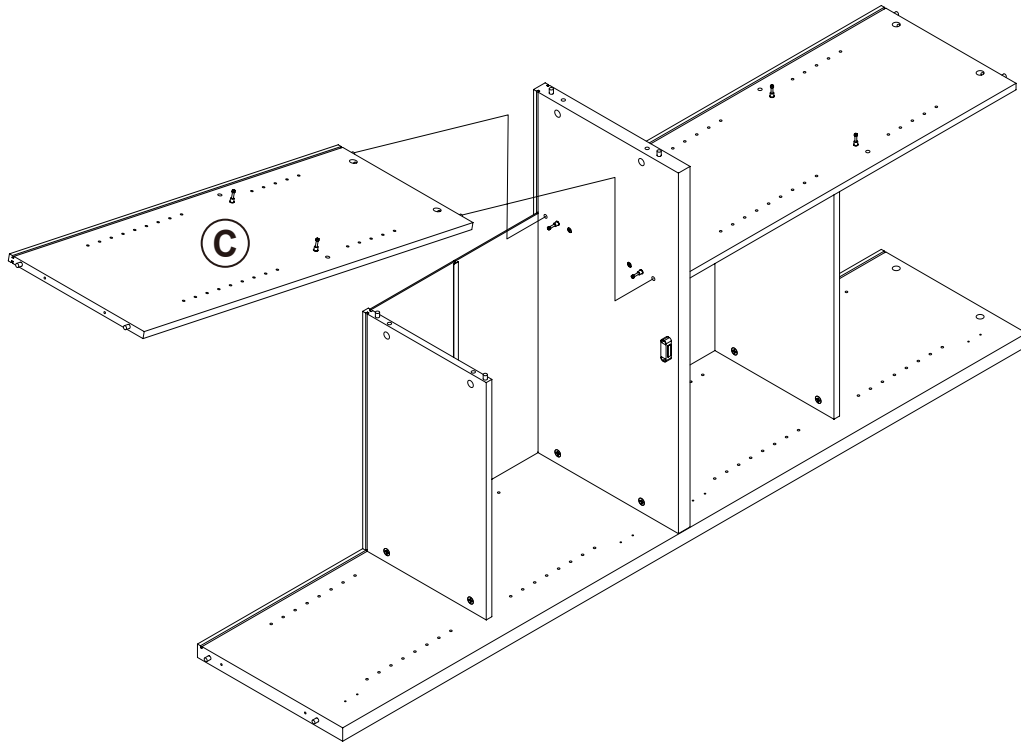

    
 
STEP 10

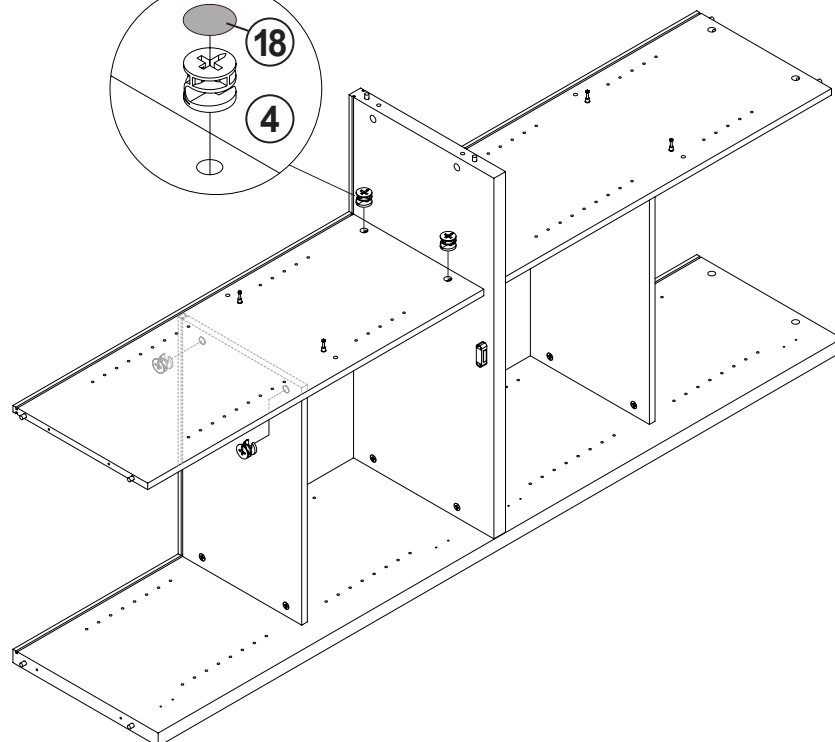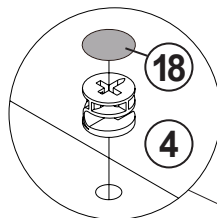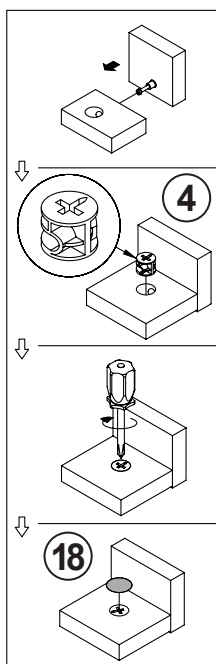





ITEM: **950440**

COASTER
FINE FURNITURE

  STEP 11

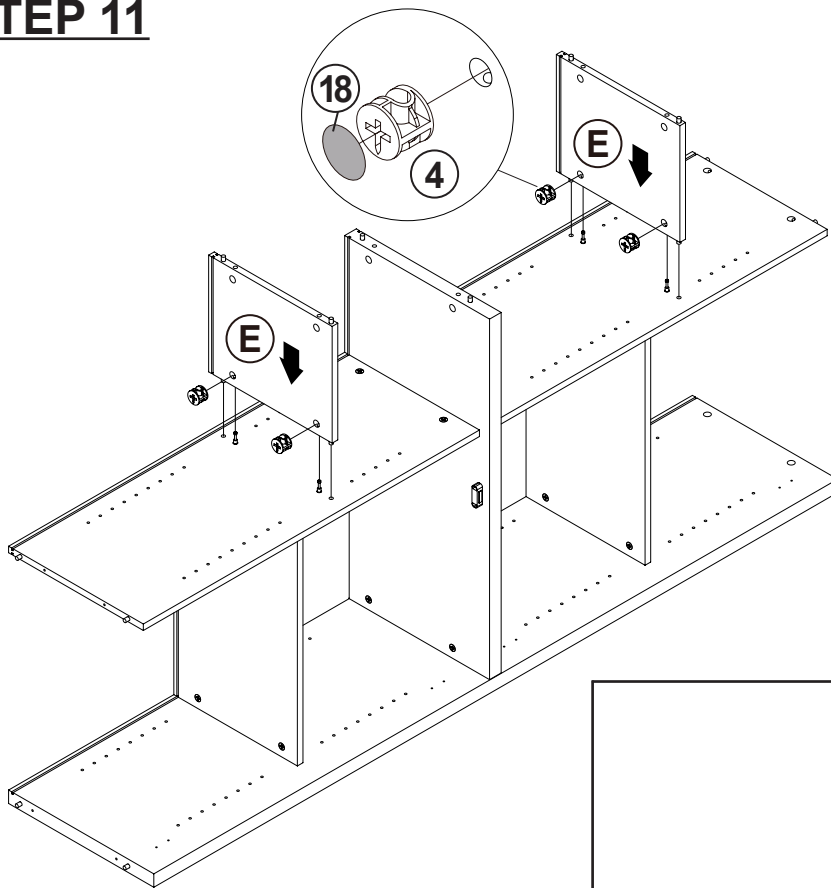

   
 
STEP 12

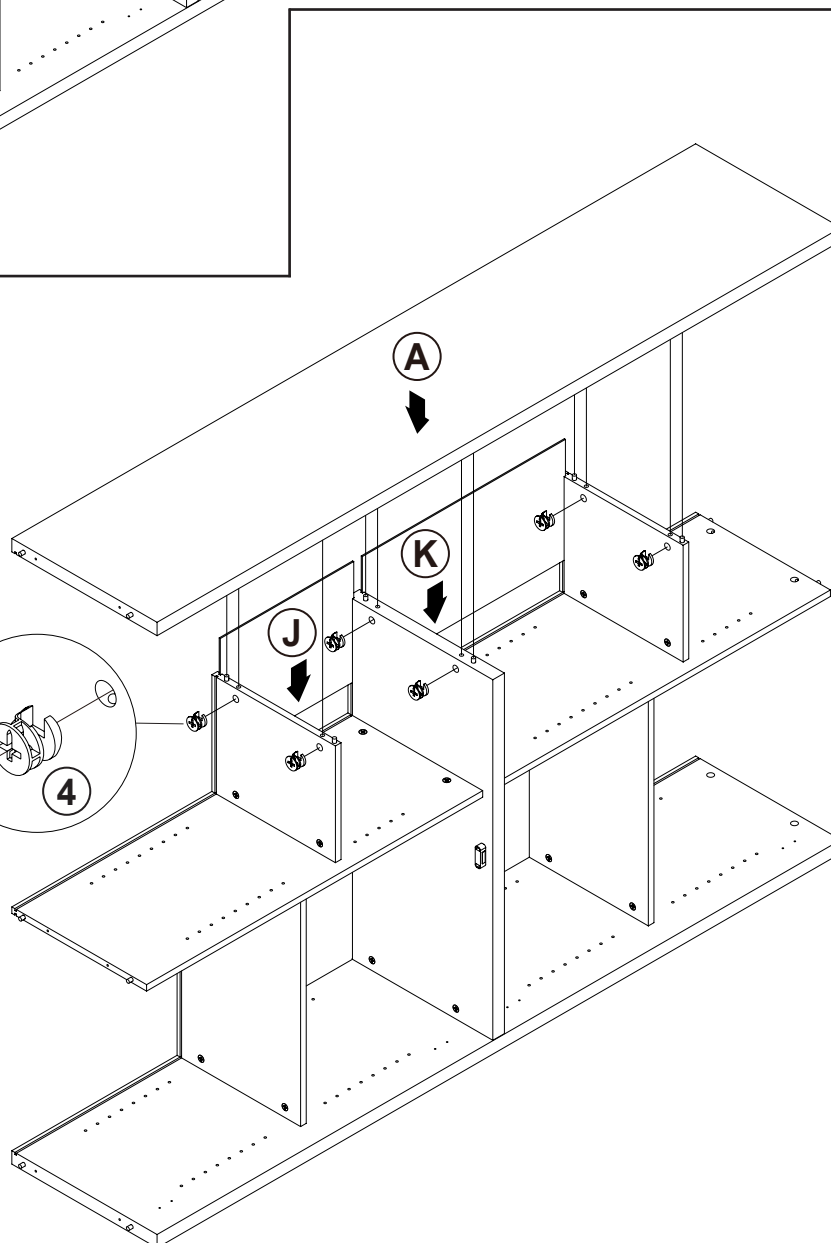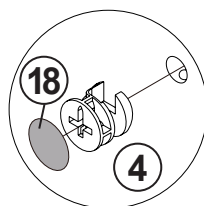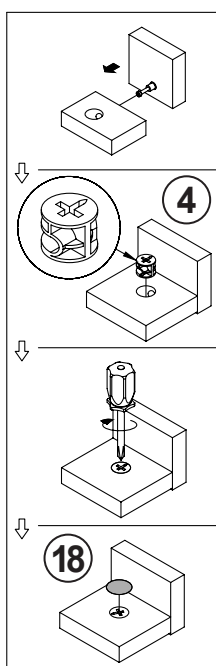




ITEM: **950440**

COASTER
FINE FURNITURE

  STEP 13

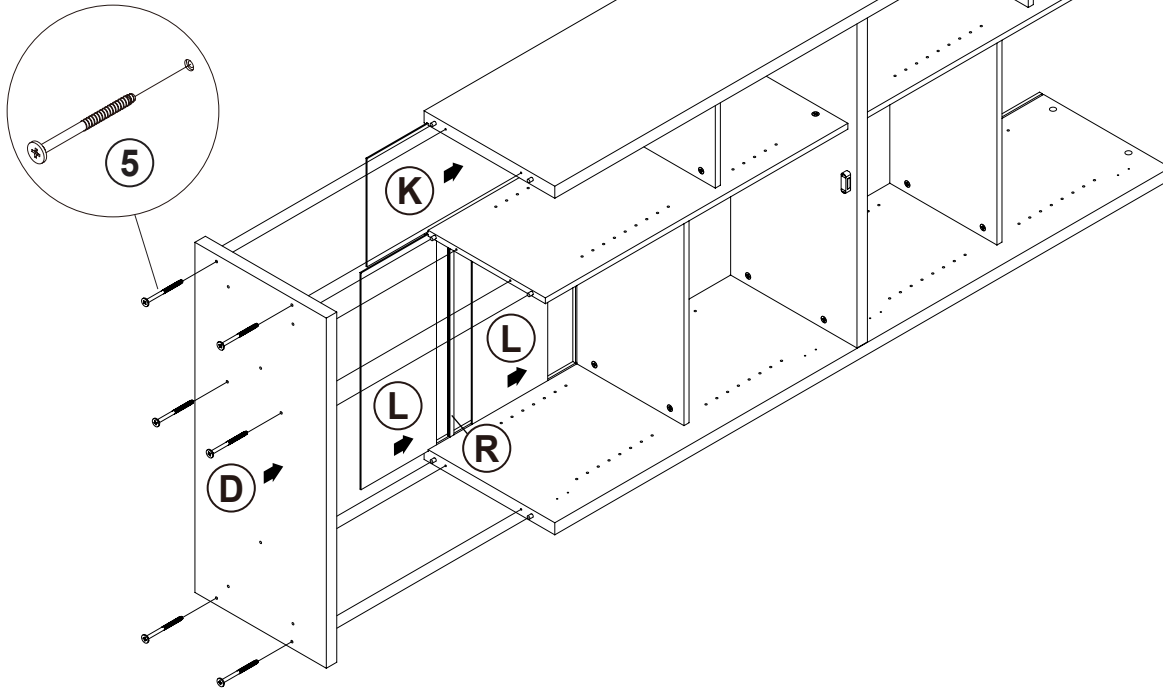

   
STEP 14

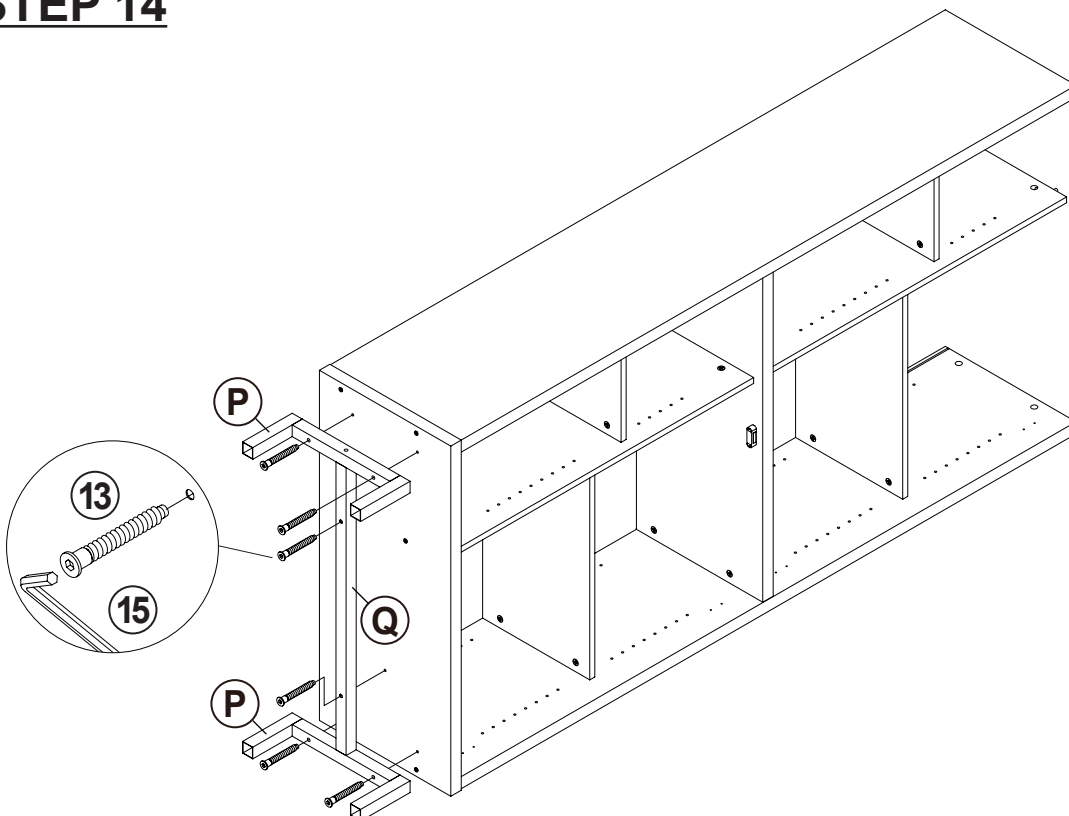


ITEM: **950440**

COASTER
FINE FURNITURE

 STEP 15

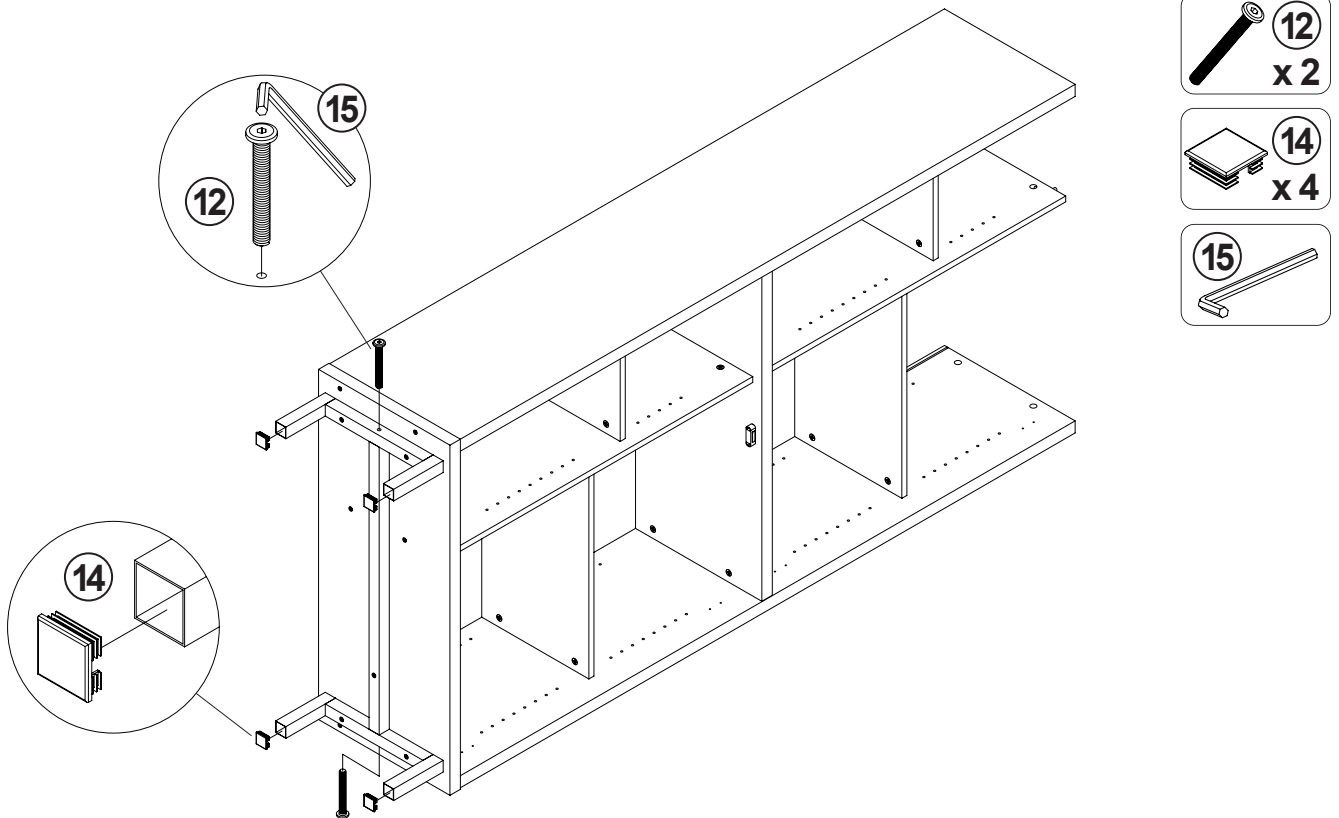



 
STEP 16

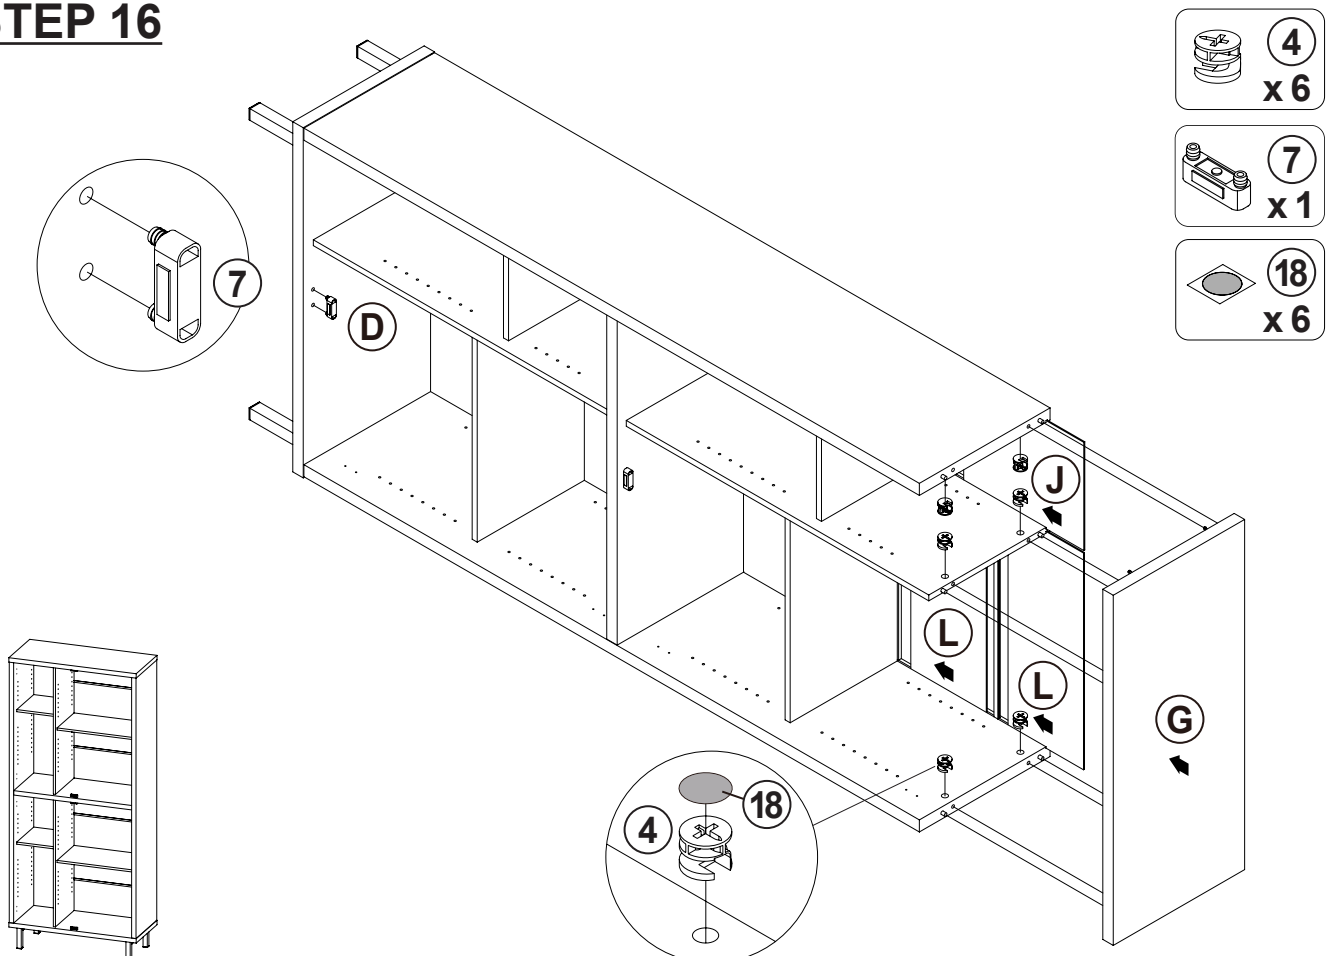


ITEM: **950440**

STEP 17

   COASTER
FINE FURNITURE

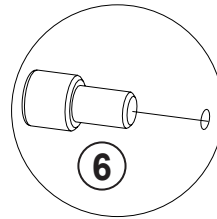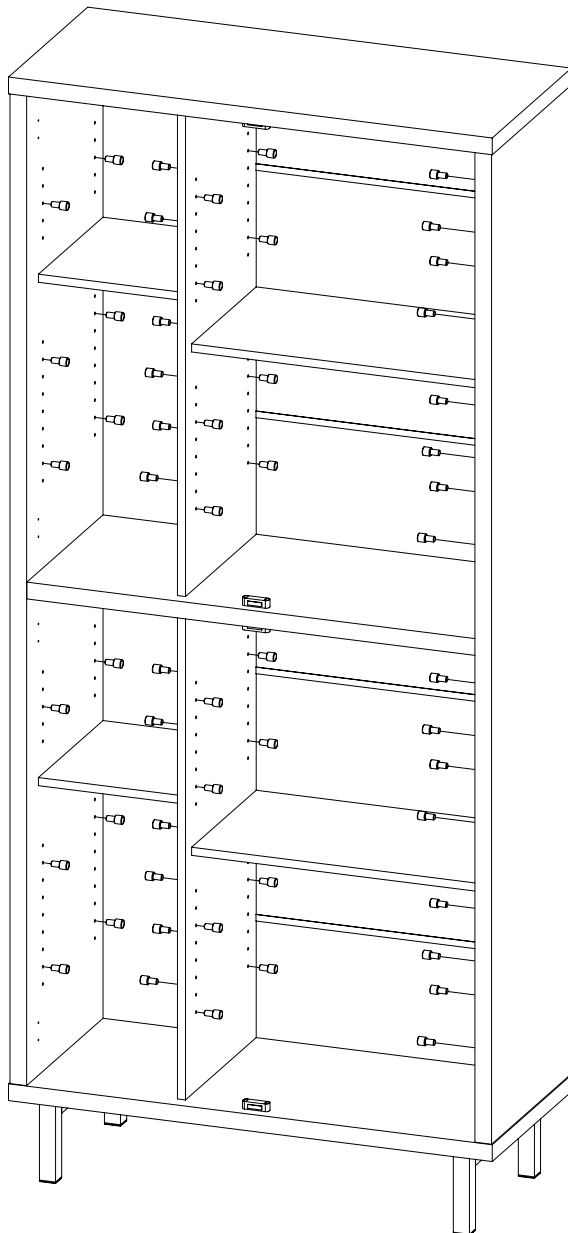




 
STEP 18

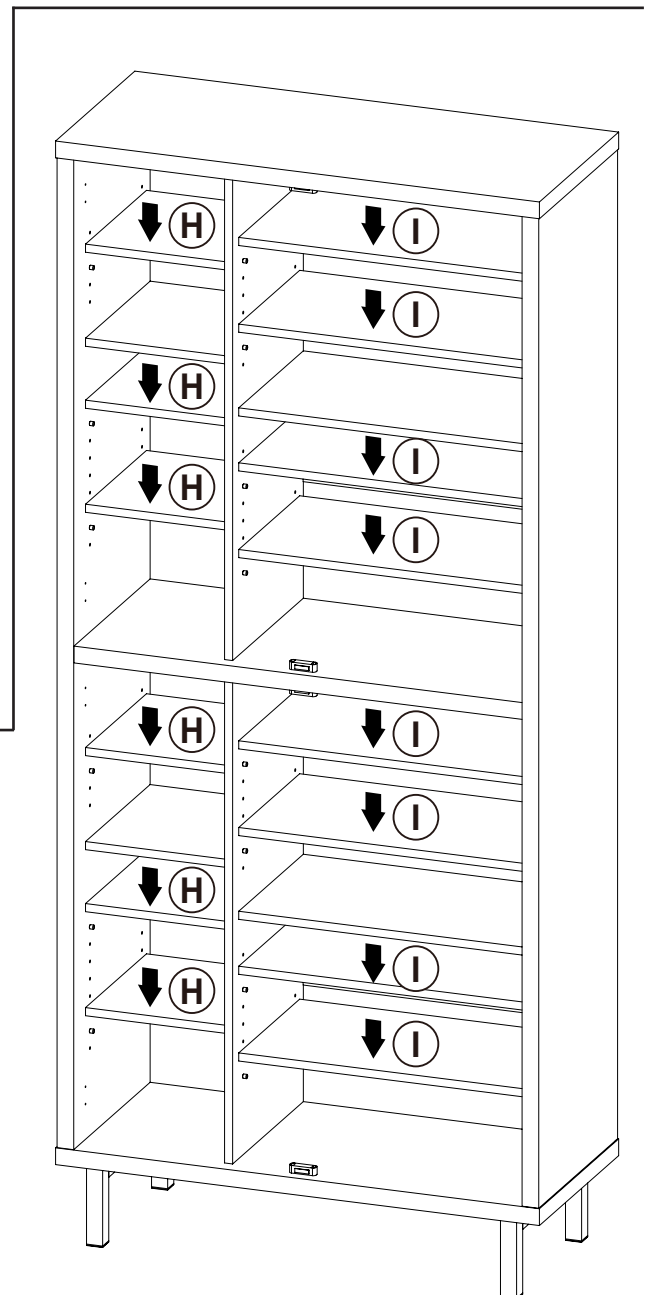






ITEM: **950440**

STEP 19

    COASTER
FINE FURNITURE

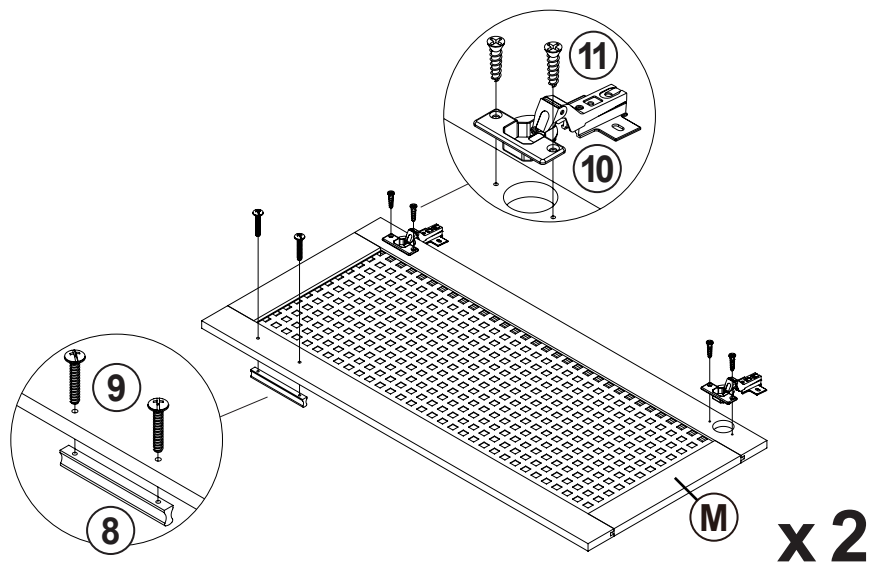

     
STEP 20

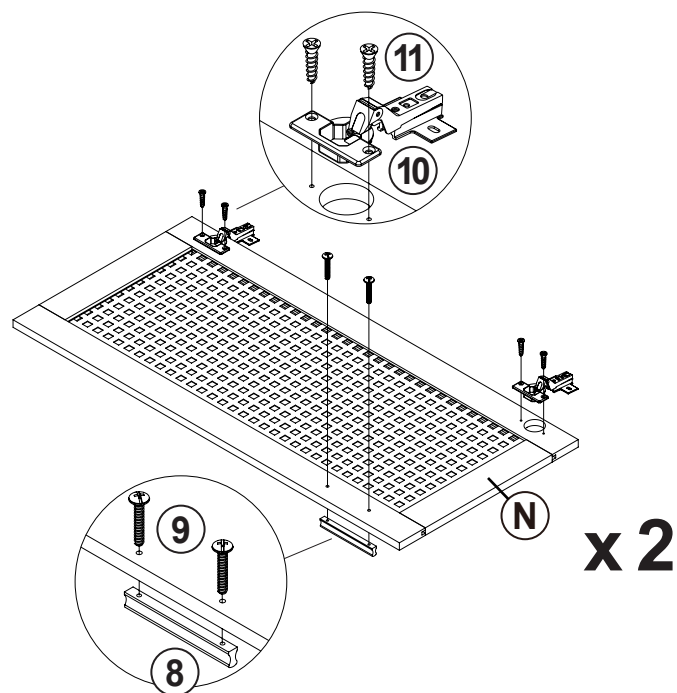





ITEM: **950440**

STEP 21

 COASTER
FINE FURNITURE

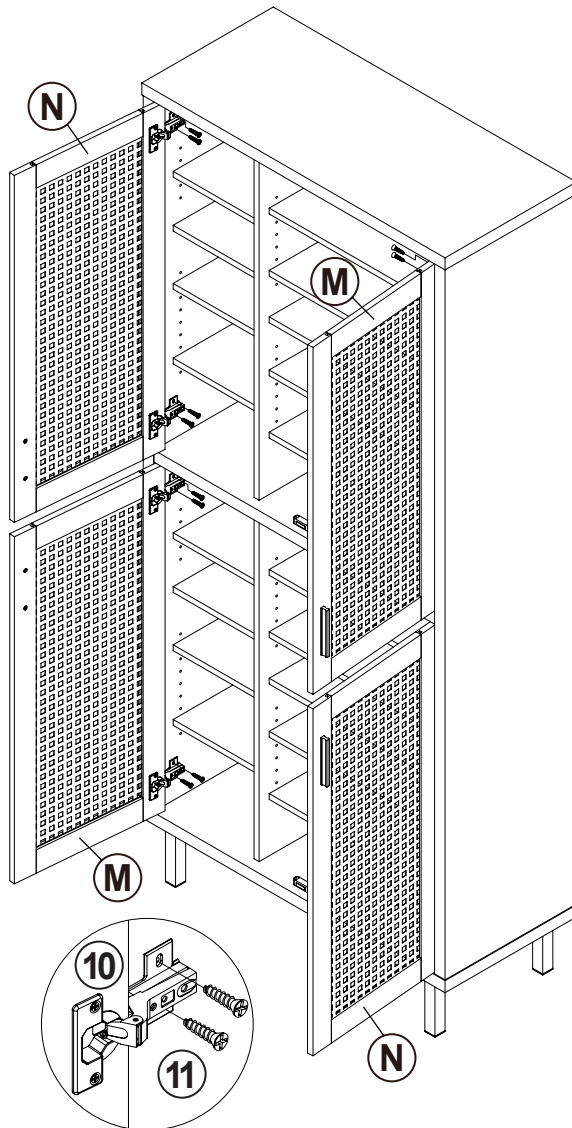

    STEP 22

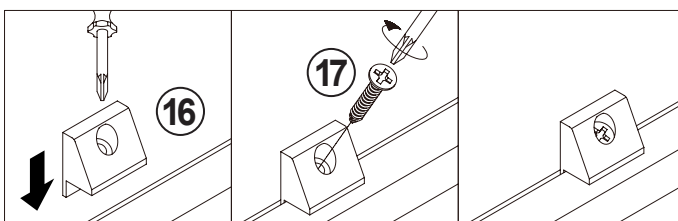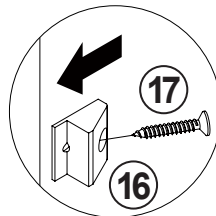



ITEM: **950440**



STEP 23

COMPLETE

  COASTER
FINE FURNITURE

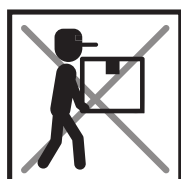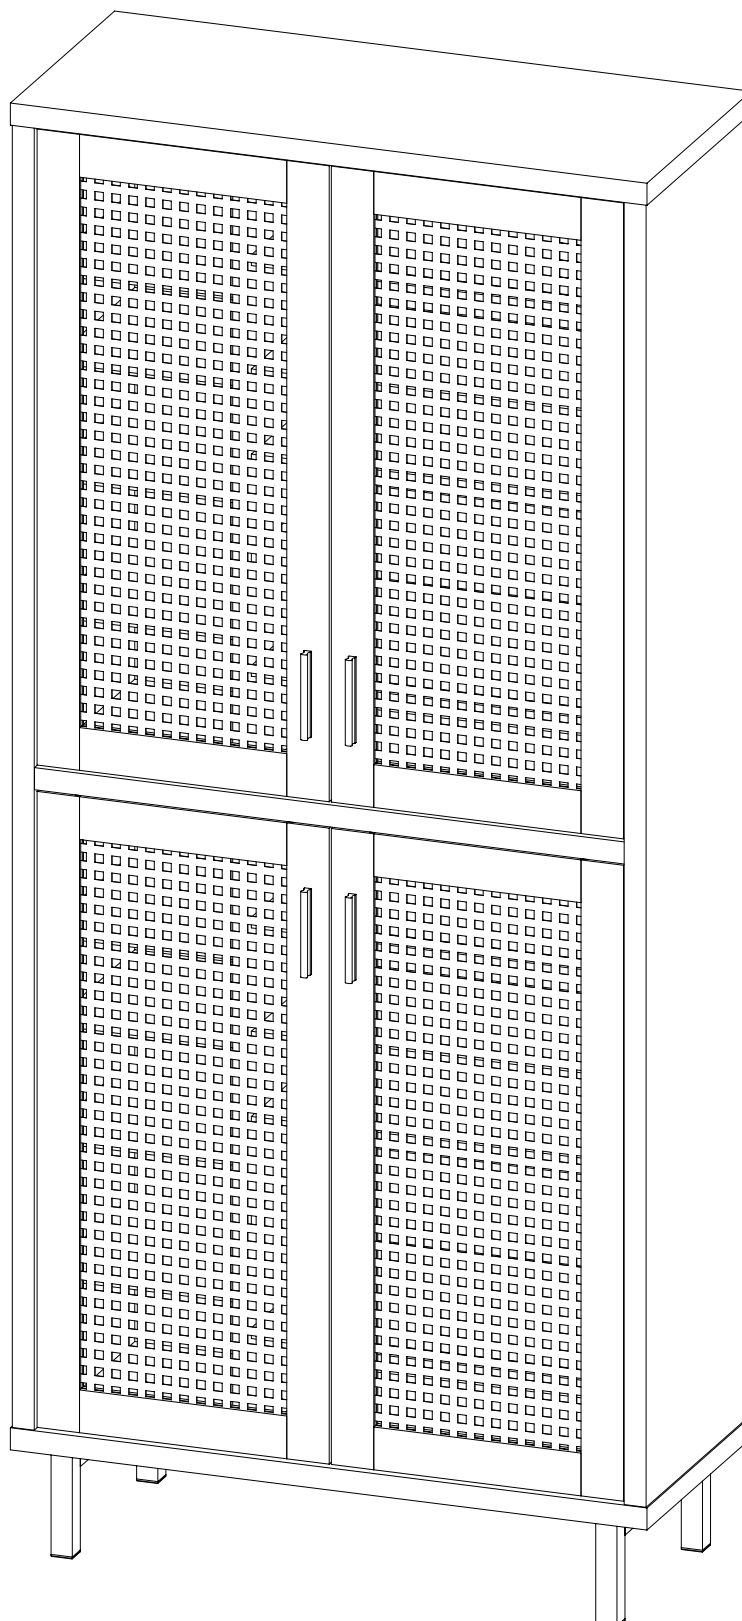

ITEM: 950440

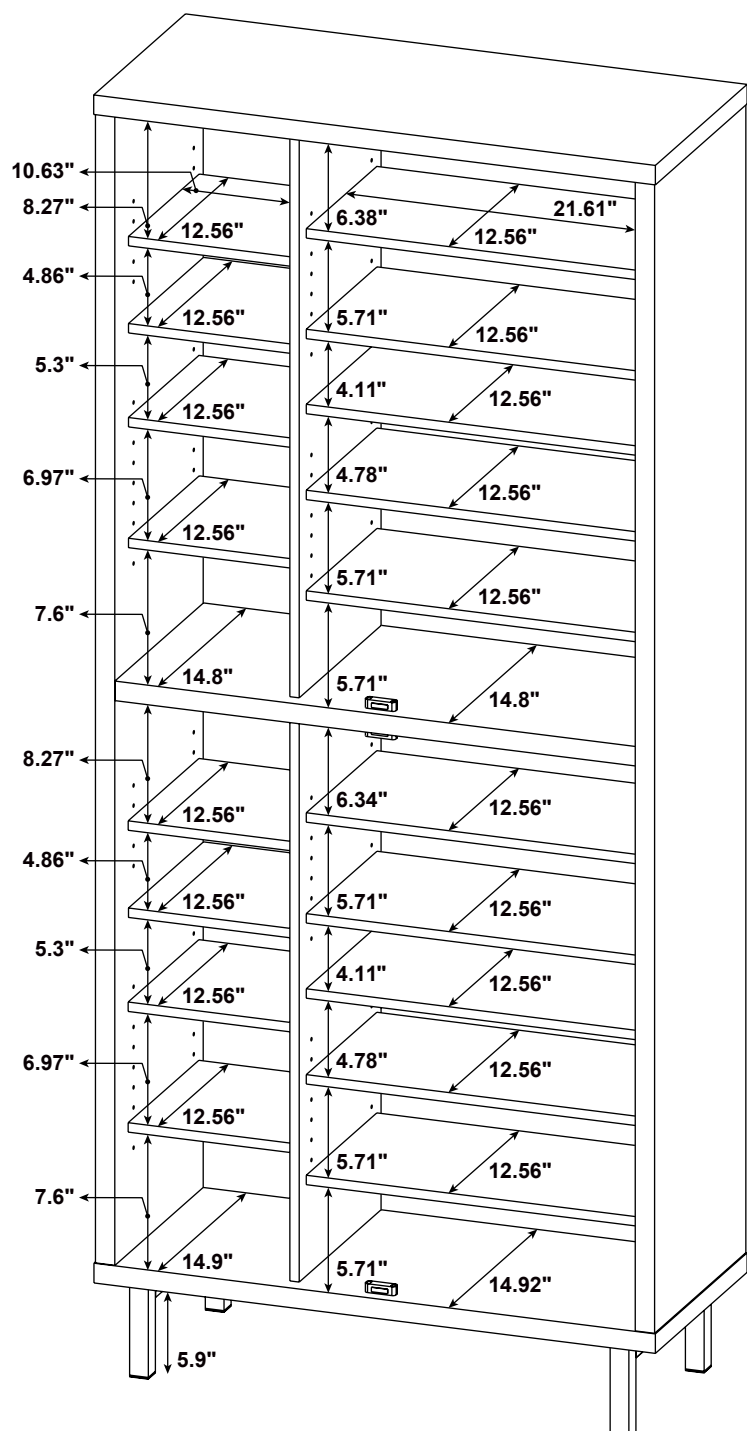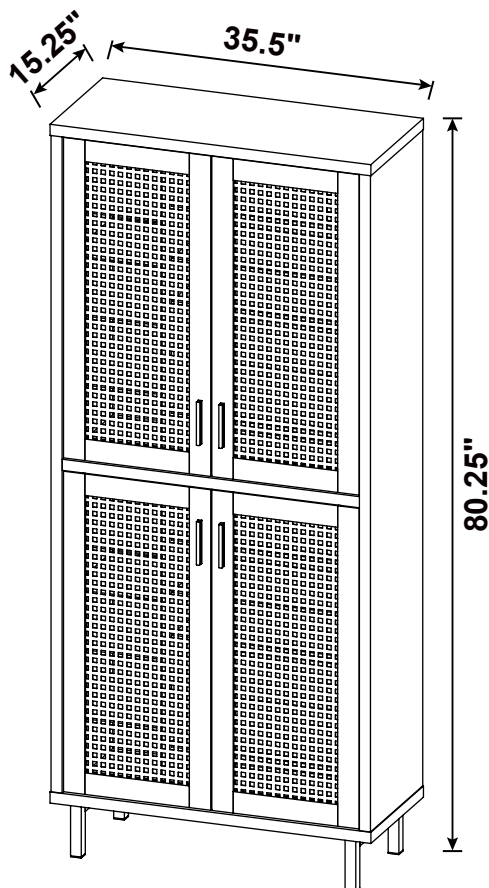  

Note : Dimension tolerance $\pm 5\%$


ANTI-TIPPING INSTALLMENT INSTRUCTIONS
FURNITURE TIPPING RESTRAINT**WARNING**

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.


This restraint must be screwed to a wood stud on the wall, using the long screw provided.

STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

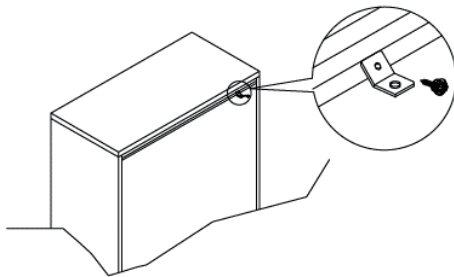**STEP 2**

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

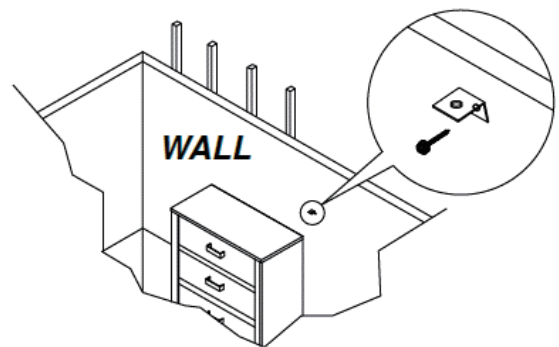**STEP 3**

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

