



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

193671
Dining Table

ITEM: 193671



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A TOP



1PC

B LEG



4PCS

C LEAF



1PC

HARDWARE IDENTIFICATION

1 ALLEN WRENCH
(M5 x 65mm - BLK)



1PC

2 BOLT
(M8 x 60mm - RBW)



8PCS

3 LOCK WASHER
(M8 - RBW)



8PCS

4 FLAT WASHER
(M8 - RBW)




8PCS

ITEM: **193671**




ASSEMBLY INSTRUCTIONS

STEP 1

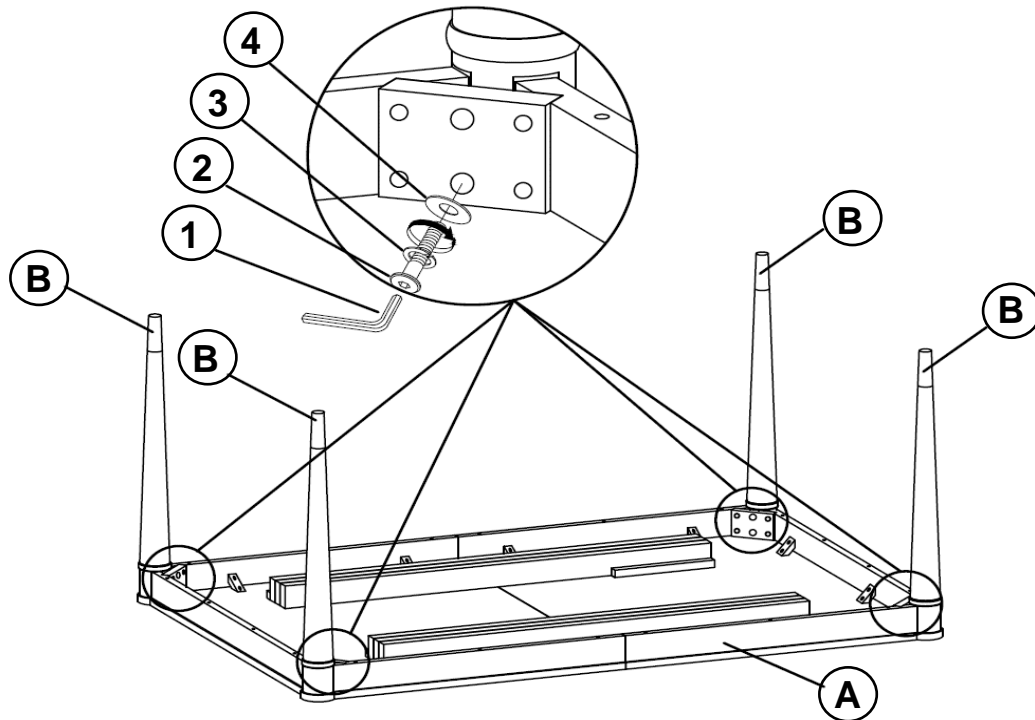

***Bottom View**

STEP 2

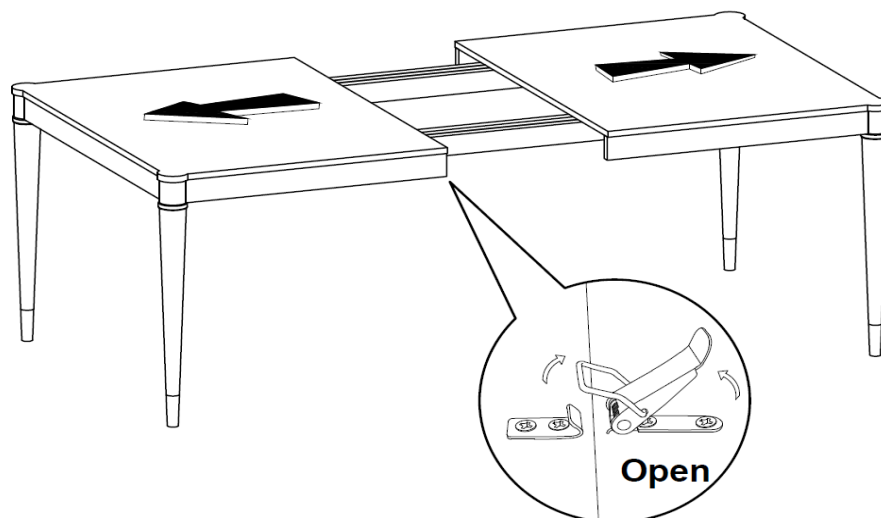


ITEM: **193671**




ASSEMBLY INSTRUCTIONS

STEP 3

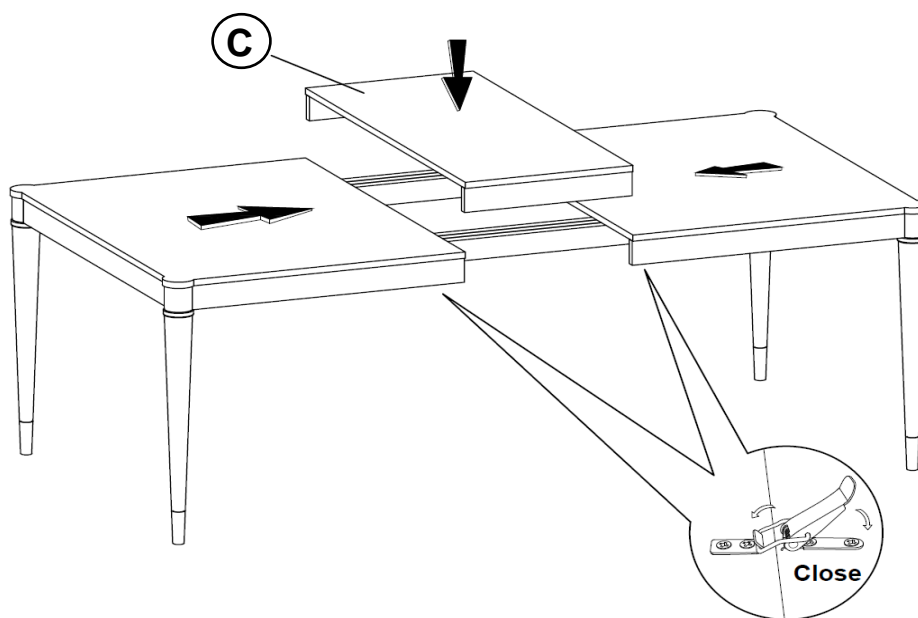


STEP 4

COMPLETE

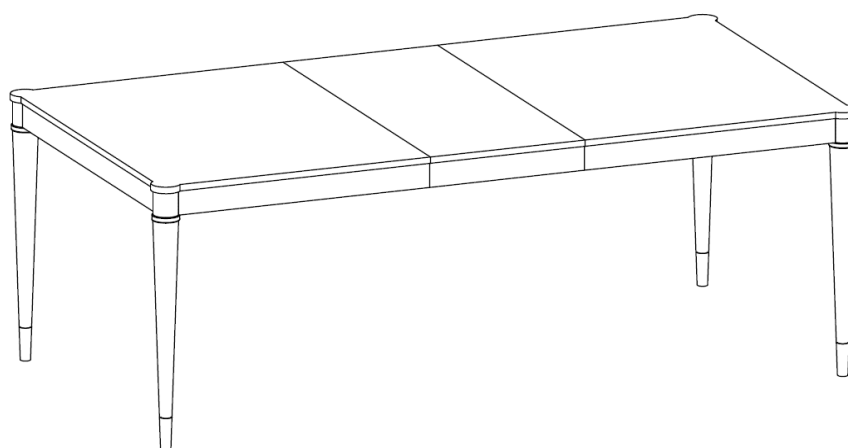

ITEM:193671

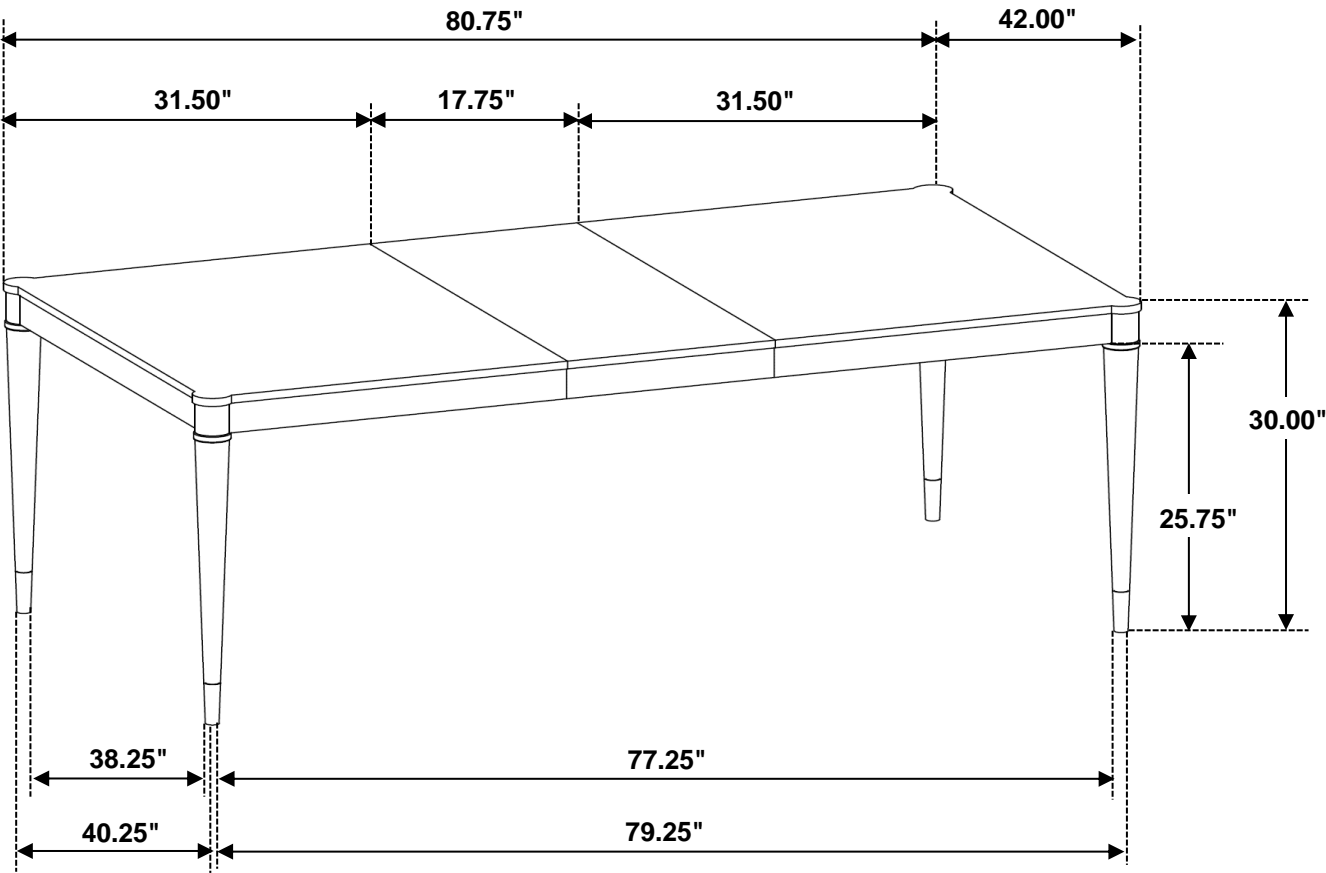

Note: Dimension tolerance $\pm 5\%$