

**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**



*Fine Furniture for every stage of life*

# ITEM:315882

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

 
 




 
 
 
 
 
 
 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES






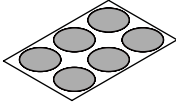


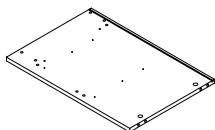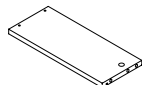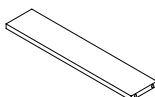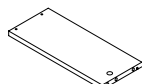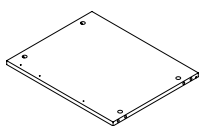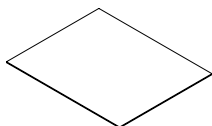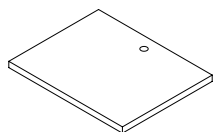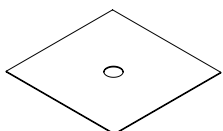



## PARTS IDENTIFICATION

A	LEFT SIDE PANEL		1 PC	I	DRAWER BACK PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	J	DRAWER LEFT SIDE PANEL		2 PCS
C	LOWER CROSS BRACE		2 PCS	K	DRAWER RIGHT SIDE PANEL		2 PCS
D	BOTTOM PANEL		1 PC	L	DRAWER BOTTOM PANEL		2 PCS
E	FRONT DECORATIVE STRIP		1 PC	M	LOWER DRAWER FRONT PANEL		1 PC
F	TOP PANEL		1 PC	N	TYPEA+C ELECTRICAL SOCKET		1 PC
G	BACK PANEL		1 PC	O	LED LIGHT		1 PC
H	UPPER DRAWER FRONT PANEL		1 PC				

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

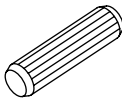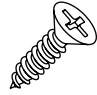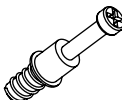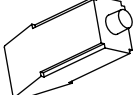ITEM: **315882****HARDWARE IDENTIFICATION****Z**

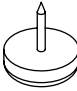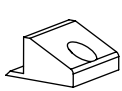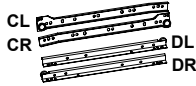
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	<b>WOODEN DOWEL</b> Ø8x30mm		28 PCS	7	<b>GLIDES SCREW</b> Ø 3x12mm BLK		27 PCS
2	<b>CAM BOLT</b> Ø7x35.5mm SR		12 PCS	8	<b>GLUE 40g</b>		1 PC
3	<b>CAM LOCK</b> Ø15x12mm SR		12 PCS	9	<b>STICKER</b> Ø20mm		2 PCS
4	<b>SCREW</b> Ø 4.3x35mm SR		8 PCS	10	<b>PLASTIC COVER</b> Ø 52mm		1 PC
5	<b>PLASTIC FEET</b> Ø15mm		4 PCS	11	<b>BACK PANEL SUPPORT</b>		3 PCS
6	<b>GLIDES</b> L = 350mm BLK		2 SET	12	<b>BACK PANEL SUPPORT SCREW</b> Ø3 x 19mm SR		3 PCS

**Z6,Z10 not included in blister packaging.****NOTE:**

 Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **315882**

**STEP 1**

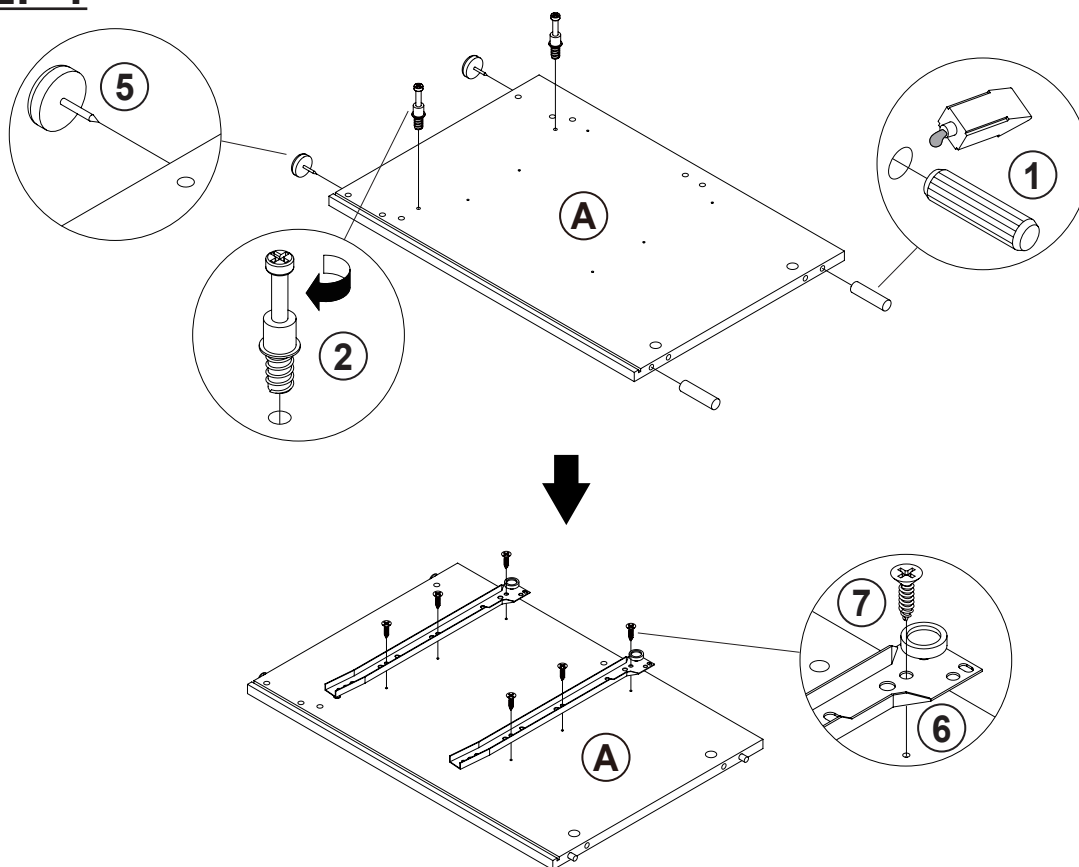

- 8**
- 1**  
**x 2**
- 2**  
**x 2**
- 5**  
**x 2**
- 6**  
**x 2**
- 7**  
**x 6**

**STEP 2**

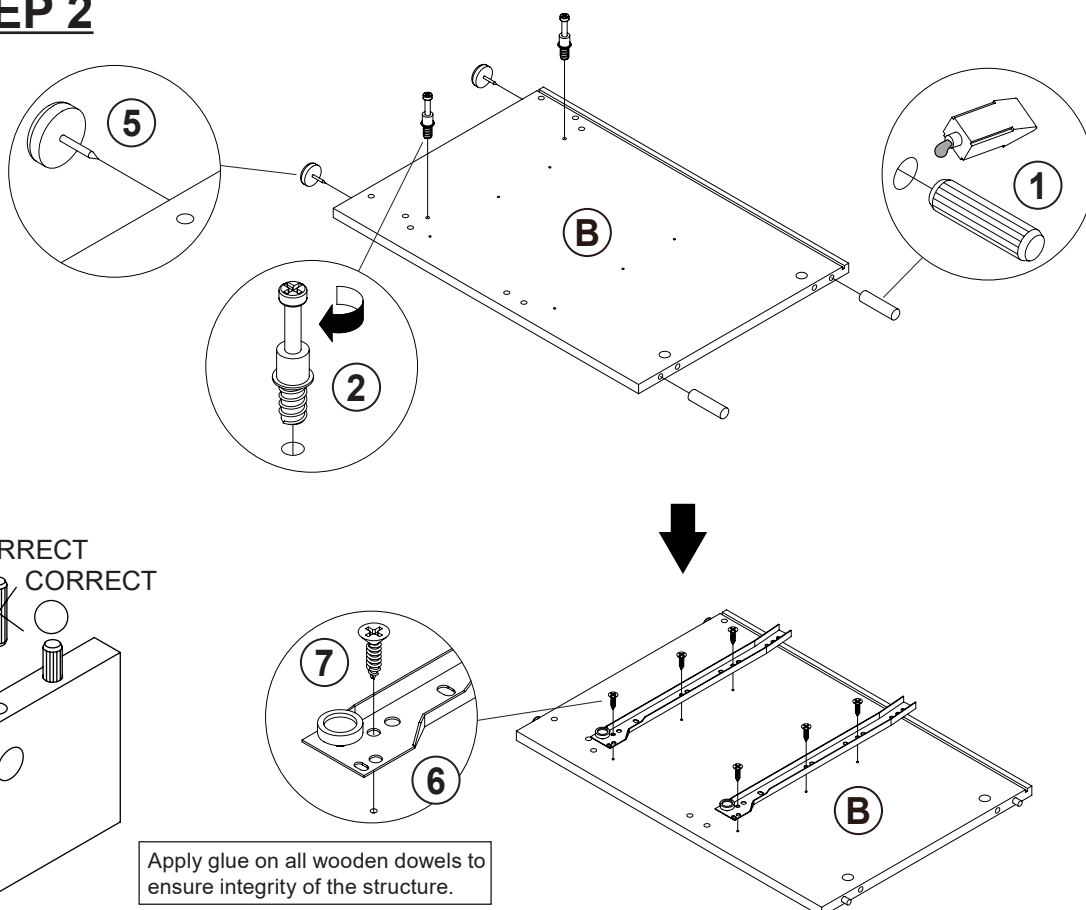 


- 8**
- 1**  
**x 2**
- 2**  
**x 2**
- 5**  
**x 2**
- 6**  
**x 2**
- 7**  
**x 6**


ITEM: **315882**

**STEP 3**

 **COASTER**  
FINE FURNITURE

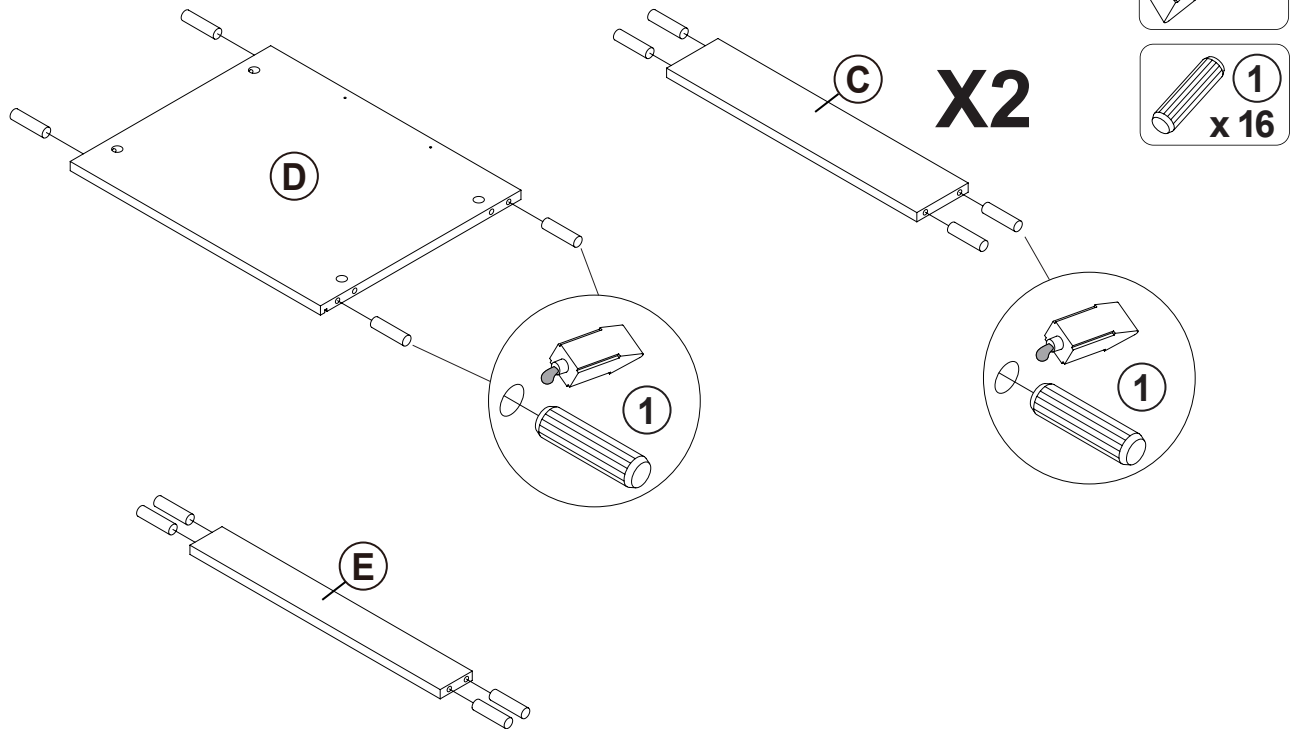


**STEP 4**


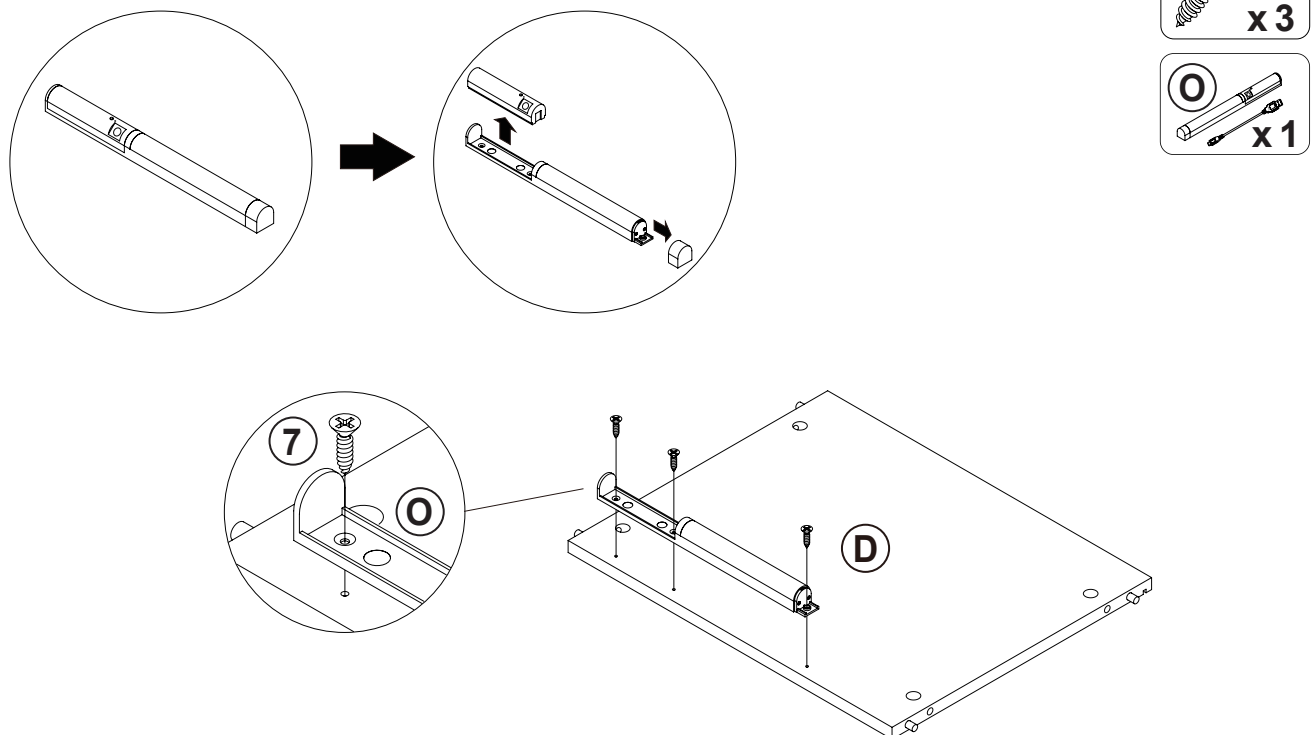 


ITEM: **315882**

**STEP 5**

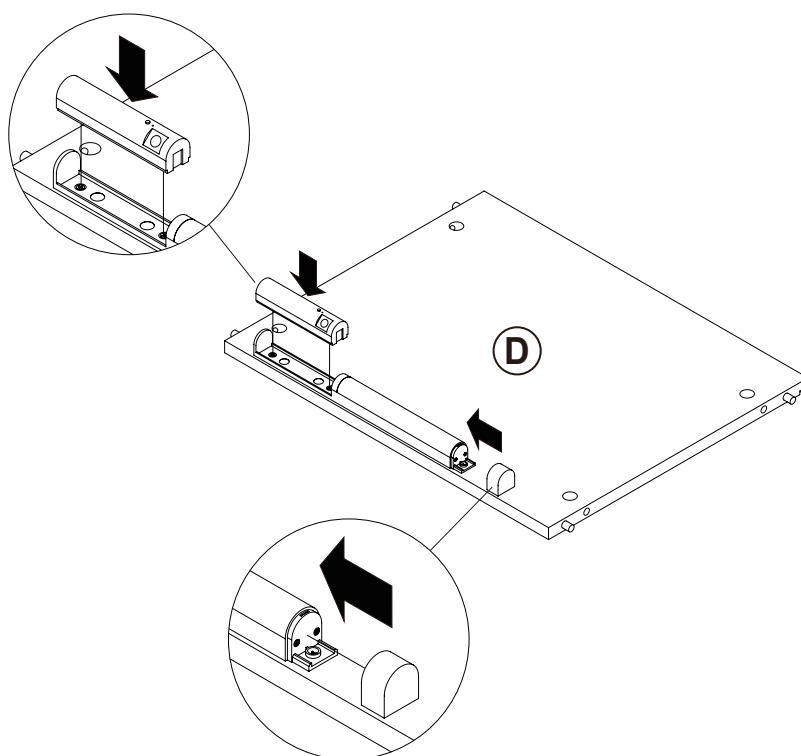 


**STEP 6**

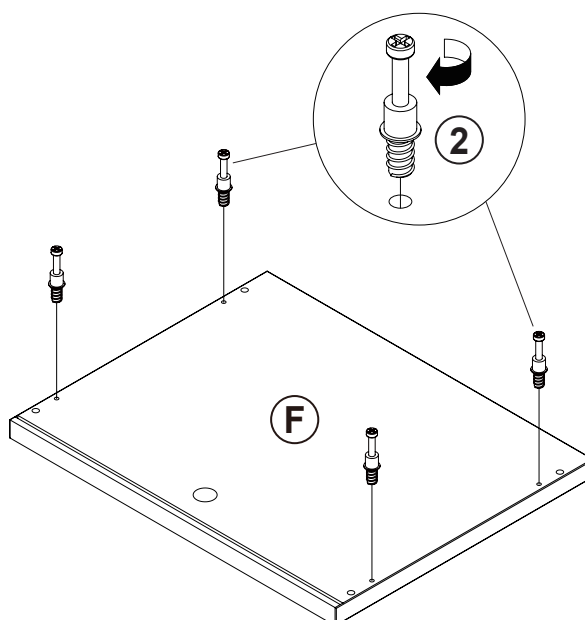  



ITEM: **315882**

**STEP 7**

 **COASTER**  
FINE FURNITURE

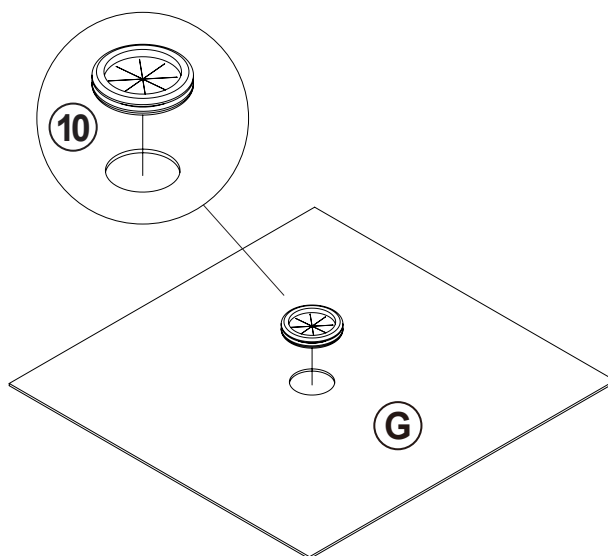


**STEP 8**




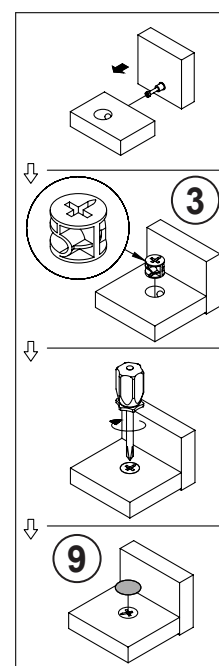 
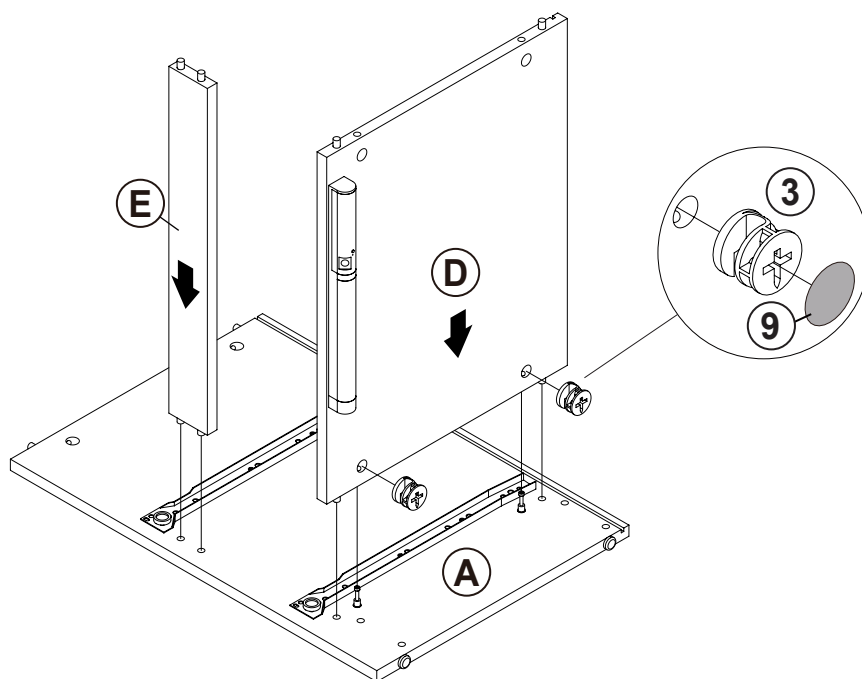 


ITEM: **315882**

**STEP 9**

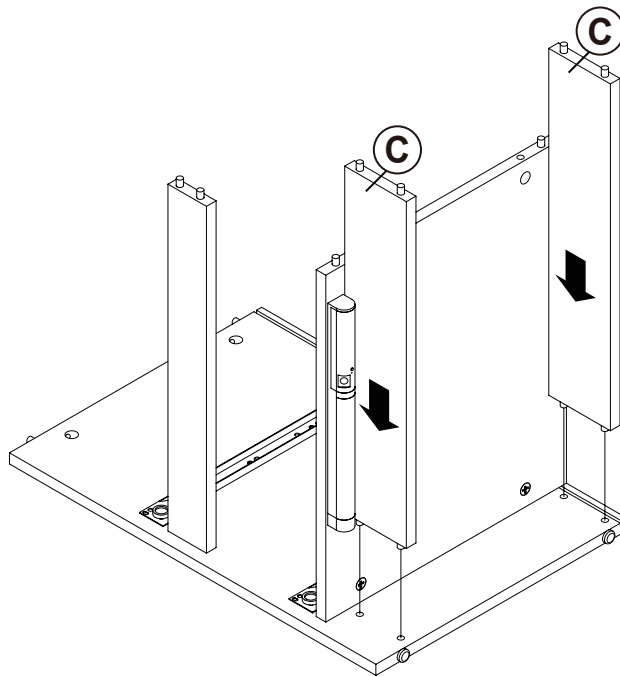 


**STEP 10**

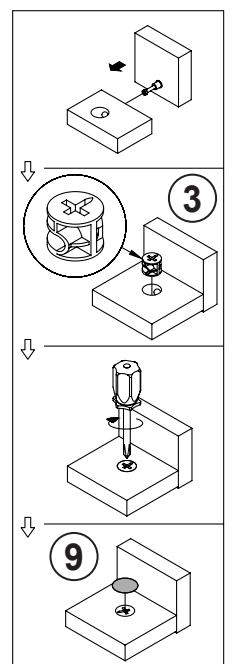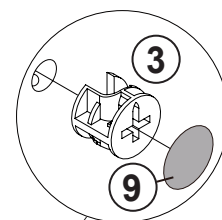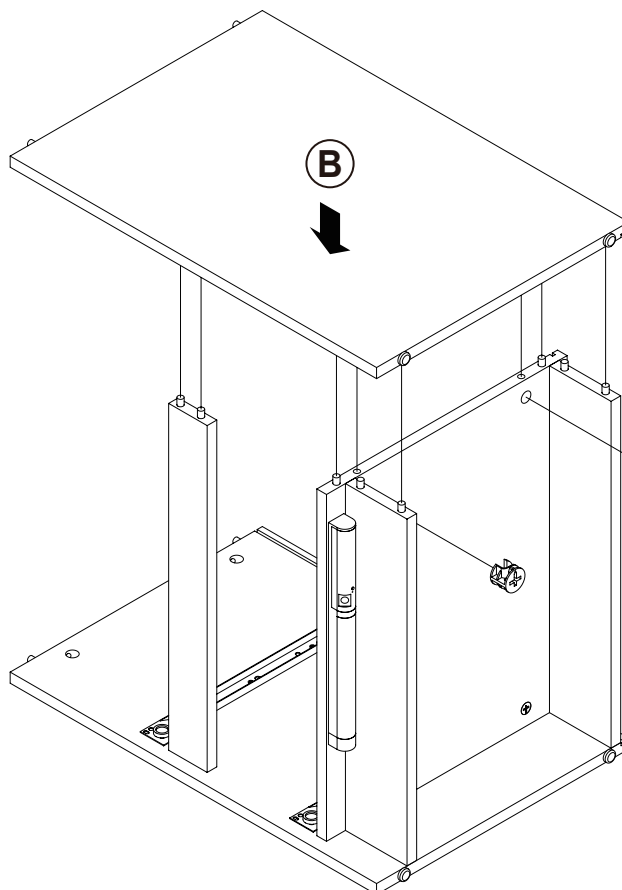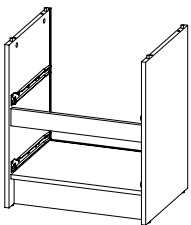     





ITEM: **315882**

**STEP 11**

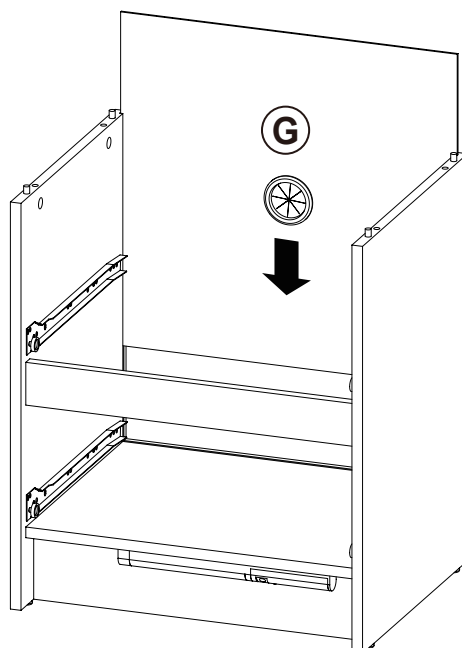 



**STEP 12**

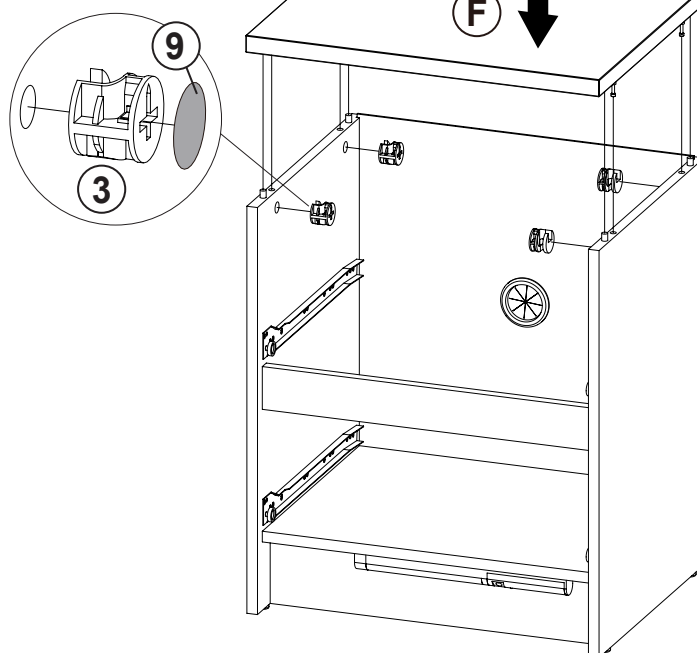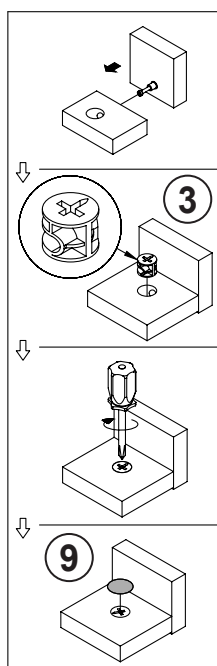  






ITEM: **315882**

**STEP 13**

 
 
**COASTER**  
FINE FURNITURE

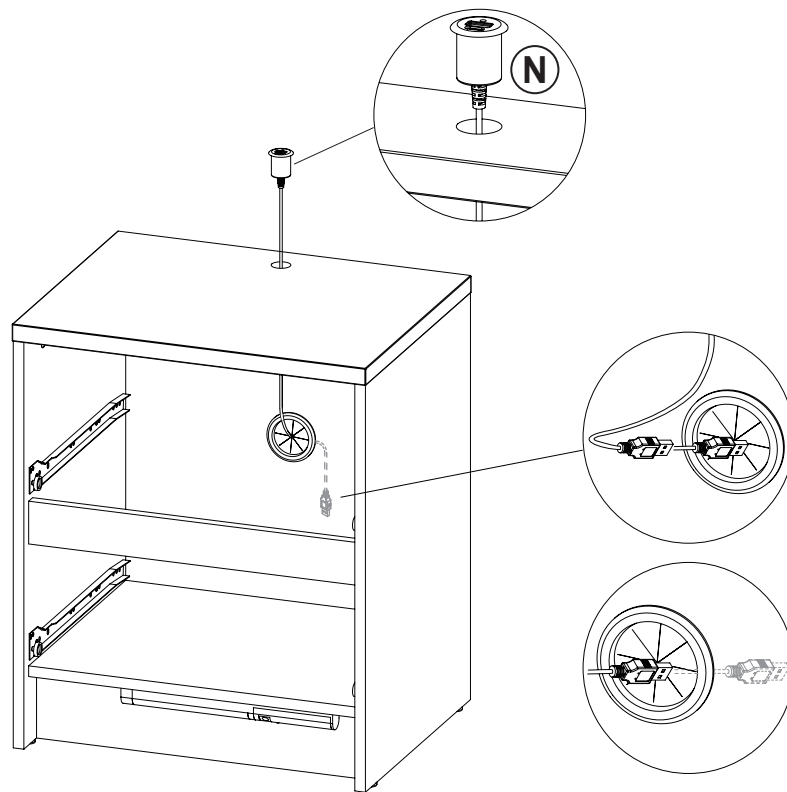

**STEP 14**

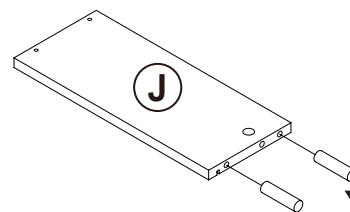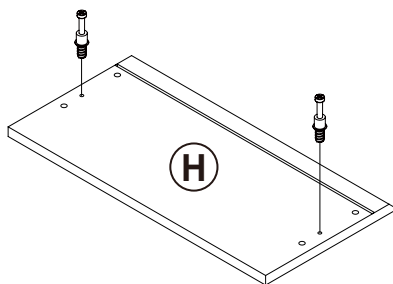     


**X2**

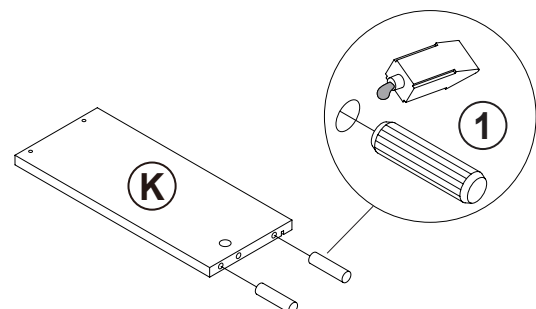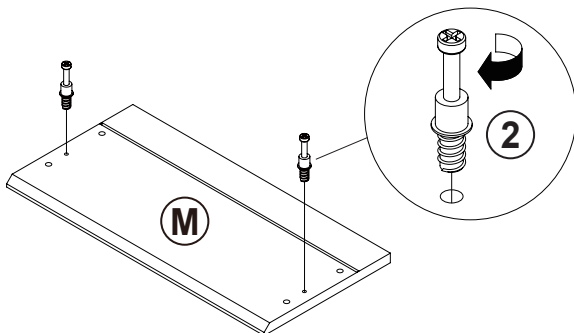  


**X2**

ITEM: **315882**

 
**STEP 15-1**

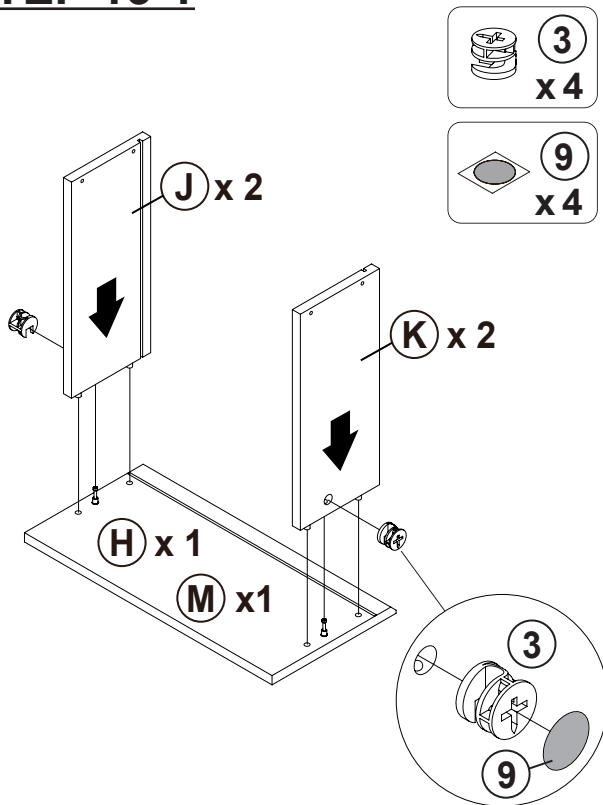


**STEP 15-2**

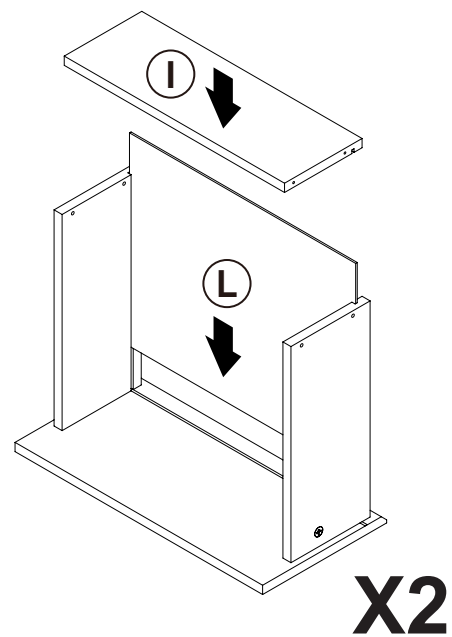 

**STEP 15-3**

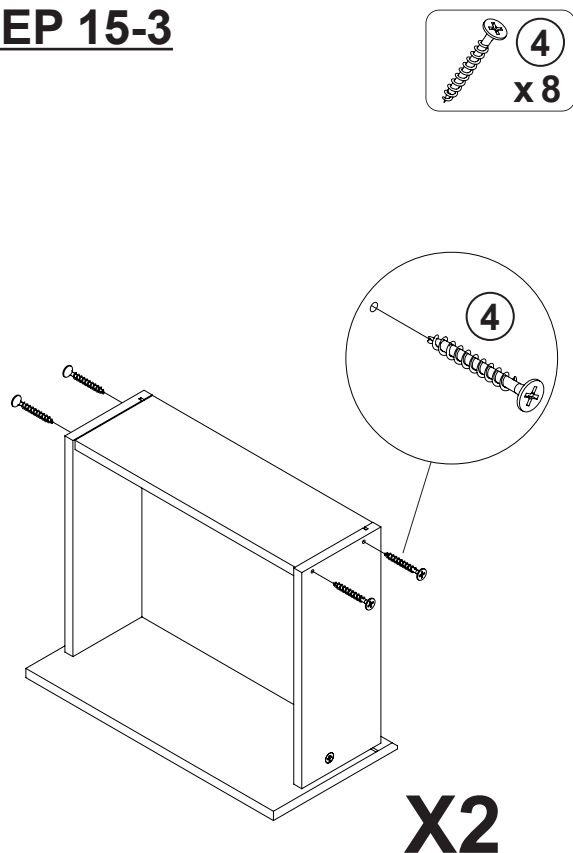 


**STEP 15-4**




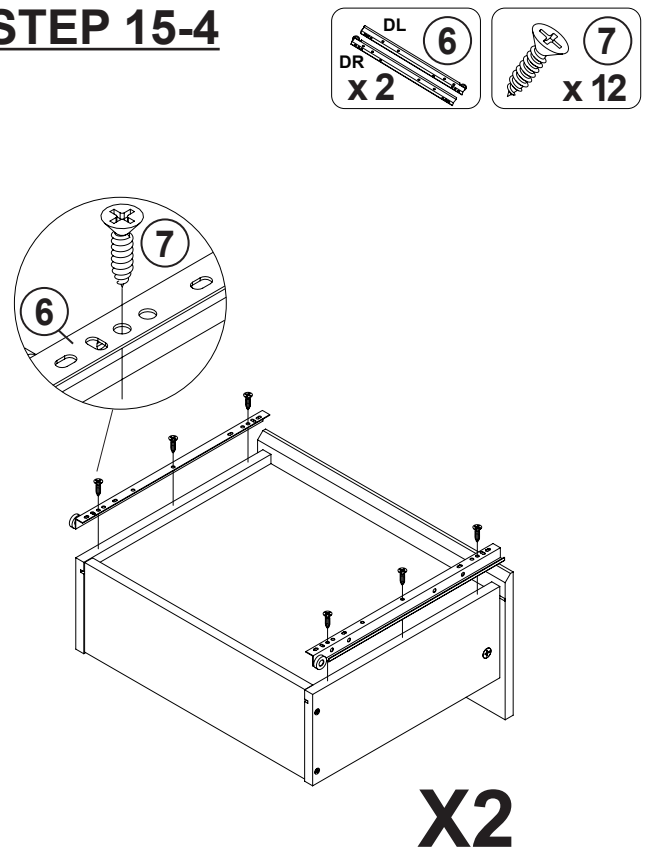 


ITEM: **315882**

**STEP 16**

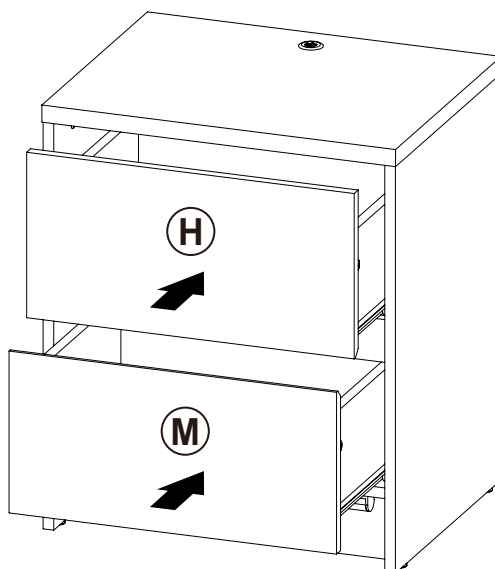 

**STEP 17**

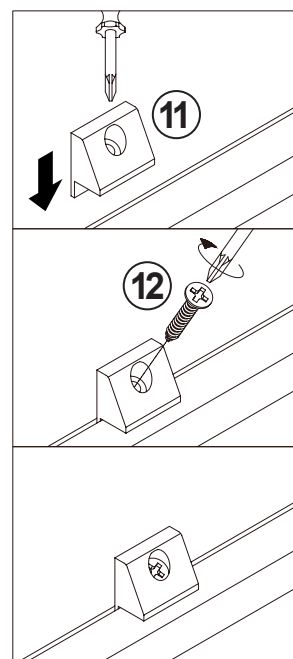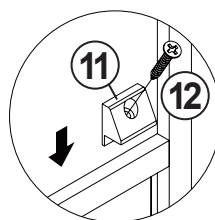  
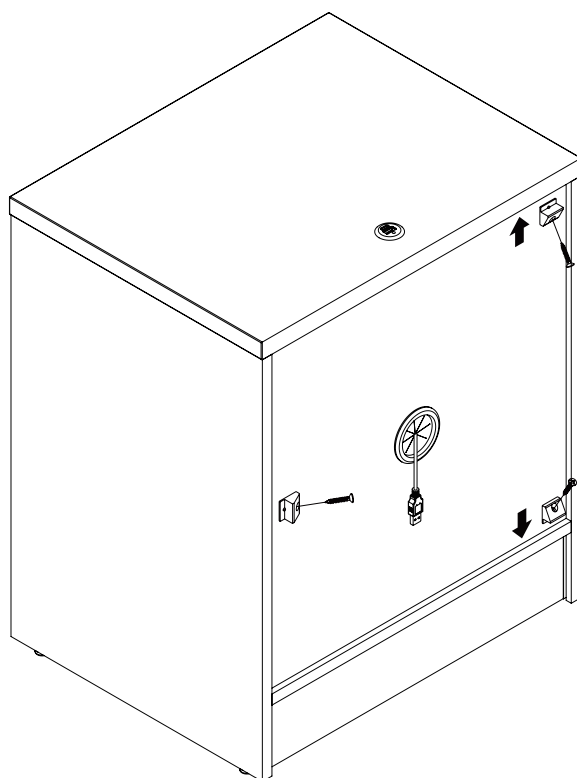 
 


ITEM: **315882**

**STEP 18**

   **COMPLETE**


**COASTER**  
FINE FURNITURE

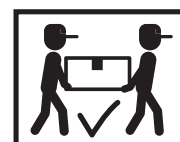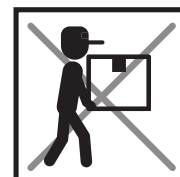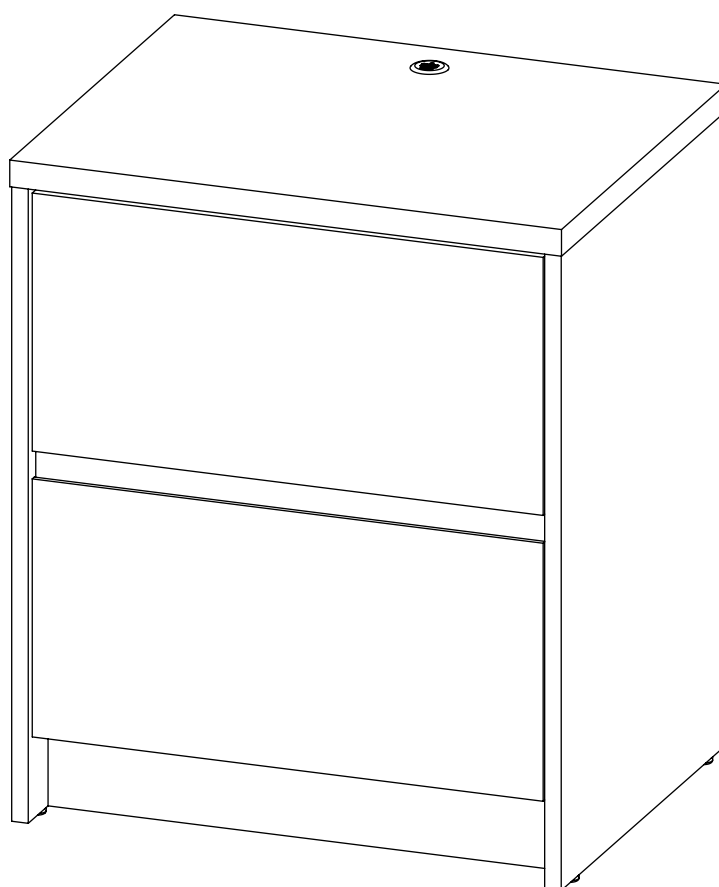

ITEM: **315882**


## STEP 19
 
### LED Tube Light User Manual

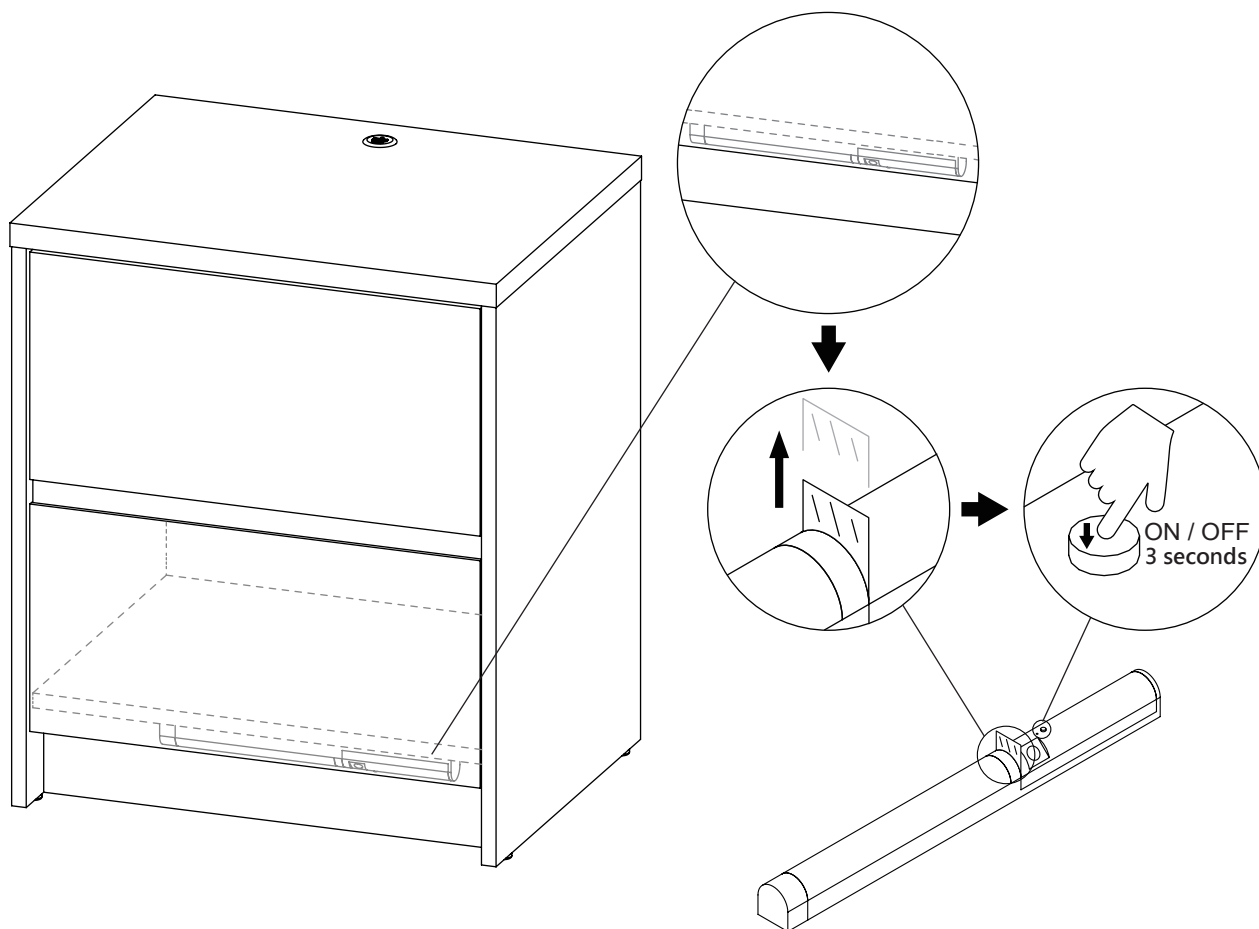


### Charging Instructions
 
#### Operating instructions:

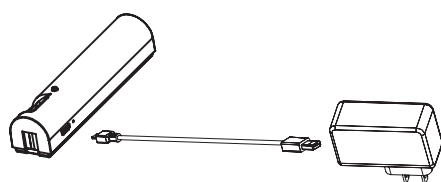


USB charging wires

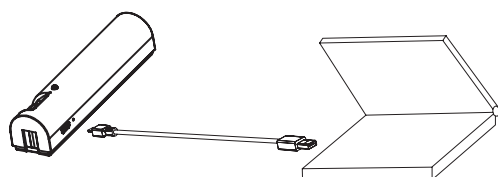 

#### USB charging parameters: 5V /1A

 
In the dark condition, the light will switch on when detecting human moving within detection range, the light will switch off after human leaving or stop moving for 15 seconds. In a bright environment, this sensor function will not work.

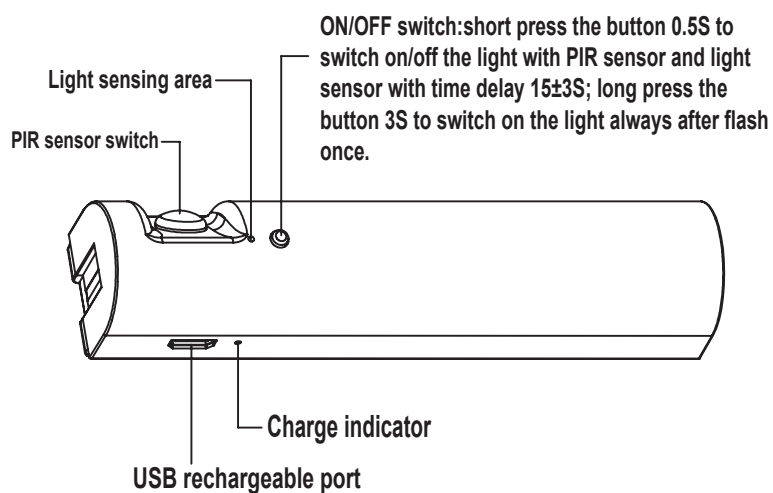




ITEM: **315882**

**STEP 20**

 **Sensing Distance**

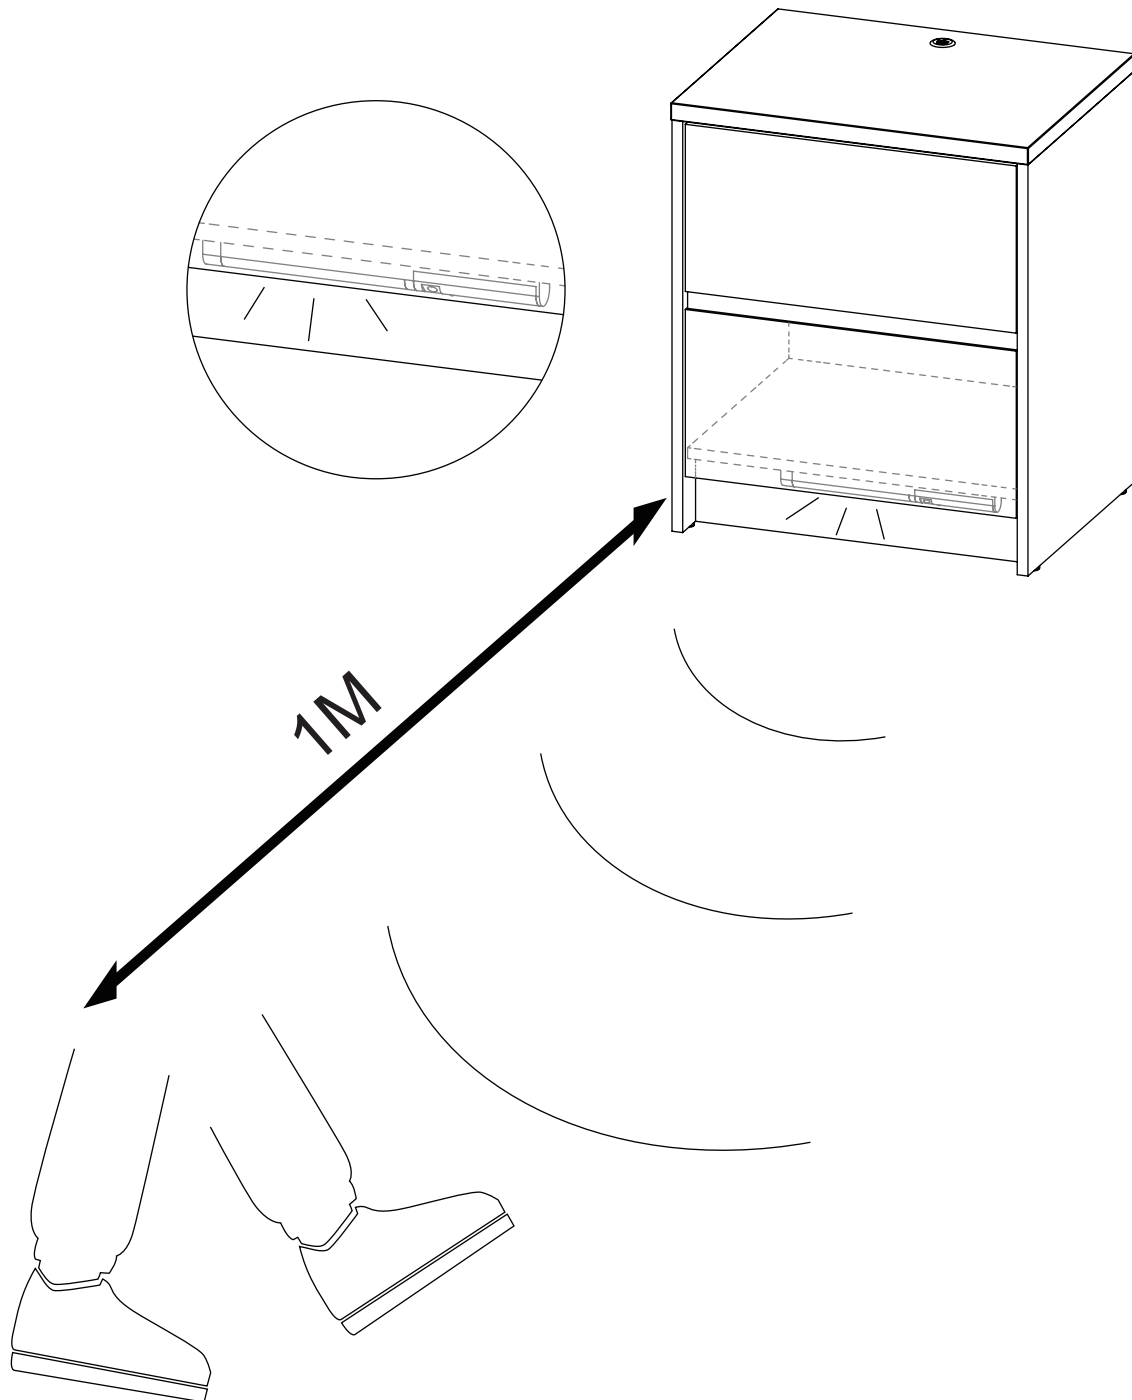

ITEM: **315882**

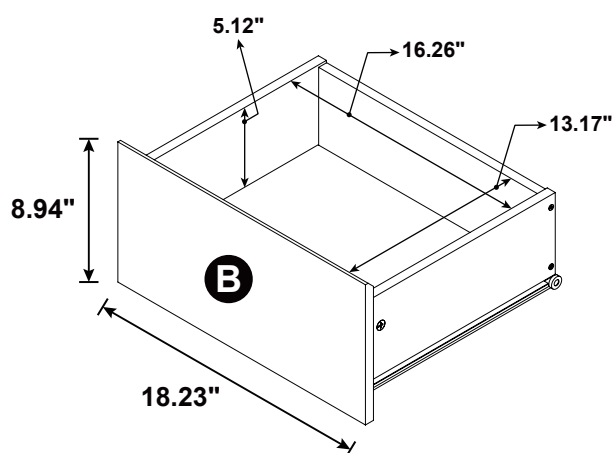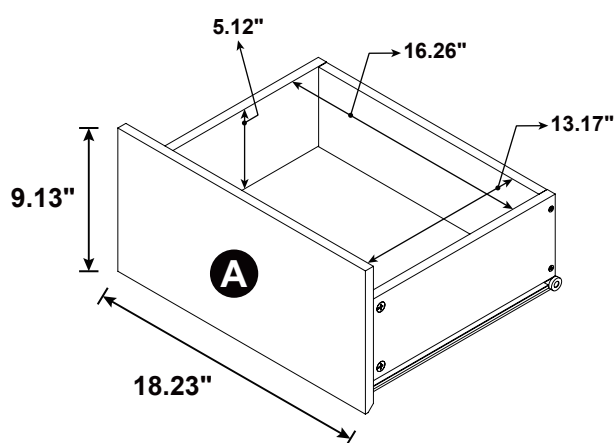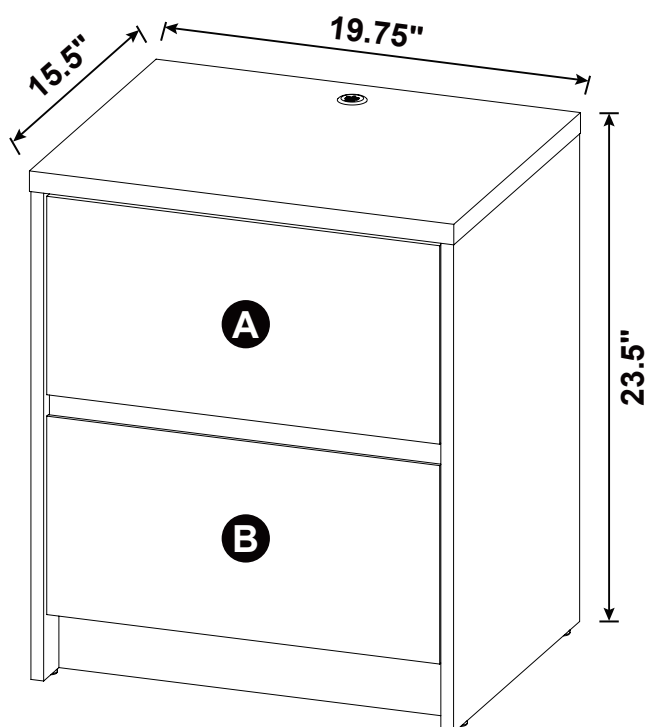   

**Note :** Dimension tolerance  $\pm 5\%$