

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

REVISION 0: 01/14/2024 NIGH

PAGE 1 OF 16

315902 NIGHTSTAND

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

Remove hardware from box and sort by size.
 Please check to see that all hardware and parts are present prior to start of assembly.
 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME



PARTS IDENTIFICATION

A	LEFT SIDE PANEL	1 PC	I	DRAWER BACK PANEL		2 PCS
В	RIGHT SIDE PANEL	1 PC	J	DRAWER LEFT SIDE PANEL		2 PCS
С	LOWER CROSS BRACE	2 PCS	K	DRAWER RIGHT SIDE PANEL	Sign Sign Sign Sign Sign Sign Sign Sign	2 PCS
D	BOTTOM PANEL	1 PC	L	DRAWER BOTTOM PANEL		2 PCS
E	FRONT DECORATIVE STRIP	1 PC	М	LOWER DRAWER FRONT PANEL		1 PC
F	TOP PANEL	1 PC	N	TYPEA+C ELECTRICAL SOCKET		1 PC
G	BACK PANEL	1 PC	0	LED LIGHT	The state of the s	1 PC
н	UPPER DRAWER FRONT PANEL	1 PC				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



HARDWARE IDENTIFICATION


Z NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	WOODEN DOWEL Ø8x30mm		28 PCS	7	GLIDES SCREW Ø 3x12mm BLK		27 PCS
2	CAM BOLT Ø7x35.5mm SR		12 PCS	8	GLUE 40g		1 PC
3	CAM LOCK Ø15x12mm SR		12 PCS	9	STICKER Ø20mm		2 PCS
4	SCREW Ø 4.3x35mm SR	MATTER THE STATE OF THE STATE O	8 PCS	10	PLASTIC COVER Ø 52mm		1 PC
5	PLASTIC FEET Ø15m		4 PCS	11	BACK PANEL SUPPORT		3 PCS
6	GLIDES L = 350mm BLK	CL CR TO	2 SET	12	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		3 PCS


Z6,Z10 not included in blister packaging.


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 315902 COASTER* STEP 1 **(5) (5) x** 2 x 2 7 STEP 2

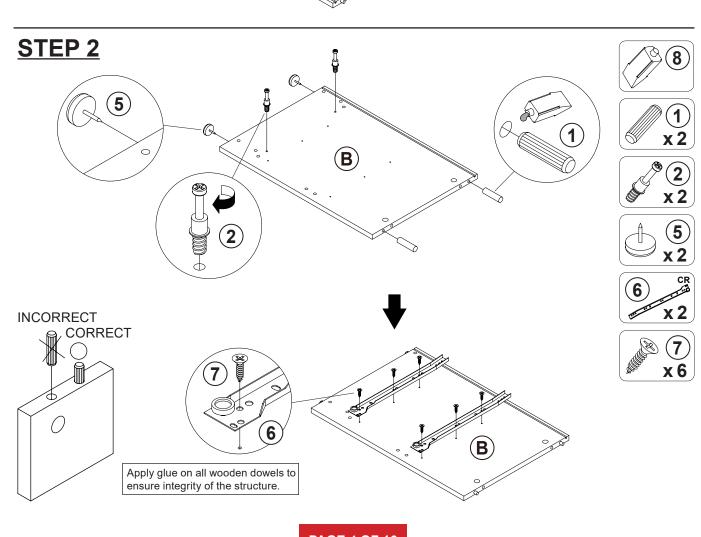

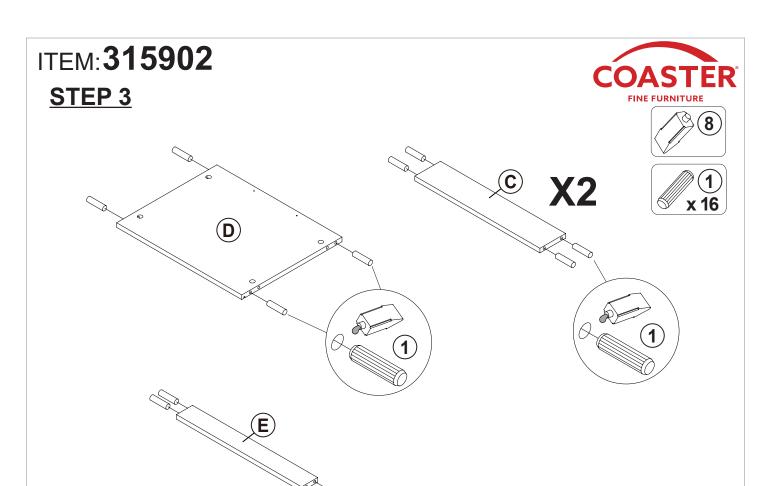


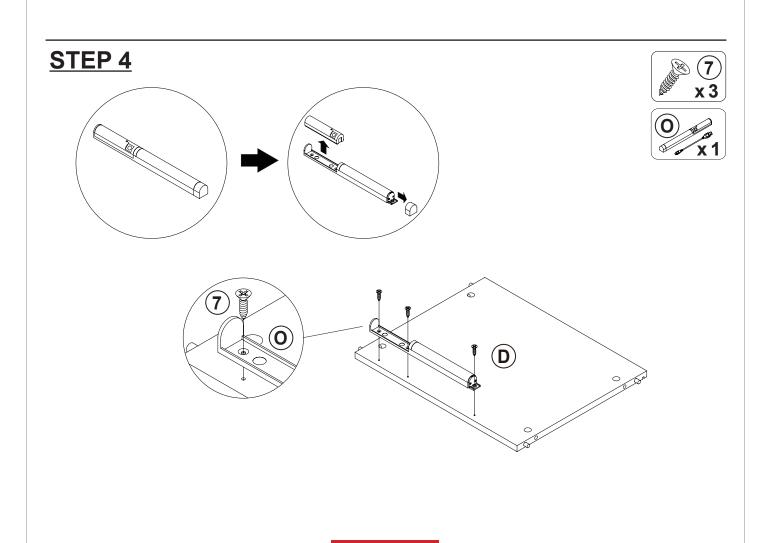


PAGE 5 OF 16

COASTERFURNITURE.COM



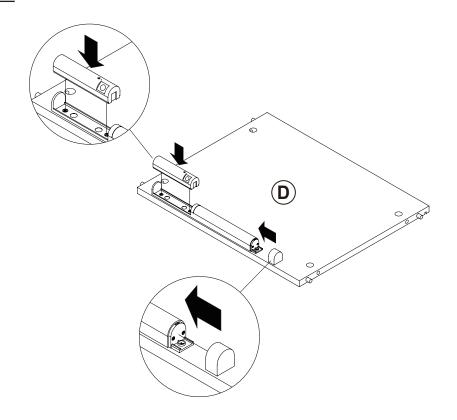





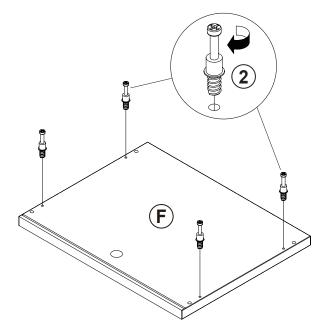






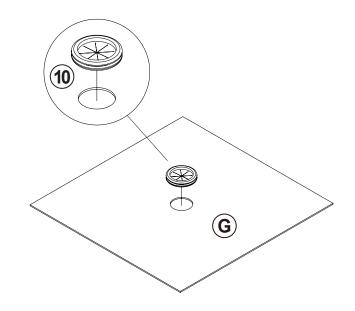

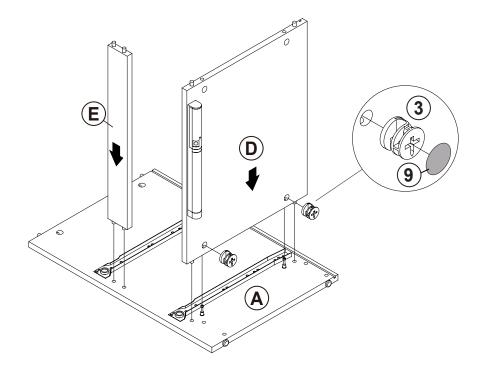







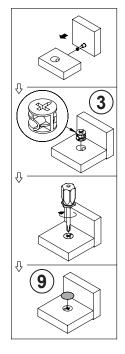





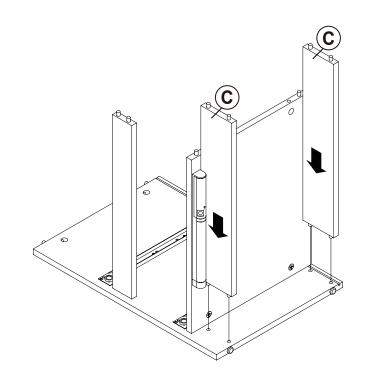


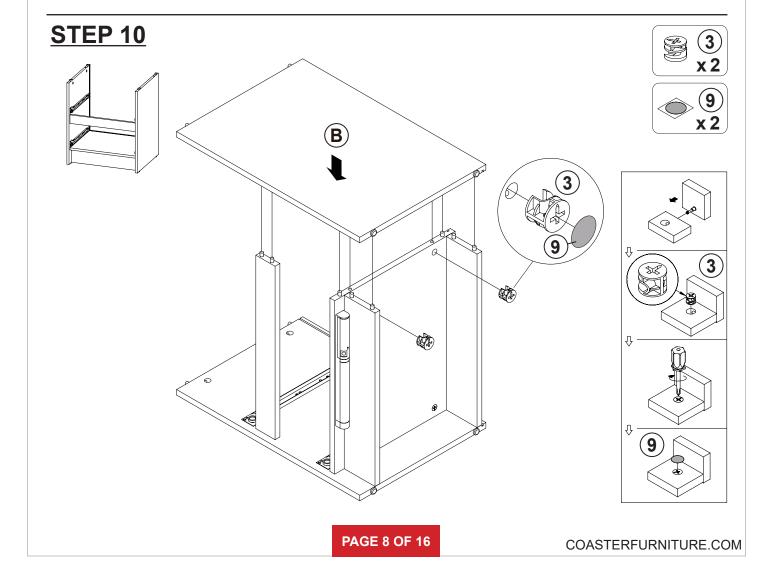



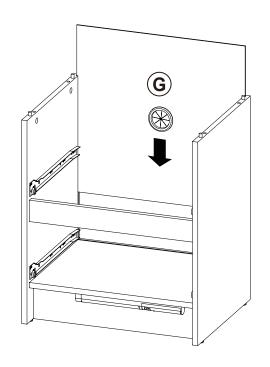

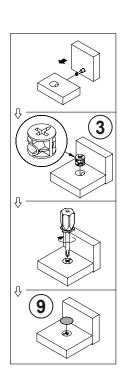


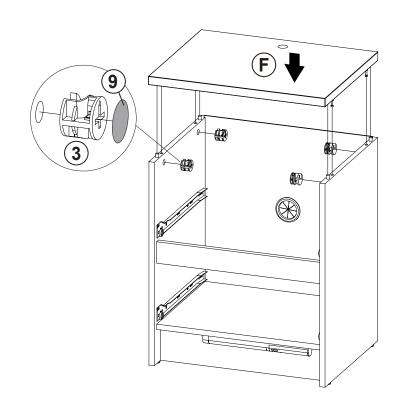










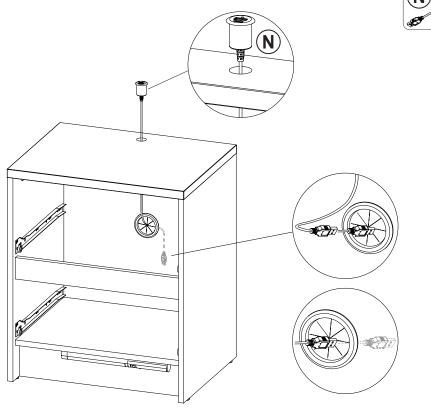


STEP 14

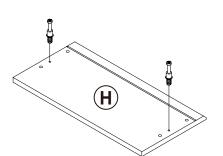

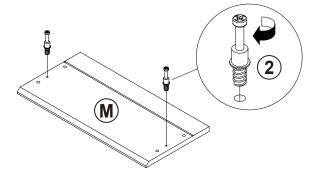

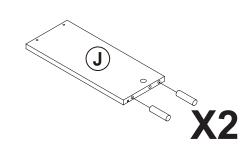

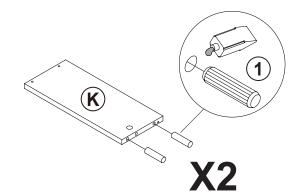


x 8










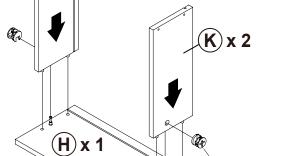

(M) x1

STEP 15-2



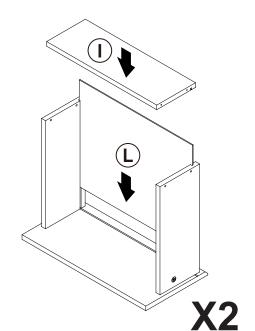

STEP 15-3





3








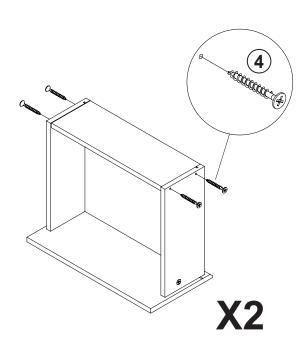


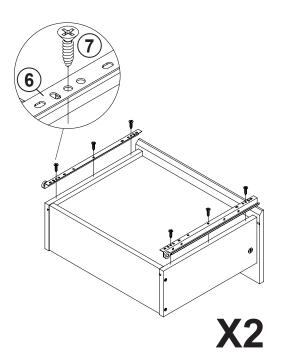





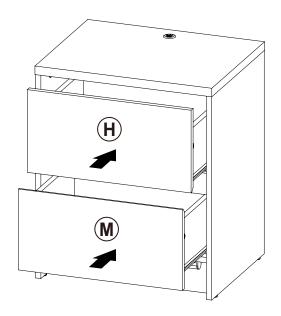



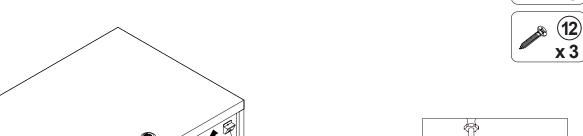

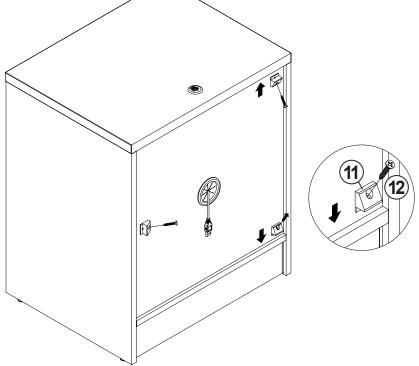

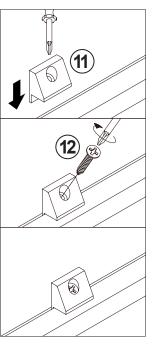

STEP 18

COMPLETE











STEP 19



LED Tube Light User Manual

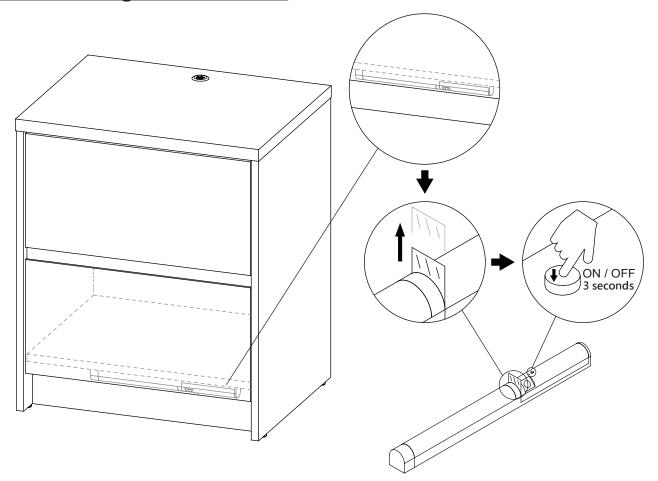

Charging Instructions

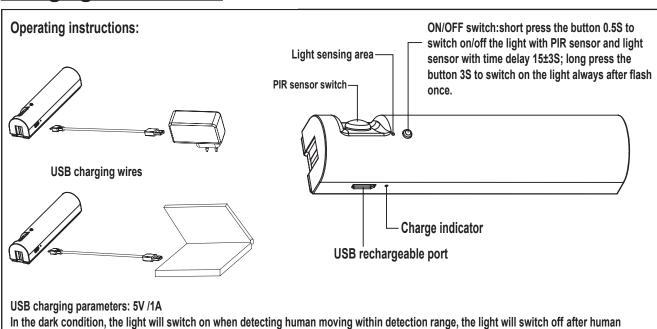


leaving or stop moving for 15 seconds. In a bright environment, this sensor function will not work.


STEP 20


COASTER


Sensing Distance

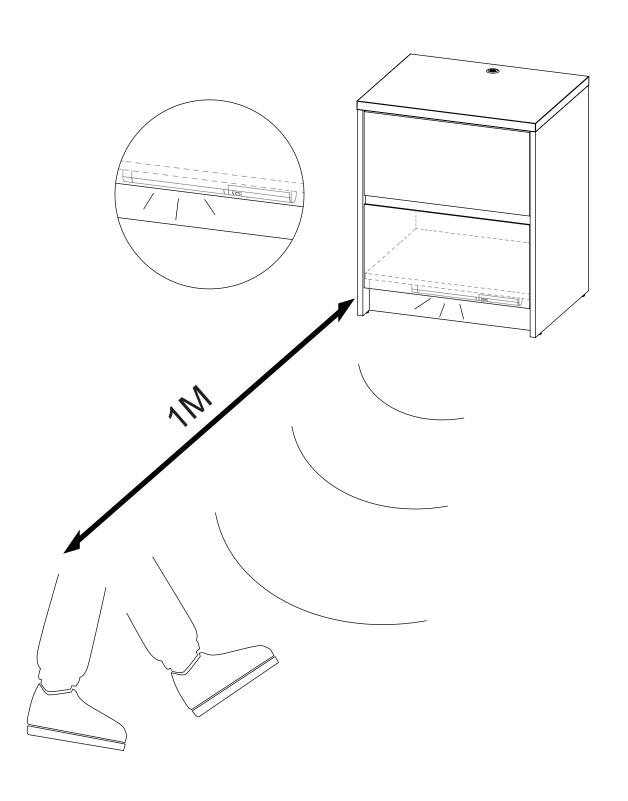



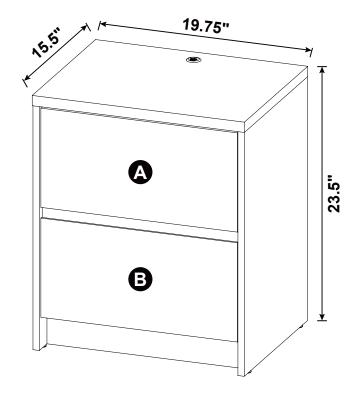

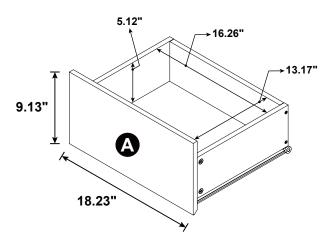

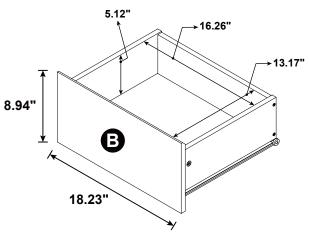

Note: Dimension tolerance ±5%