

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 02/05/2025

PAGE 1 OF 9

COASTERFURNITURE.COM

ITEM:315906



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

WARNING!

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.


\triangle


ASSEMBLY TIME **30 MINUTES** PARTS IDENTIFICATION TOP 1 PC **1 PC** С LIFTING POLE Α **BASE FRAME** В D **1 PC 1 PC TOP FRAME** HARDWARE IDENTIFICATION Ζ NO DESCRIPTION FIGURE Q'TY NO DESCRIPTION **FIGURE** Q'TY ALLEN BOLT 4 PCS **1 PC** 1 5 WRENCH M6x33mm BLK 4mm SR ALLEN BOLT **1 PC** 2 4 PCS 6 WRENCH M6x15mm BLK 5mm SR Ø **CASTER WITH** BOLT 4 PCS **2 PCS** 3 7 M8x43mm BLK LOCK **FLOOR** 4 PCS 8 CASTER 2 PCS 4 PROTECTOR 30x15mm


Z7,Z8 not included in blister packaging.


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

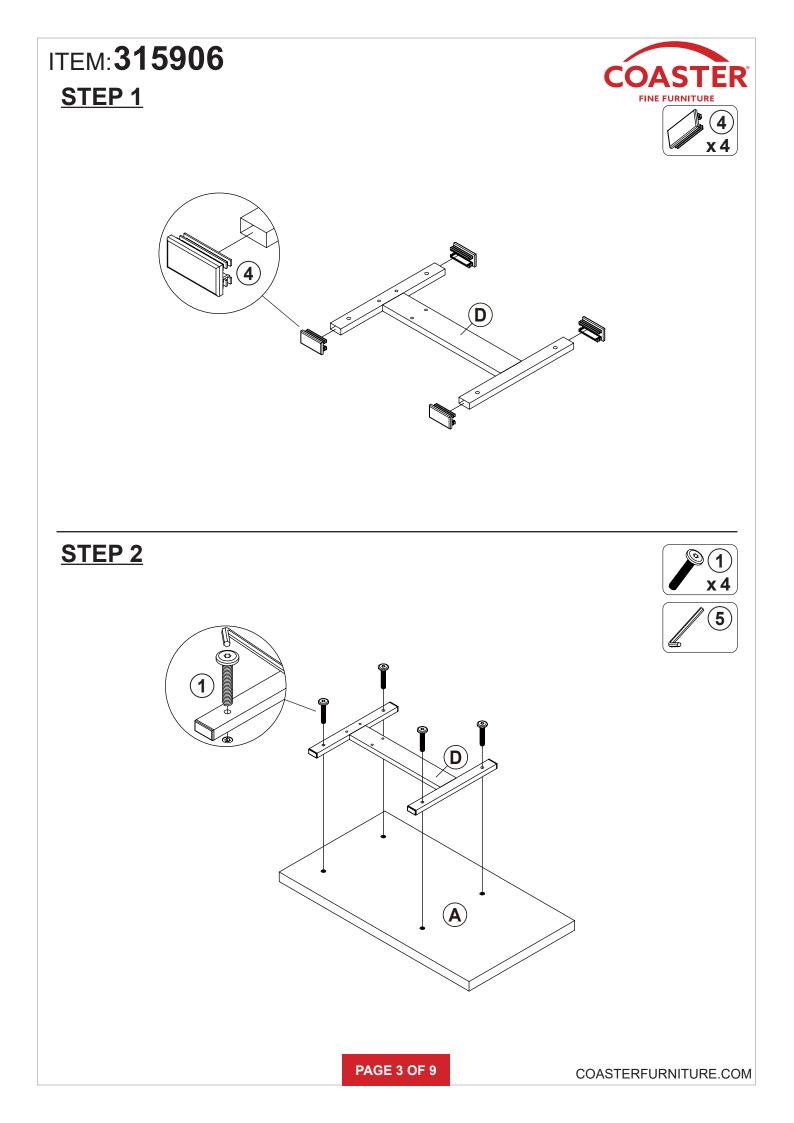

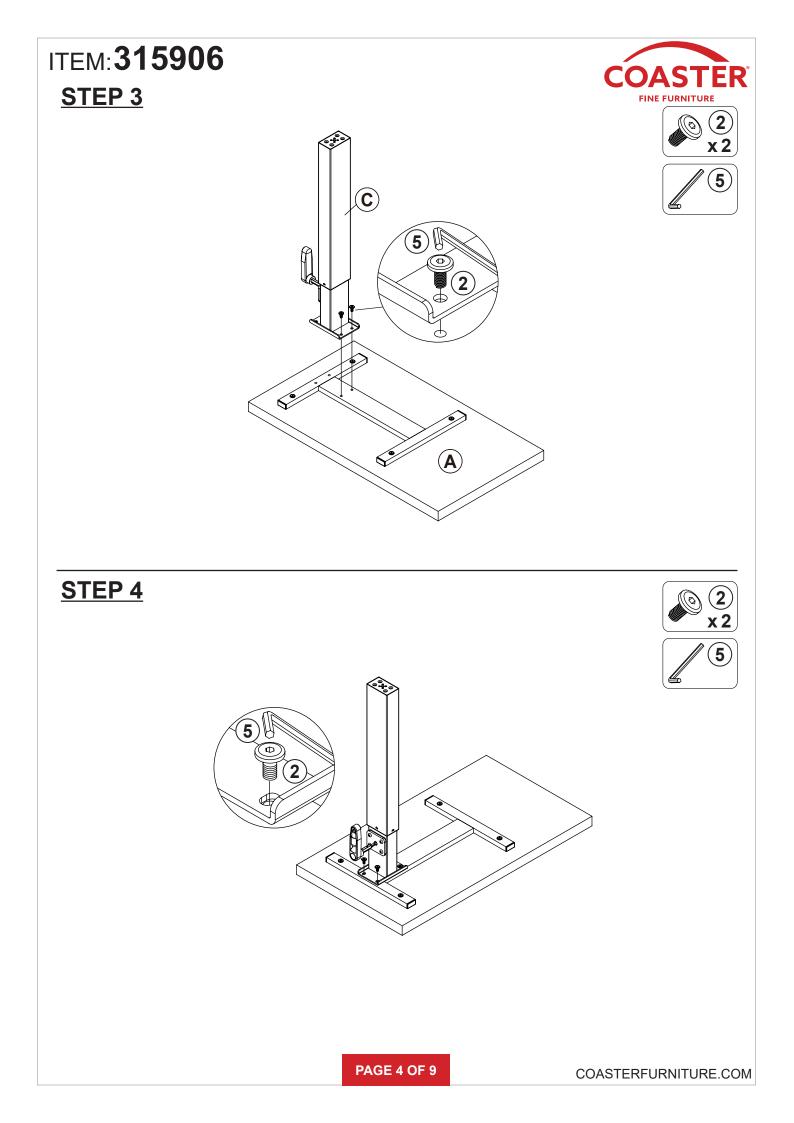

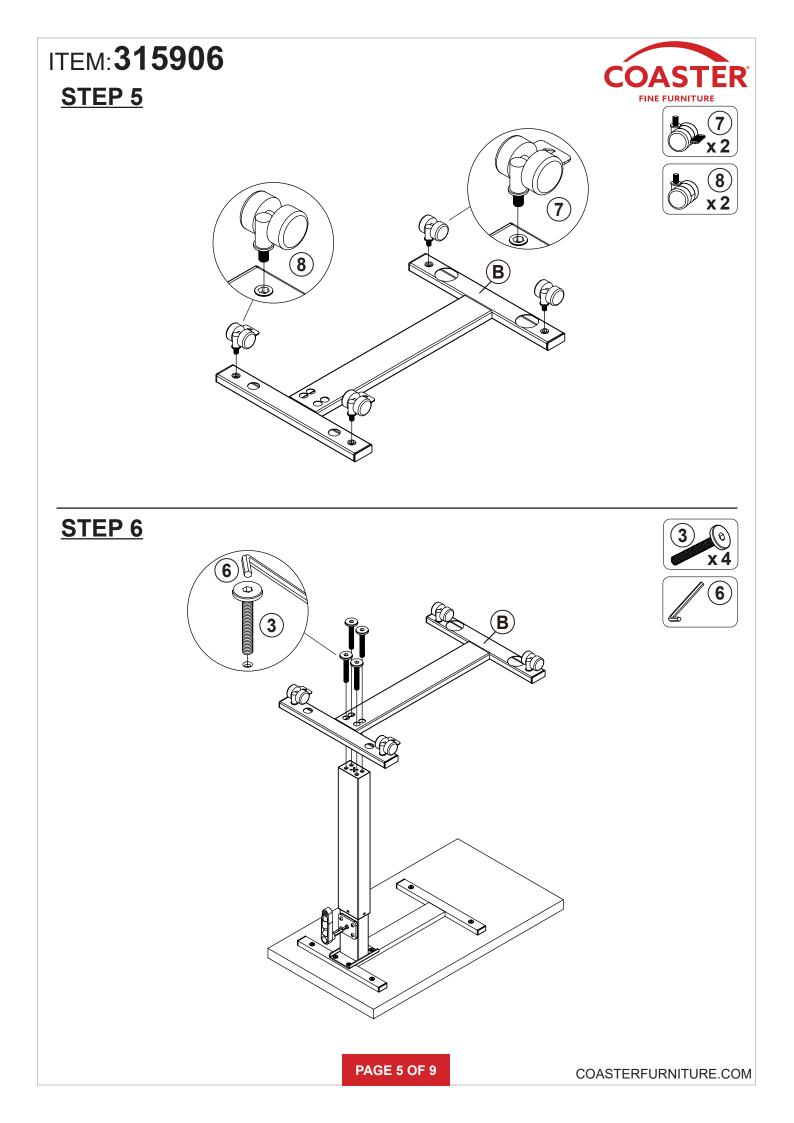

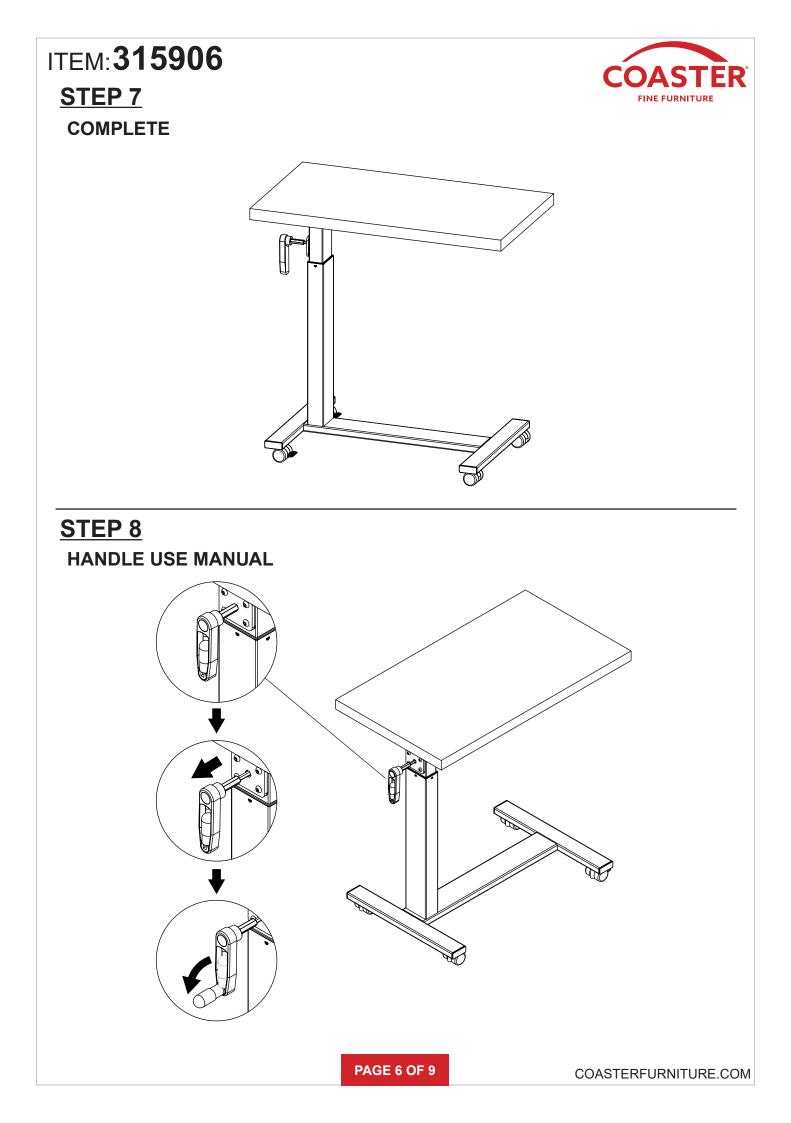

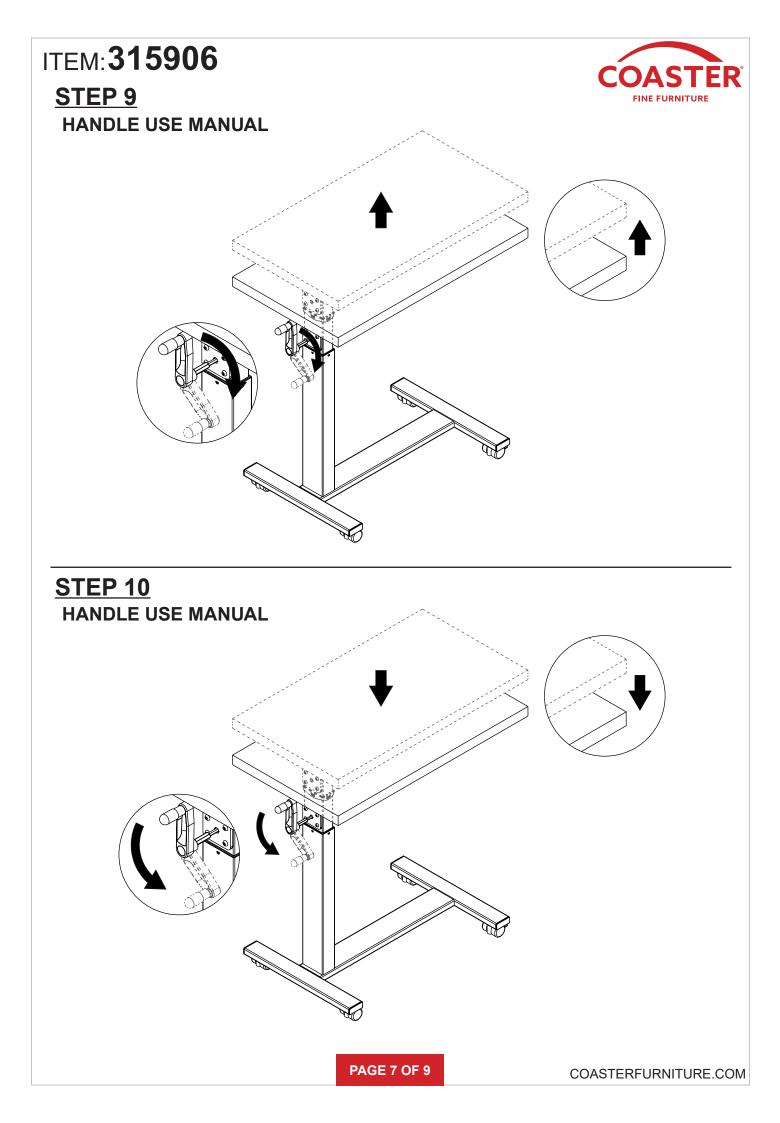

ITEM: **315906** STEP 11 HANDLE USE MANUAL



