

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

706224
MEDIA TOWER

ITEM:706224

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!













1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

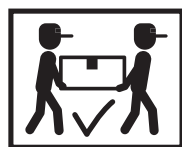

ASSEMBLY TIME

60 MINUTES

            PARTS IDENTIFICATION

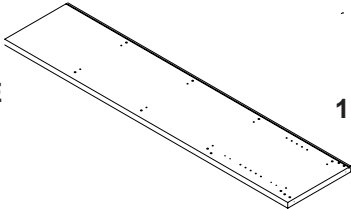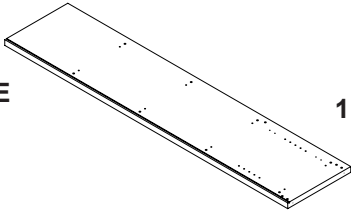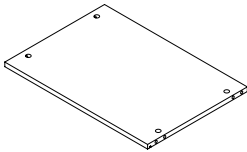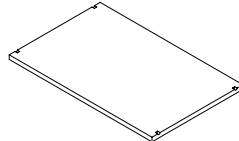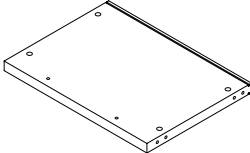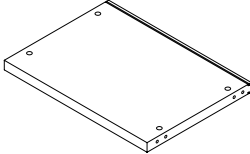 
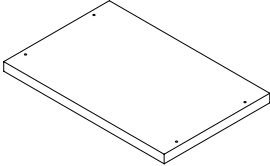 
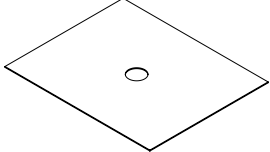 
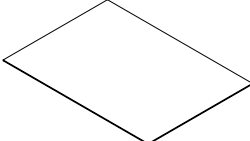 
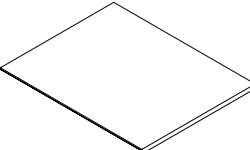 



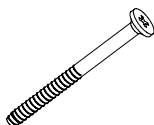 
 

 
 
A	LEFT SIDE PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC
C	FRONT TOP BAR		2 PCS
D	BOTTOM PANEL		1 PC
E	ADJUSTABLE SHELF		1 PC
F	FRONT DECORATIVE STRIP		1 PC
G	LOWER CROSS PANEL		1 PC
H	UPPER CROSS PANEL		2 PCS
I	TOP PANEL		1 PC
J	LOWER BACK PANEL		1 PC
K	BACK PANEL		3 PCS
L	DOOR		1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:706224

HARDWARE IDENTIFICATION**Z**


NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	HINGE Ø35mm SR		2 PCS
2	WOODEN DOWEL Ø8 x 30mm		32 PCS	9	HINGE SCREW Ø4 x 15mm SR		8 PCS
3	CAM BOLT Ø7 x 35.5mm SR		16 PCS	10	BACK PANEL SUPPORT		6 PCS
4	CAM LOCK Ø15 x 12mm SR		16 PCS	11	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
5	BOLT Ø9.5x55mm SR		4 PCS	12	PLASTIC COVER Ø 52mm		1 PC
6	PLASTIC FEET Ø15m		4 PCS	13	STICKER Ø20mm		3 PCS
7	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		4 PCS				

Z8, Z12 not included in blister packaging.**NOTE:**


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **706224**

 STEP 1

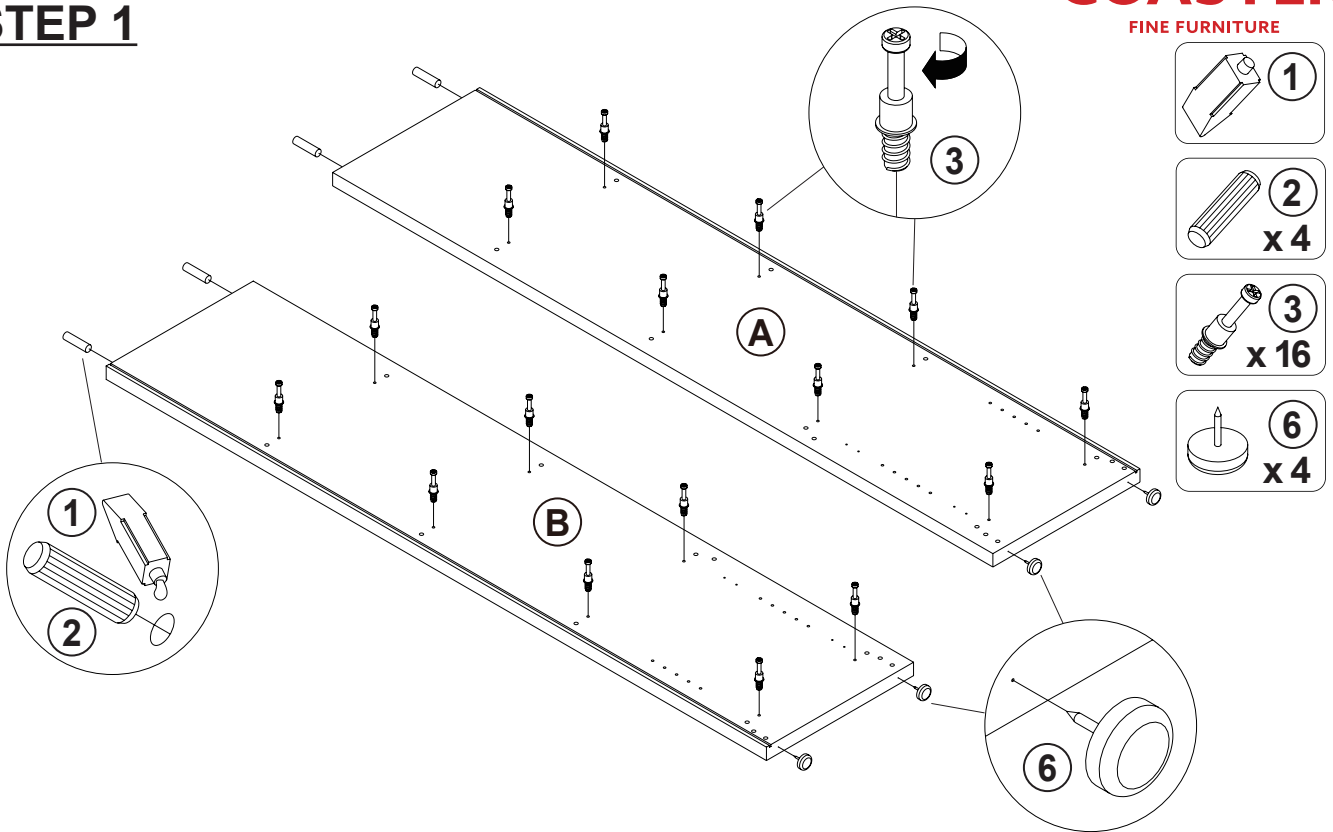


 STEP 2

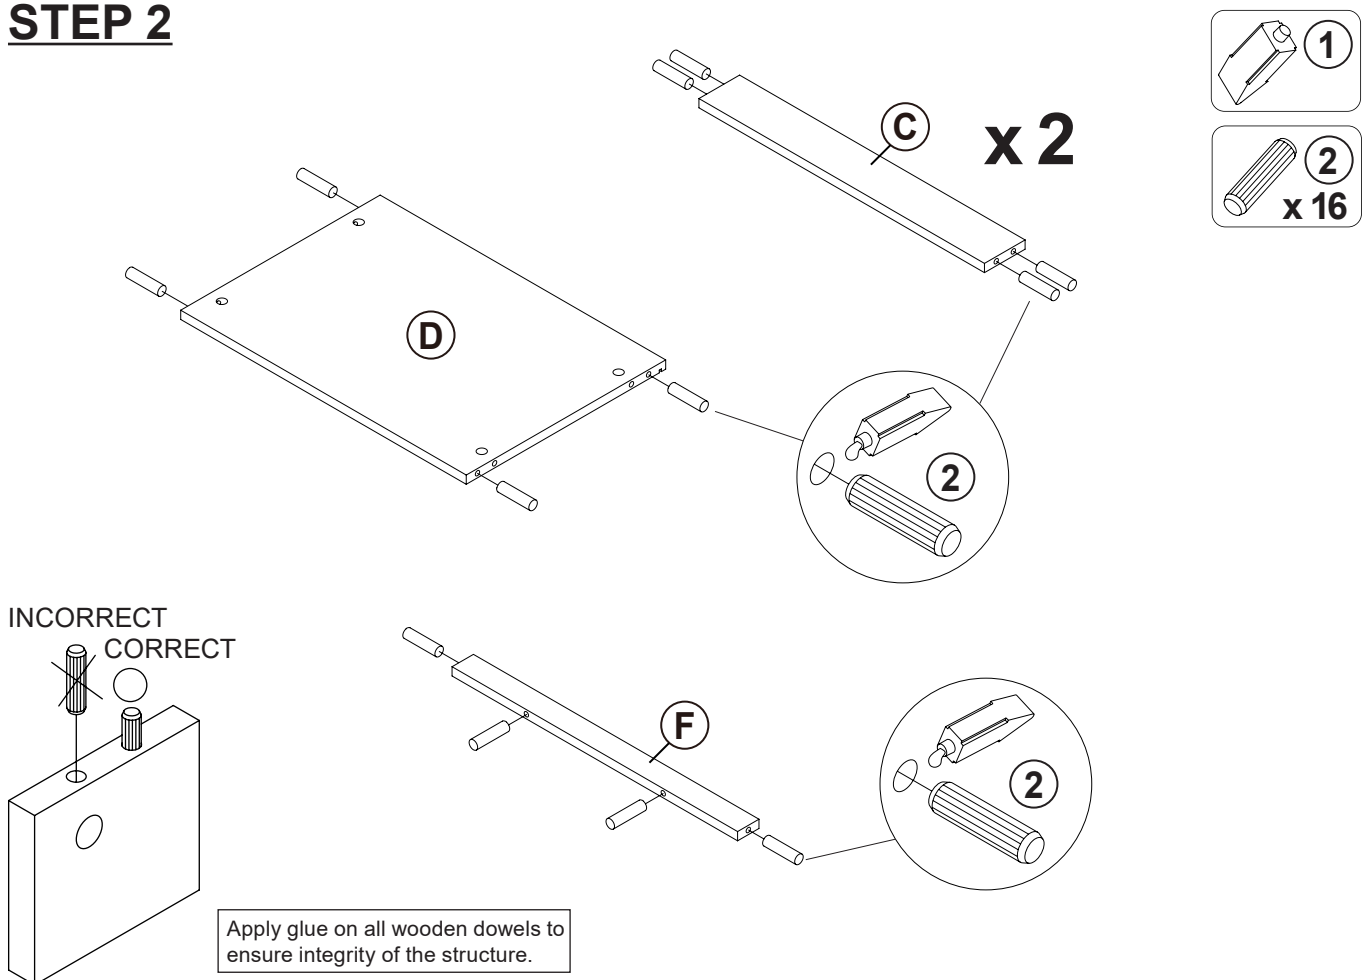


ITEM: **706224**

 STEP 3

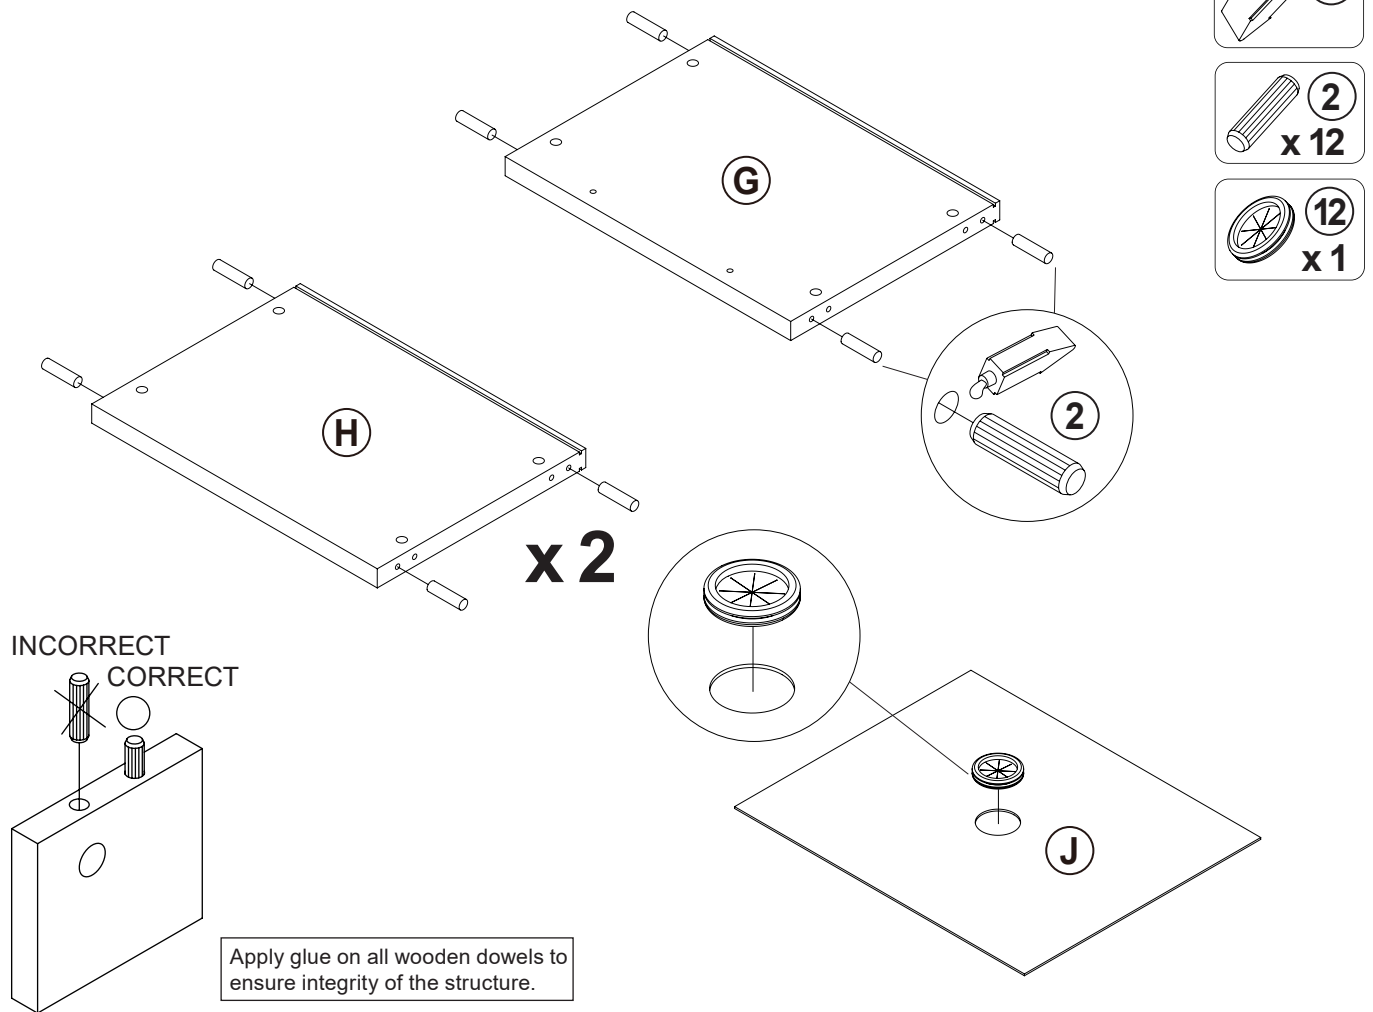


 
STEP 4

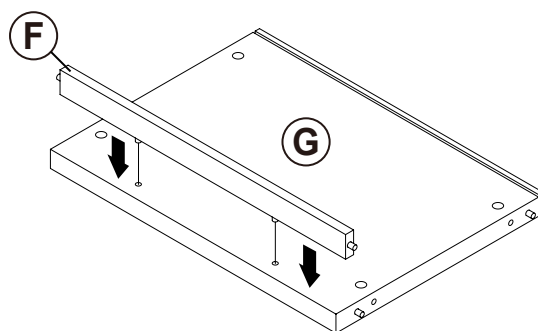

ITEM: **706224**



COASTER
FINE FURNITURE

  STEP 5

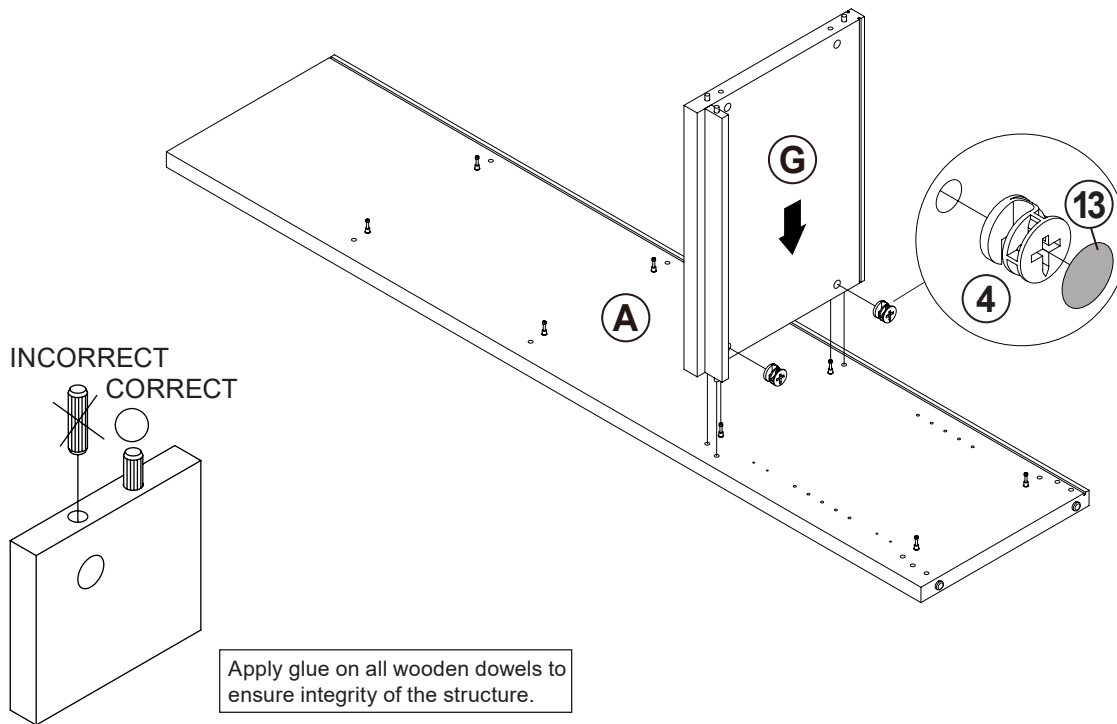


Apply glue on all wooden dowels to ensure integrity of the structure.

  STEP 6

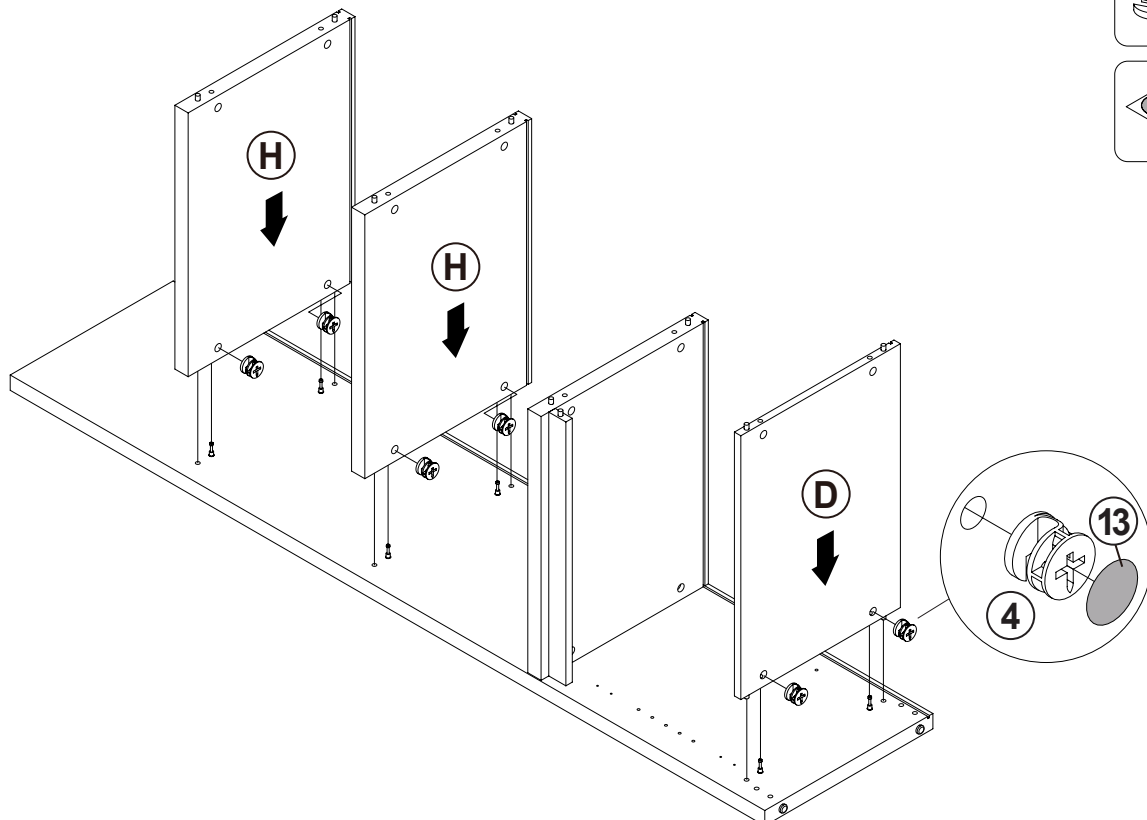


ITEM: **706224**

 STEP 7

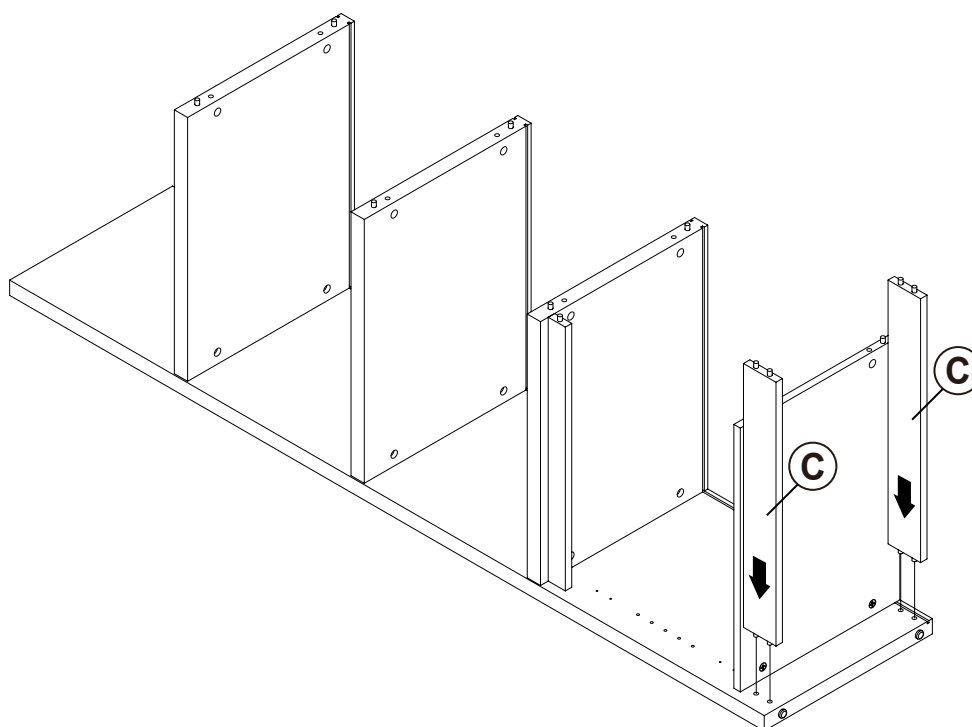




 
STEP 8

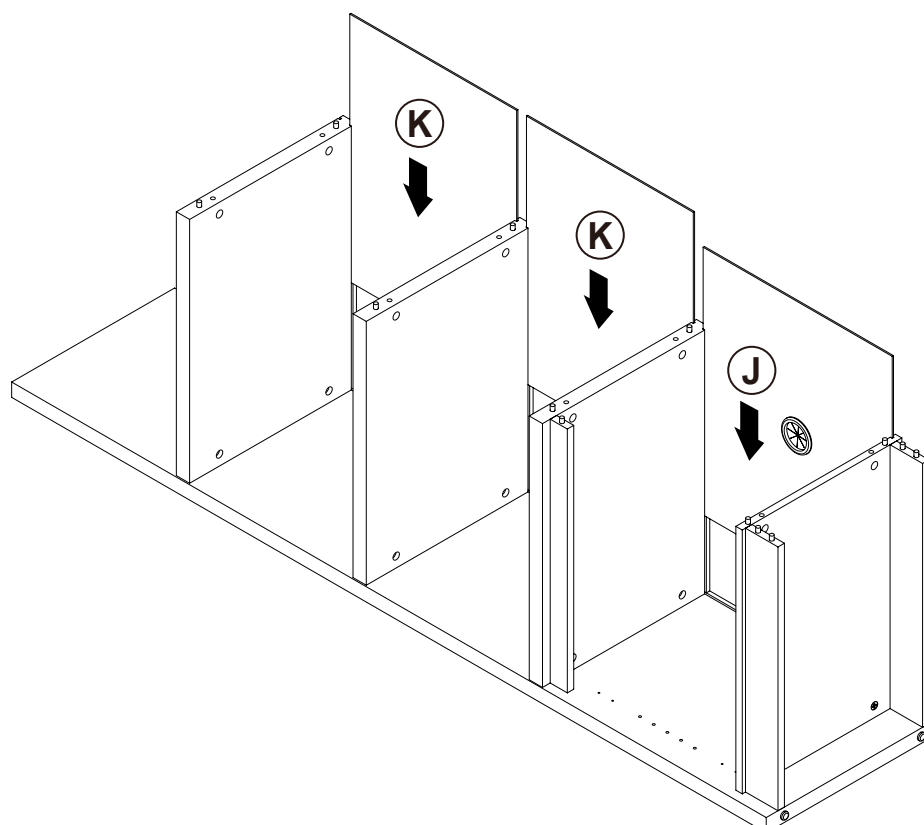





ITEM: **706224**

COASTER
FINE FURNITURE

    STEP 9

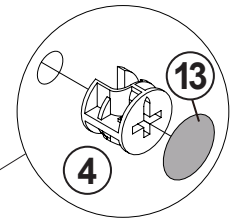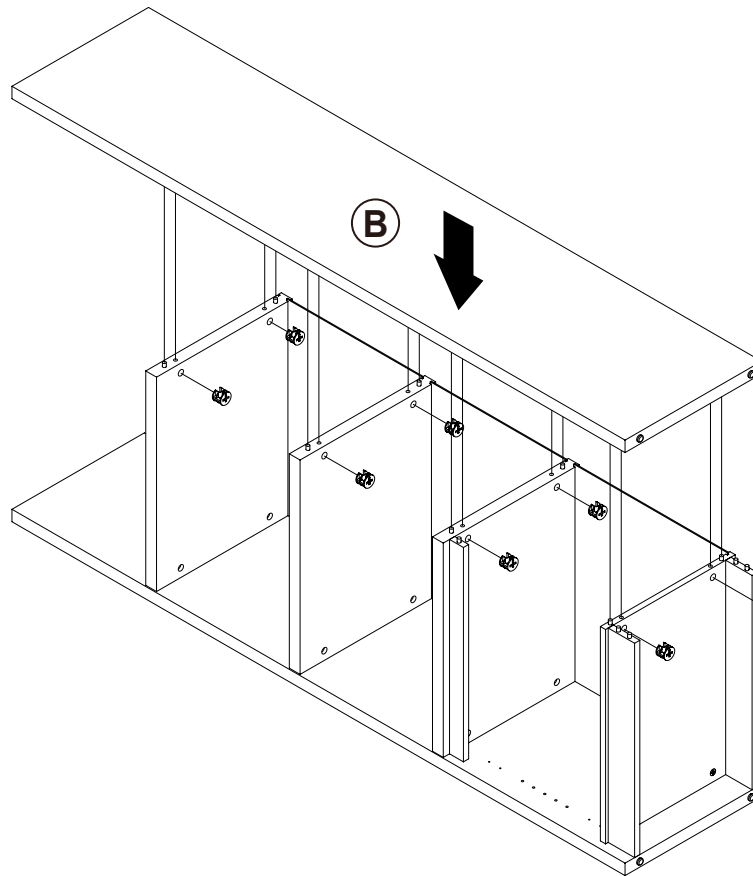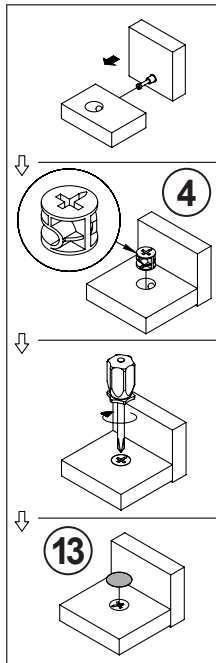

  
 
 
STEP 10

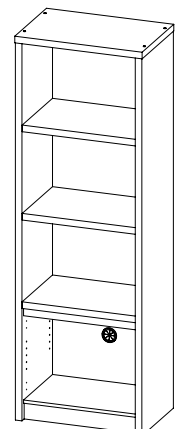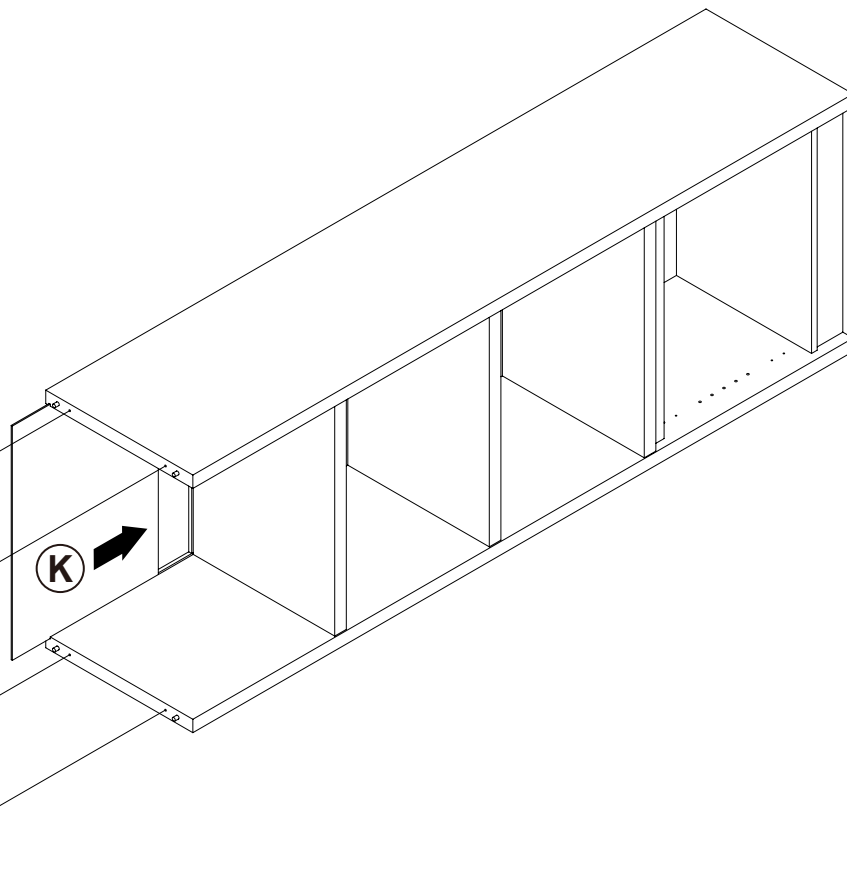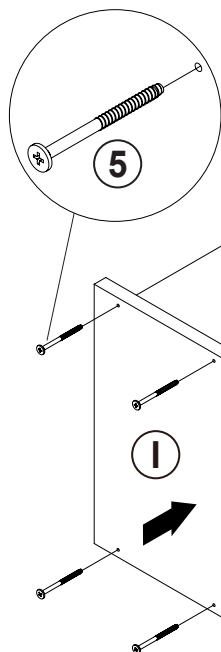


ITEM: **706224**

STEP 11

   COASTER
FINE FURNITURE

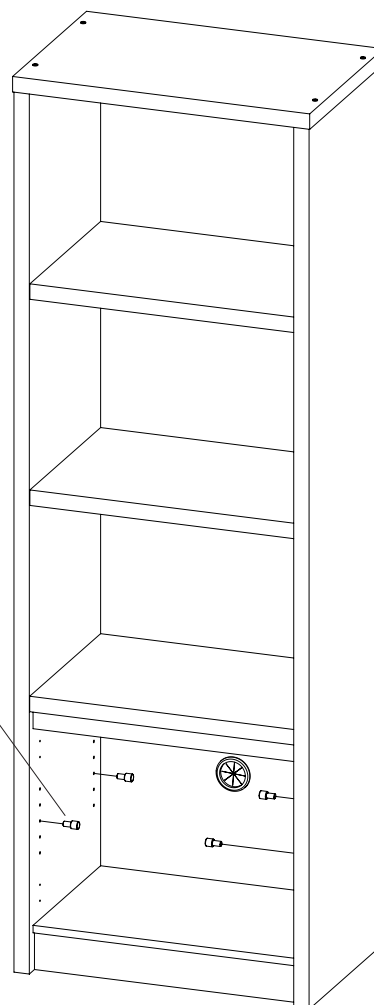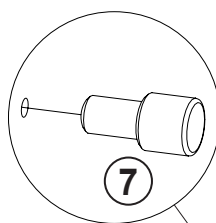



 
STEP 12

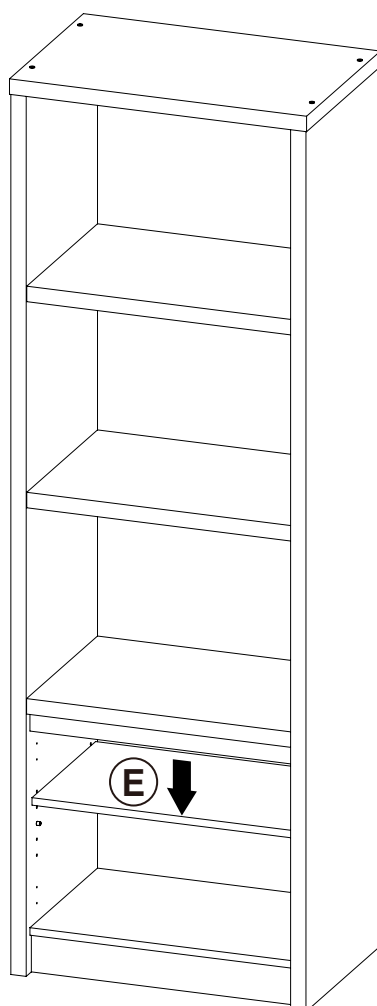


ITEM: **706224**

STEP 13

   
COASTER
FINE FURNITURE

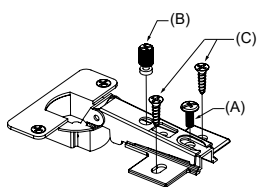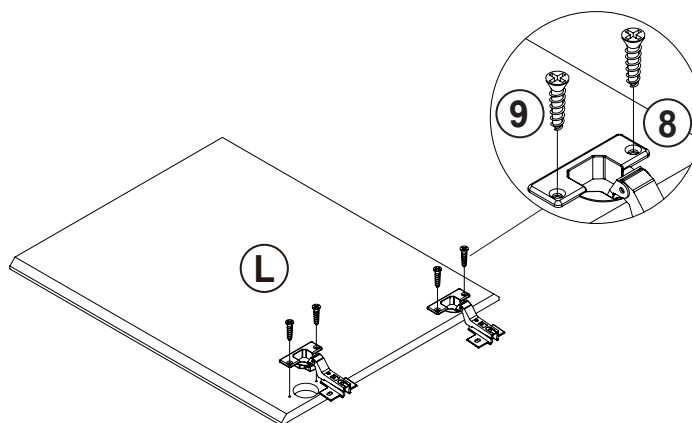


HORIZONTAL BY
SCREW A ADJUSTMENT

 



LATERAL BY
SCREW B ADJUSTMENT

 

VERTICAL BY
SCREW C ADJUSTMENT

 


  STEP 14

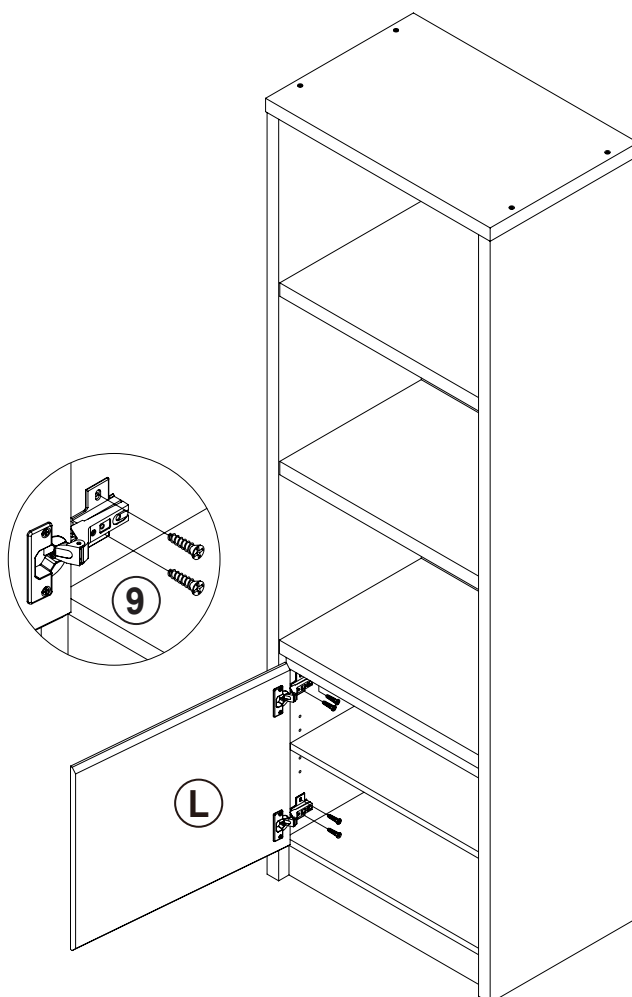

ITEM: **706224**





 
STEP 15

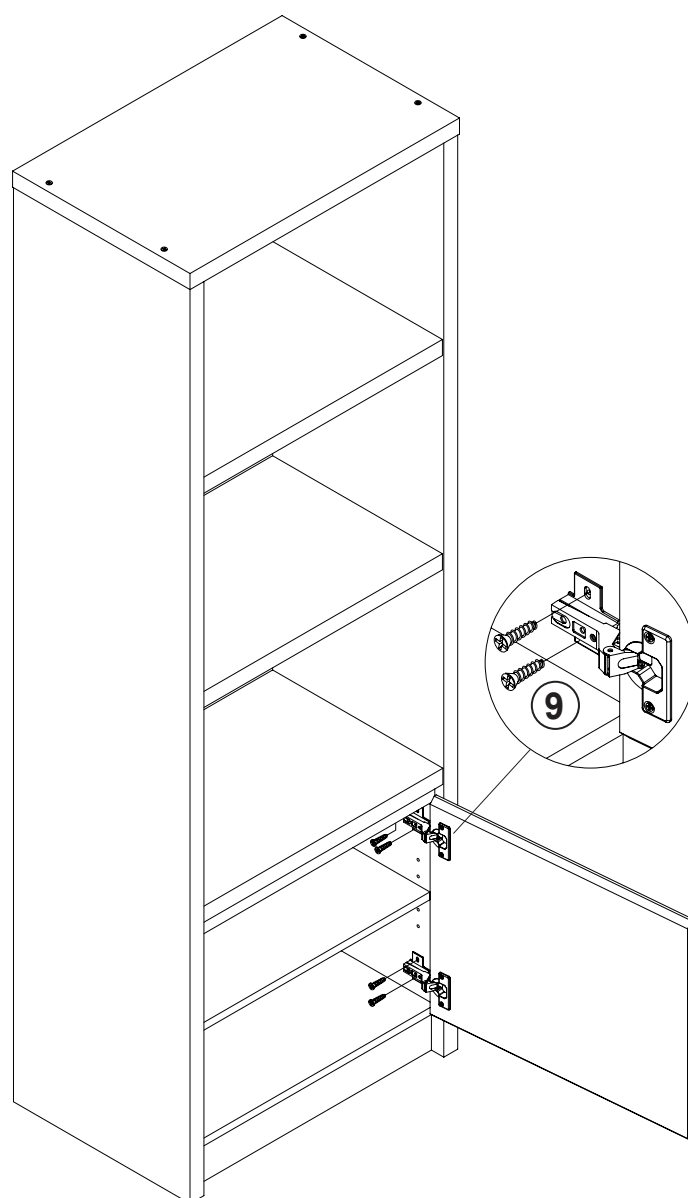

ITEM: **706224**

STEP 16

   
 
 
COASTER
FINE FURNITURE

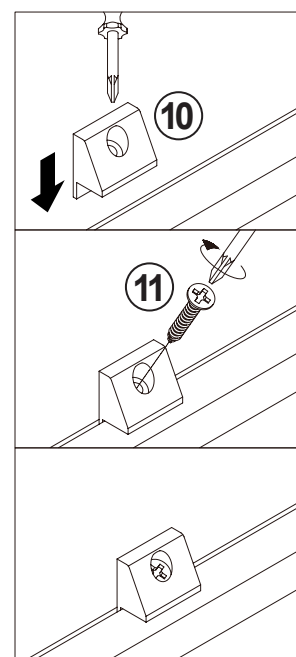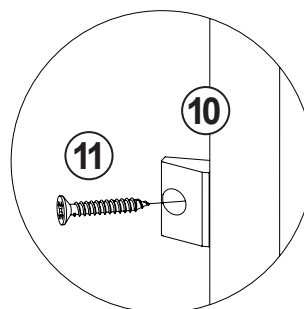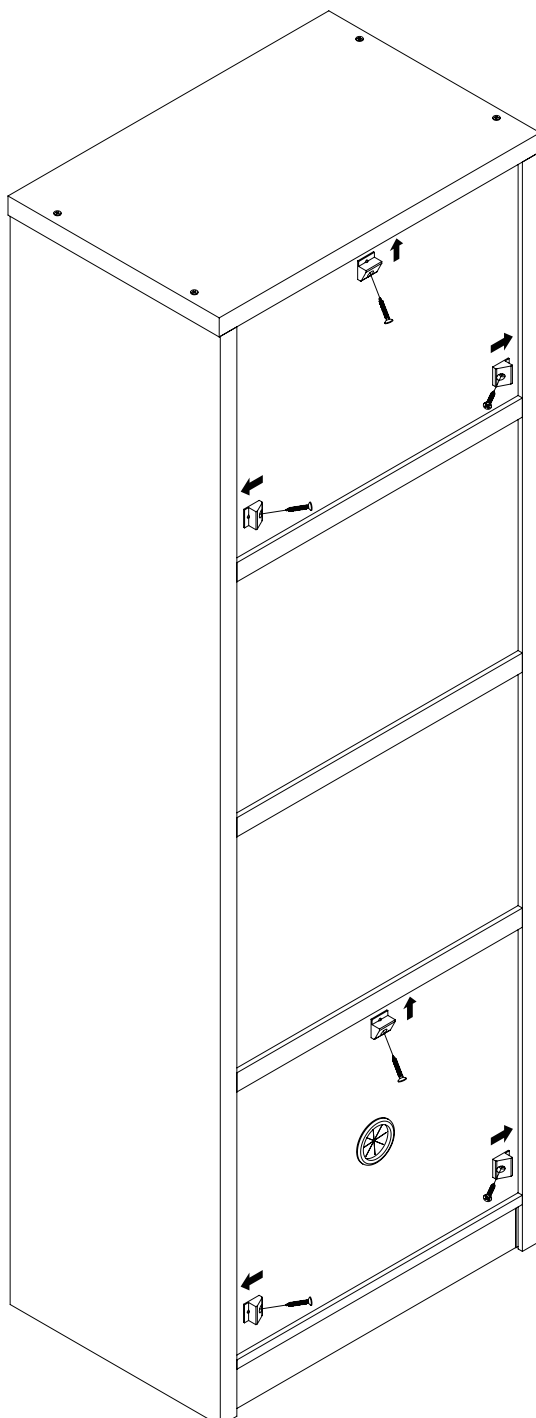


ITEM: **706224**

STEP 17

   COMPLETE

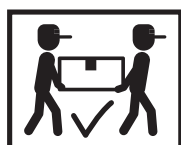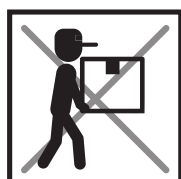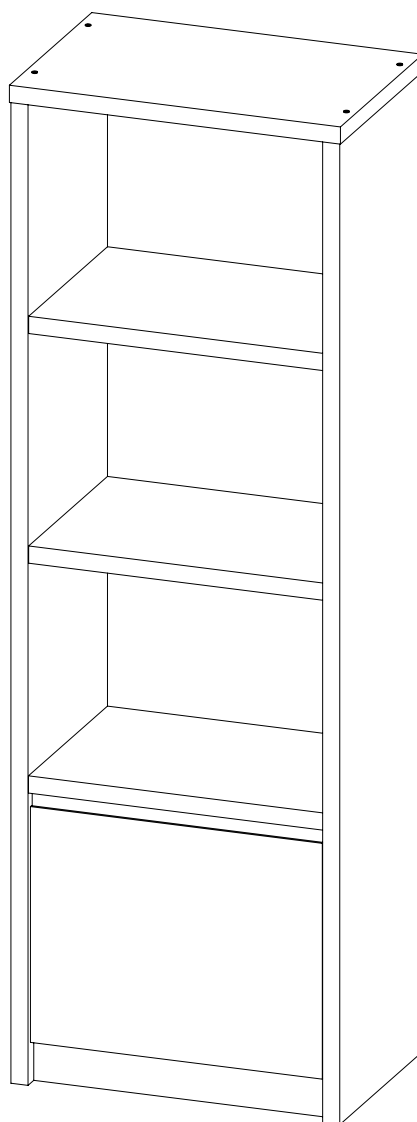

ITEM: 706224

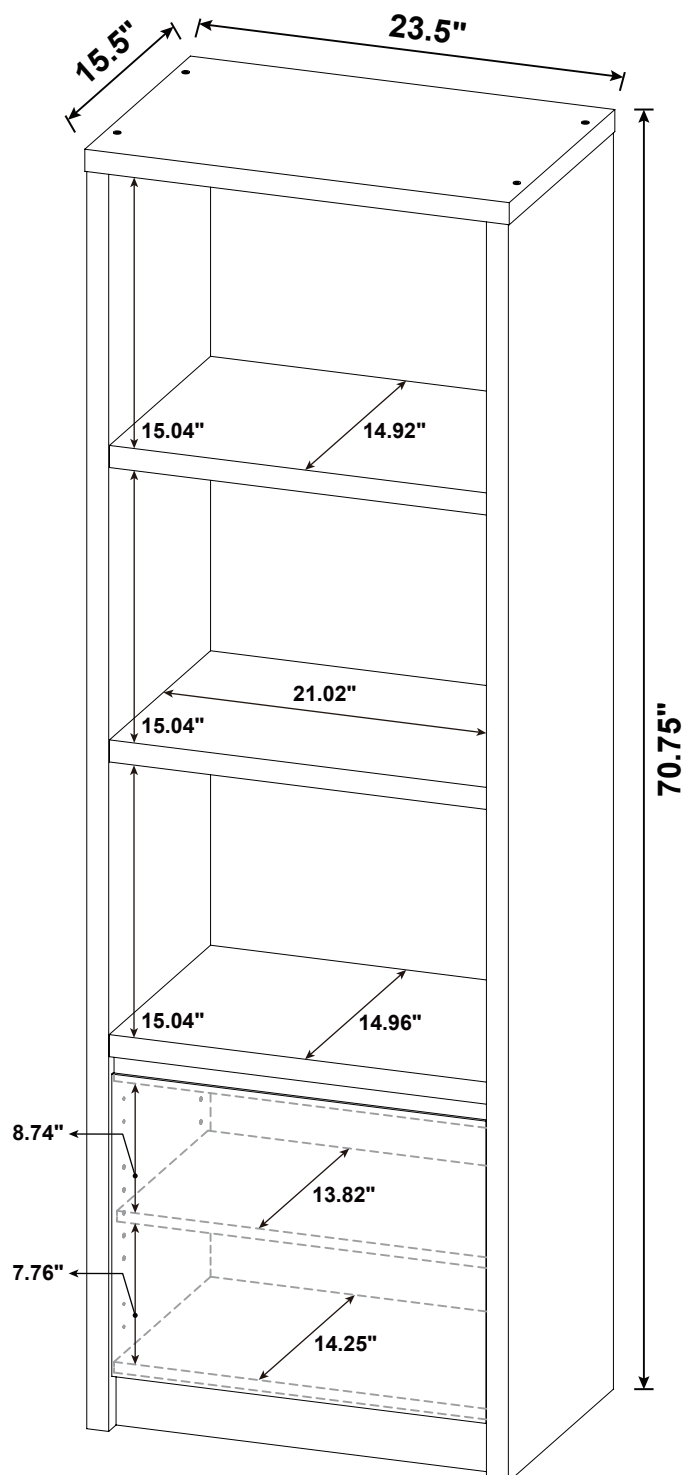 

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

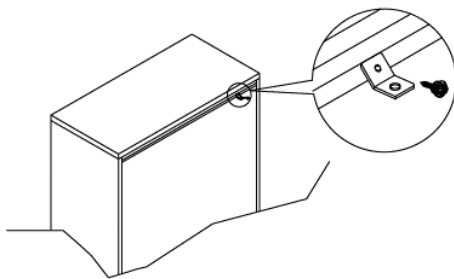

STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

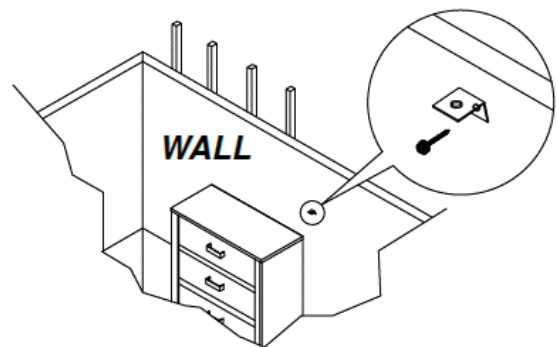

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

