

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 06/21/2024 REVISION 1 : 02/22/2025

PAGE 1 OF 6

COASTERFURNITURE.COM

ITEM: 180201(B1&B2)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME



PART IDENTIFICATION

B1 (BOX 1)

- AN TOP
- CN **TRESTLE BAR**
- DN LEAF

B2 (BOX 2)

BASE BN





2PCS

2PCS

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 180201(B1)

1	THREADED BOLT (5/16" x 100mm - WHT)		2PCS
2	HALF ROUND NUT (22 x 17 x 10mm - WHT)	[o]	2PCS
3	HEX NUT (5/16" x 12 - BLK)	9	2PCS
4	HEX BOLT (5/16" x 50mm - BLK)		8PCS
5	LOCK WASHER (1.6 x 14mm - BLK)	Ø	8PCS
6	FLAT WASHER (1 x 18mm - BLK)	0	8PCS
7	WRENCH (M12 - RBW)		1PC
8	WOOD DOWEL (10 x 40mm - BRW)		4PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 180201(B1&B2) ASSEMBLY INSTRUCTIONS



<u>STEP 1</u>









