

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

706198 Coffee Table

REVISION 0: 02/19/2025

PAGE 1 OF 4

COASTERFURNITURE.COM

### ITEM: 706198

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.



**ASSEMBLY TIME** 

15 MINUTES

#### **PART IDENTIFICATION**

A TOP

B SHELF

1PC

C LEG FRAME


4PCS

#### **HARDWARE IDENTIFICATION**


1	BOLT (5/16" x 25mm - BLK)	16PCS
2	LOCK WASHER (1.6 x 14mm - BLK)	16PCS
3	FLAT WASHER (1 x 18mm - BLK)	16PCS
4	ALLEN WRENCH (M5 x 65mm - BLK)	1PC

# ITEM: **706198**ASSEMBLY INSTRUCTIONS STEP 1



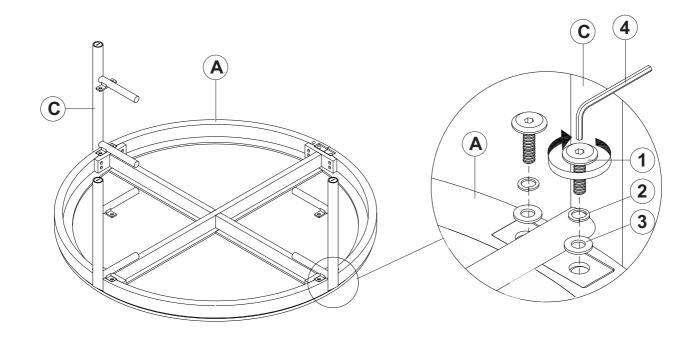

#### STEP 2

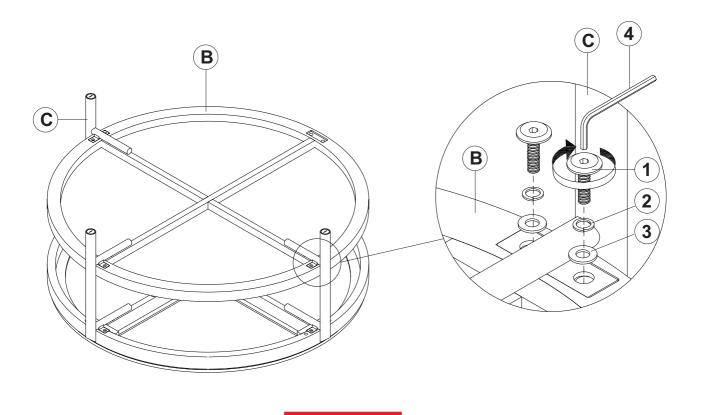


# ITEM: **706198**


#### **ASSEMBLY INSTRUCTIONS**





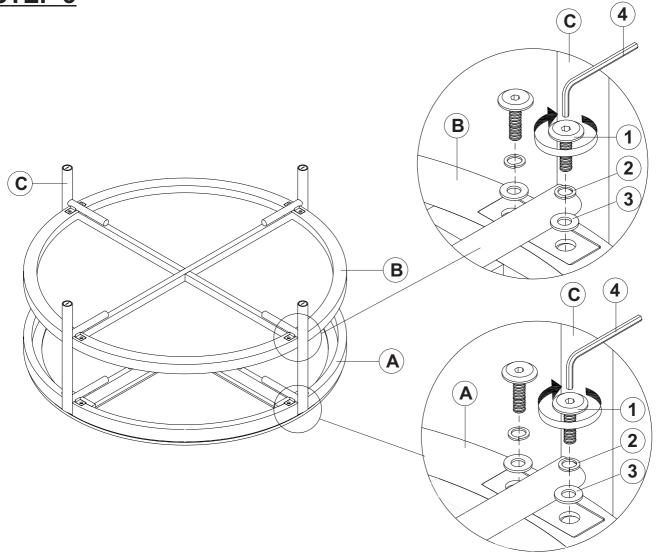


# STEP 4 COMPLETE

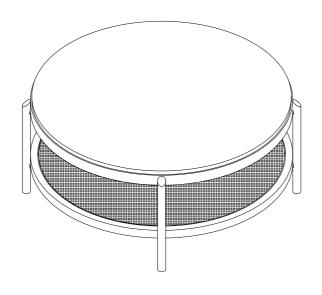



ITEM: **706198** 



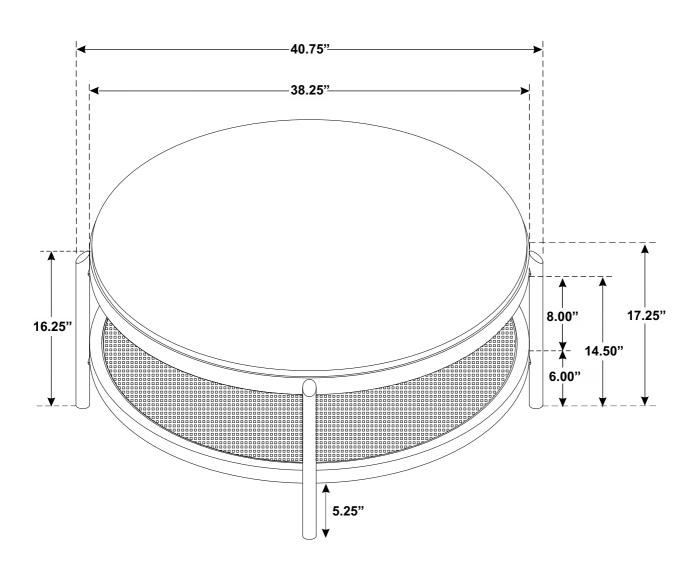

Note: Dimension tolerance ±5%