

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

706177 END TABLE

ITEM: **706177**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

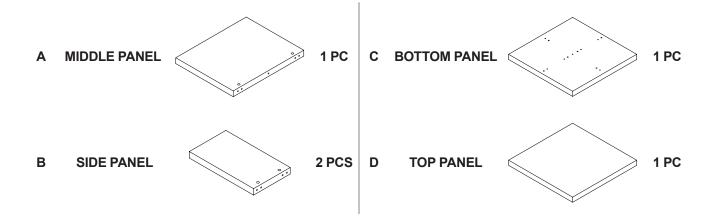

HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	WOODEN DOWEL Ø8x30mm		13 PCS	4	BOLT ∲9.5x55mm SR		7 PCS
2	CAM BOLT Ø7x35.5mm SR		6 PCS	5	FOOT Ø35xH19mm		4 PCS
3	CAM LOCK Ø15x12mm SR		6 PCS	6	STICKER Ø20mm		1 PC


Z5 not included in blister packaging.


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **706177 STEP 1**



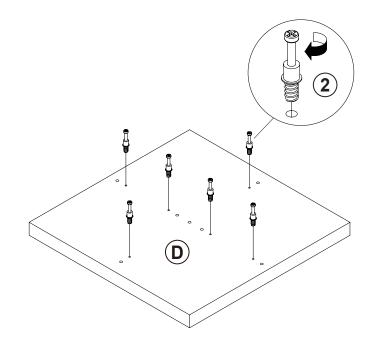

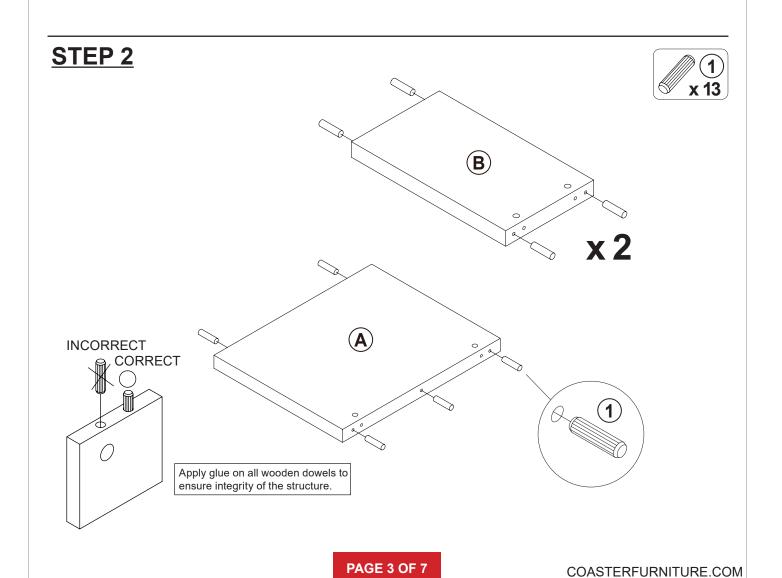


ITEM:**706177** STEP 3







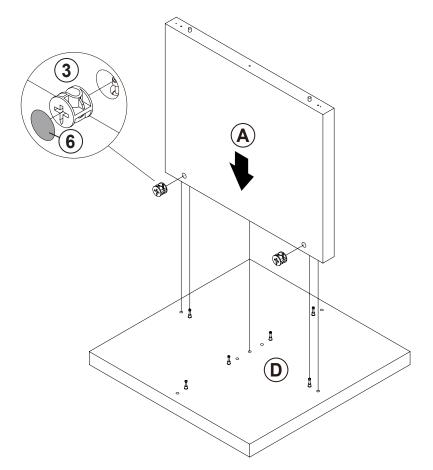



STEP 4







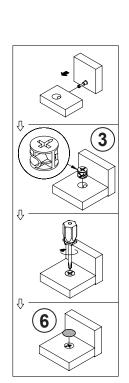

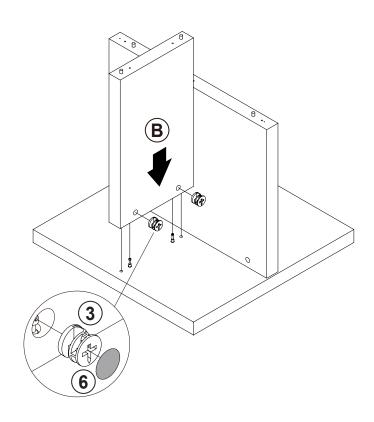


ITEM:**706177** STEP 5









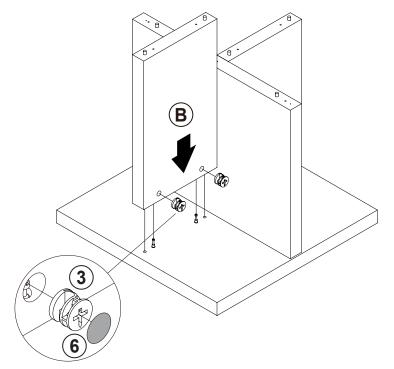

STEP 6

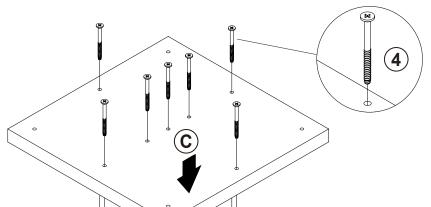




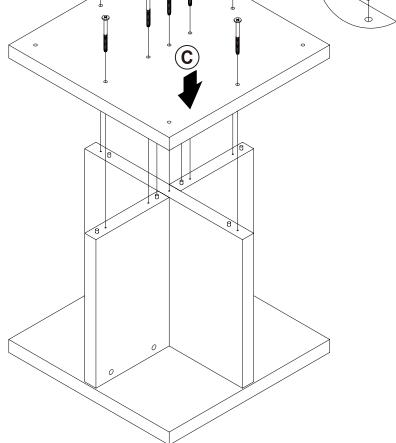


ITEM: **706177 STEP 7**





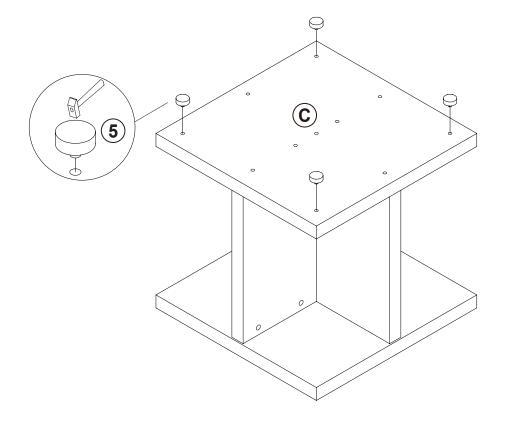

STEP 8 COMPLETE

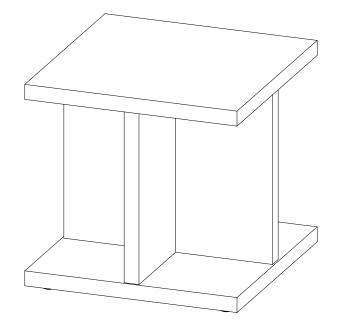






ITEM:**706177**



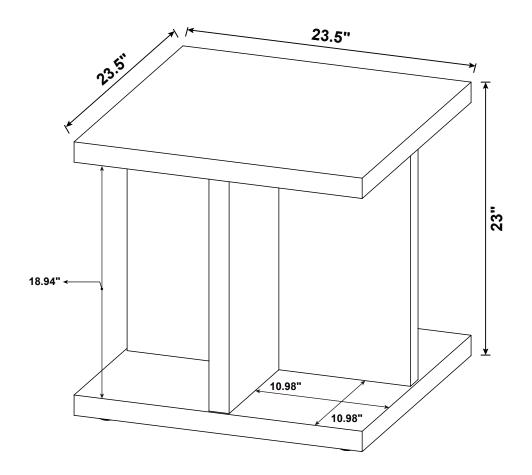

Note: Dimension tolerance ±5%