



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

193611(B1&B2)

Dining Table

ITEM: 193611(B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



 
ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)


A TOP WITH LEAF



1PC


B2 (BOX 2)

 B LEG PANEL SUPPORT




2PCS

 C MOUNTING BOARD



2PCS

 D LEG PANEL

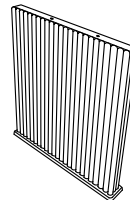


2PCS

HARDWARE IDENTIFICATION

Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 193611 (B1)

1

 
BOLT WITH SMALL WASHER
(M6 x 40mm - BLK)



4PCS

2

 BOLT WITH BIG WASHER
(M6 x 40mm - BLK)



12PCS

3

ALLEN WRENCH
(M4 x 55mm - GD)



1PC

 
ITEM : 193611(B1&B2)

ASSEMBLY INSTRUCTIONS




STEP 1

IMPORTANT NOTE: Take out the Extension Leaf.

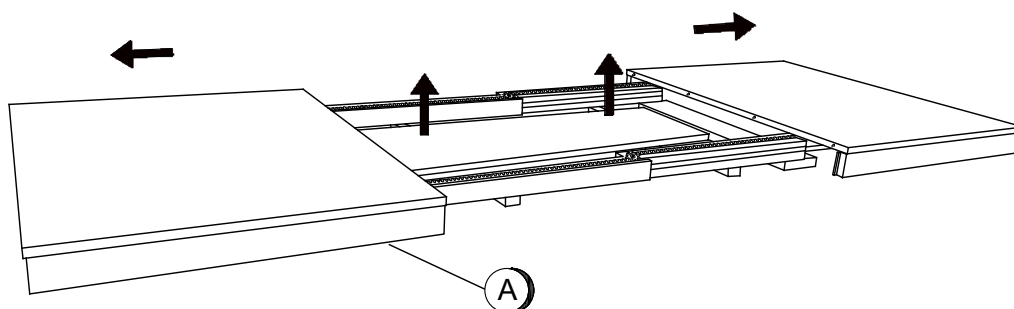

 STEP 2

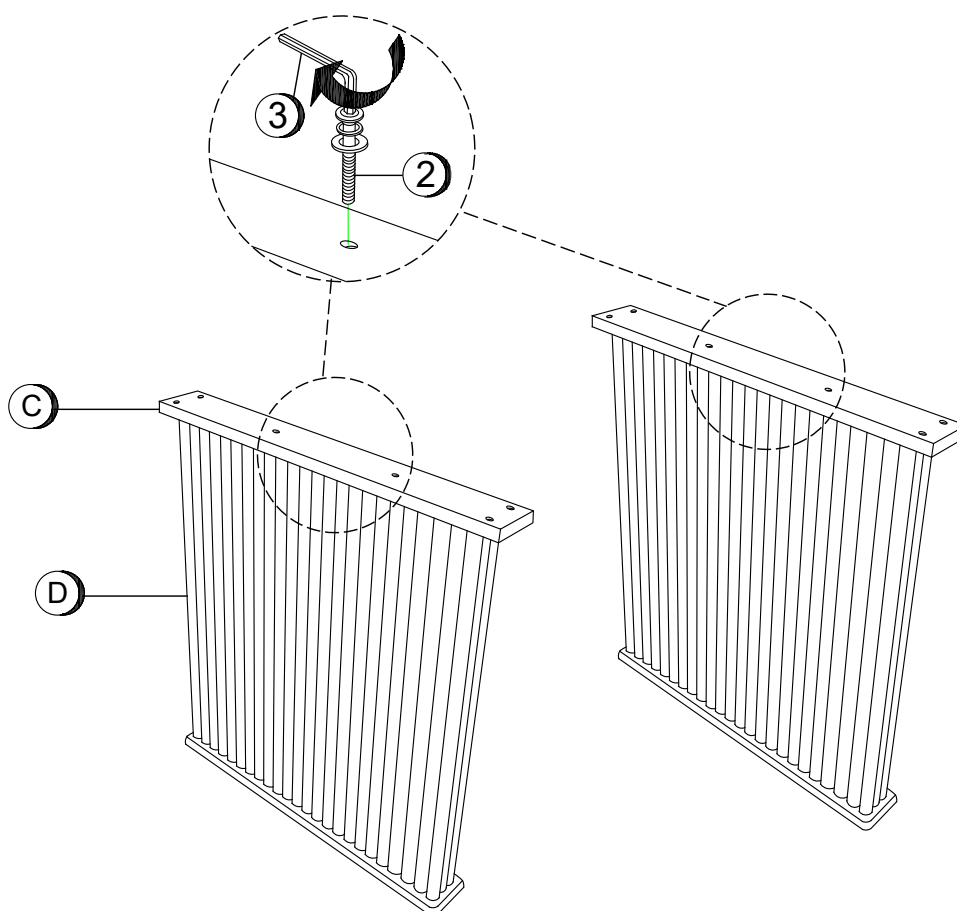


ITEM : 193611(B1&B2)

ASSEMBLY INSTRUCTIONS




STEP 3

 Do not fully tighten until all bolts are attached.

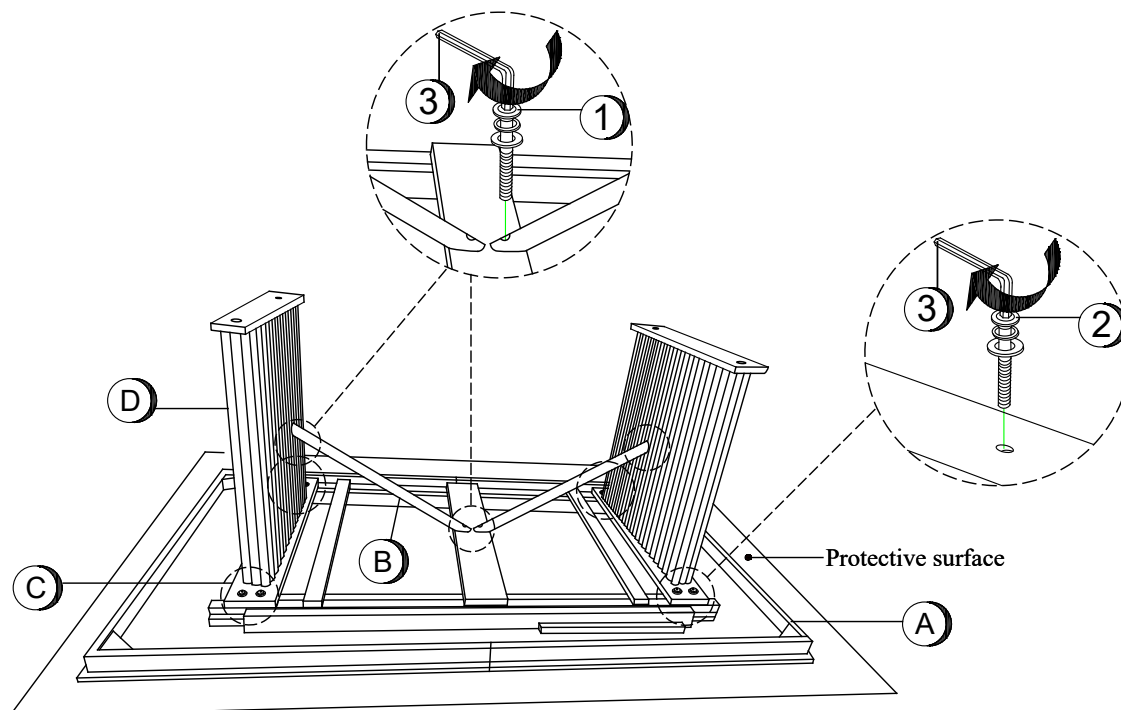

STEP 4

 Fully tighten all bolts on this step.

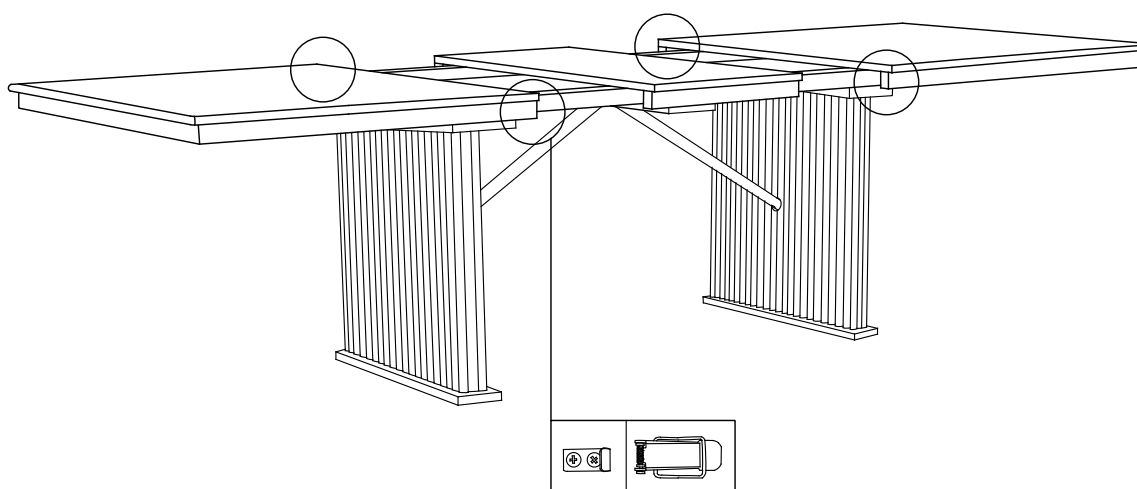


Turn counter-clockwise to unlock

ITEM : 193611(B1&B2)

ASSEMBLY INSTRUCTIONS



 
STEP 5

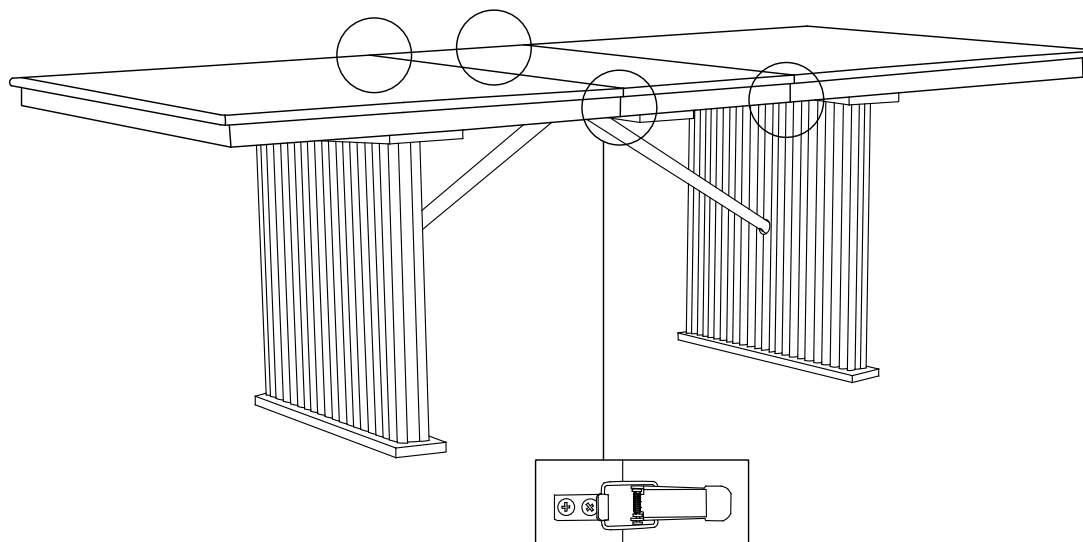


Turn clockwise to lock

STEP 6

 COMPLETE

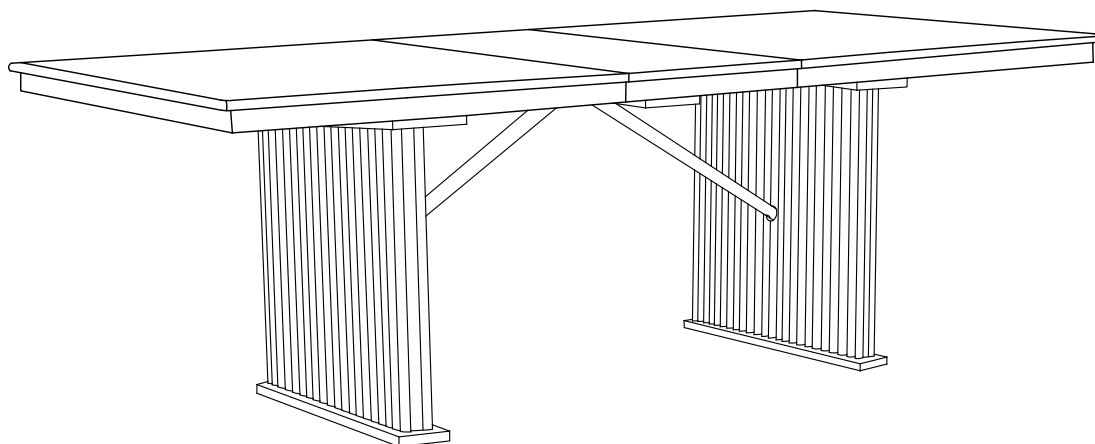

ITEM : 193611(B1&B2)

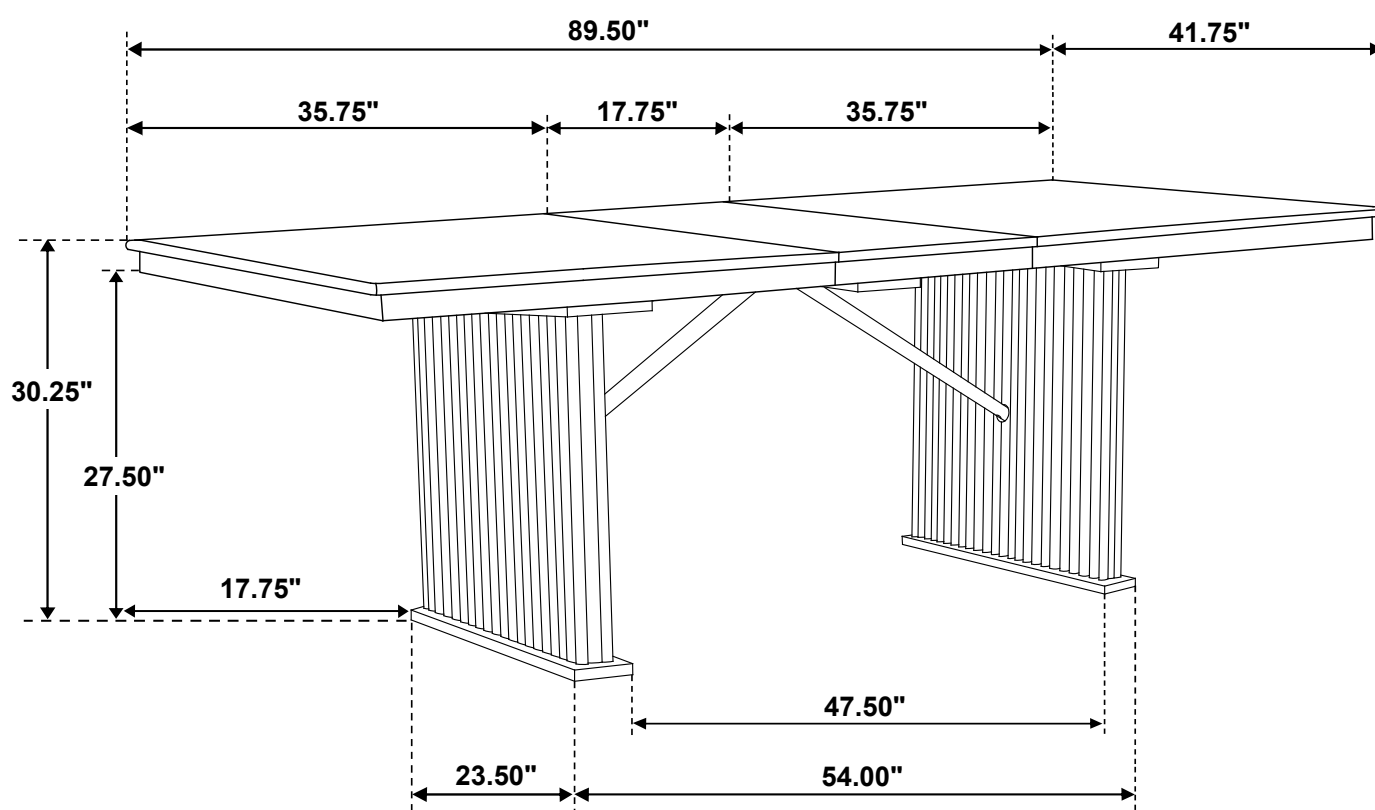 

Note: Dimension tolerance $\pm 5\%$