

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0: 02/26/2025

COASTERFURNITURE.COM

ITEM: 108546BLK ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

Α	SEAT AND BACK	1PC
В	LEFT LEG FRAME	1PC
С	RIGHT LEG FRAME	1PC
D	MIDDLE STRETCHER	1PC

HARDWARE IDENTIFICATION

1	BOLT (Ø1/4" x 1-1/2" - RBW)		4PCS
2	LOCK WASHER (Ø1/4" - RBW)	\bigcirc	4PCS
3	FLAT WASHER (Ø1/4" - RBW)	\bigcirc	4PCS
4	ALLEN WRENCH (4MM - RBW)		1PC
5	PAN HEAD SCREW (#8MM x 1" - RBW)	()	2PCS

NOTE:


Quantities shown are for one chair.

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 108546BLK ASSEMBLY INSTRUCTIONS



STEP 1

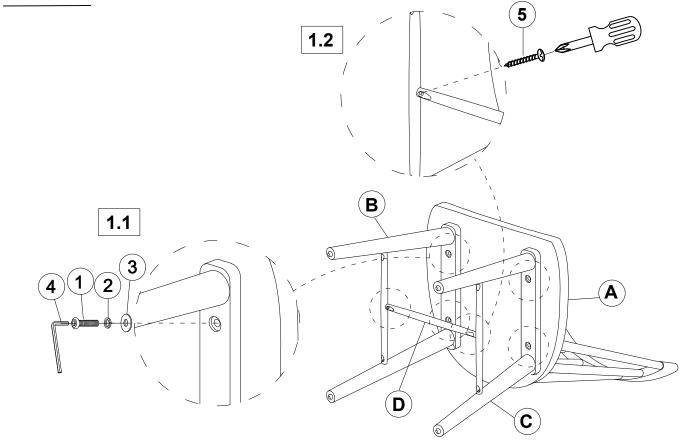


STEP 2 COMPLETE

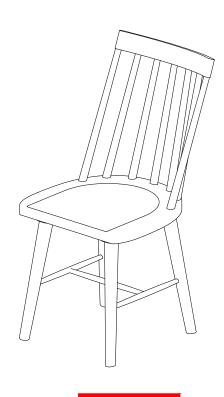



COASTERFURNITURE.COM

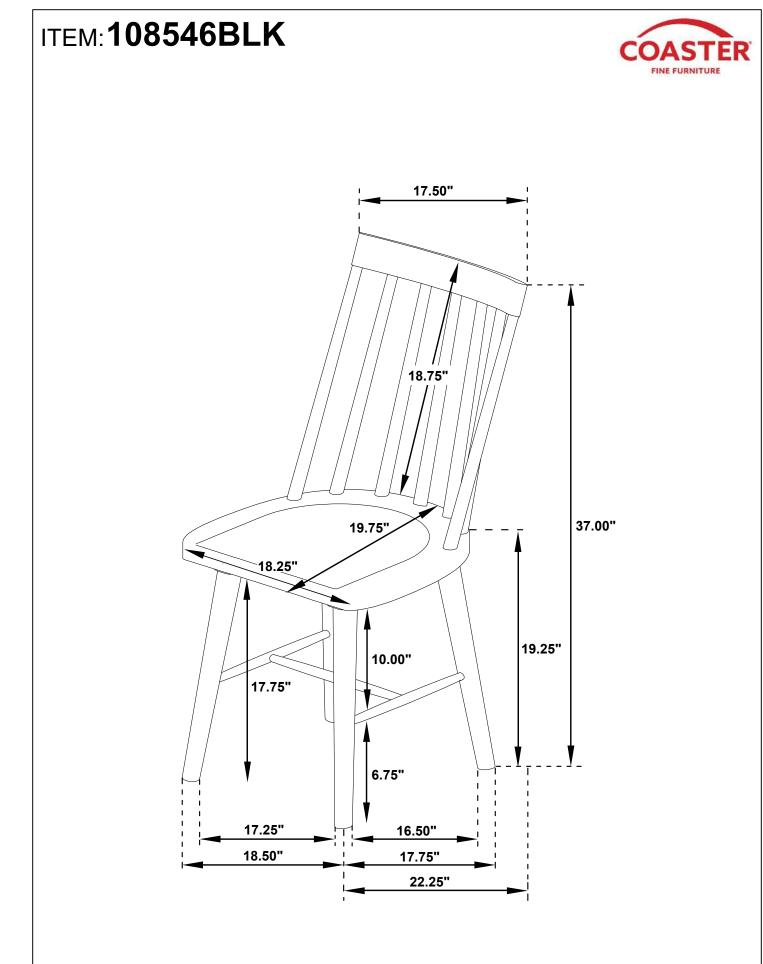

Note: Dimension tolerance ±5%