




## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

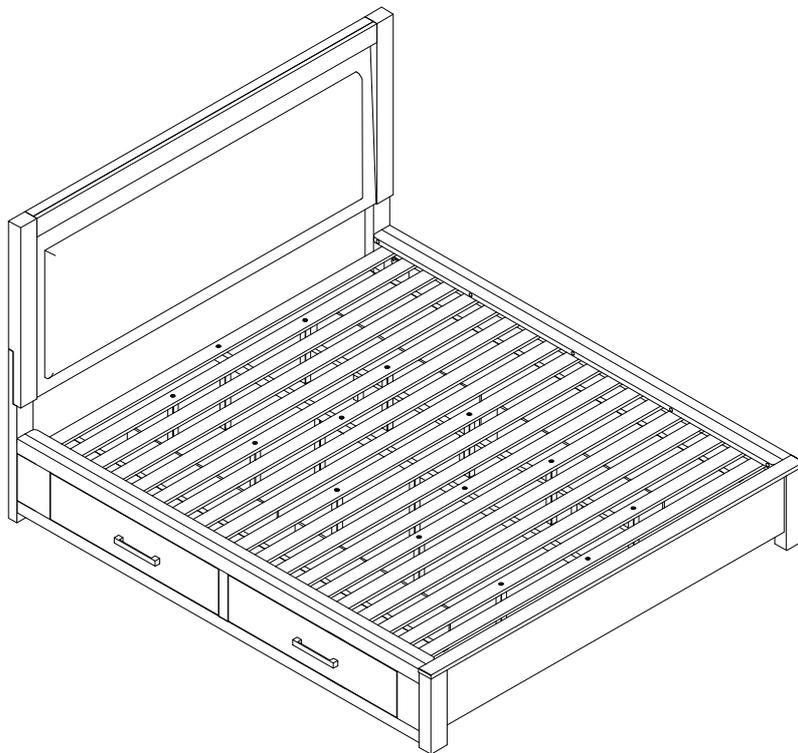

*Fine Furniture for every stage of life*

# 224850KW (B1-B3) California King Bed

REVISION 0 : 08/15/2024  
REVISION 1 : 03/18/2025

# ITEM: 224850KW(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

25 MINUTES

## PARTS IDENTIFICATION

 
### B1 (BOX 1)

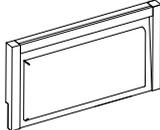AN HEADBOARD PANEL  1PC

CN RIGHT HEADBOARD LEG  1PC

BN LEFT HEADBOARD LEG  1PC

 
### B2 (BOX 2)

DN FOOTBOARD  1PC

FN ROLL SLAT SUPPORT WITH LEVELER  10PCS

EN ROLL SLAT (19PCS)  1SET

### B3 (BOX 3)


GN STORAGE DRAWERS  2SET

 
IN DRAWERS SUPPORT LEG WITH LEVELER  6PCS

KN CENTER RAIL SUPPORT WITH LEVELER  4PCS

HN RAIL TOP  2PCS

JN CENTER RAIL  1PC

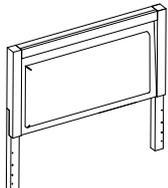HBN 224850KW (B1) FROM BOX 1 HEADBOARD COMPLETE  1PC

DN 224850KW (B2) FROM BOX 2 FOOTBOARD  1PC

# ITEM: 224850KW(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224850KW(B1)

1	<b>MEDIUM BOLT</b> (Ø5/16" x 45MM - BLK)		6PCS
2	<b>BIG LOCK WASHER</b> (Ø5/16" - BLK)		6PCS
3	<b>BIG FLAT WASHER</b> (Ø5/16" x 19 x 1.5MM - BLK)		6PCS
4	<b>ALLEN WRENCH</b> (74 x 30 x 4MM - BLK)		1PC

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224850KW(B2)

5	<b>SHORT BOLT</b> (Ø1/4" x 32MM - BLK)		12PCS
6	<b>SMALL LOCK WASHER</b> (Ø1/4" - BLK)		12PCS
7	<b>SMALL FLAT WASHER</b> (Ø1/4" x 19 x 1.5MM - BLK)		12PCS
4	<b>ALLEN WRENCH</b> (74 x 30 x 4MM - BLK)		1PC

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224850KW(B3)

8	<b>WOODEN DOWEL</b> (Ø8 x 40MM)		12PCS
9	<b>LONG BOLT</b> (Ø5/16" x 75MM - BLK) (Ø1/4" x 45MM - BLK)		10PCS
6	<b>SMALL LOCK WASHER</b> (Ø1/4" - BLK)		10PCS
7	<b>SMALL FLAT WASHER</b> (Ø1/4" x 19 x 1.5MM - BLK)		10PCS

# ITEM: 224850KW(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

 
1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION


4	<b>ALLEN WRENCH</b> (74 x 30 x 4MM - BLK)		1PC
10	<b>THREADED BOLT</b> (Ø5/16" x 75MM - BLK)		8PCS
13	<b>U-SQUARE WASHER</b> (25 x 15 x 2MM - BLK)		8PCS
14	<b>HEX NUT</b> (Ø5/16 x 17MM - BLK)		8PCS
15	<b>WRENCH</b> (13MM - BLK)		1PC

# ITEM: 224850KW(B1-B3)


## ASSEMBLY INSTRUCTIONS



### STEP 1

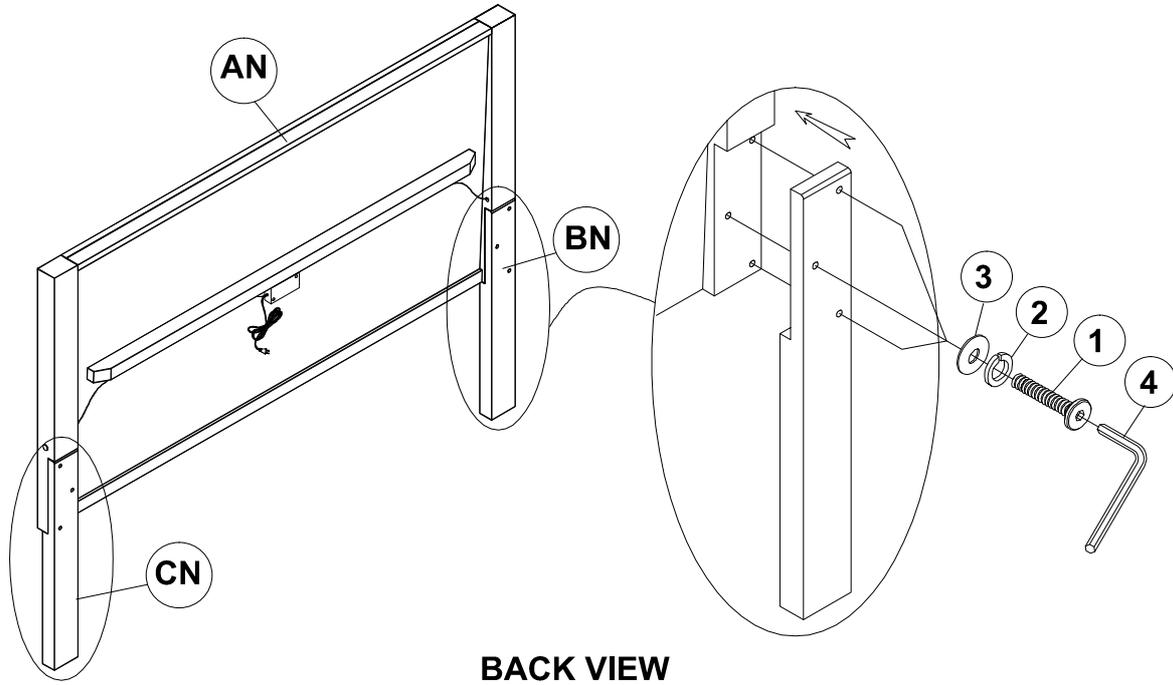

### STEP 2

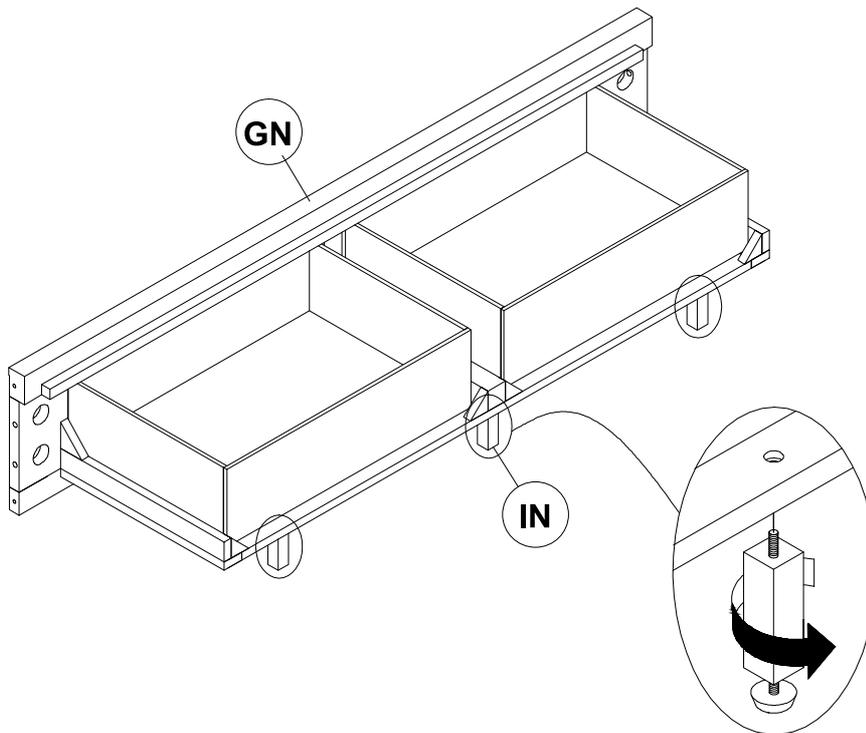


# ITEM: 224850KW(B1-B3)


## ASSEMBLY INSTRUCTIONS



### STEP 3

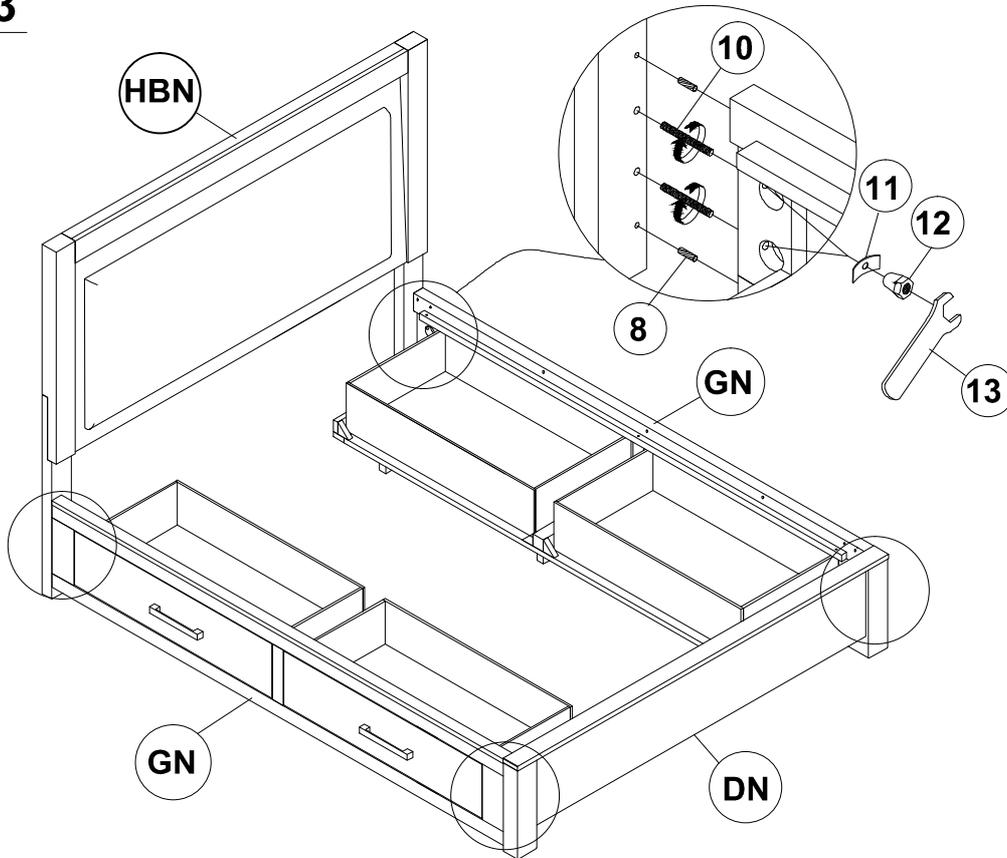

### STEP 4

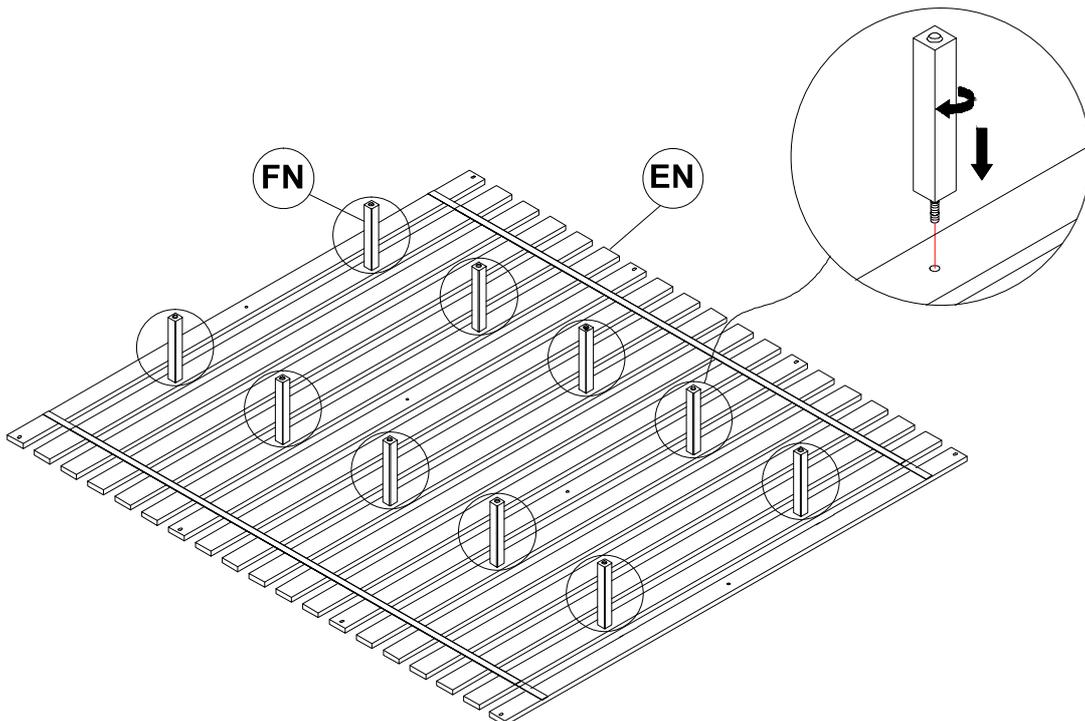


# ITEM: 224850KW(B1-B3)


## ASSEMBLY INSTRUCTIONS



### STEP 5

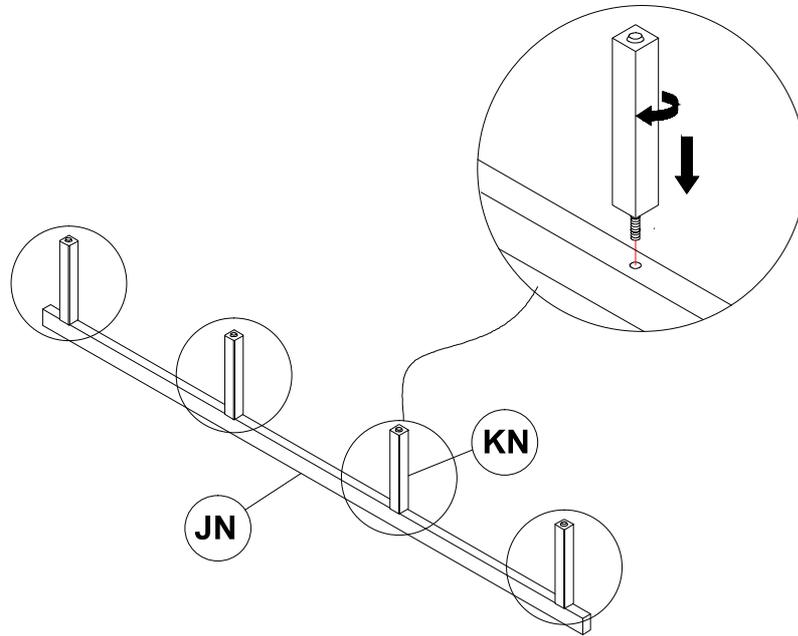

### STEP 6

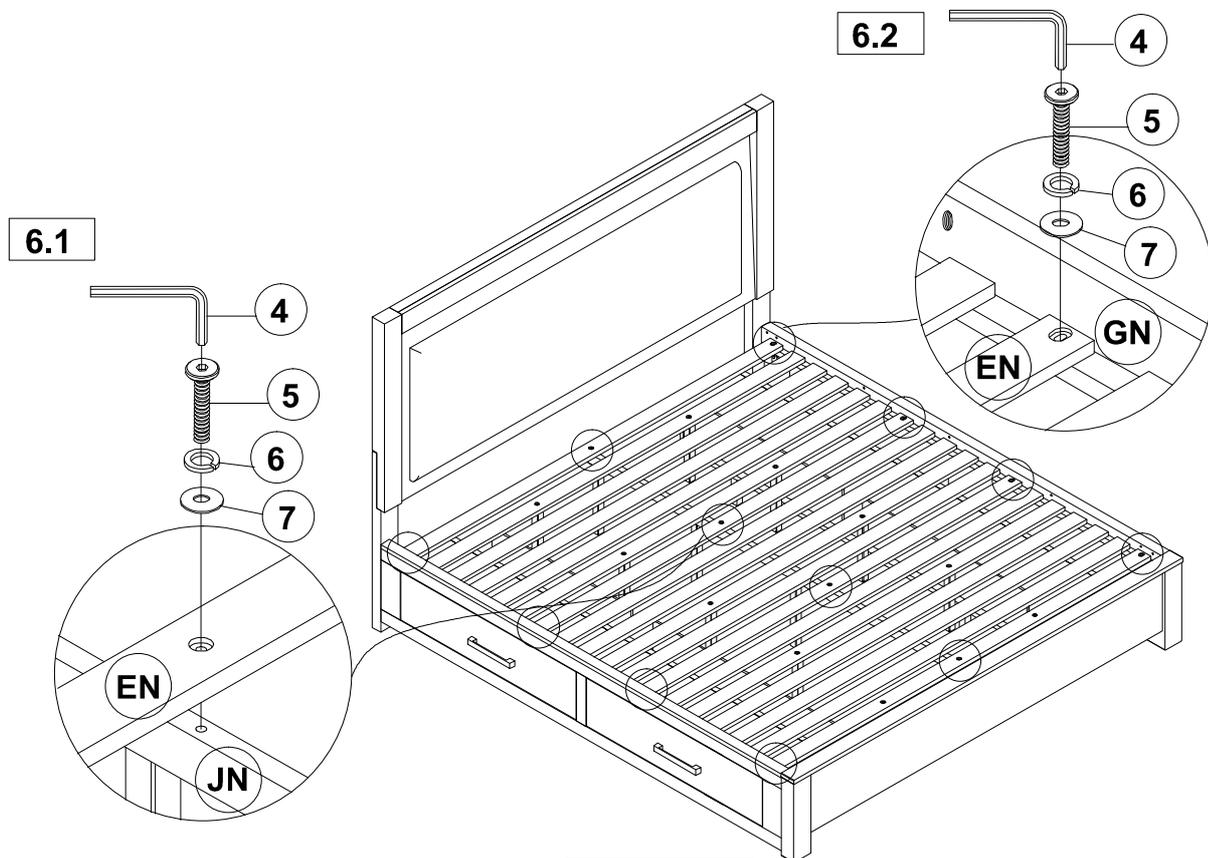


# ITEM: 224850KW(B1-B3)

## ASSEMBLY INSTRUCTIONS



### STEP 7

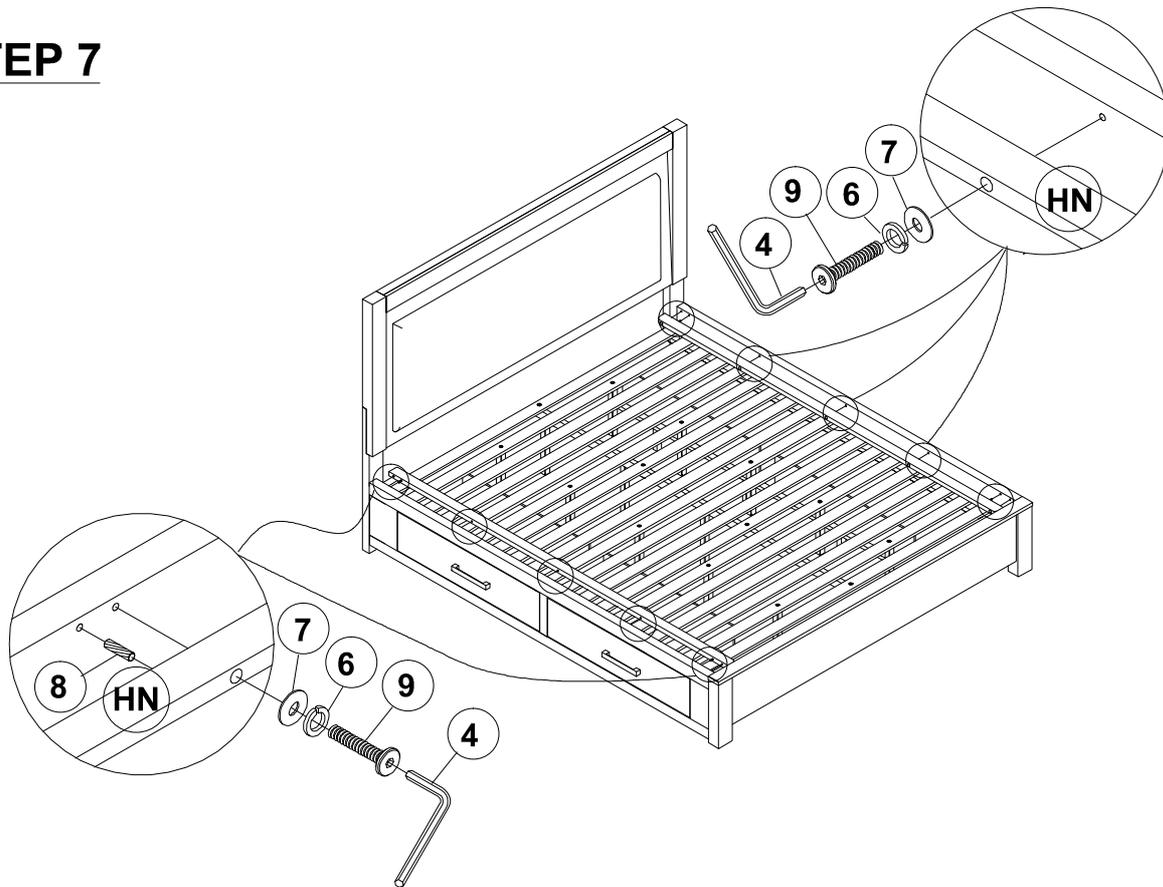

### STEP 8 COMPLETE

★ Attach the Adapter to the power source according to the instructions on the adapter.



**Touched light location**  
Your Touch is the Switch  
Touch 1-Night light  
Touch 2-Energy saver light  
Touch 3-Bright reading light  
Touch 4-Off

