

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

108930
Dining Table

ITEM: **108930**



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

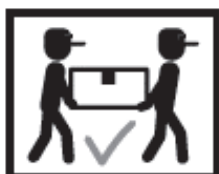


ASSEMBLY TIME

15 MINUTES


PART IDENTIFICATION

 A TOP

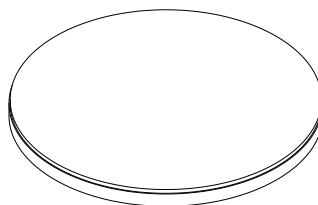


1PC

 B LEG



4PCS

 
C LEG SUPPORT

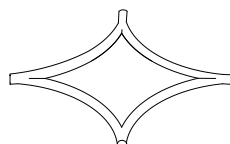

1PC

HARDWARE IDENTIFICATION

 1 BOLT
(5/16" x 50mm - BLK)



8PCS

2 LOCK WASHER
(1.6 x 14mm - BLK)



8PCS

3 FLAT WASHER
(1 x 18mm - BLK)



8PCS

4 ALLEN WRENCH
(M5 x 70mm - BLK)



1PC

5 FLAT HEAD SCREW
(8 x 63mm - BLK)



4PCS

NOTE:

 
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **108930**


ASSEMBLY INSTRUCTIONS



STEP 1

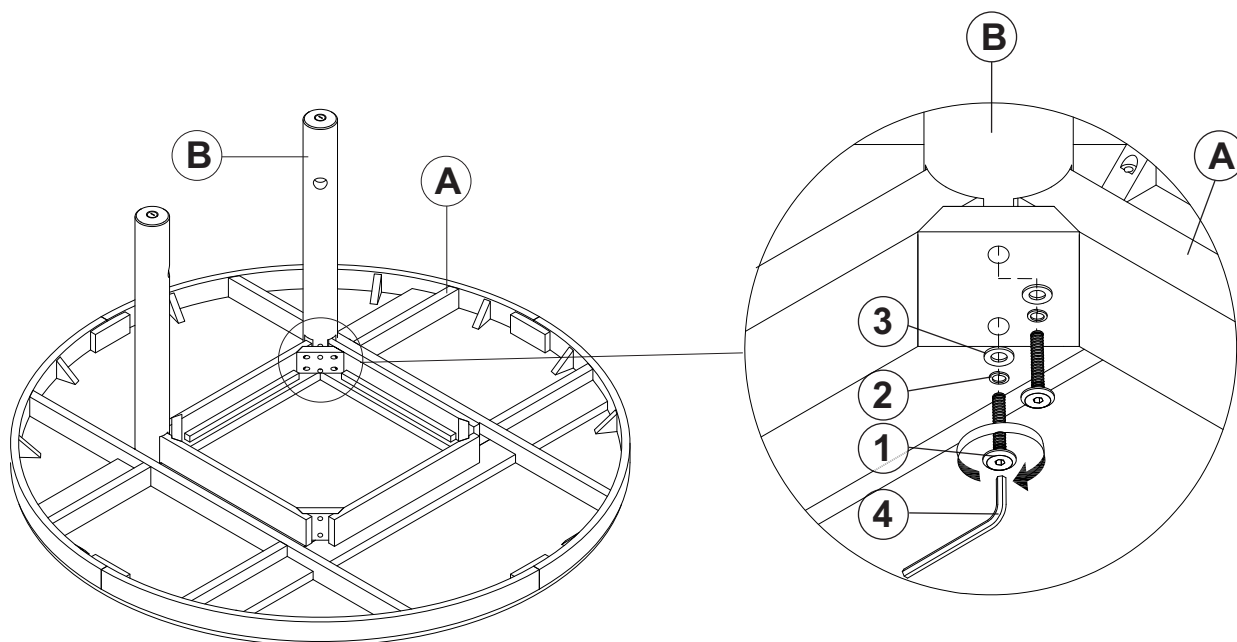

 STEP 2

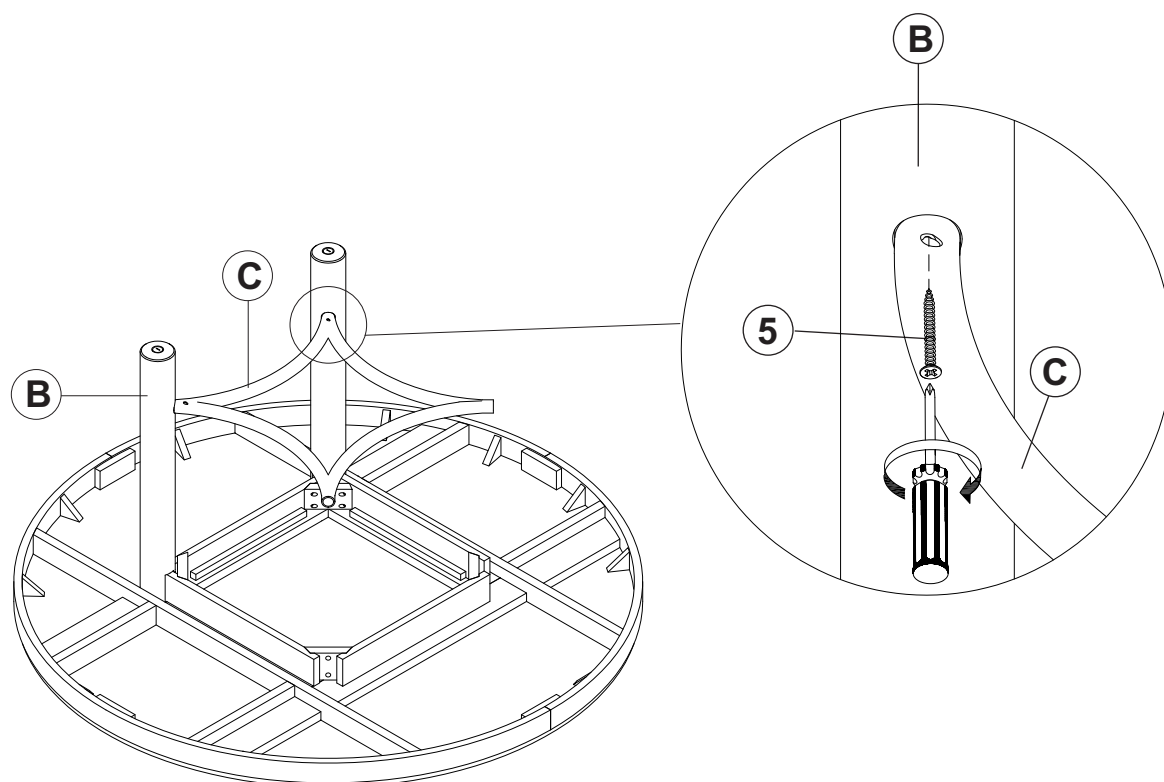

ITEM: **108930**

 
ASSEMBLY INSTRUCTIONS



STEP 3


ATTENTION !

Do not fully tighten bolts in this step.

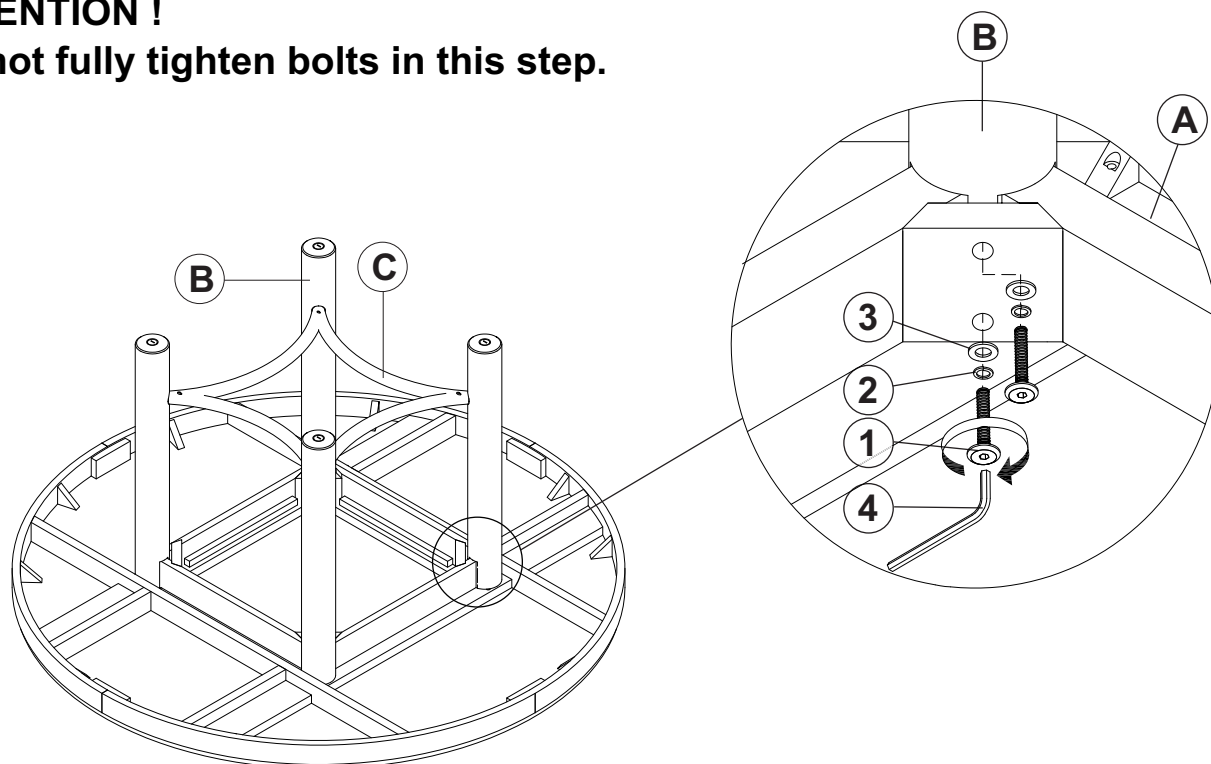

STEP 4

 Please tighten bolts 100% after assembly is complete.

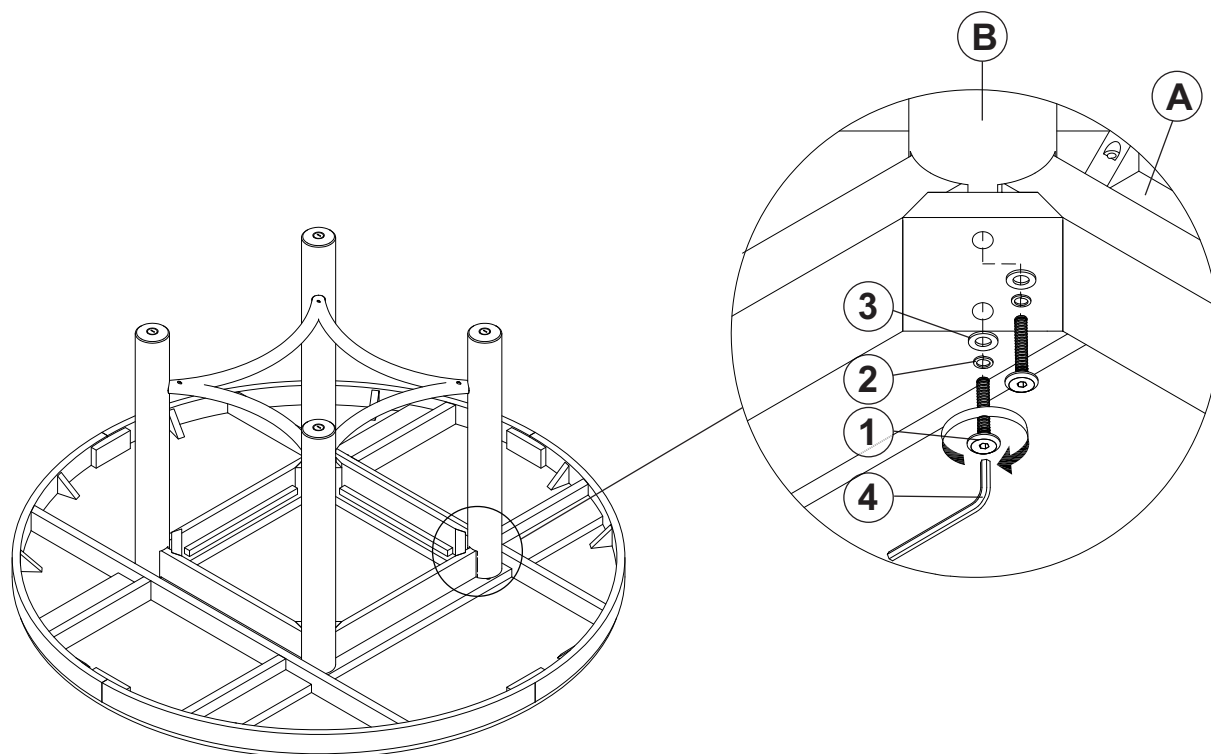


ITEM: **108930**


ASSEMBLY INSTRUCTIONS



 
STEP 5

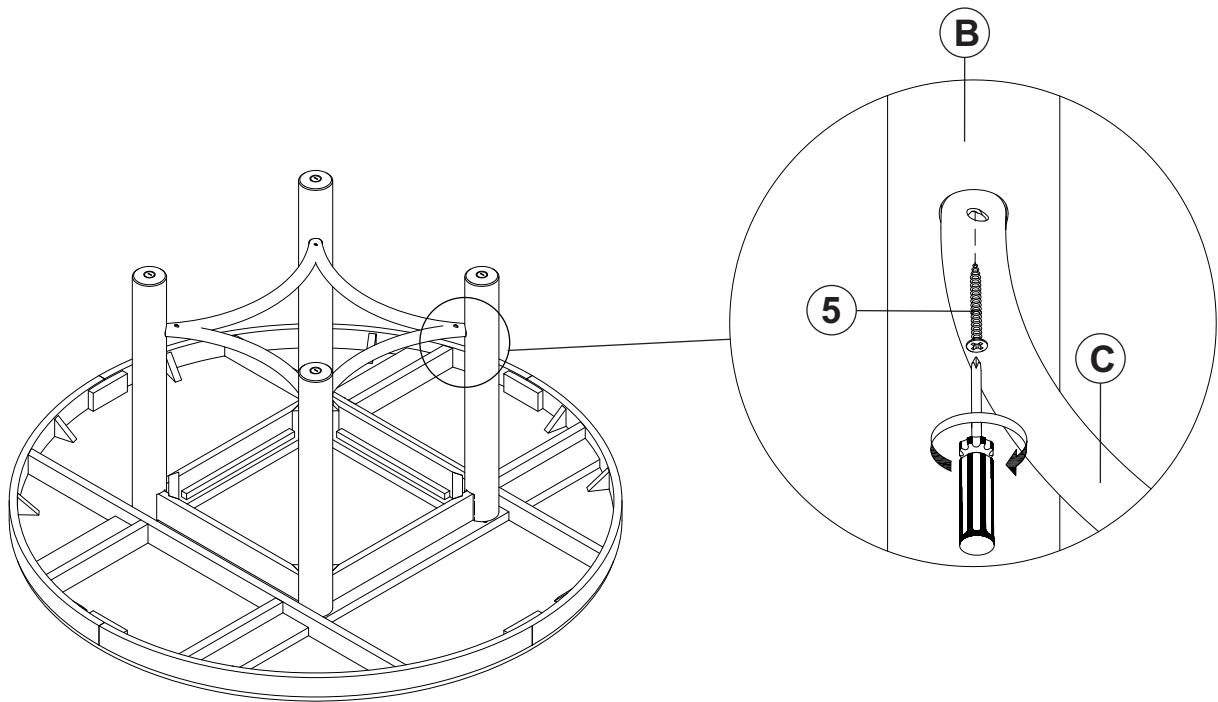

 STEP 6 COMPLETE

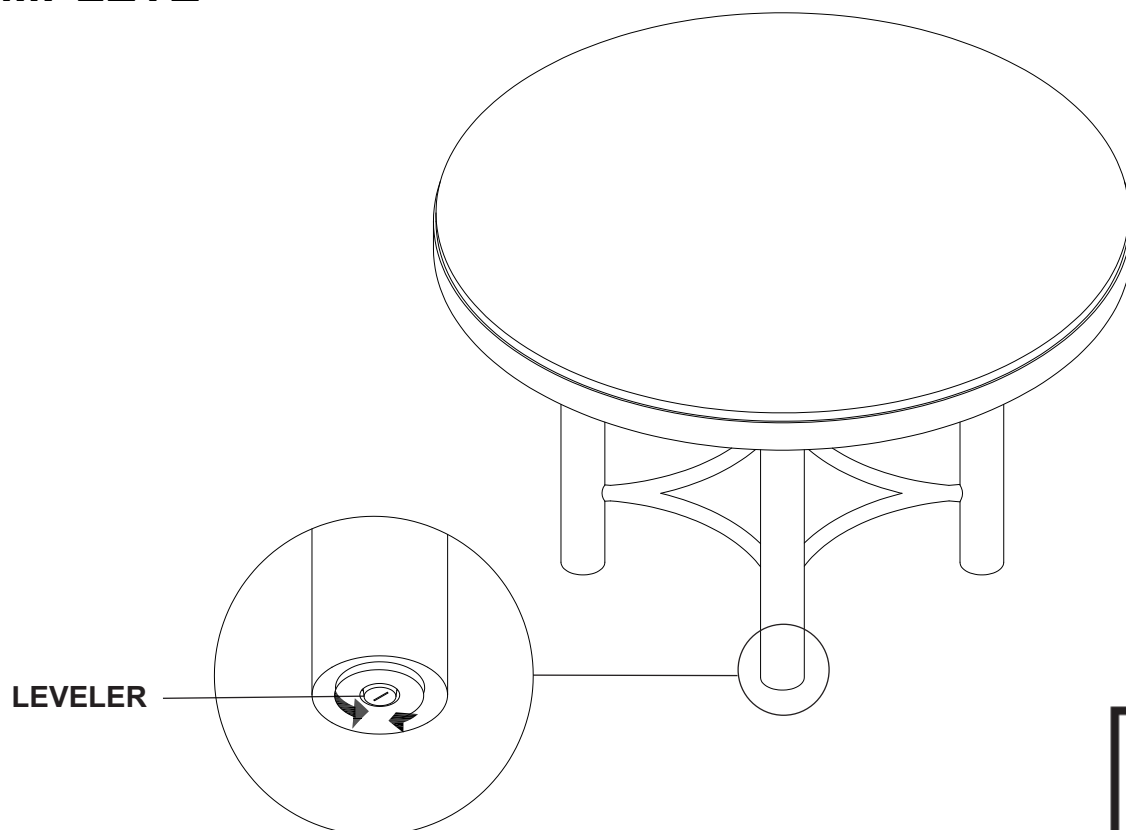

ITEM: **108930**

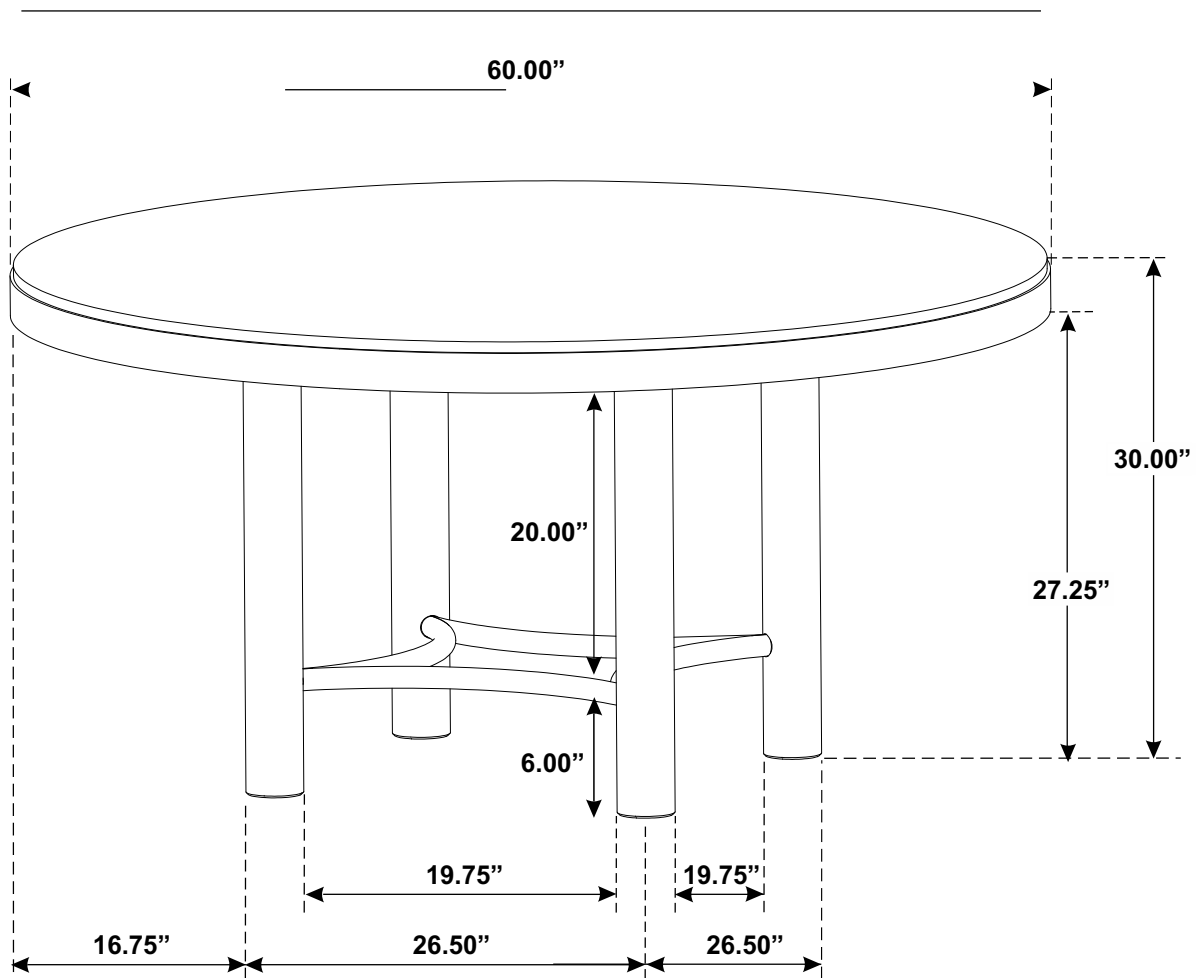 

Note: Dimension tolerance $\pm 5\%$