



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

115501
Dining Table

ITEM: **115501**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

25 MINUTES


PARTS IDENTIFICATION

A TOP

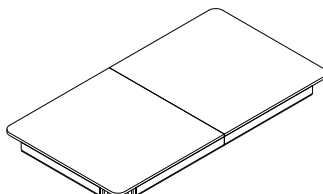

1PC

 B LEAF



1PC

C LEG

 


4PCS

HARDWARE IDENTIFICATION

1

BOLT
(5/16" x 50mm - BLK)



8PCS

2

LOCK WASHER
(1.6 x 14mm - BLK)



8PCS

3

FLAT WASHER
(1 x 18mm - BLK)



8PCS

4

ALLEN WRENCH
(M5 x 70mm - BLK)



 
1PC

ITEM: **115501**


ASSEMBLY INSTRUCTIONS



STEP 1

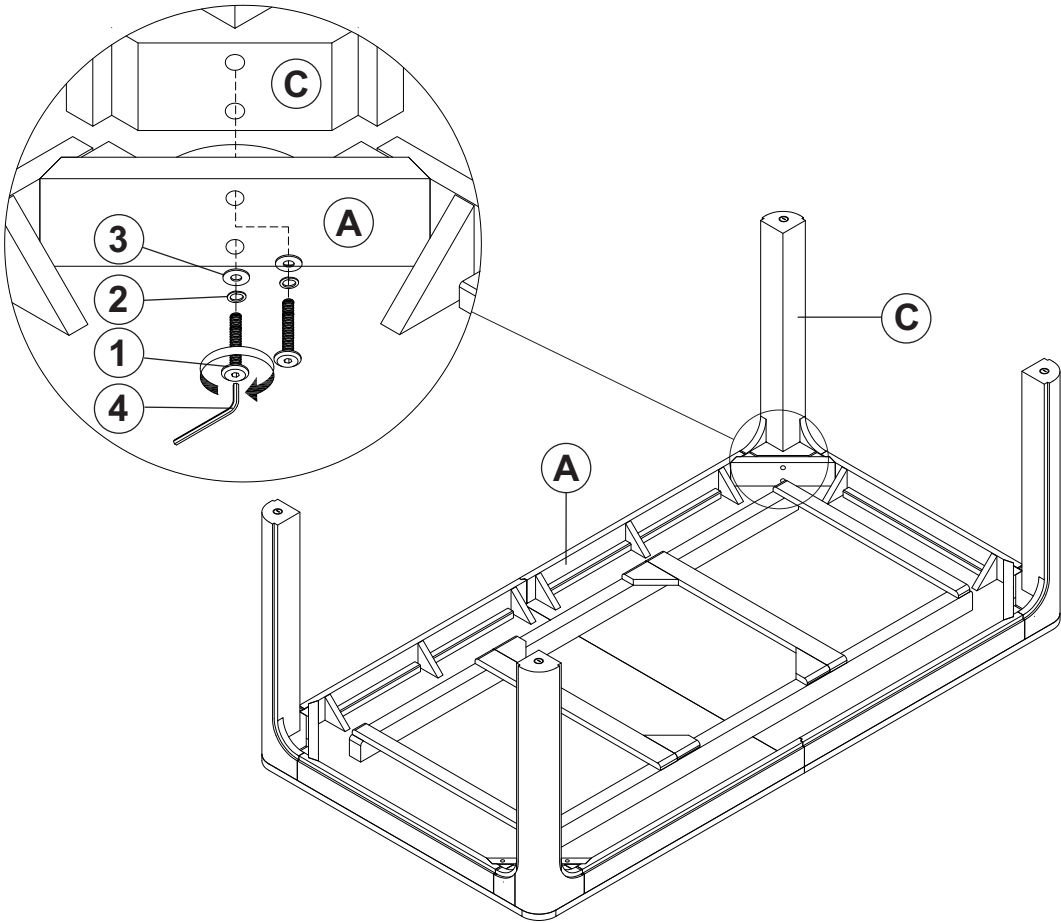


 
STEP 2

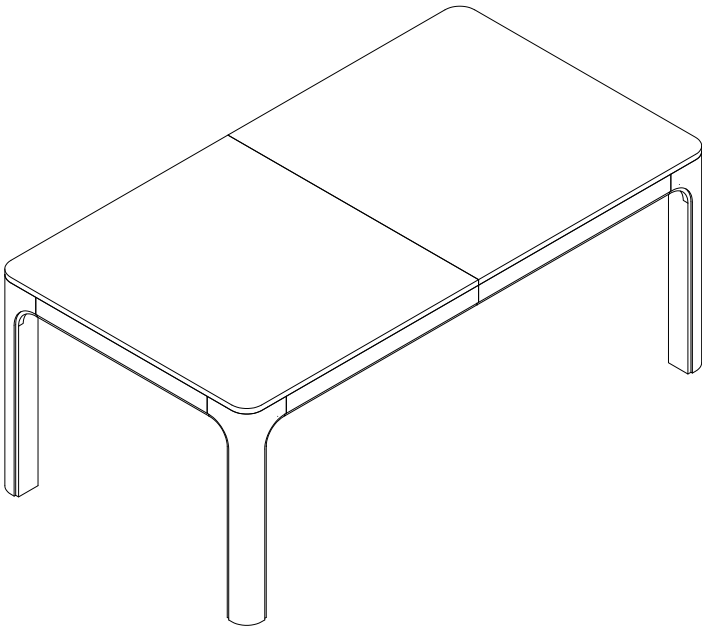


ITEM: **115501**
ASSEMBLY INSTRUCTIONS



  STEP 3

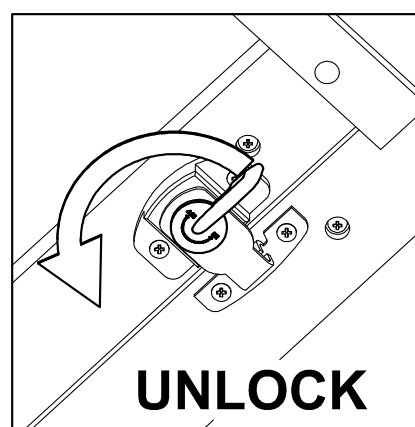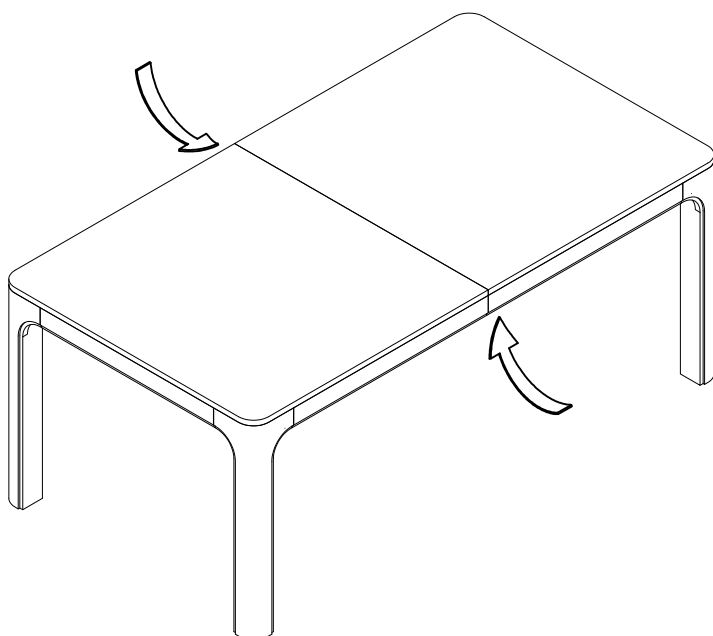

 STEP 4

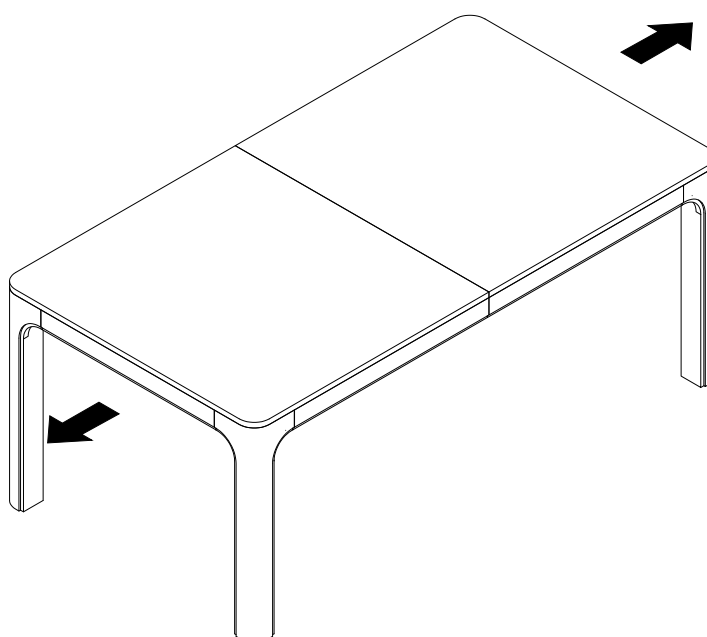


ITEM: **115501**


ASSEMBLY INSTRUCTIONS



 STEP 5

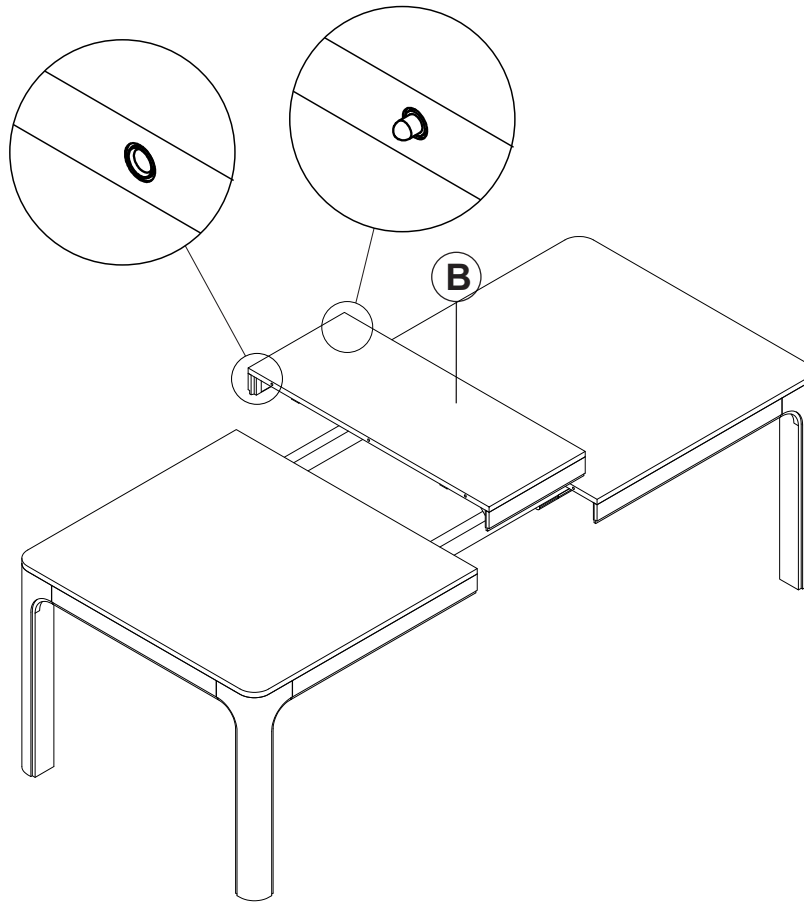

 STEP 6


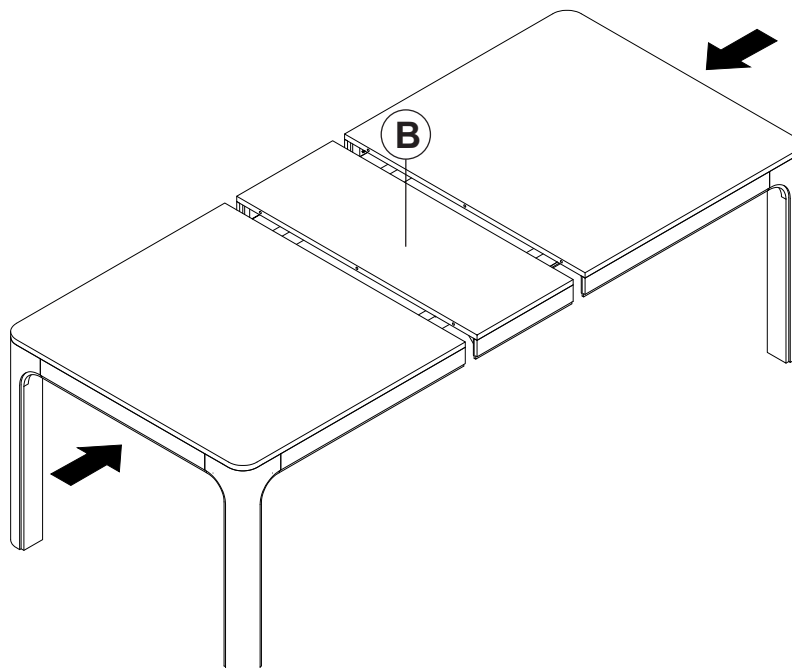


ITEM: **115501**


ASSEMBLY INSTRUCTIONS



  
STEP 7

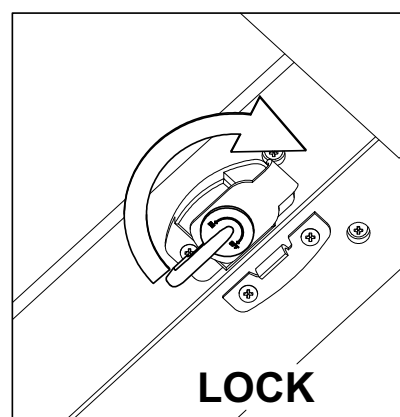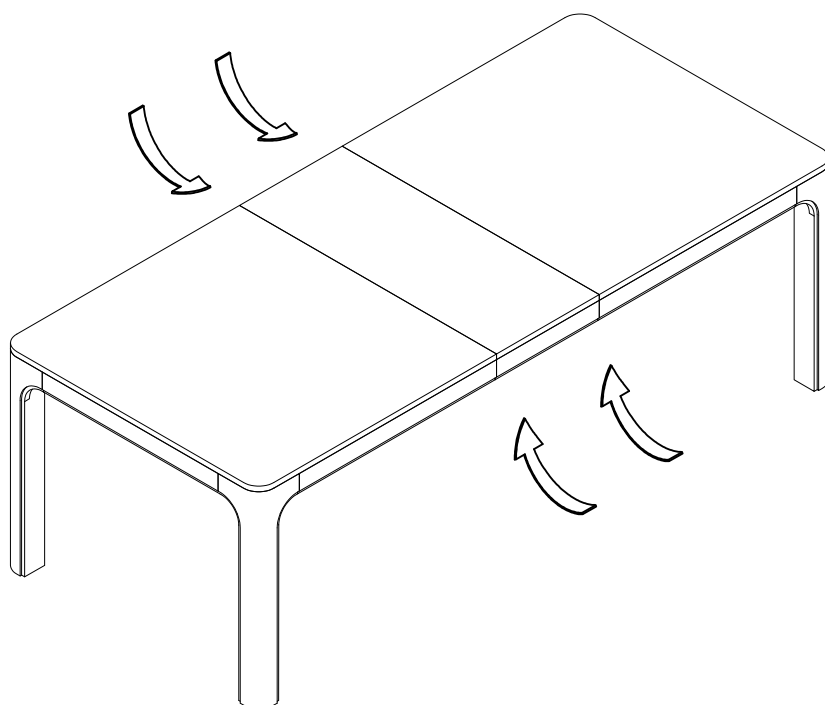

 STEP 8 **COMPLETE**

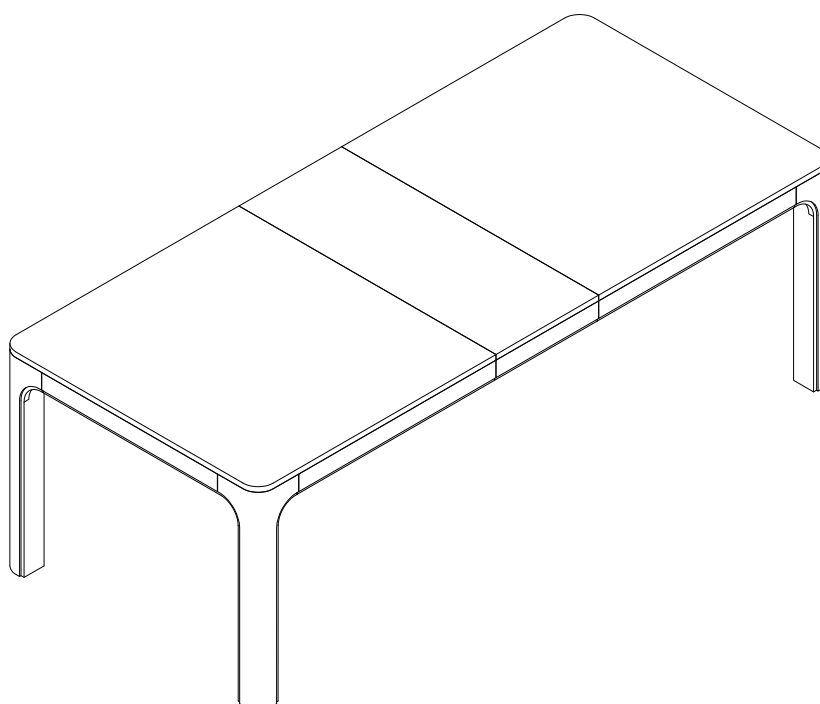

ITEM: **115501**

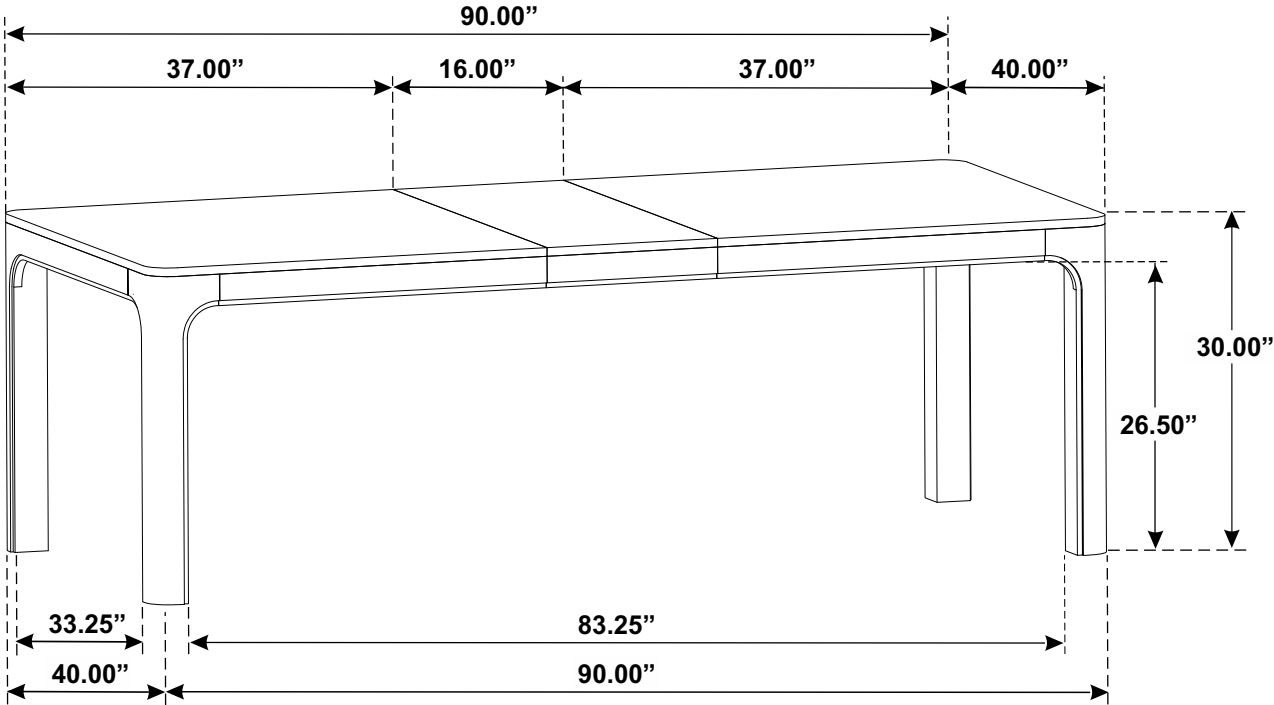 

Note: Dimension tolerance $\pm 5\%$