

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

706677
END TABLE

ITEM:706677

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME

30 MINUTES


PARTS IDENTIFICATION

A TOP PANEL

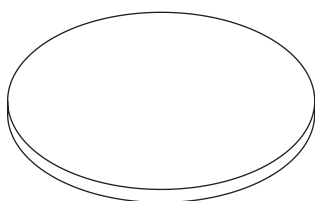


1 PC

 C SIDE PANEL

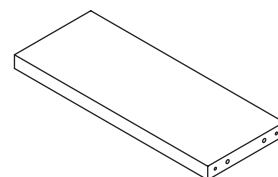

3 PCS

 B CROSS PANEL



3 PCS

HARDWARE IDENTIFICATION



Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	WOODEN DOWEL Ø8x30mm		6 PCS	4	ALLEN WRENCH 4mm SR		1 PC
2	SCREW Ø4.5x42mm SR		12 PCS	5	PLASTIC FEET Ø15m		3 PCS
3	BOLT Ø7x60mm BLK		6 PCS				

NOTE:




Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **706677**

 
 
STEP 1

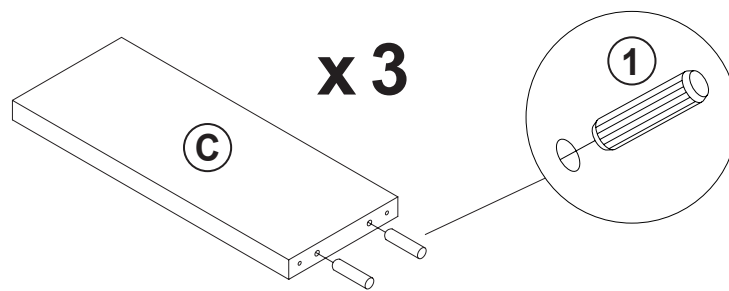

   STEP 2

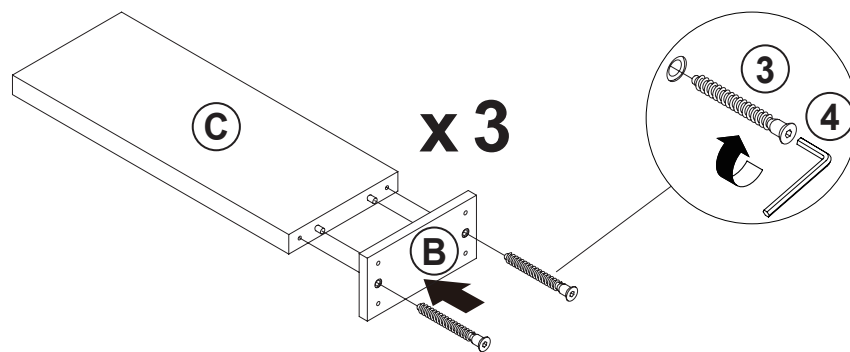


 
 
STEP 3

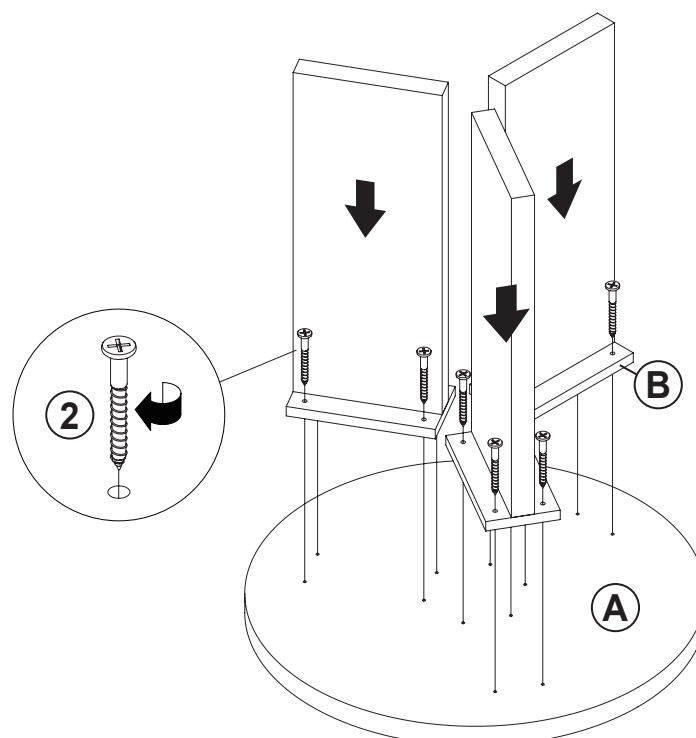

ITEM: **706677**


STEP 4

   COASTER
FINE FURNITURE

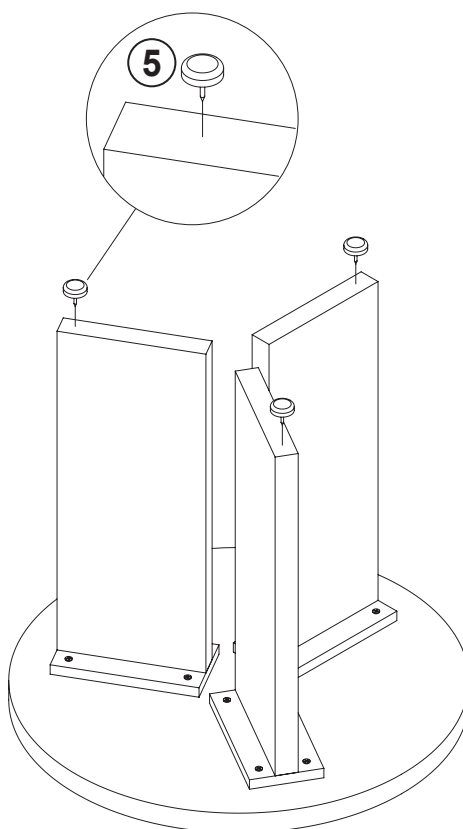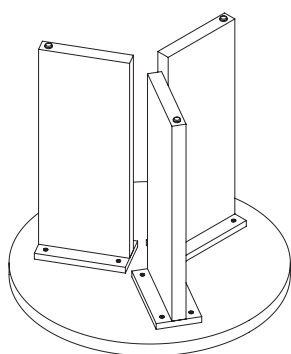


STEP 5

 COMPLETE

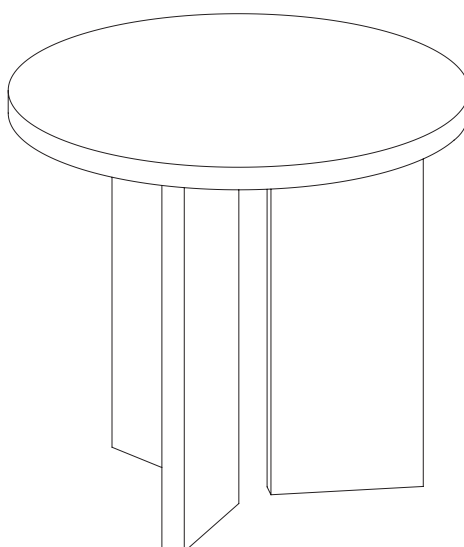

ITEM: **706677**

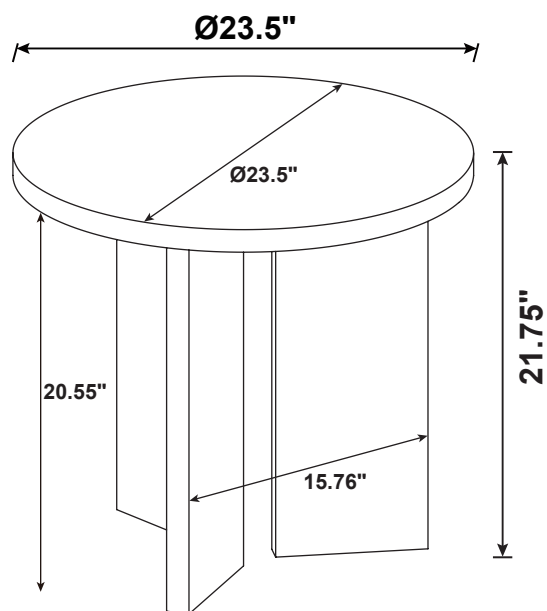 

Note : Dimension tolerance $\pm 5\%$