

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

950442
ACCENT CABINET

ITEM:950442

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES











PARTS IDENTIFICATION

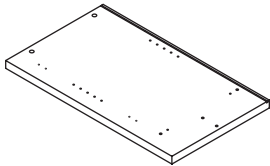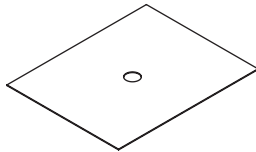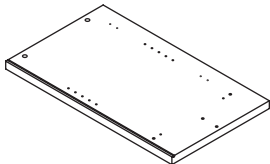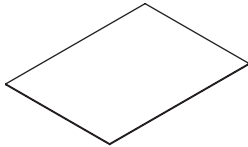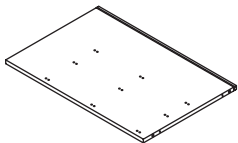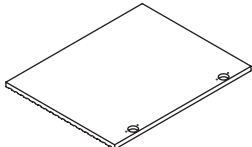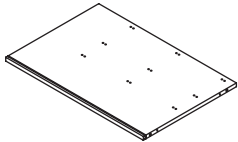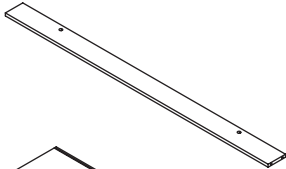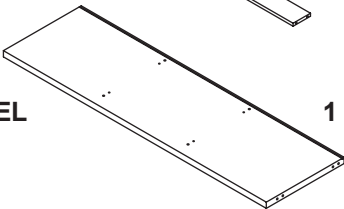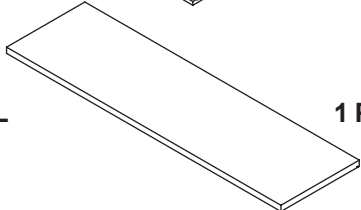A	LEFT SIDE PANEL		1 PC	I	LEFT AND RIGHT BACK PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	J	MIDDLE BACK PANEL		1 PC
C	LEFT DIVIDER PANEL		1 PC	K	DOOR		2 PCS
D	RIGHT DIVIDER PANEL		1 PC	L	DRAWER FRONT PANEL		3 PCS
E	CROSS BRACE		1 PC	M	DRAWER BACK PANEL		3 PCS
F	BOTTOM PANEL		1 PC	N	DRAWER LEFT SIDE PANEL		3 PCS
G	ADJUSTABLE SHELF		2 PCS	O	DRAWER RIGHT SIDE PANEL		3 PCS
H	TOP PANEL		1 PC	P	DRAWER BOTTOM PANEL		3 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

          ITEM: **950442****HARDWARE IDENTIFICATION****Z**

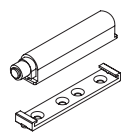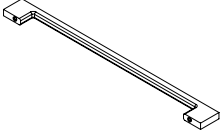NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	11	GLIDES L=350mm SR		3 SETS
2	WOODEN DOWEL Ø8x30mm		35 PCS	12	GLIDES BOLT Ø6x13mm SR		36 PCS
3	CAM BOLT Ø7x35.5mm SR		20 PCS	13	HINGE Ø35mm SR		4 PCS
4	CAM LOCK Ø15 x 12mm SR		20 PCS	14	HINGE SCREW Ø4x15mm SR		22 PCS
5	BOLT Ø9.5x55mm SR		4 PCS	15	DOOR CATCH		2 SETS
6	SCREW Ø4.3x35mm SR		12 PCS	16	BACK PANEL SUPPORT		6 PCS
7	PLASTIC FEET Ø15mm		5 PCS	17	BACK PANEL SUPPORT SCREW Ø3x19mm SR		6 PCS
8	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		8 PCS	18	STICKER Ø20mm		4 PCS
9	HANDLE L= 289mm BLK		3 PCS	19	PLASTIC COVER Ø52mm		2 PCS
10	BOLT M4x23mm BLK		6 PCS				

 
Z9, Z11, Z13, Z15, Z19 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **950442**

COASTER
FINE FURNITURE

STEP 1

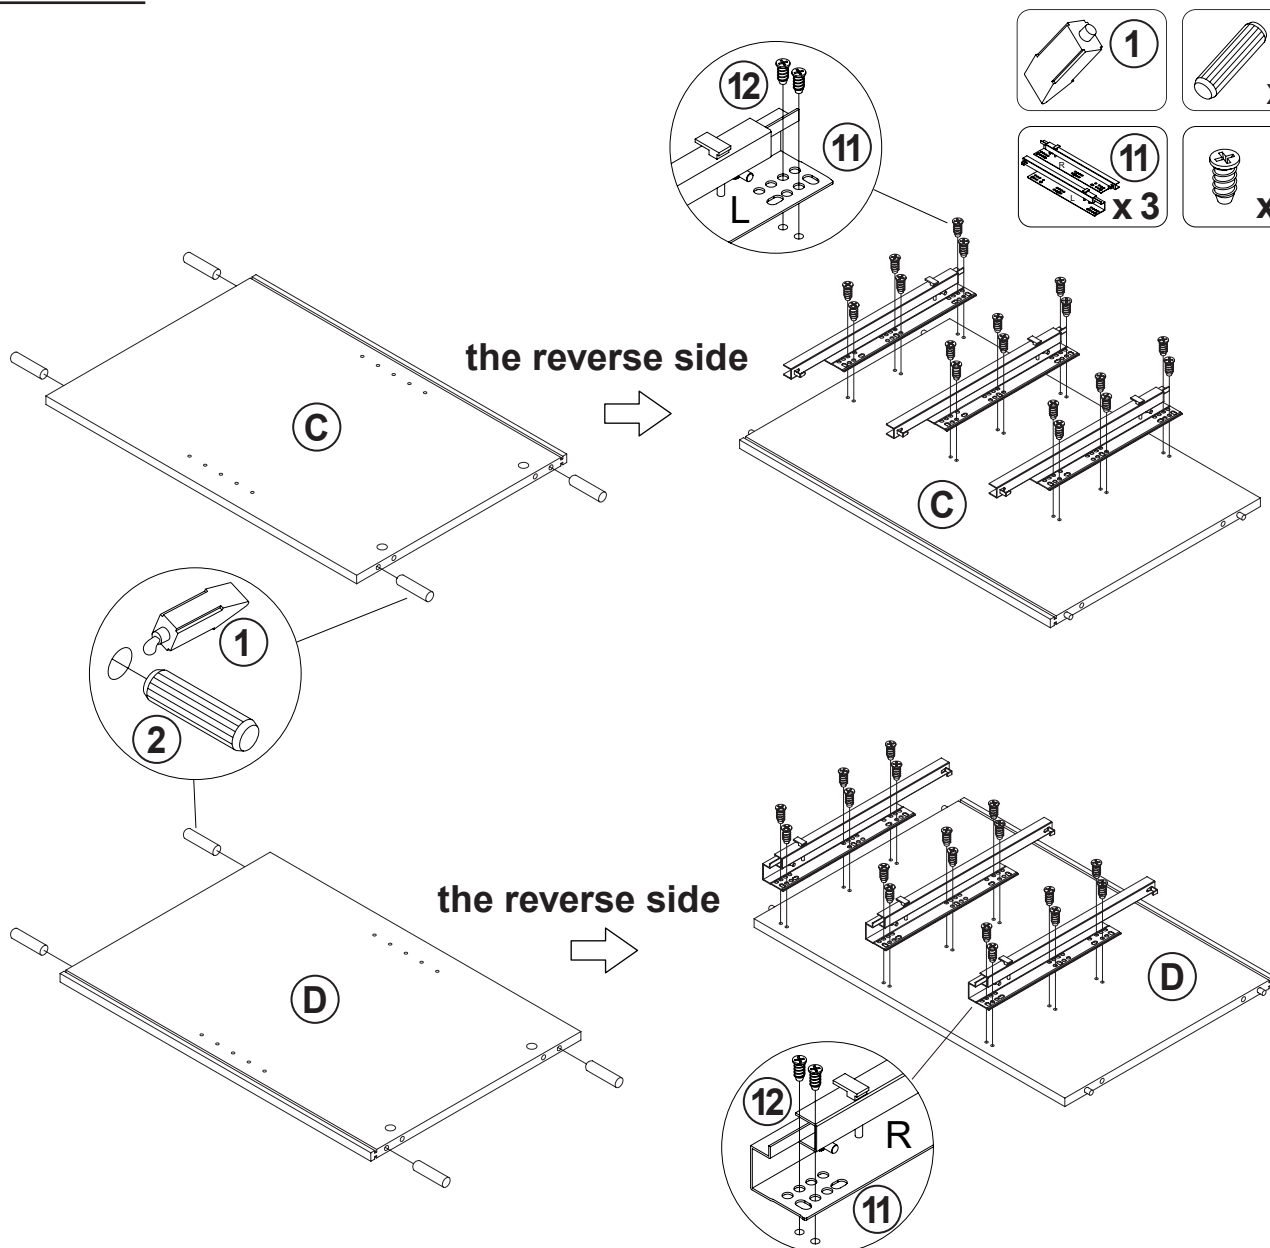


 STEP 2

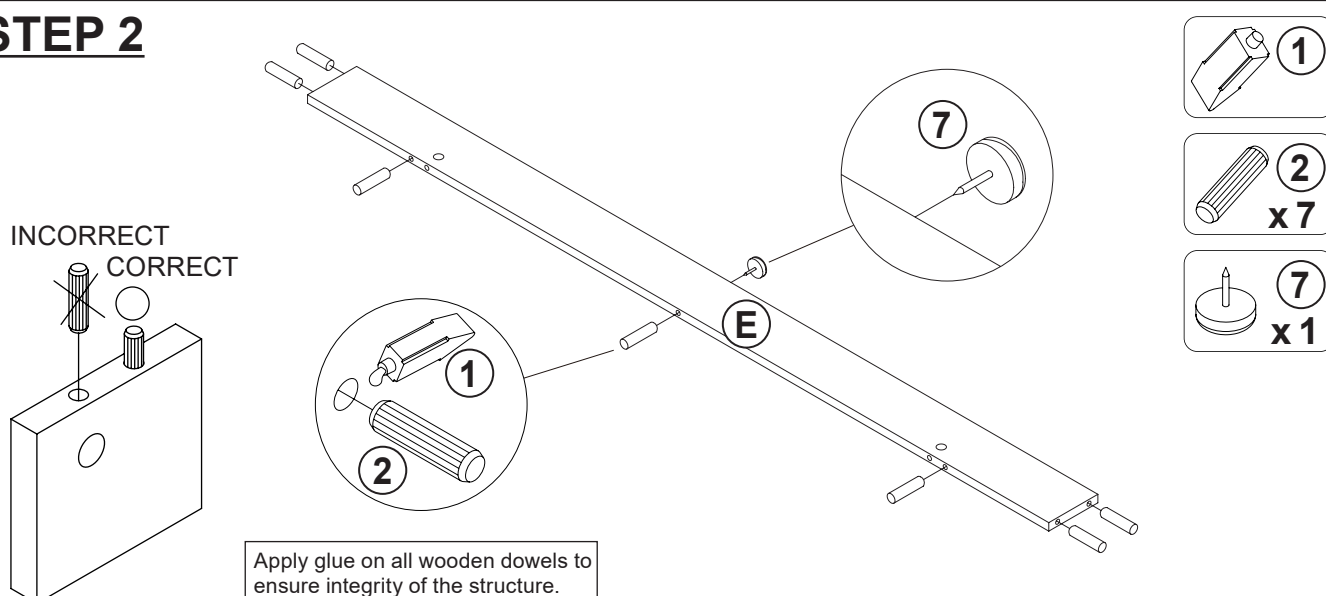


ITEM:950442

 STEP 3

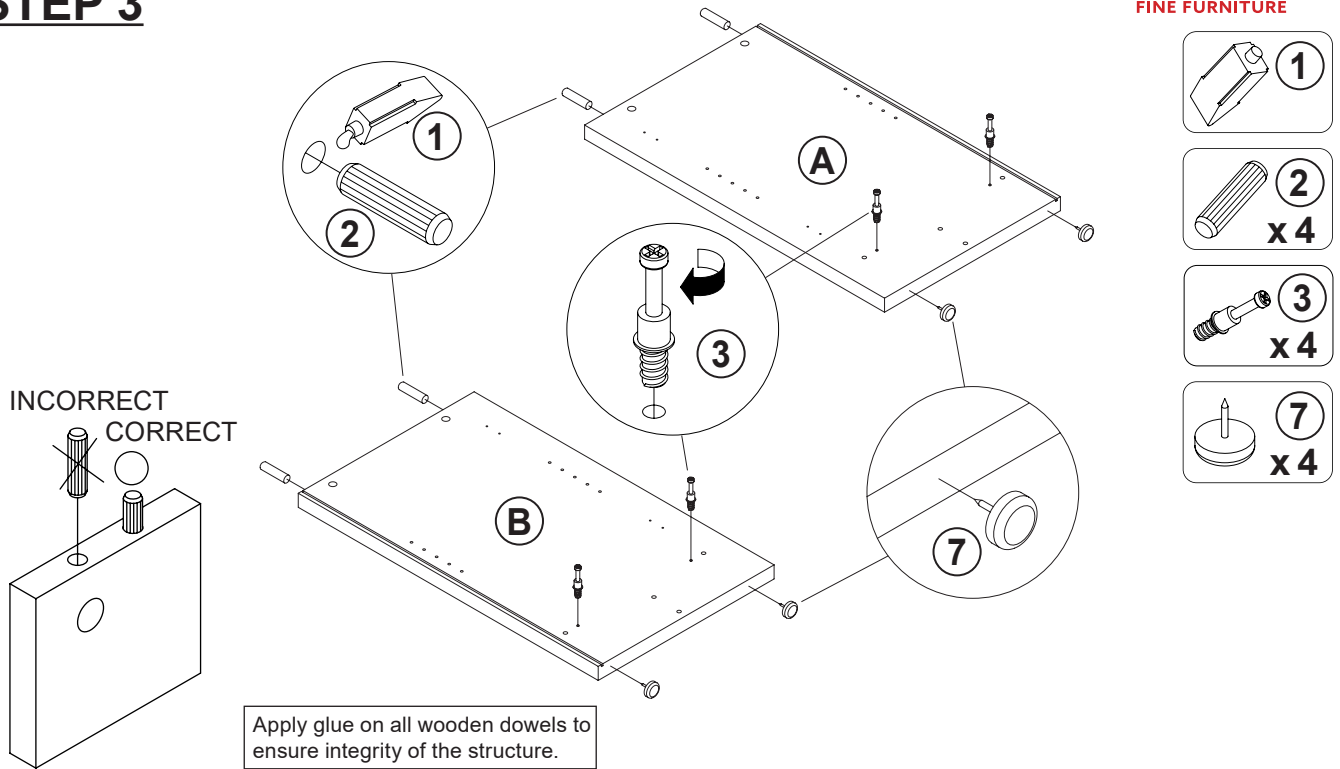
The logo for Coaster Fine Furniture, featuring a red curved line above the word "COASTER" in a bold, sans-serif font, with "FINE FURNITURE" in a smaller font below it.

 STEP 4

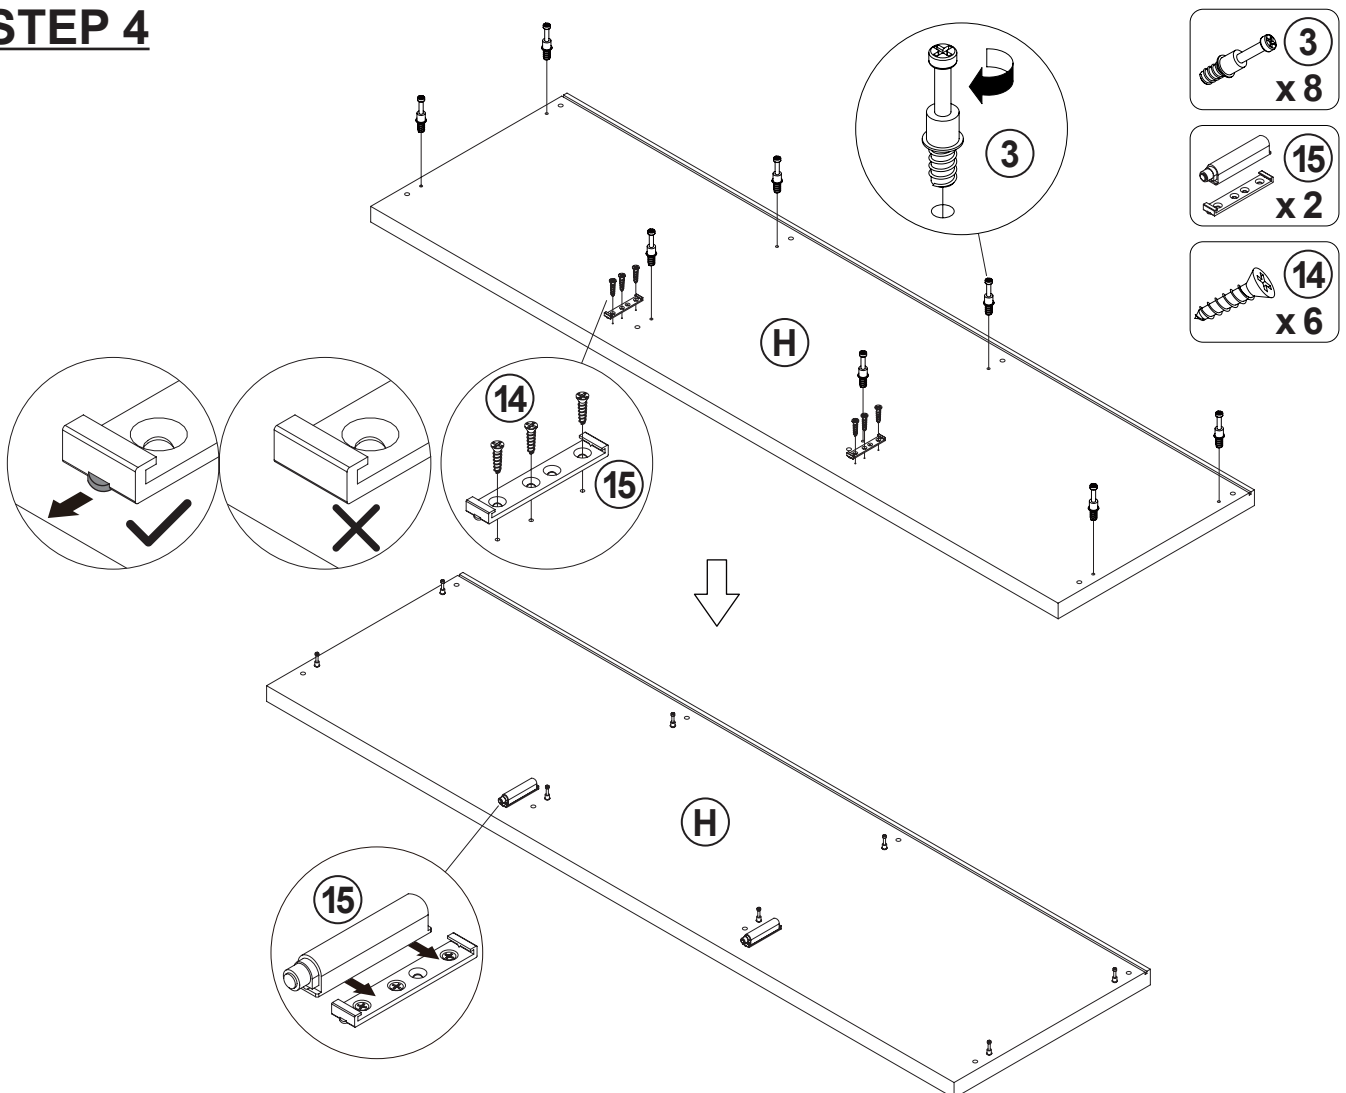


ITEM: **950442**

 STEP 5

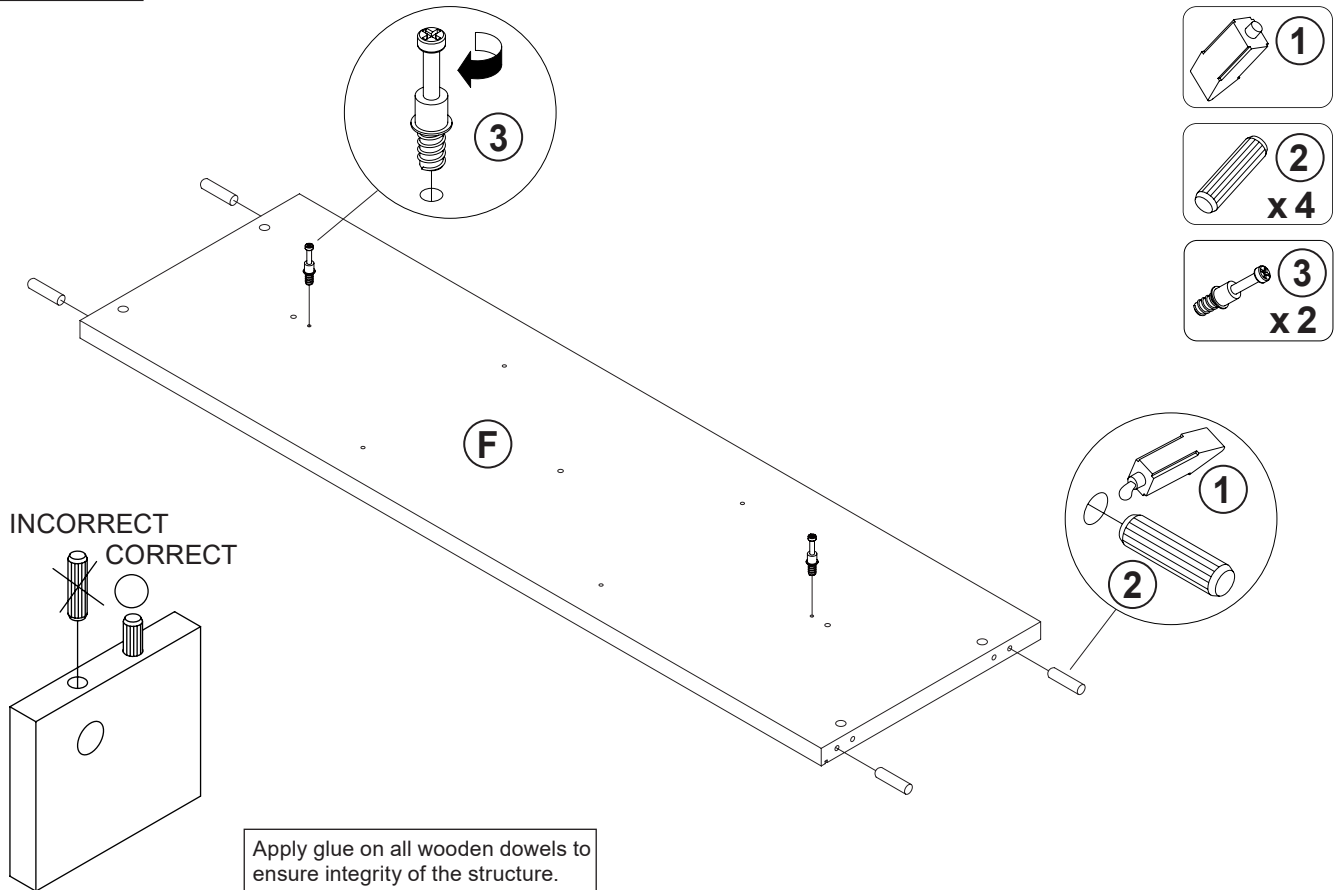


 
STEP 6

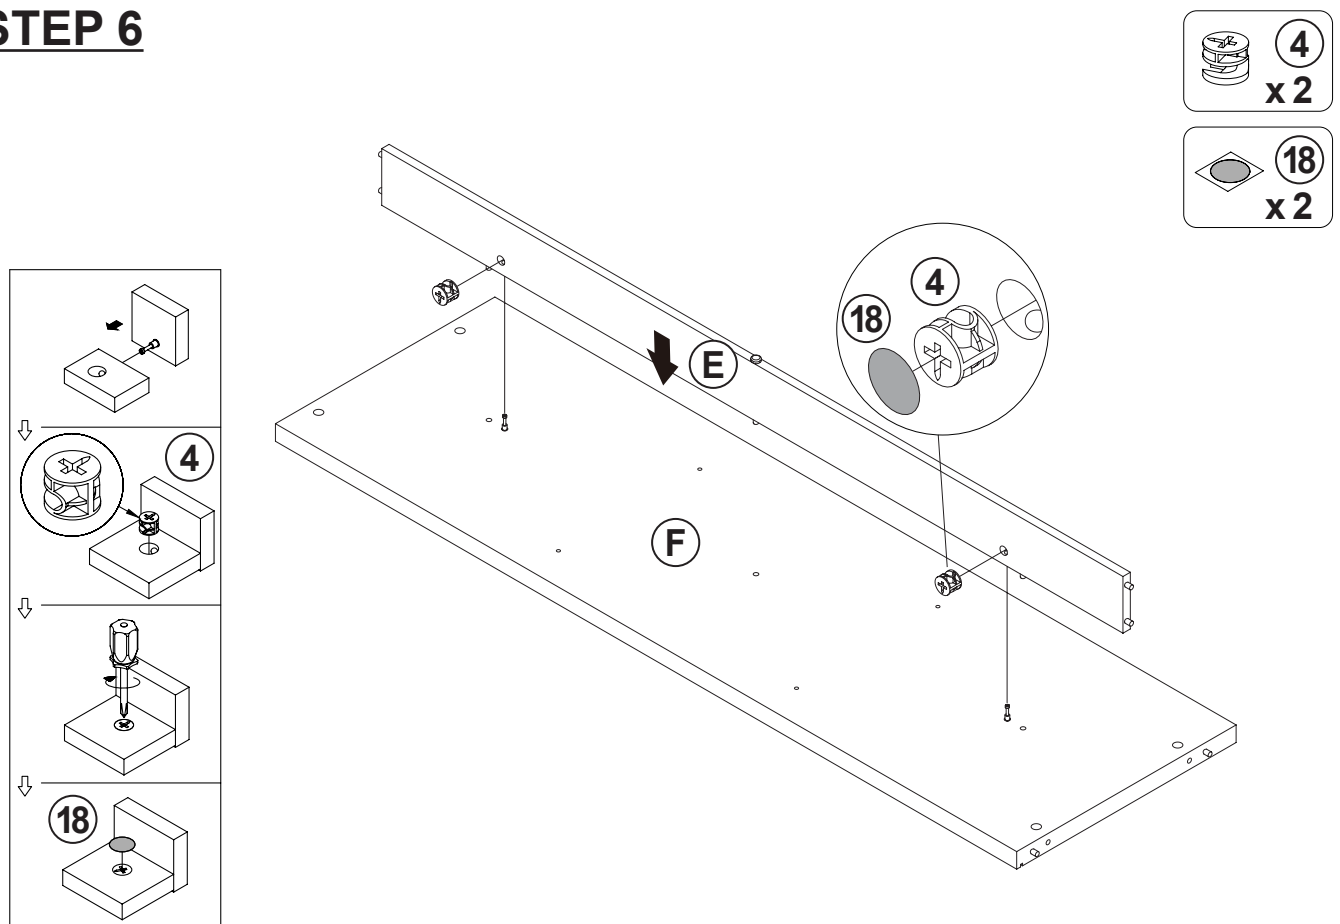



ITEM: **950442**

COASTER
FINE FURNITURE

  STEP 7

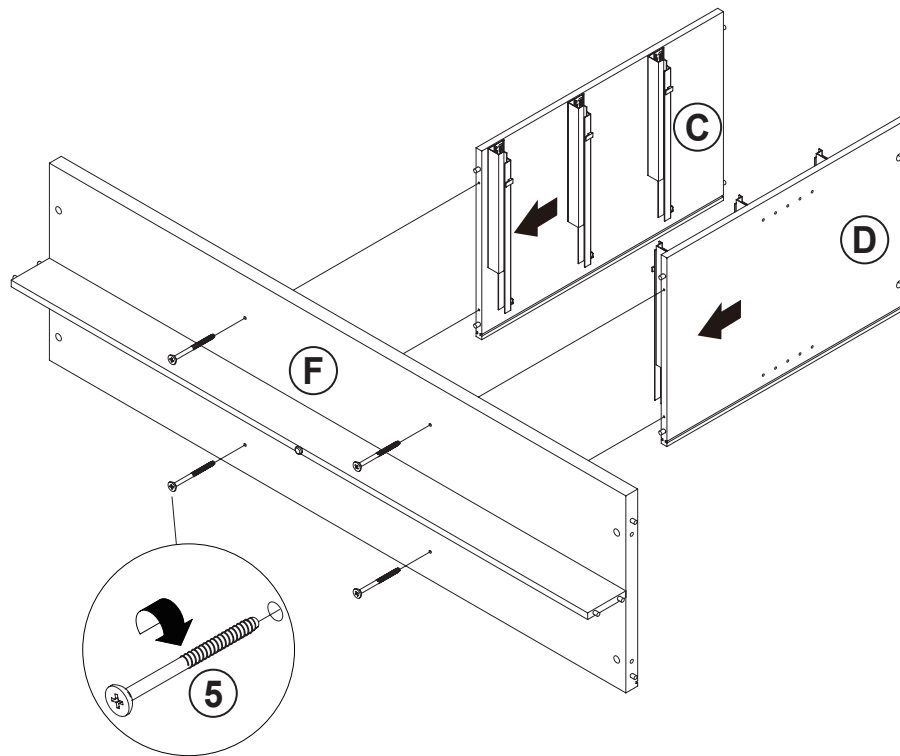

 
 
STEP 8

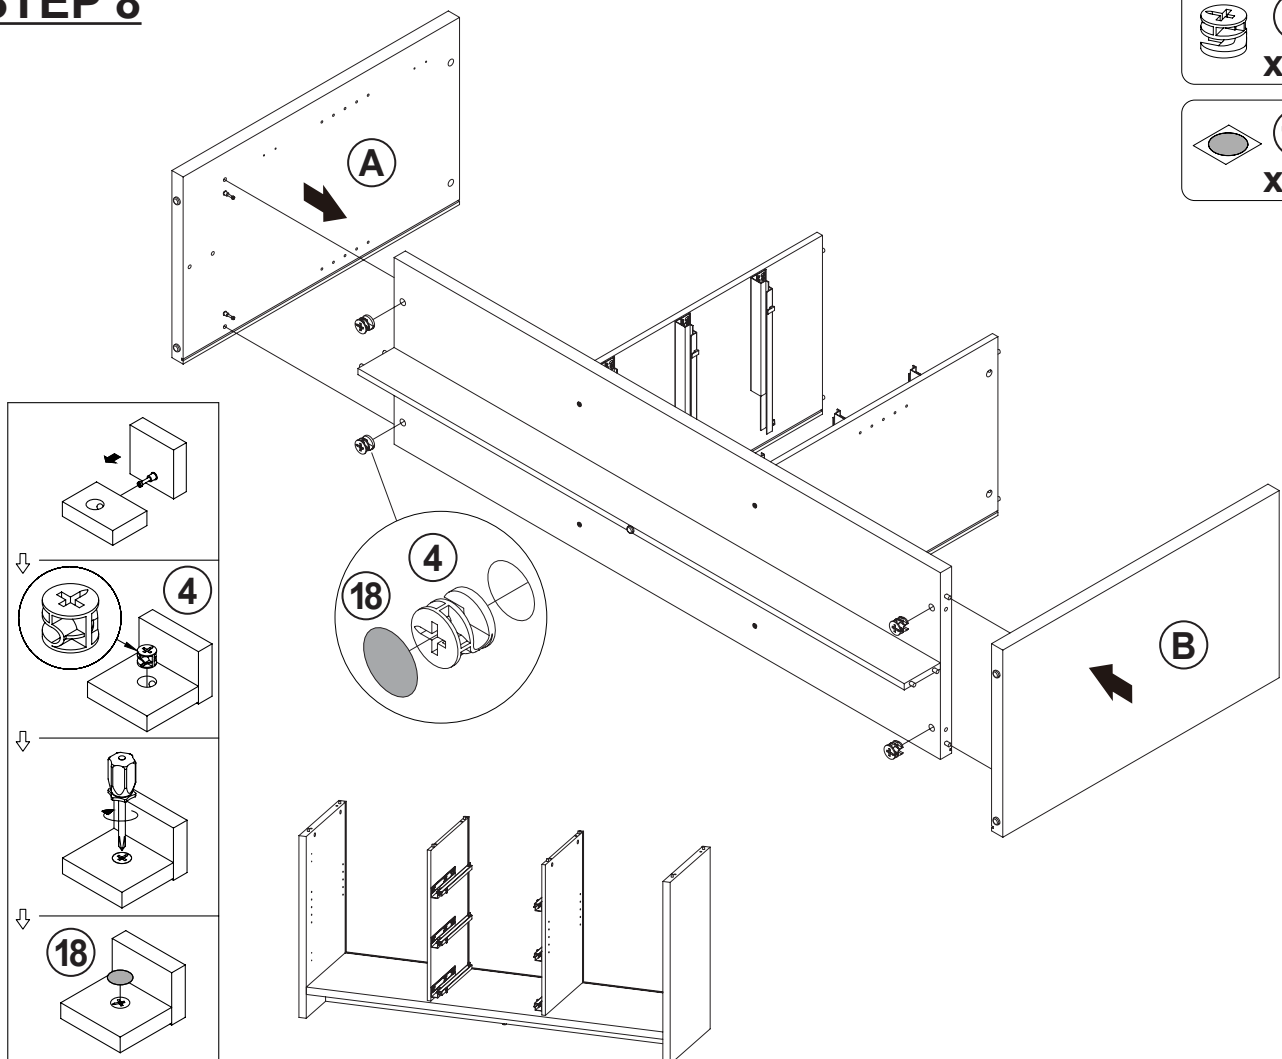



ITEM: **950442**

STEP 9

  COASTER
FINE FURNITURE

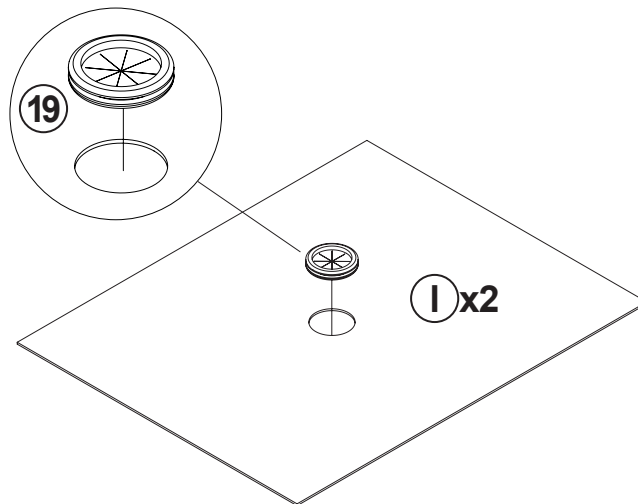

  
STEP 10

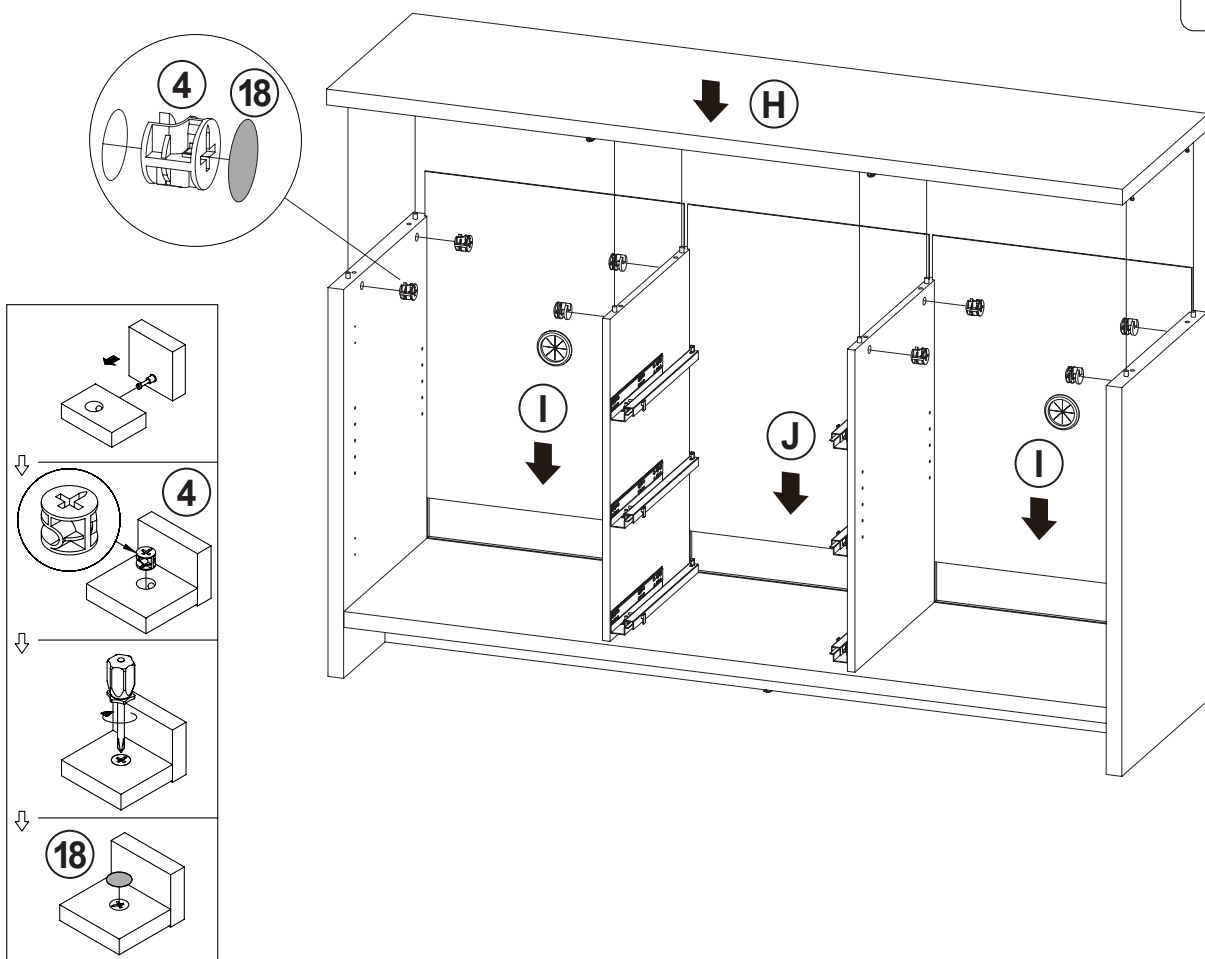

ITEM: **950442**

STEP 11

 
COASTER
FINE FURNITURE

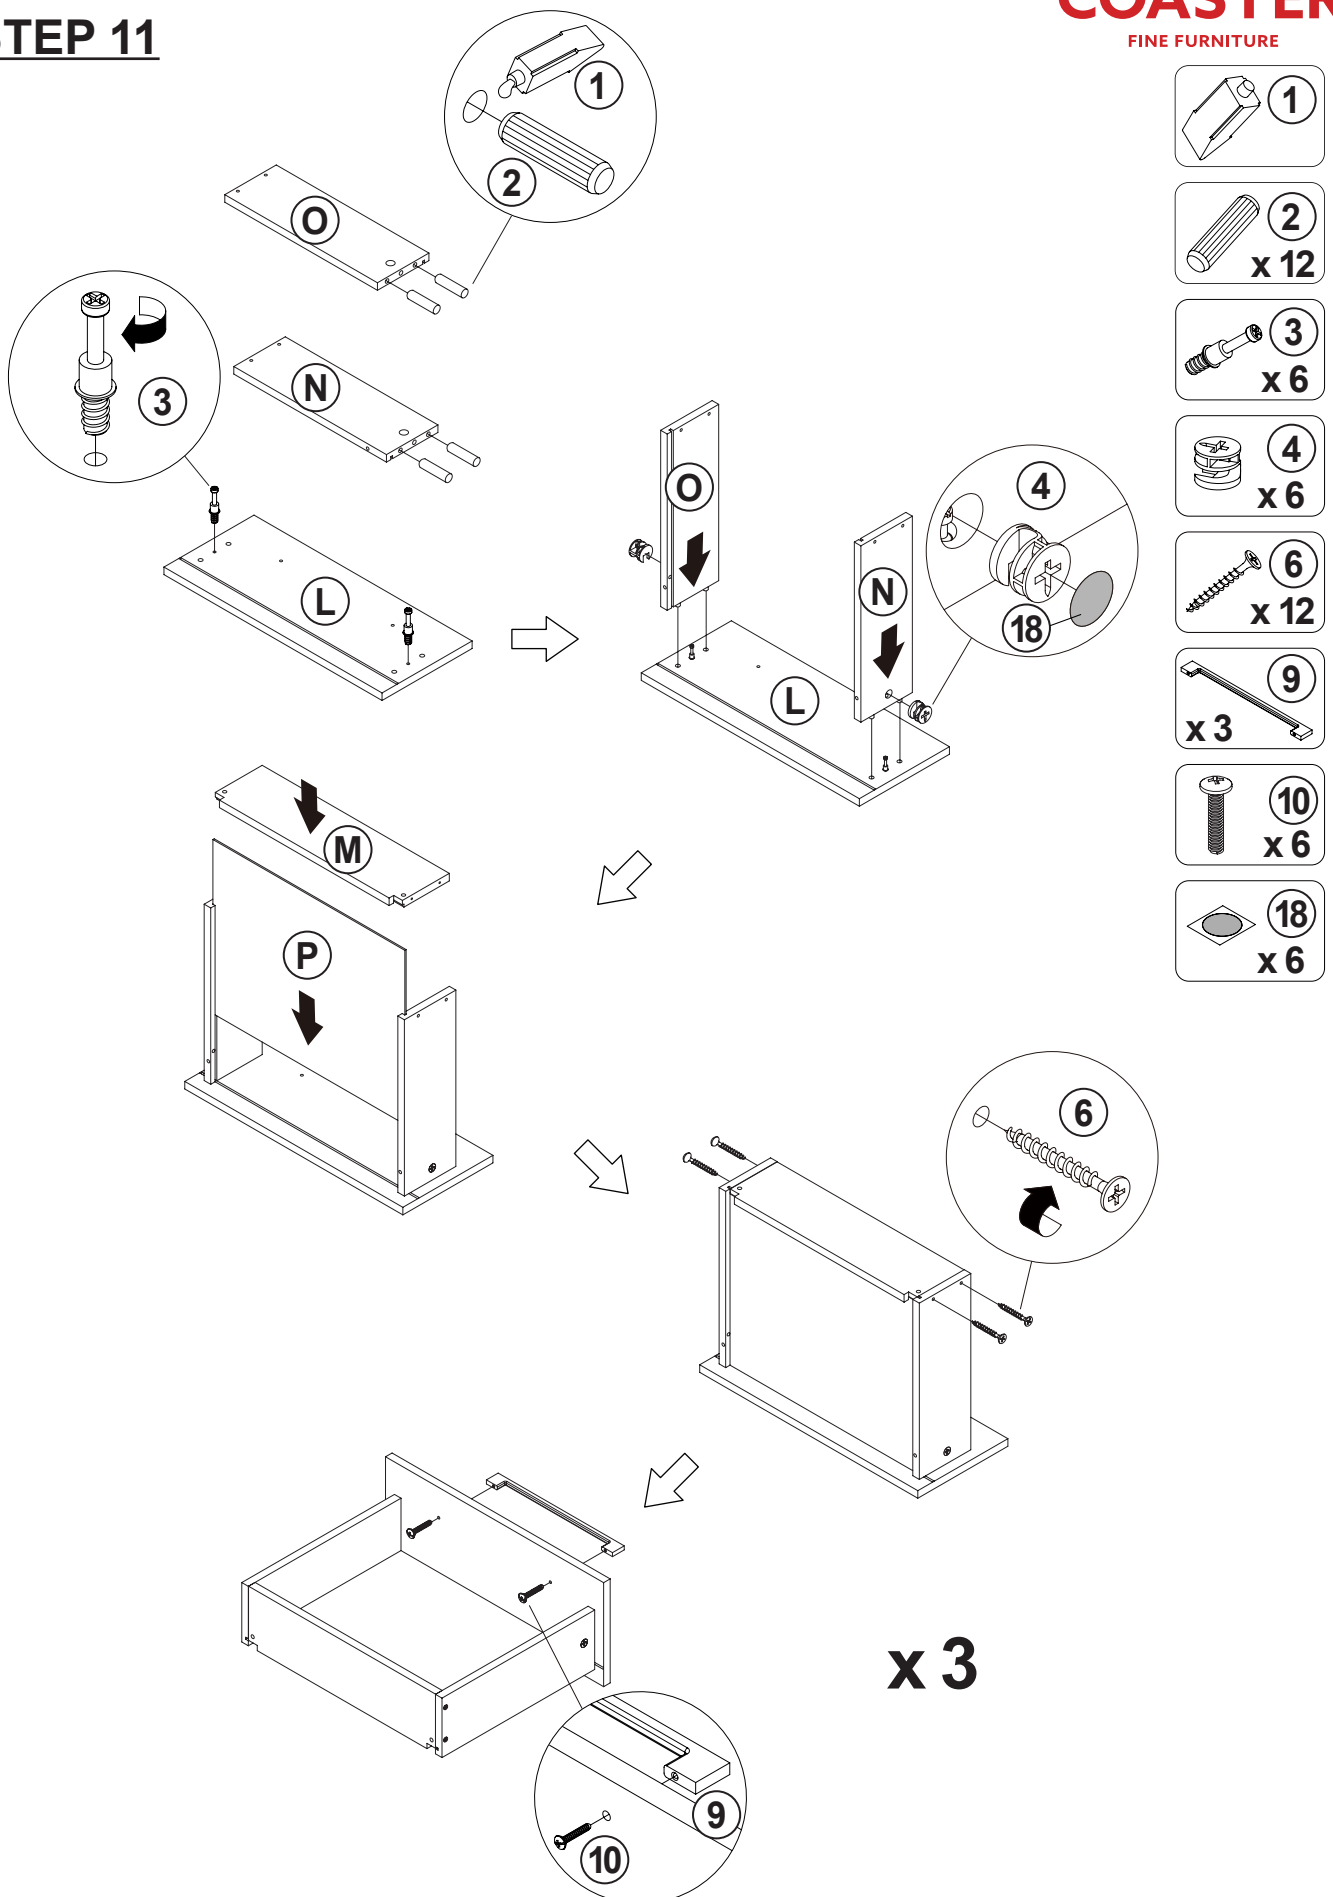


ITEM: **950442**

COASTER
FINE FURNITURE

 STEP 12

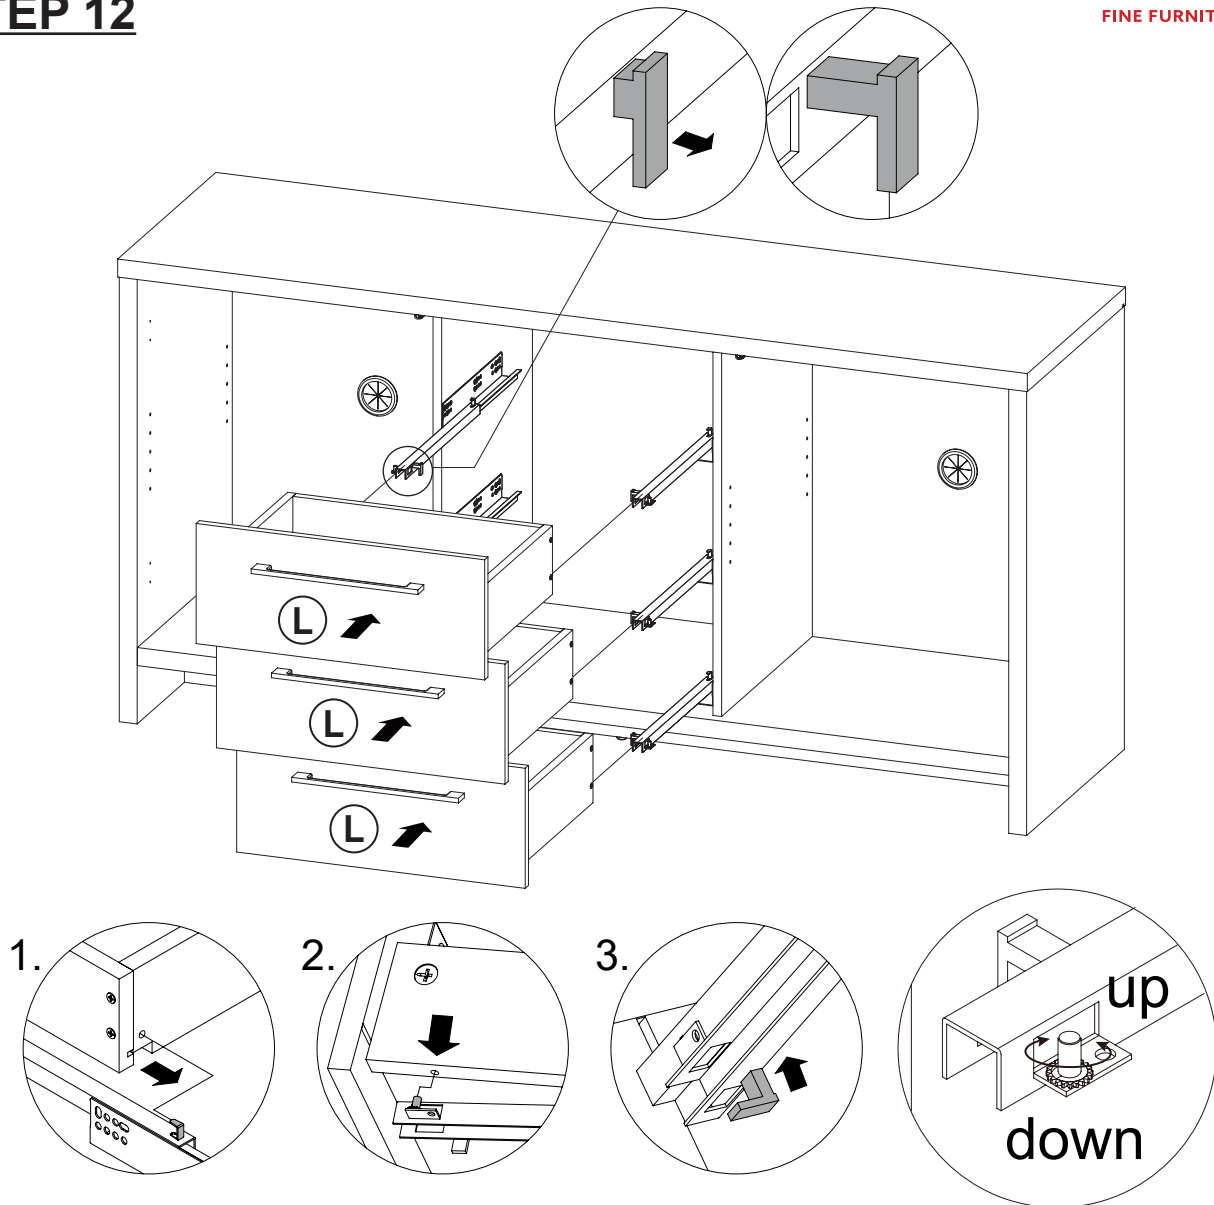


 
STEP 13

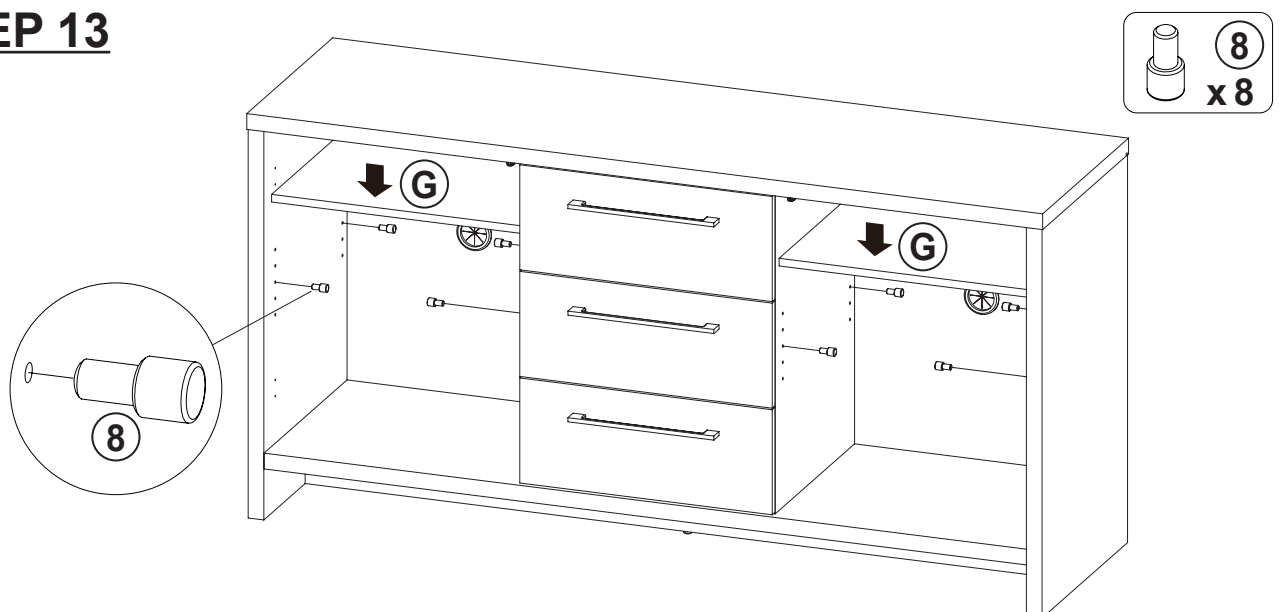



ITEM: **950442**

STEP 14

  COASTER
FINE FURNITURE

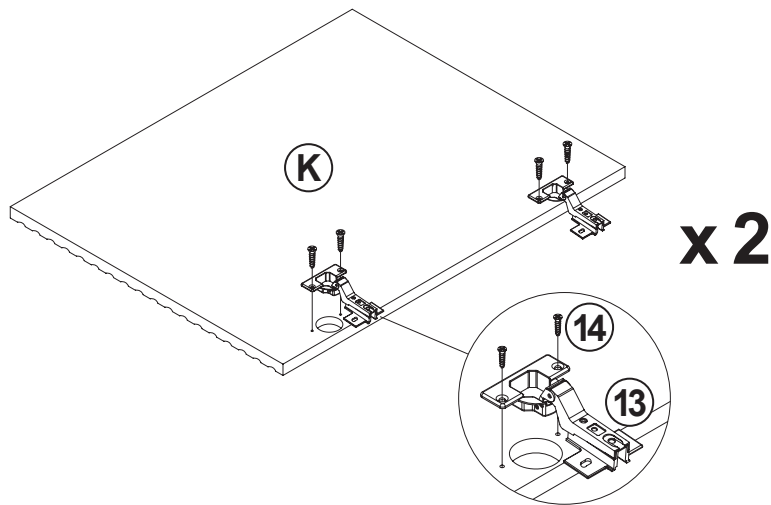



 
 
STEP 15

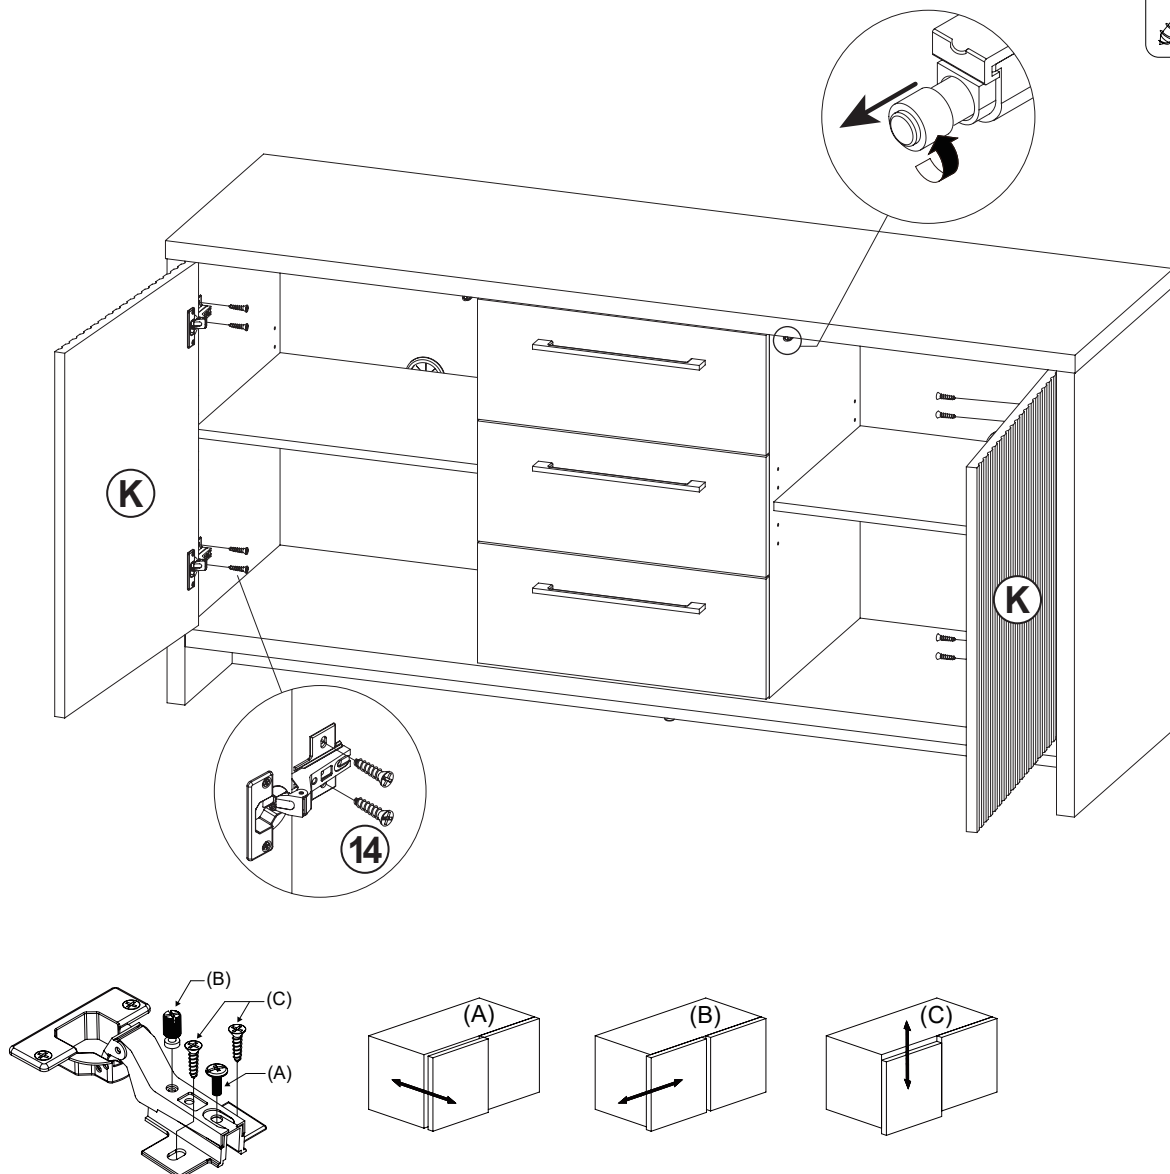



ITEM: **950442**

STEP 16

   
 
COASTER
FINE FURNITURE

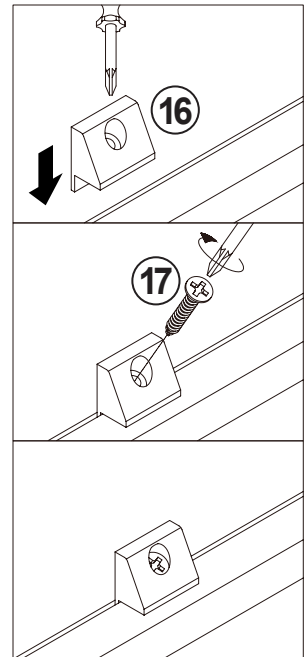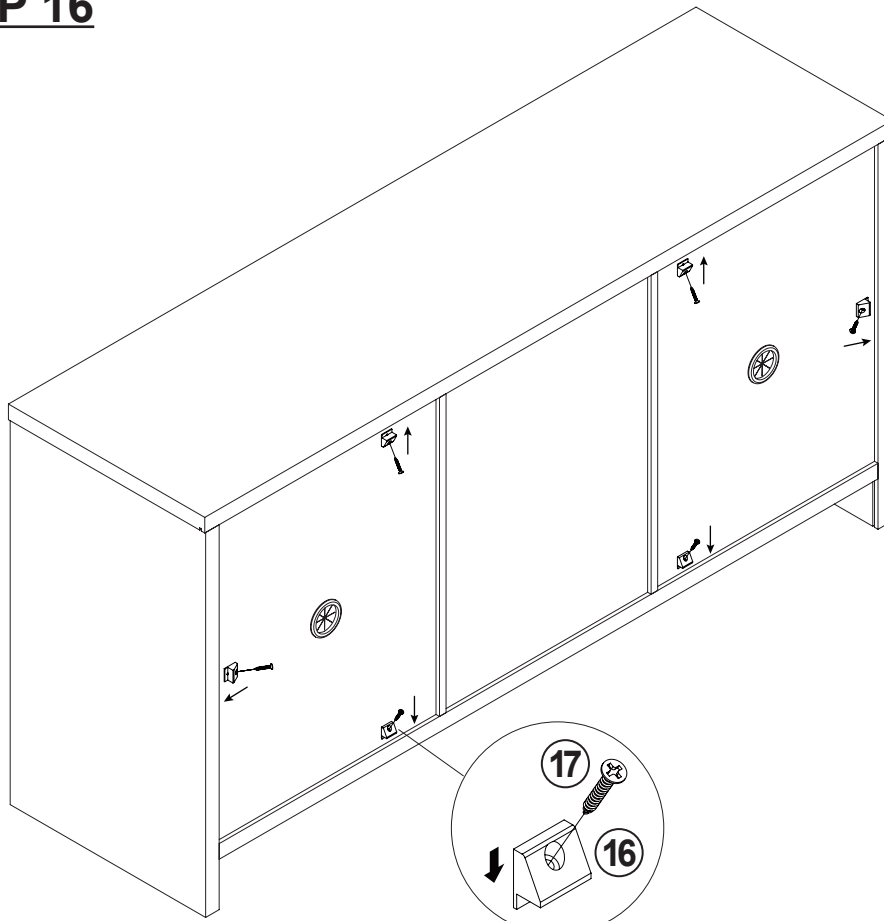

  STEP 17
COMPLETE

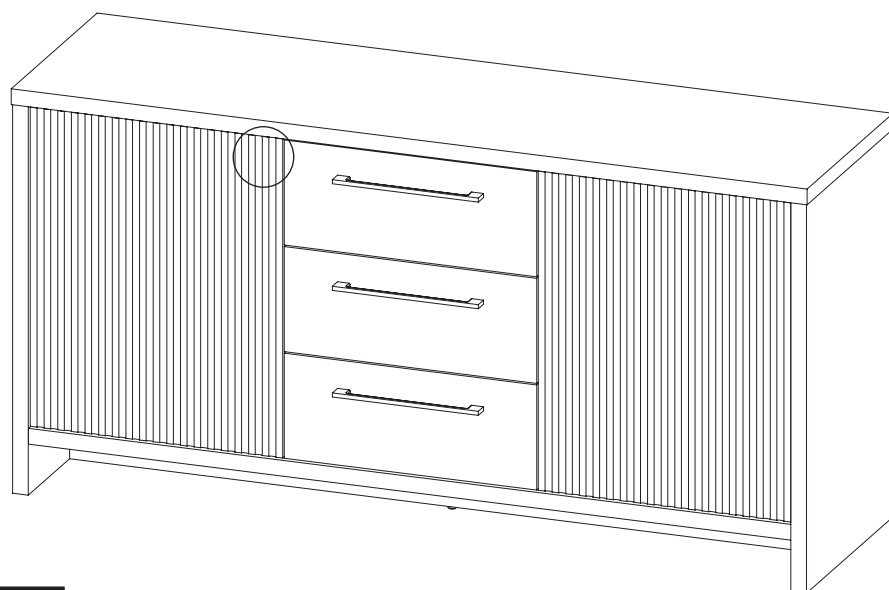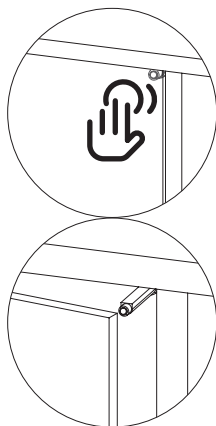

ITEM: **950442**

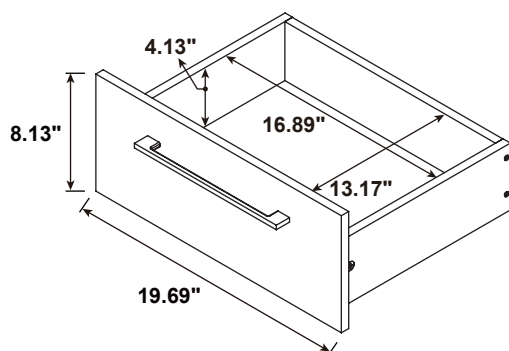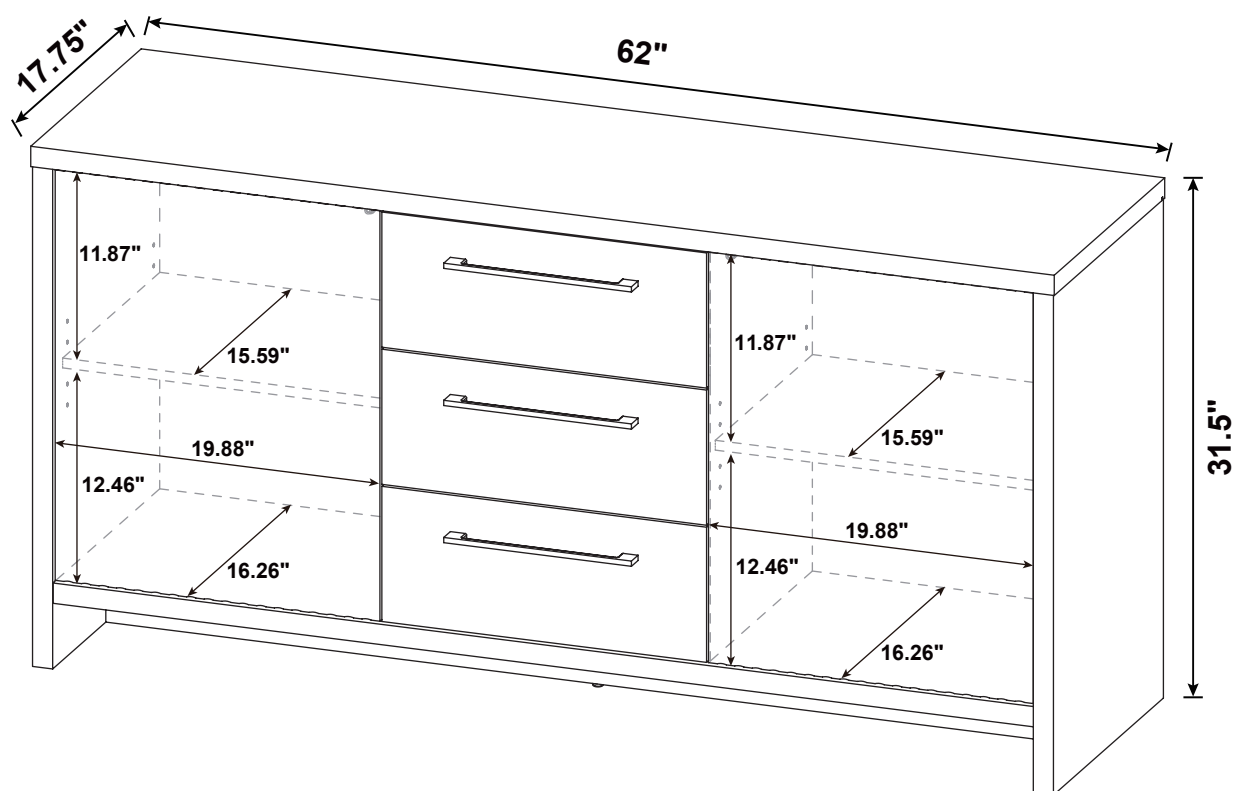  

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

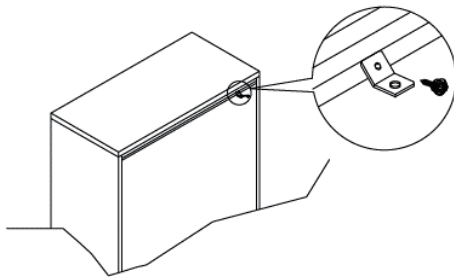

STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

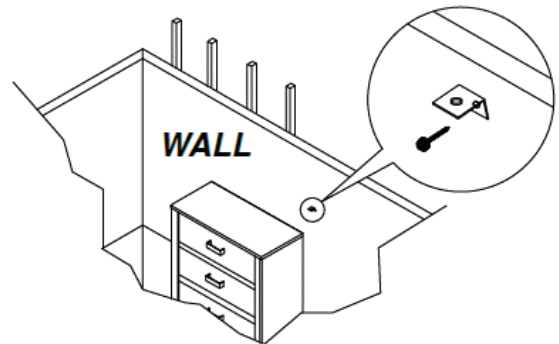

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

