



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

710937
END TABLE

REVISION 0 : 08/05/2026

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 710937



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

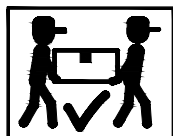


ASSEMBLY TIME

30 MINUTES


PARTS IDENTIFICATION

A TOP

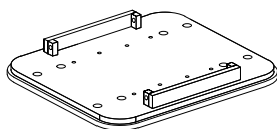


1PC

 C MOUNTING PLATE



2PCS

B BASE

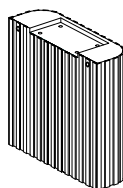

2PCS

HARDWARE IDENTIFICATION

1

ALLEN WRENCH
(5MM - BLK)



1PC

3

LOCK WASHER
(Ø5/16" - BLK)



20PCS

2

ALLEN BOLT
(Ø5/16" x 1-1/2" - BLK)



20PCS

4

FLAT WASHER
(Ø5/16" x 19MM - BLK)




20PCS

ITEM: **710937**


ASSEMBLY INSTRUCTIONS




STEP 1

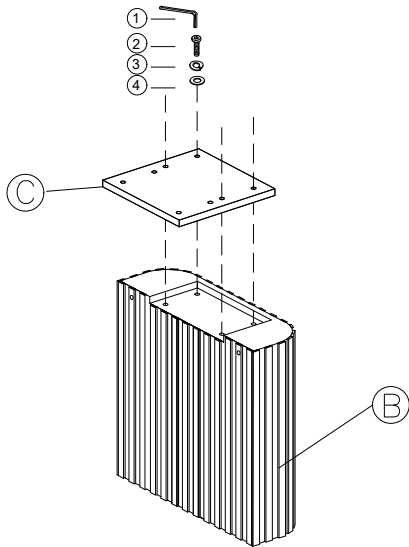



STEP 2

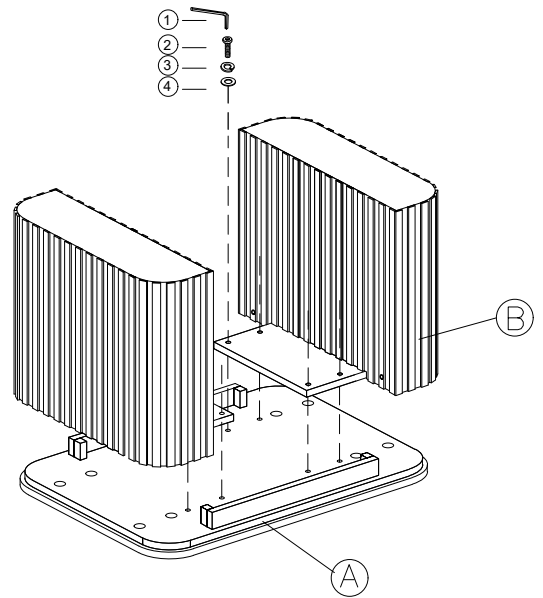


STEP 3

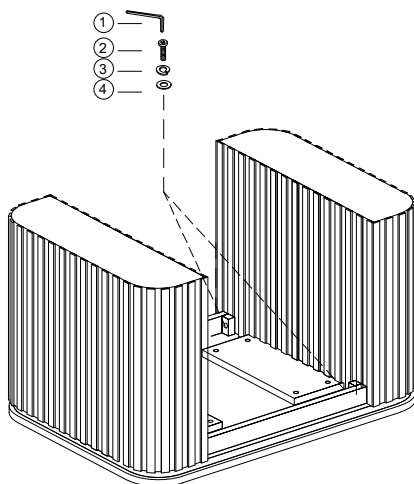

STEP 4 COMPLETE

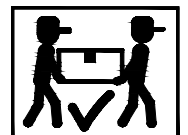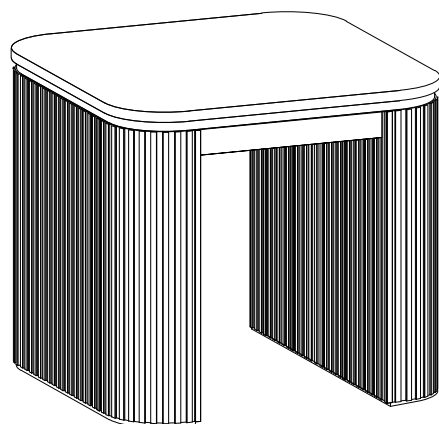

ITEM: 710937

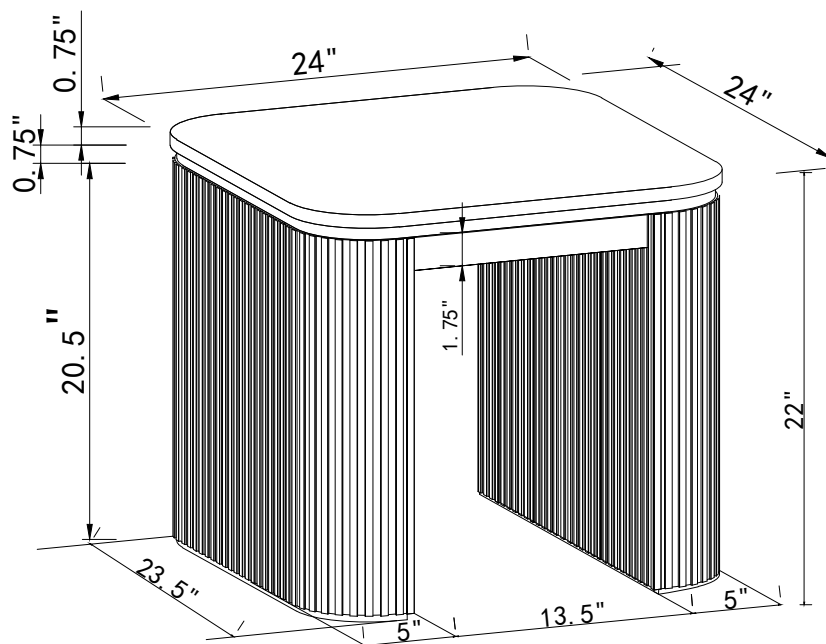

Note : Dimension tolerance $\pm 5\%$