ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

115391

Dining Table

ITEM: 115391

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME	10 MINUTES

PARTS IDENTIFICATION

A	TOP		1PC
B	LEAF		1PC
C	LEG		2PCS
D	BASE		1PC
E	UPPER MOUNTING PLATE		2PCS
F	LOWER MOUNTING PLATE		2PCS
G	CROSSBAR		1PC

HARDWARE IDENTIFICATION

1	SHORT BOLT (1/4" x 32mm - BLK)		12PCS
2	MEDIUM BOLT (5/16 x 40mm - BLK)		22PCS
3	LONG BOLT (5/16" x 50mm - BLK)		8PCS
4	BIG LOCK WASHER (5/16" - BLK)		30PCS
5	BIG FLAT WASHER (5/16" x 19 x 1.5mm - BLK)		30PCS
6	ALLEN WRENCH (74 x 30 x 4mm - BLK)		1PC
7	SMALL LOCK WASHER (1 /4" - BLK)		12PCS
8	SMALL FLAT WASHER (1/4" x 19 x 1.5mm - BLK)		12PCS

ITEM: 115391

ASSEMBLY INSTRUCTIONS

STEP 1

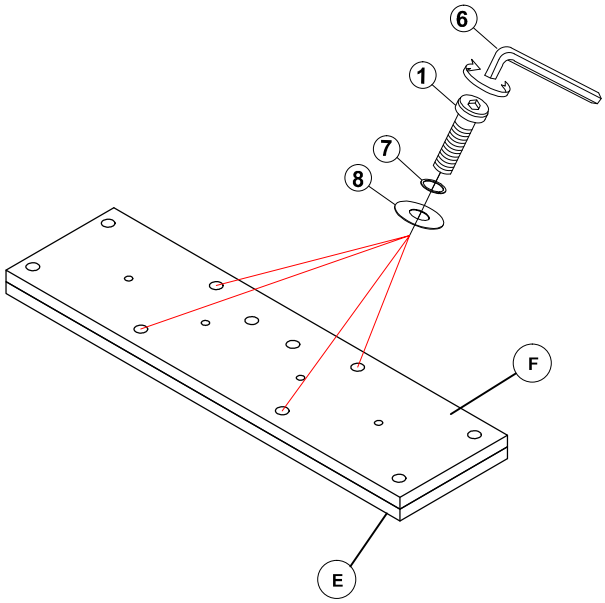

STEP 2

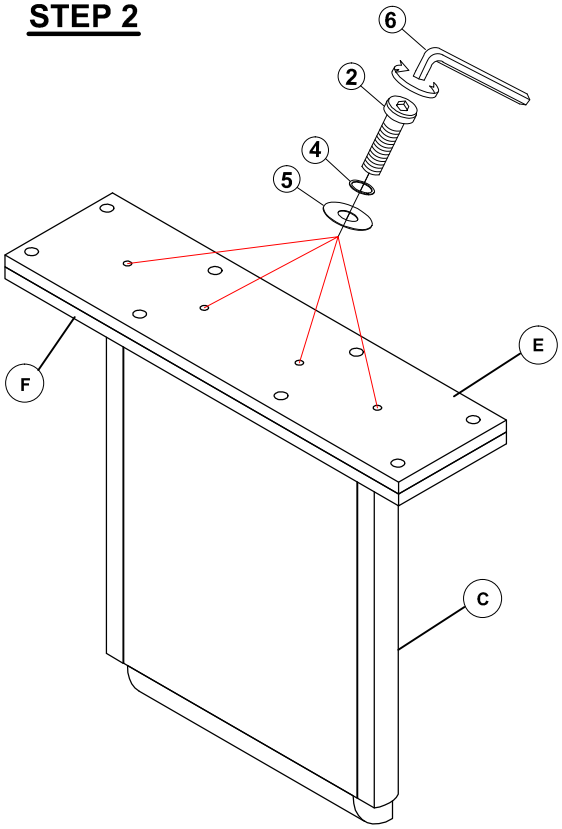

STEP 3

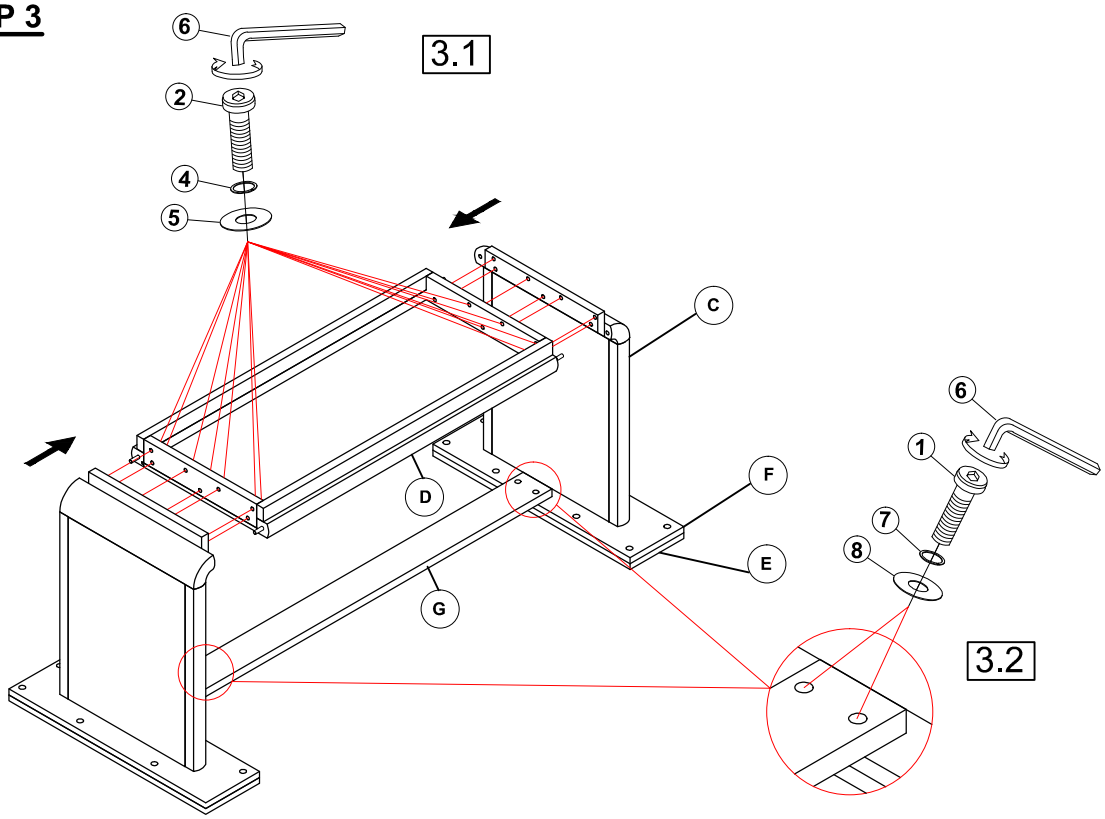

ITEM: **115391**

ASSEMBLY INSTRUCTIONS

STEP 4

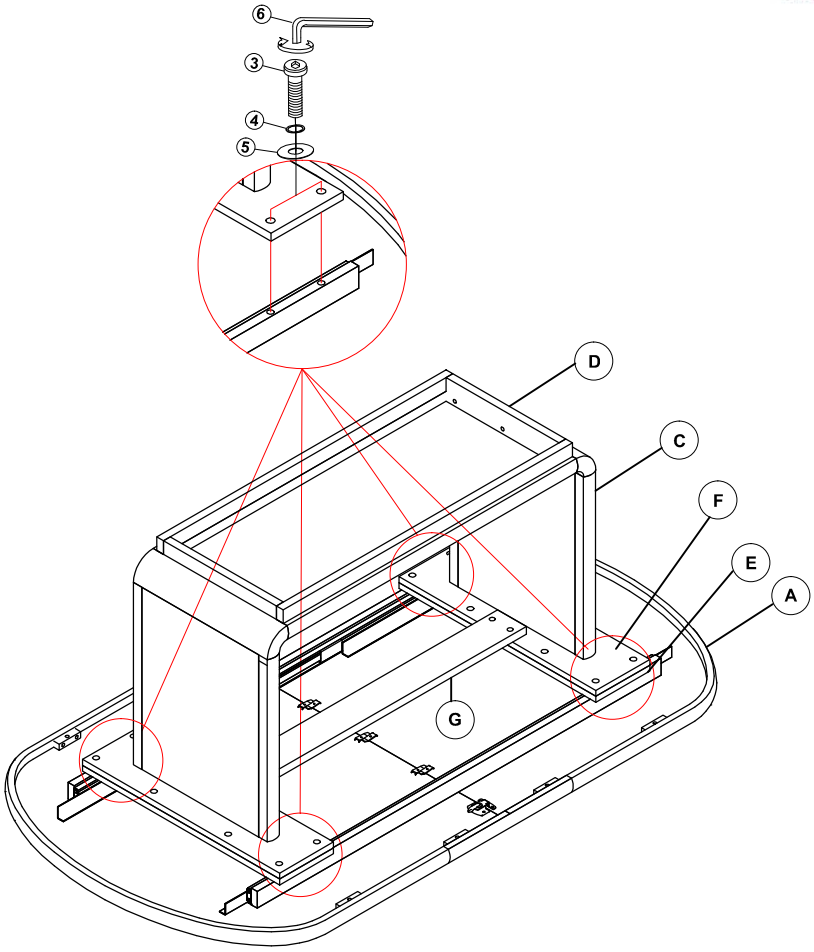

STEP 5

COMPLETE

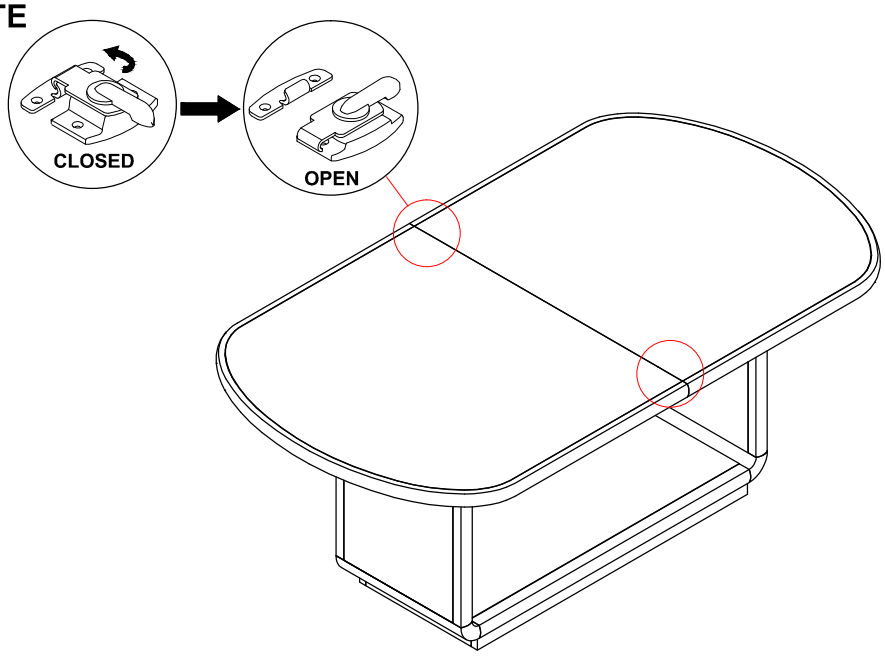

ITEM: 115391

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

STEP 6

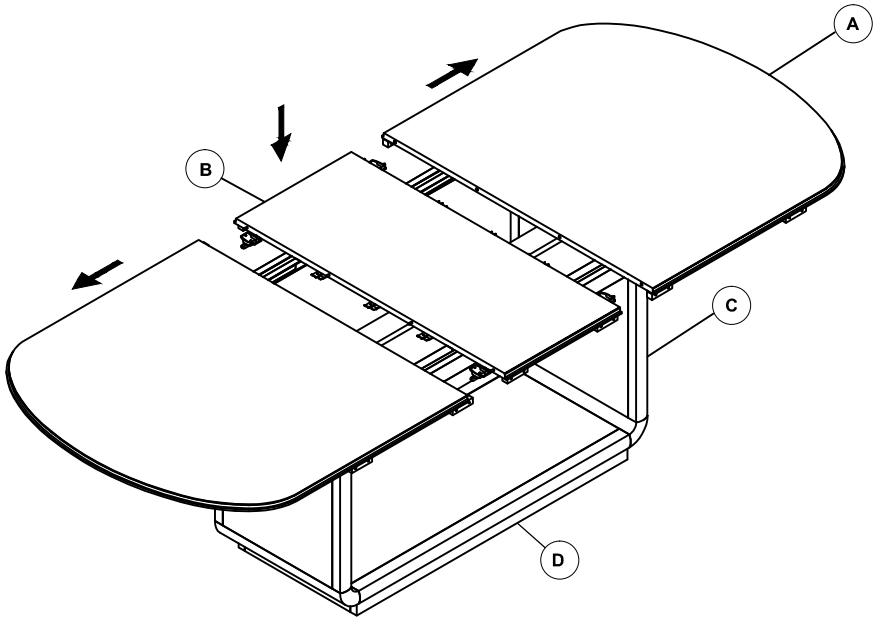

STEP 7

COMPLETE

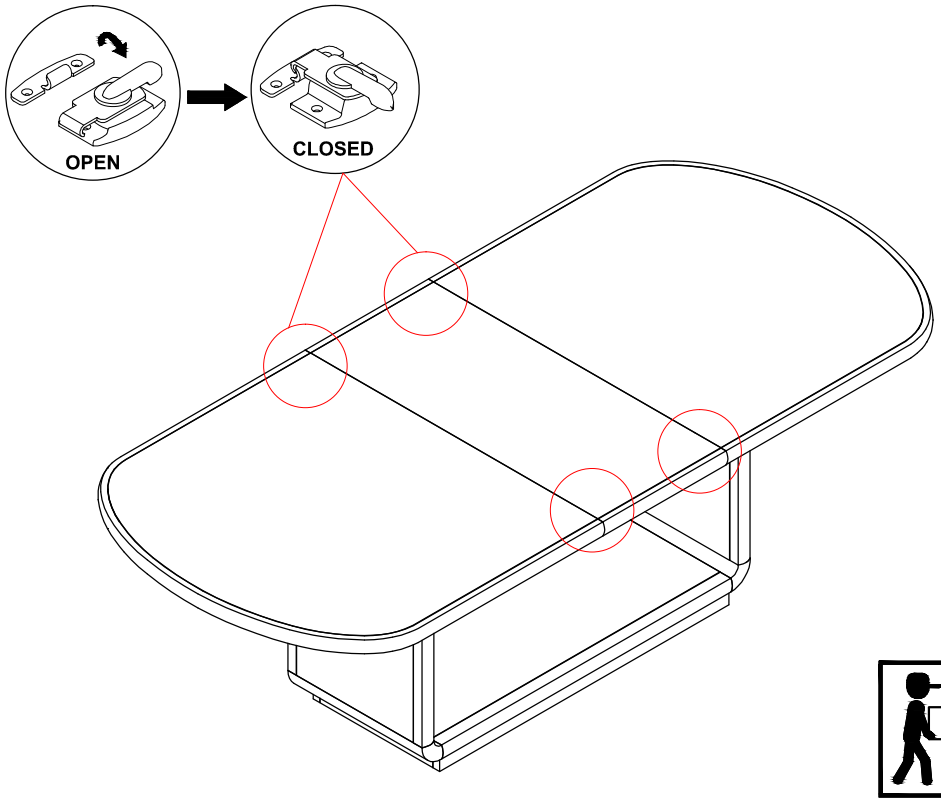

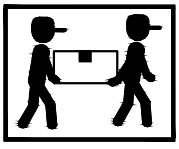

ITEM: **115391**

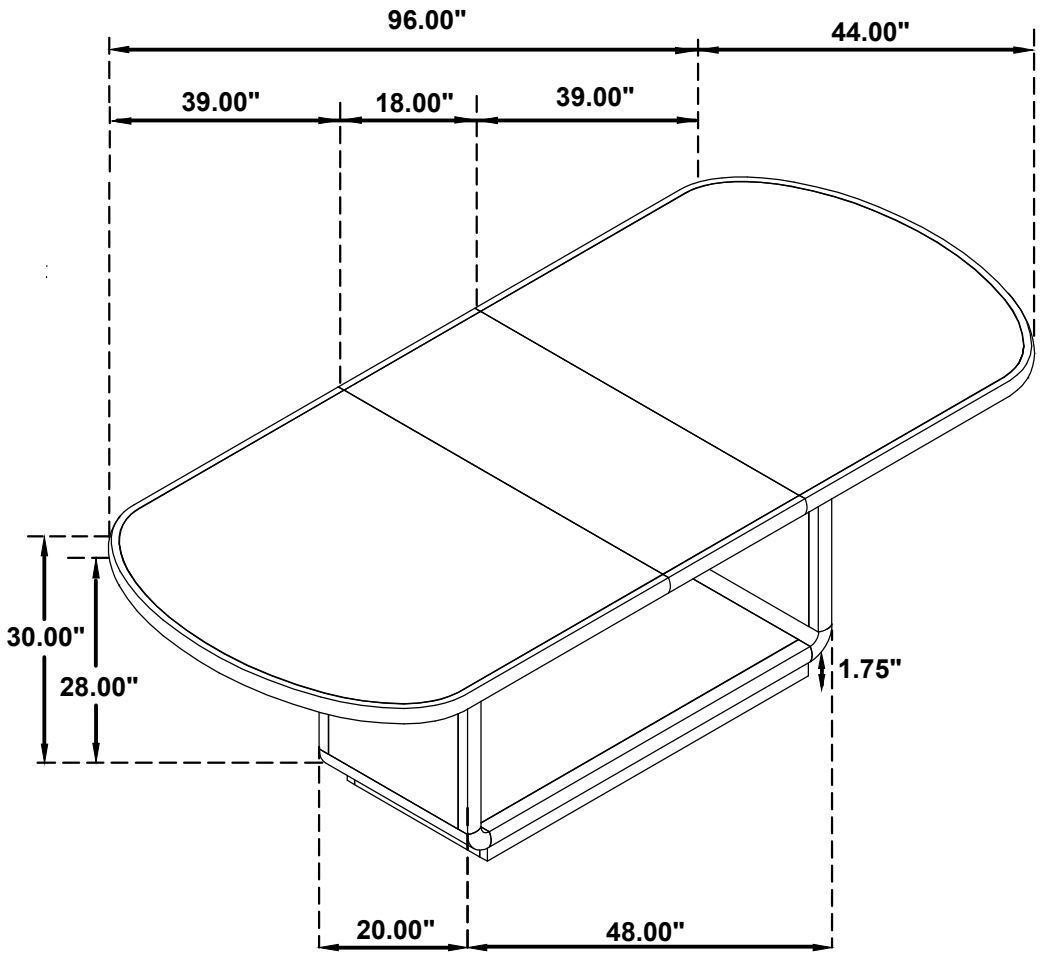

Note: Dimension tolerance ±5%

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

115392

Side Chair

REVISION 0 : 07/30/2025

COASTERFURNITURE.COM

ITEM: **115392**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME	15 MINUTES

PARTS IDENTIFICATION

A	SEAT AND BACK		1PC
B	FRONT LEG		2PCS
C	BACK LEG		2PCS

HARDWARE IDENTIFICATION

1	BOLT (5/16" x 50mm - BLK)		8PCS
2	LOCK WASHER (5/16" - BLK)		8PCS
3	FLAT WASHER (5/16" x 19 x 1.5mm - BLK)		8PCS
4	ALLEN WRENCH (74 x 30 x 4mm - BLK)		1PC

NOTE :

Quantities shown are for one chair.

ITEM: **115392**

ASSEMBLY INSTRUCTIONS

STEP 1

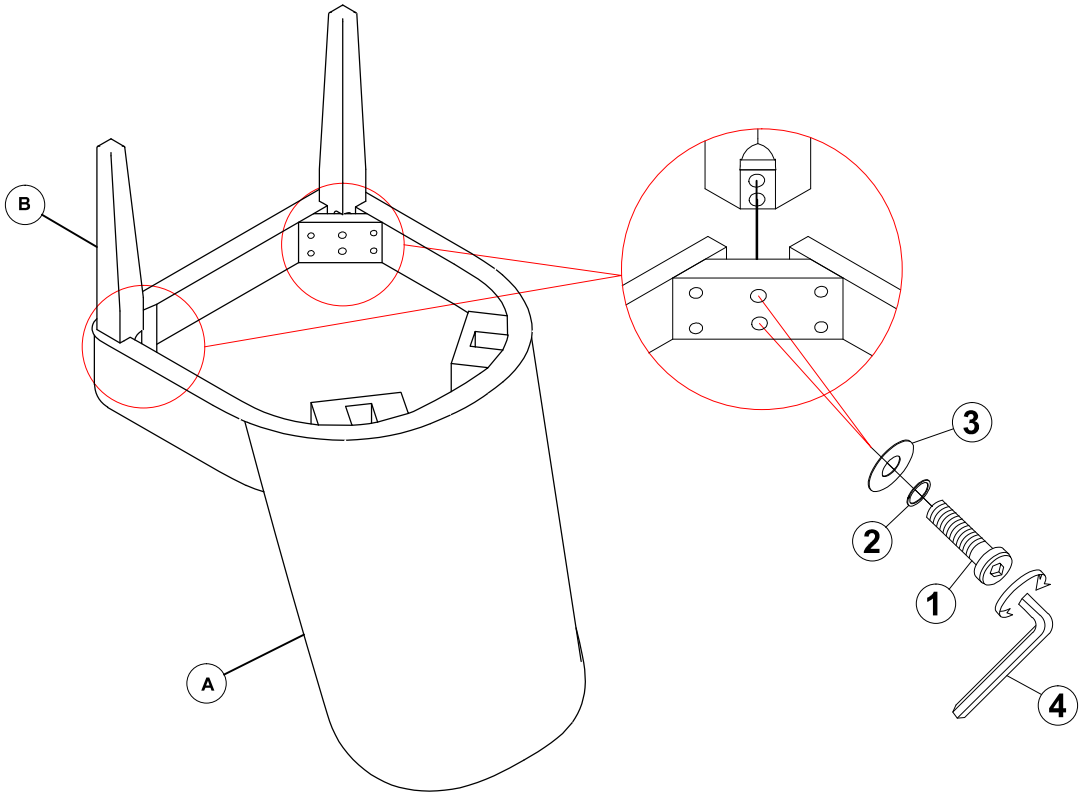

STEP 2

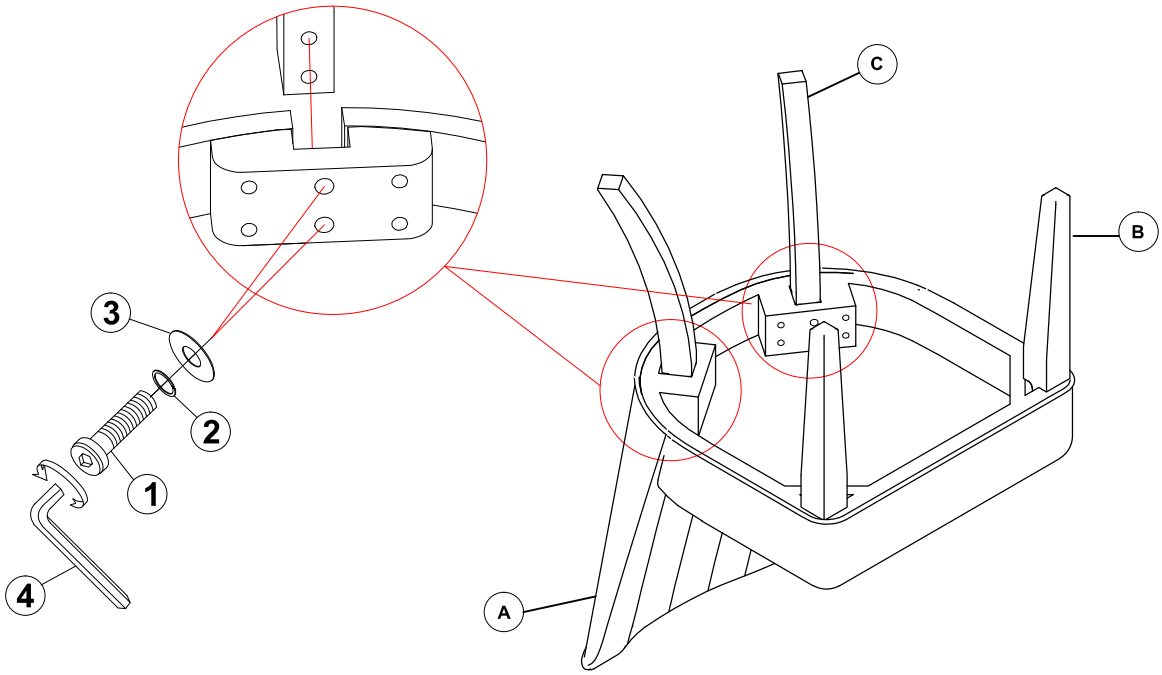

ITEM: **115392**

ASSEMBLY INSTRUCTIONS

STEP 3

COMPLETE

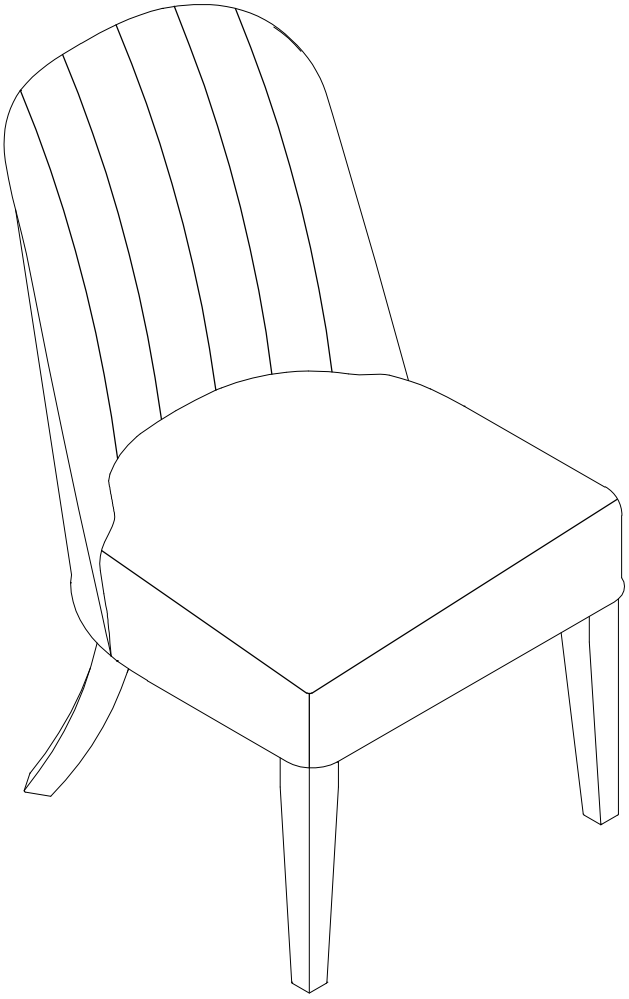

ITEM: **115392**

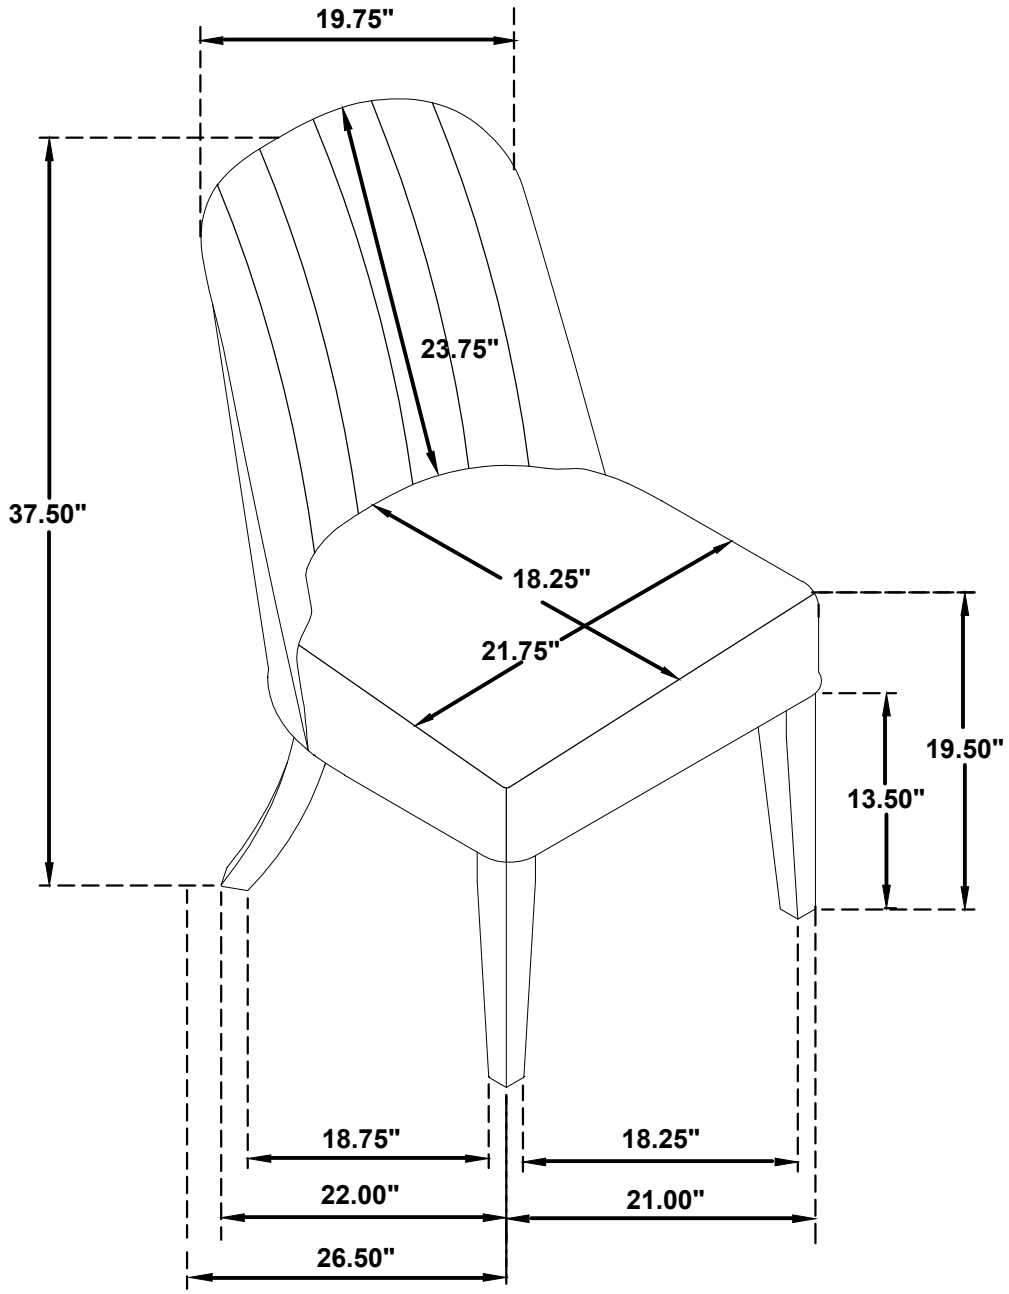

Note: Dimension tolerance ±5%

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

115393

Side Chair

REVISION 0 : 07/30/2025

COASTERFURNITURE.COM

ITEM: **115393**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME	15 MINUTES

PARTS IDENTIFICATION

A	SEAT AND BACK	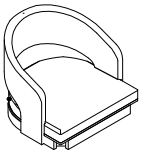	1PC
B	FRONT LEG		2PCS
C	BACK LEG		2PCS

HARDWARE IDENTIFICATION

1	BOLT (5/16" x 50mm - BLK)		8PCS
2	LOCK WASHER (5/16" - BLK)		8PCS
3	FLAT WASHER (5/16" x 19 x 1.5mm - BLK)		8PCS
4	ALLEN WRENCH (74 x 30 x 4mm - BLK)		1PC

NOTE :

Quantities shown are for one chair.

ITEM: **115393**

ASSEMBLY INSTRUCTIONS

STEP 1

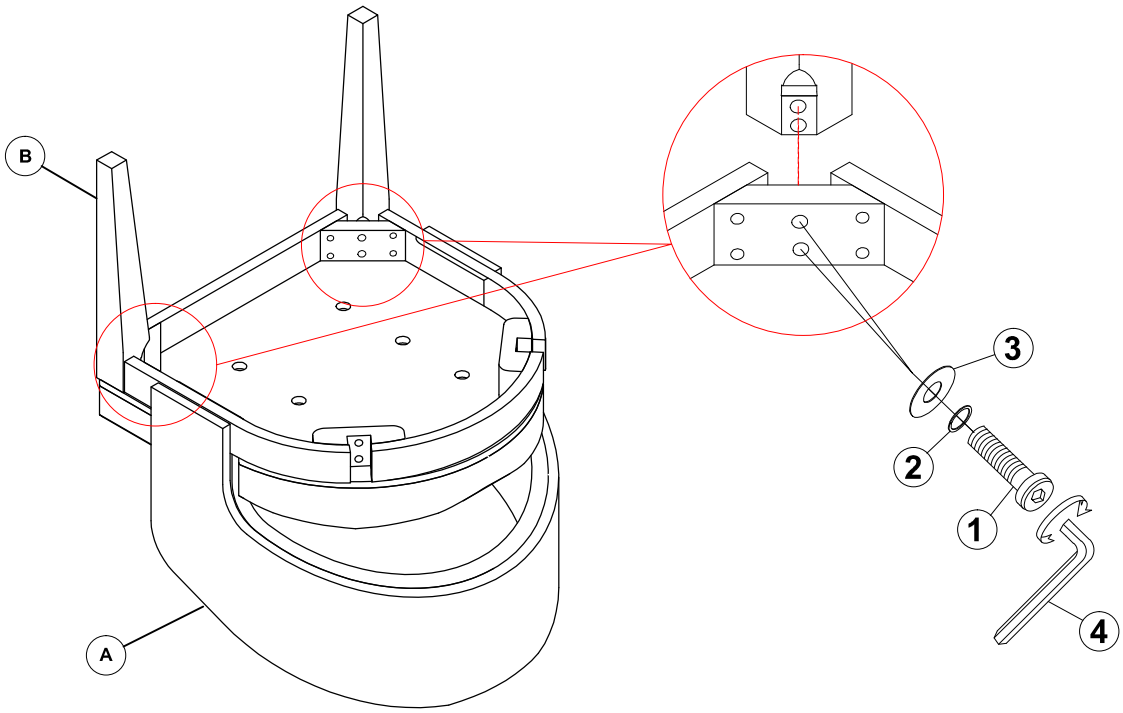

STEP 2

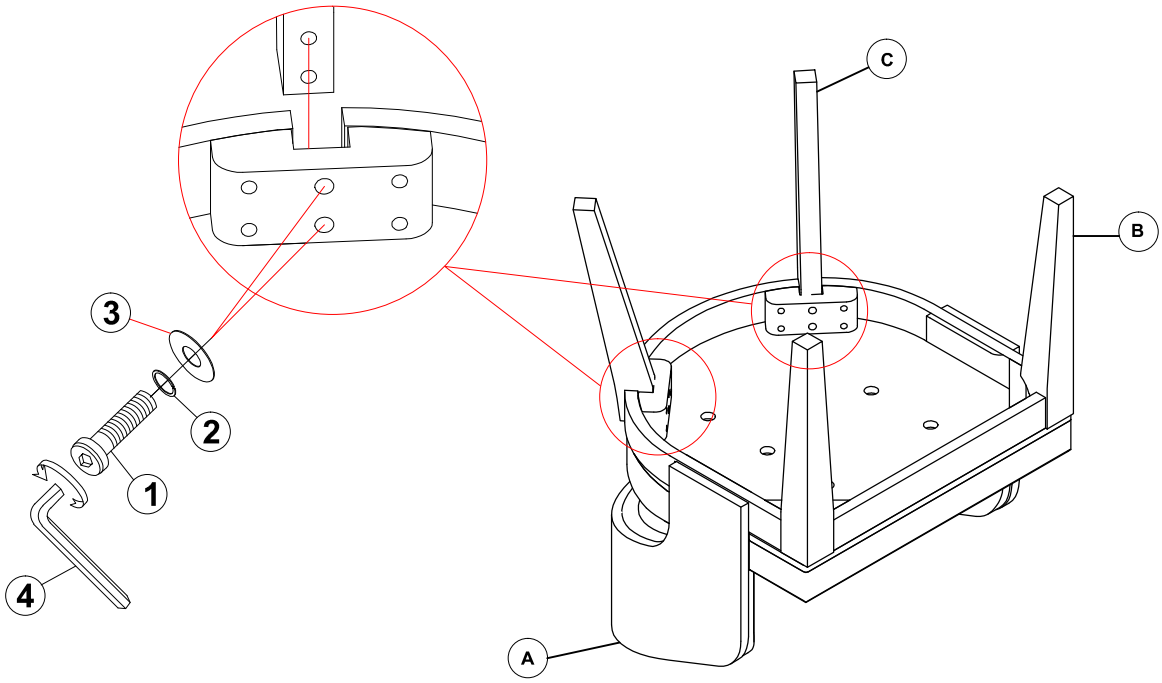

ITEM: **115393**

ASSEMBLY INSTRUCTIONS

STEP 3

COMPLETE

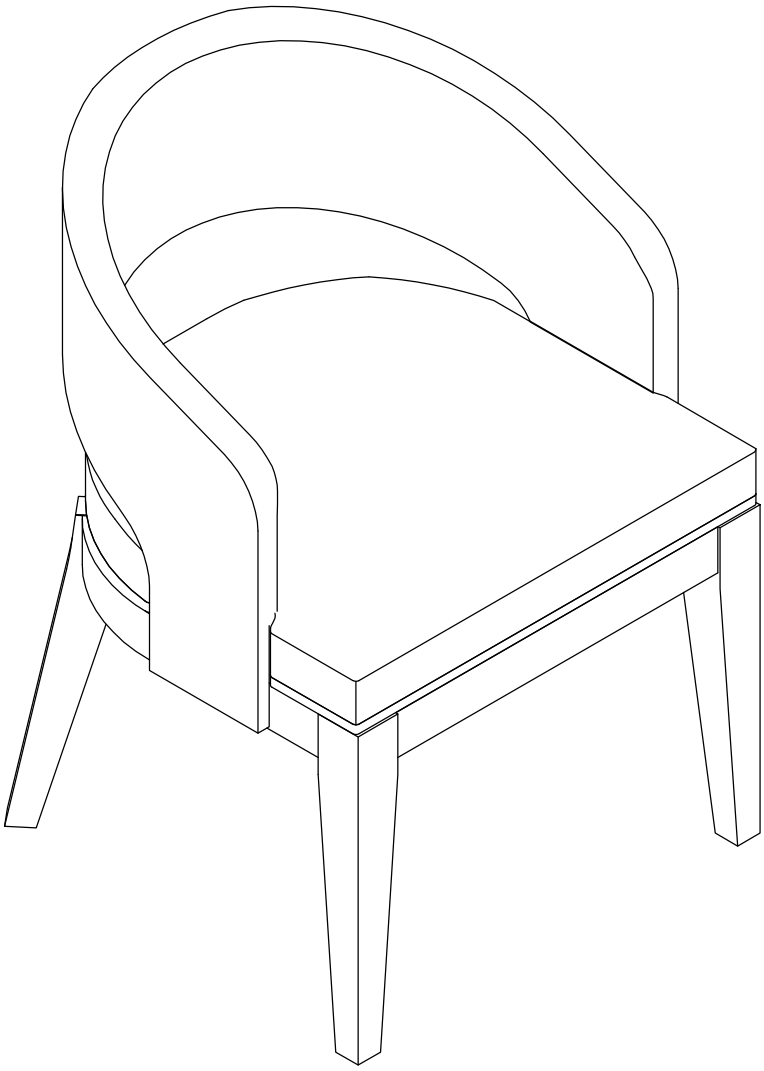

ITEM: **115393**

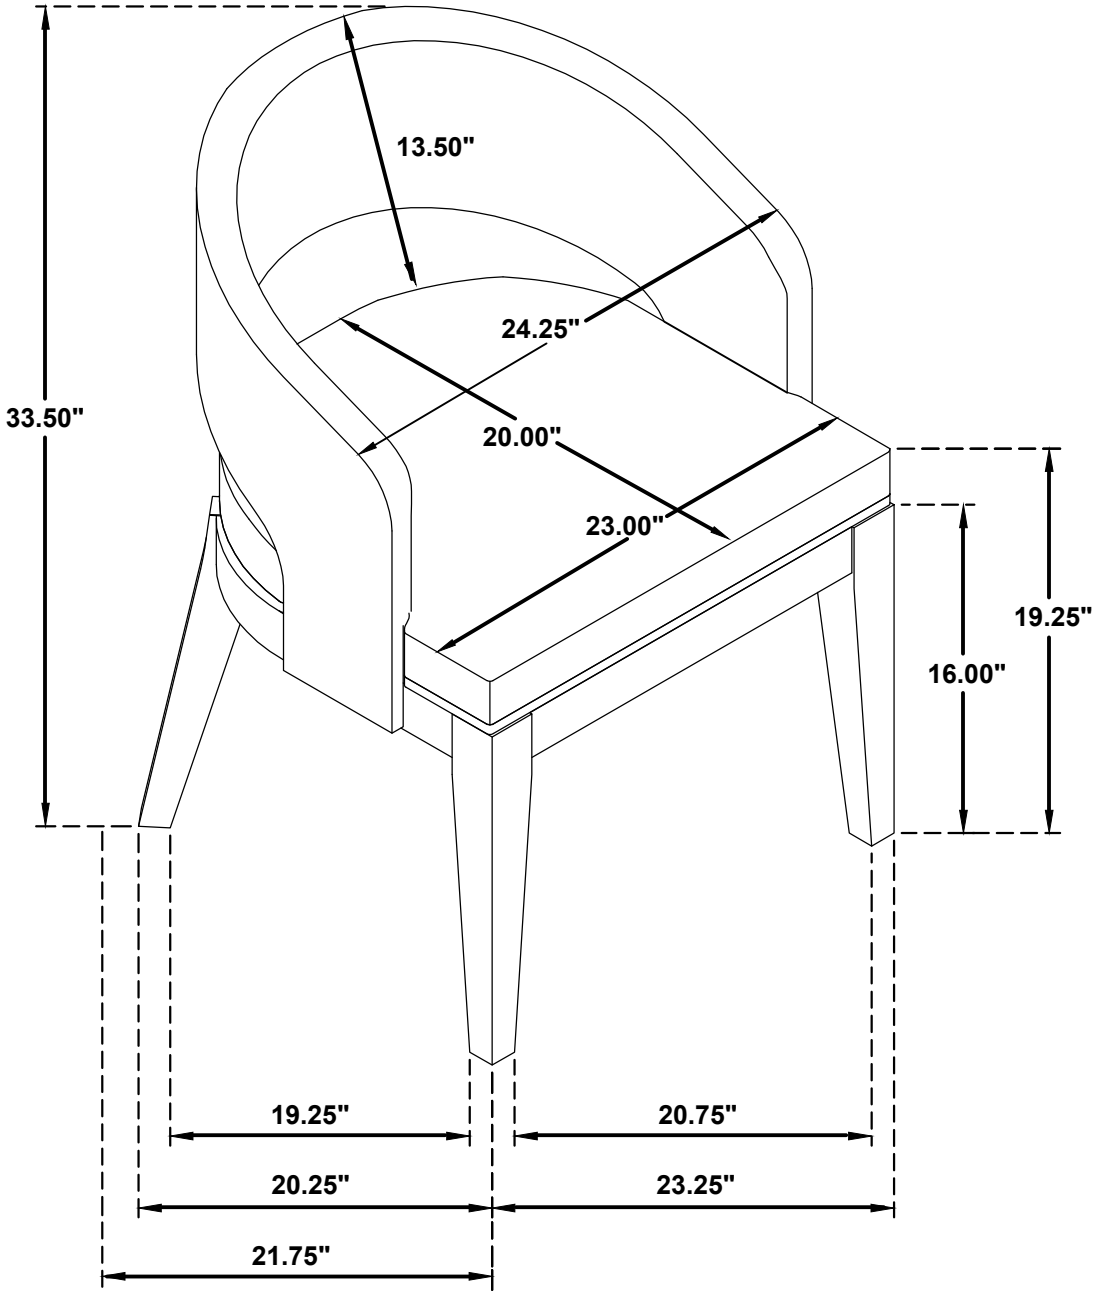

Note: Dimension tolerance ±5%