COASTER®
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

706357
END TABLE

ITEM:**706357**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

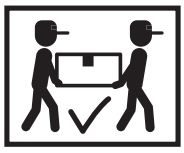

ASSEMBLY TIME | 30 MINUTES

PARTS IDENTIFICATION

A	TOP PANEL	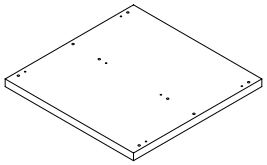	1 PC	C	MIDDLE CROSS PANEL		1 PC
B	SIDE PANEL	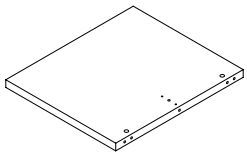	2 PCS				

HARDWARE IDENTIFICATION

Z

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	WOODEN DOWEL Ø8x30mm		10 PCS	4	PLASTIC FEET Ø15m		4 PCS
2	CAM BOLT Ø7x35.5mm SR		10 PCS	5	STICKER Ø20mm		2 PC
3	CAM LOCK Ø15x12mm SR		10 PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:**706357**

COASTER FINE FURNITURE

STEP 1



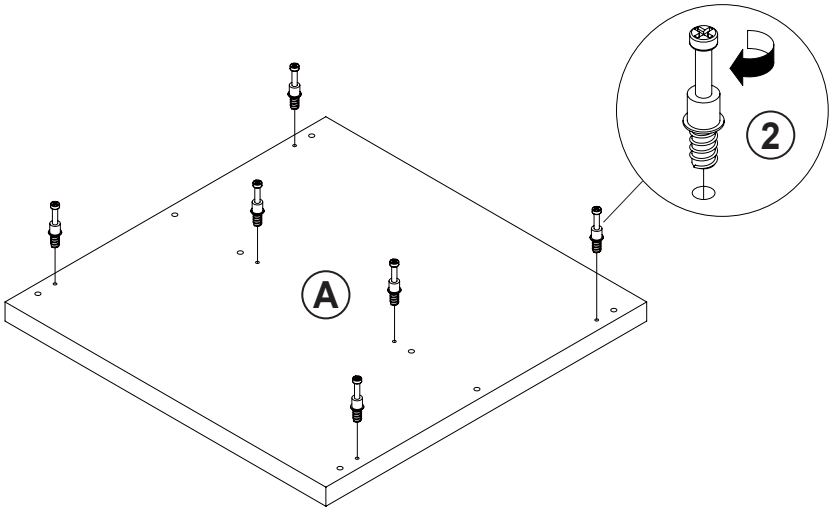

STEP 2







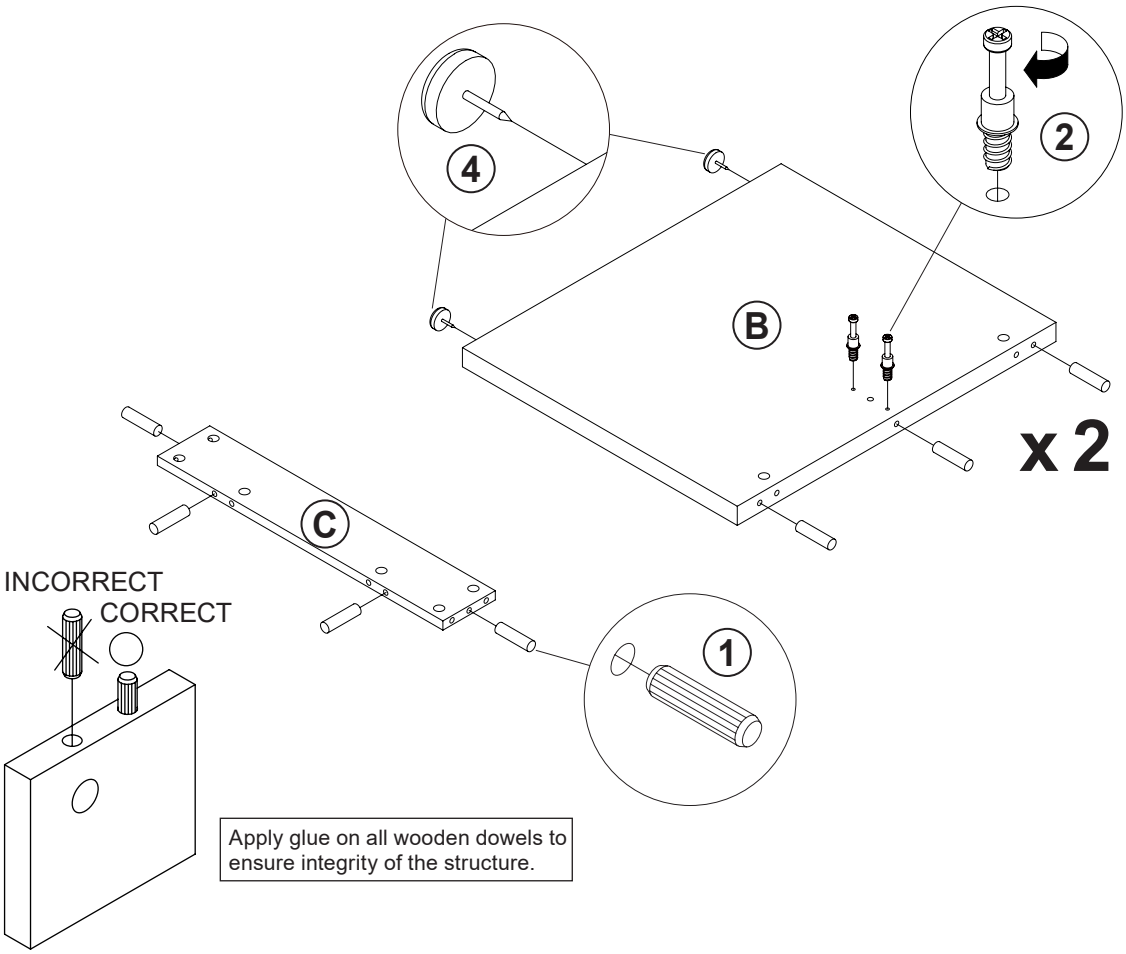

Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM:**706357**

COASTER FINE FURNITURE

STEP 3

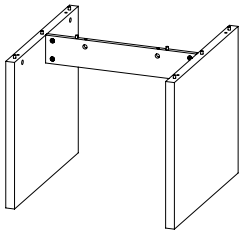

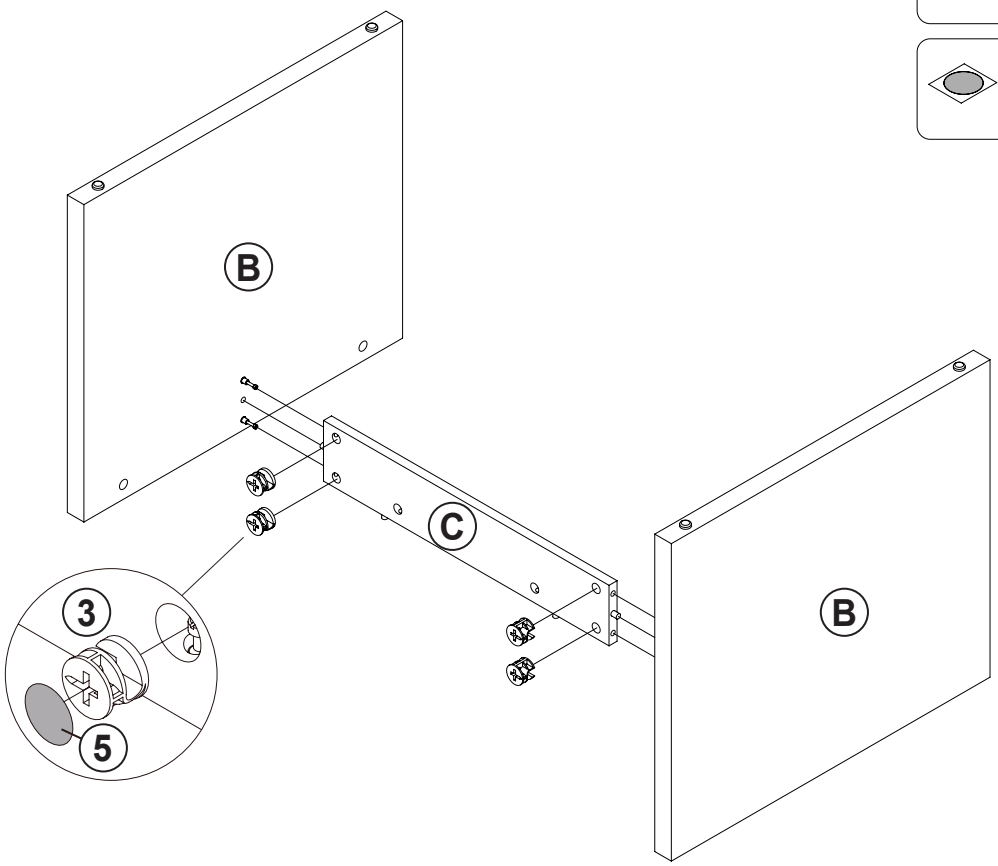

3 x 4

5 x 4

STEP 4

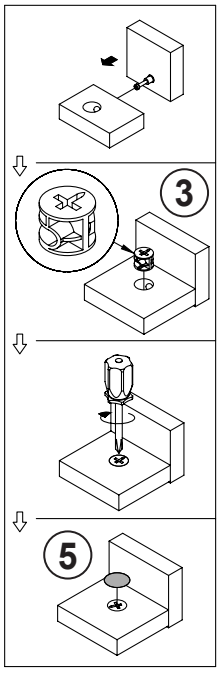

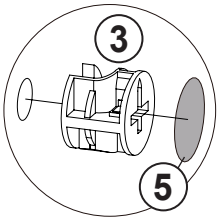

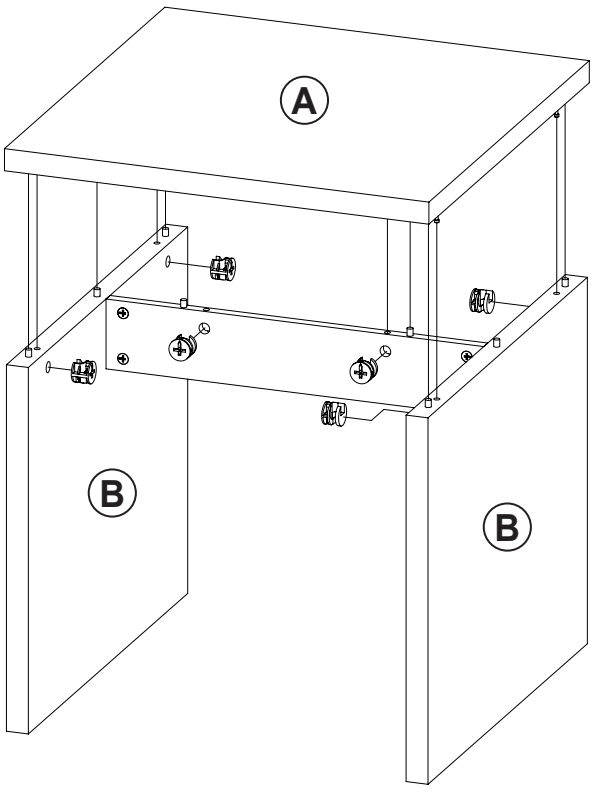

3 x 6

5 x 6

ITEM:**706357**

STEP 5

COMPLETE

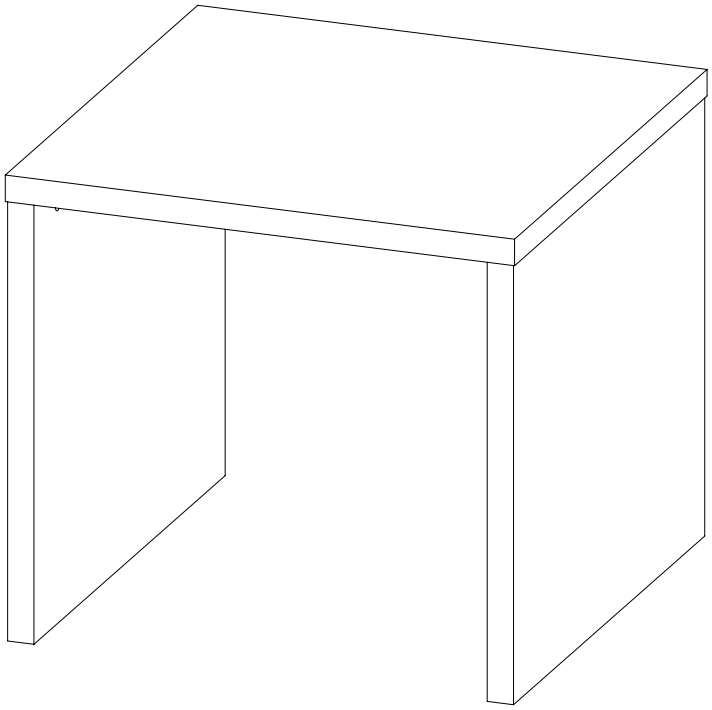

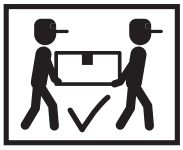

ITEM:**706357**

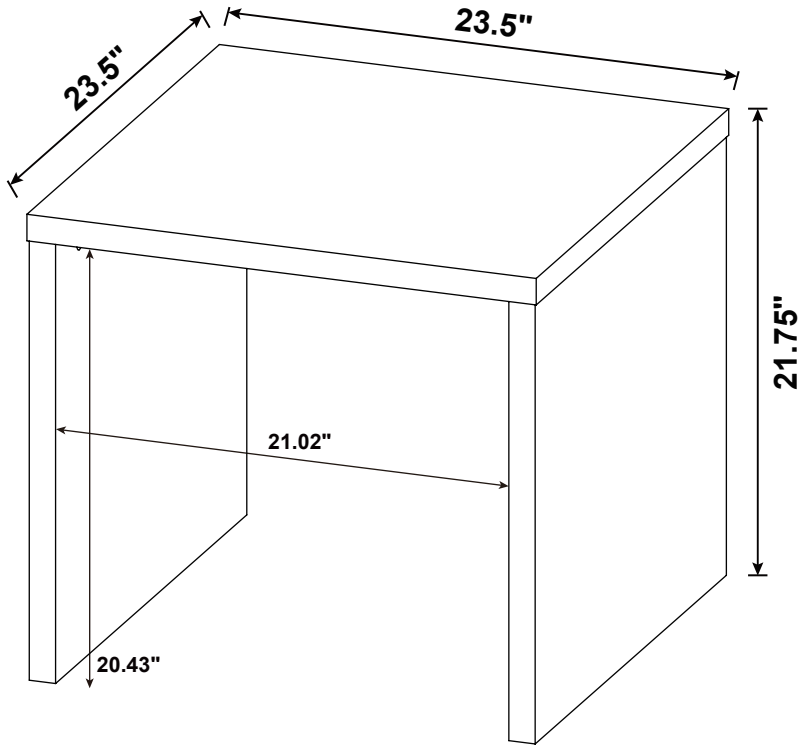

Note : Dimension tolerance ±5%

COASTER®
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

706358
LIFT TOP COFFEE TABLE

ITEM:**706358**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME | 60 MINUTES

PARTS IDENTIFICATION

A	SIDE PANEL	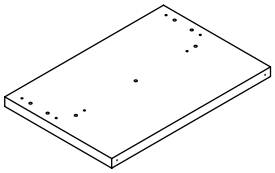	2 PCS	E	CROSS PANEL	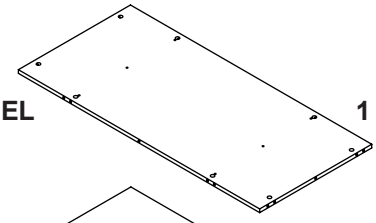	1 PC
B	LEFT DIVIDER PANEL	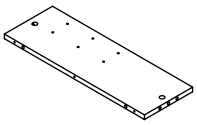	1 PC	F	TOP PANEL	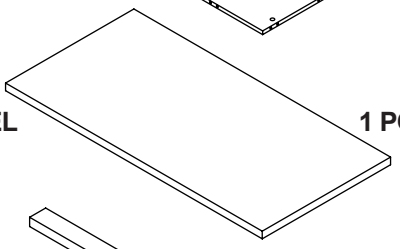	1 PC
C	RIGHT DIVIDER PANEL	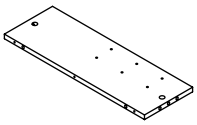	1 PC	G	CROSSBAR	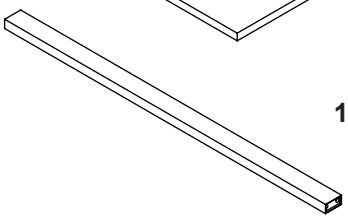	1 PC
D	FRONT TOP BAR	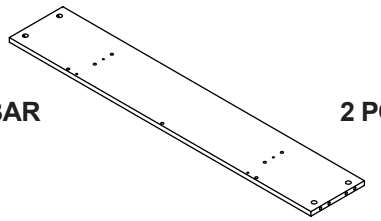	2 PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:**706358**

COASTER FINE FURNITURE

HARDWARE IDENTIFICATION

Z

NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g	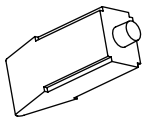	1 PC
2	WOODEN DOWEL Ø8 x 30mm		32 PCS
3	CAM BOLT Ø7 x 35.5mm SR		20 PCS
4	CAM LOCK Ø15 x 12mm SR		20 PCS
5	LONG SCREW Ø 4.5x42mm SR		6 PCS
6	PLASTIC FEET Ø15mm		4 PCS
7	LIFTER BLK	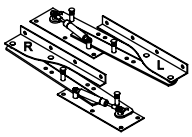	1 SET

NO	DESCRIPTION	FIGURE	Q'TY
8	SPRING BLK		2 PCS
9	BOLT Ø5.8x16mm BLK		12 PCS
10	BOLT M6x28mm BLK		4 PCS
11	BOLT M6x19mm BLK		4 PCS
12	ALLEN WRENCH 4mm SR		1 PC
13	STICKER Ø20mm	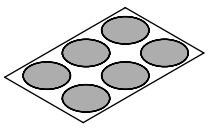	4 PCS

Z7 not included in blister packaging.

NOTE:
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:**706358**

STEP 1

COASTER FINE FURNITURE





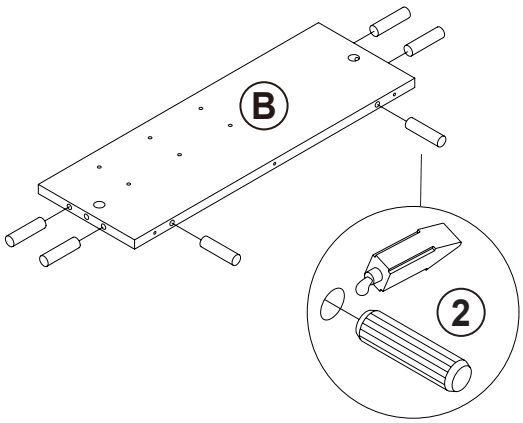

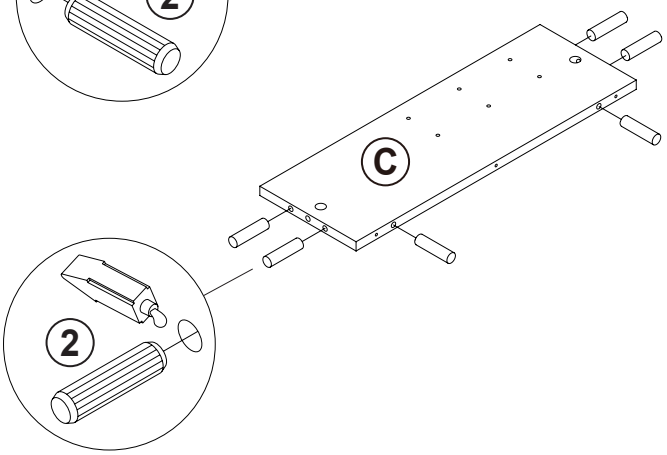

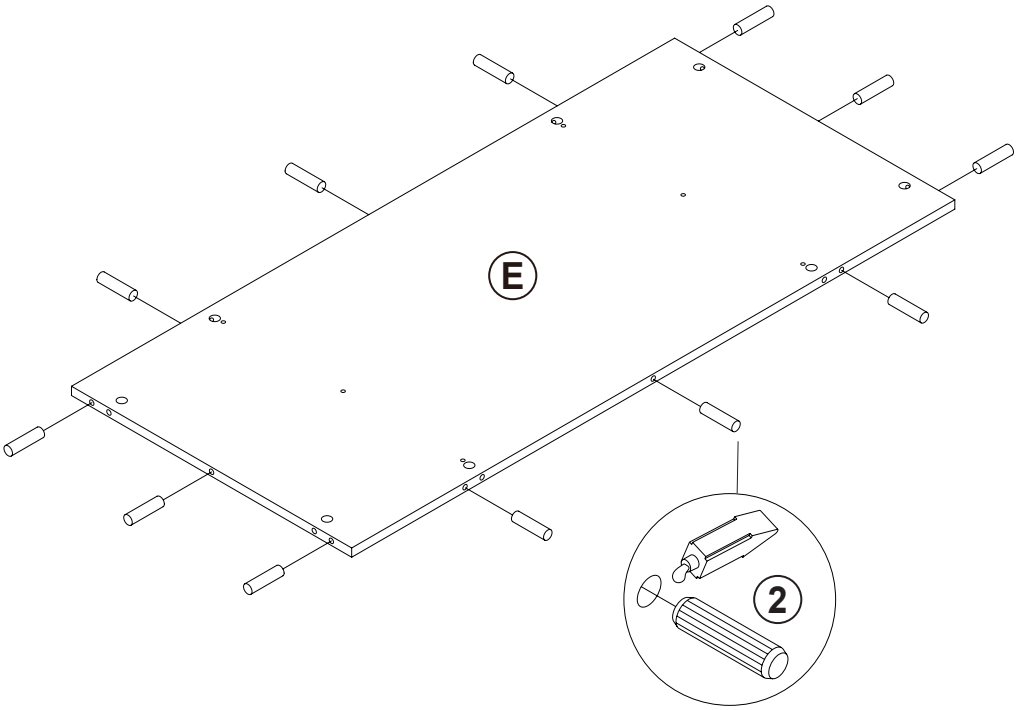

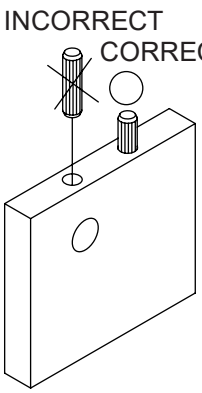

Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM:**706358**

COASTER FINE FURNITURE

STEP 2

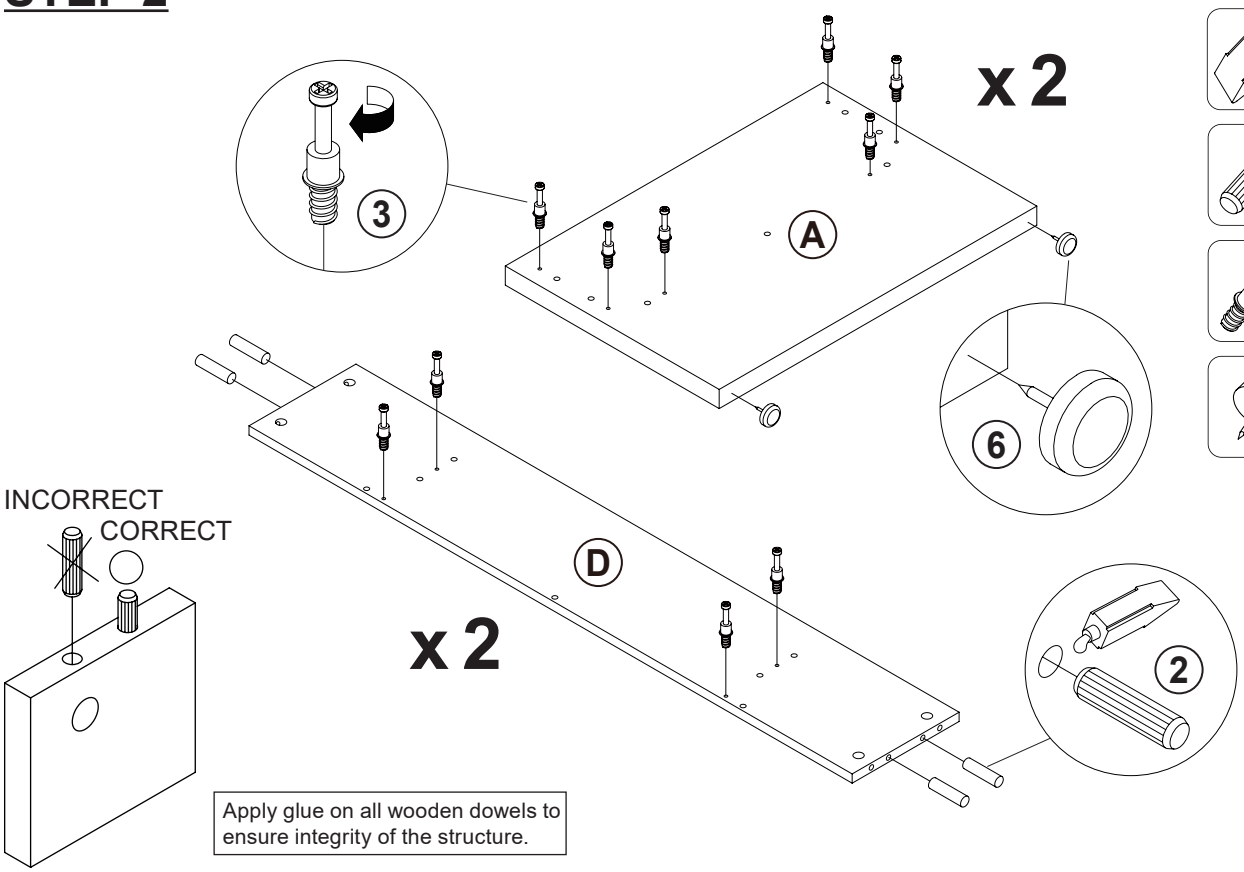

1

2 x 8

3 x 20

6 x 4

Apply glue on all wooden dowels to ensure integrity of the structure.

STEP 3

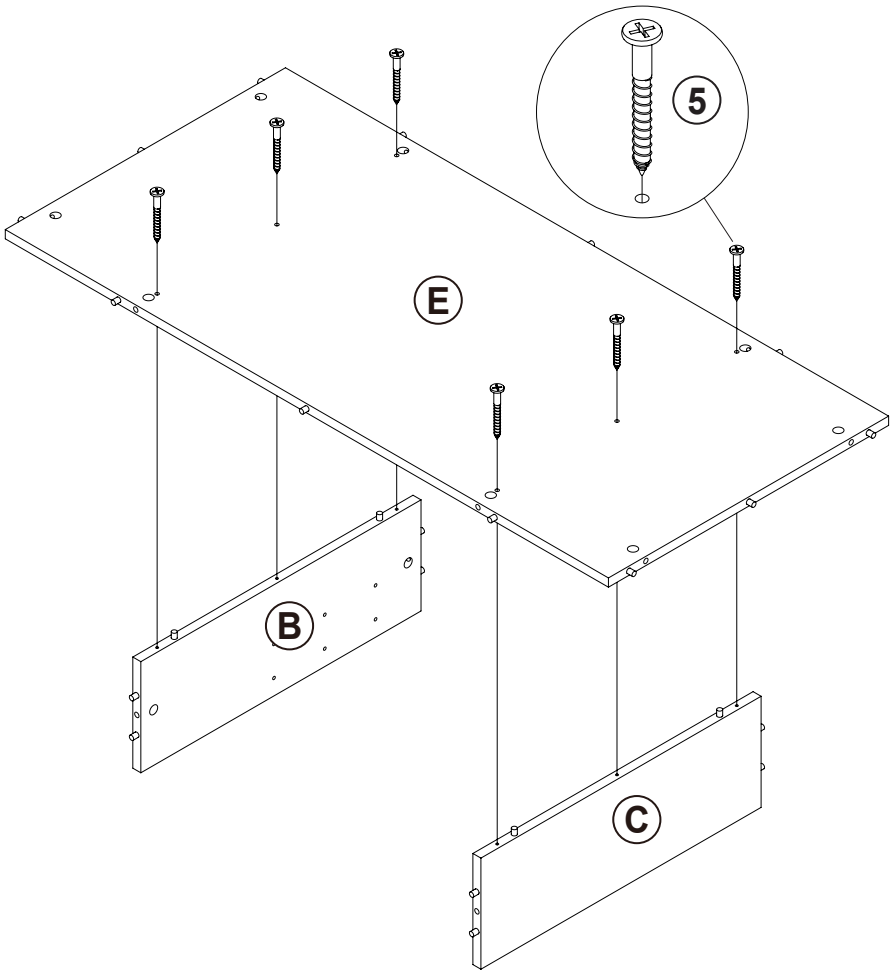

5 x 6

ITEM:**706358**

COASTER FINE FURNITURE

STEP 4





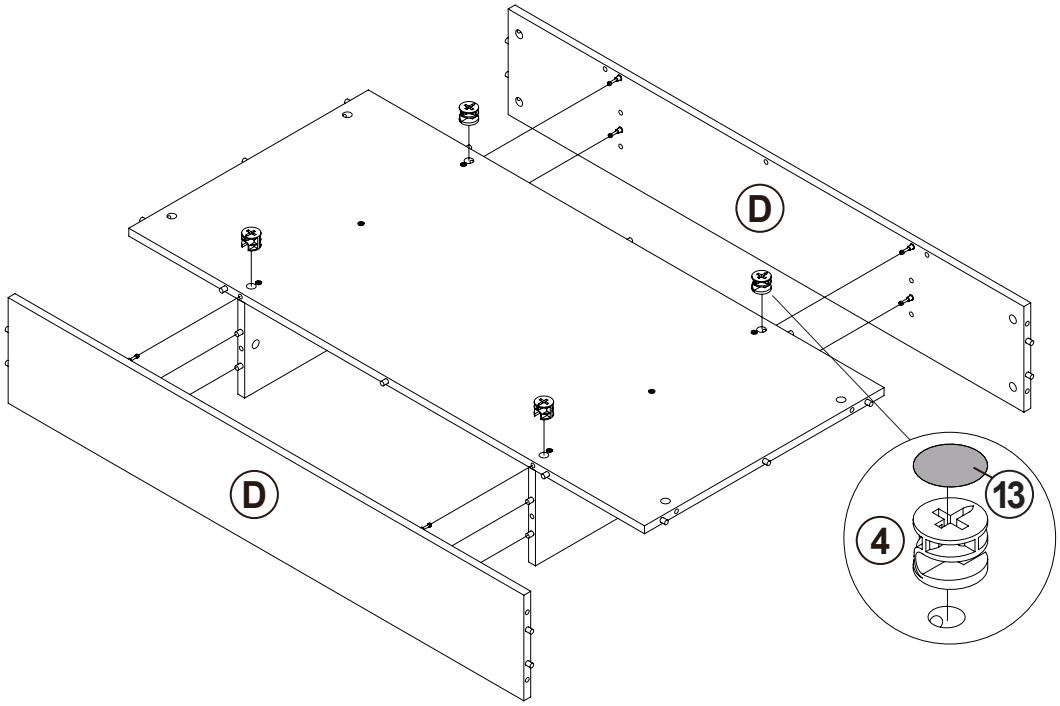

STEP 5





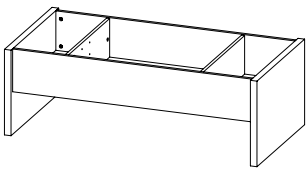

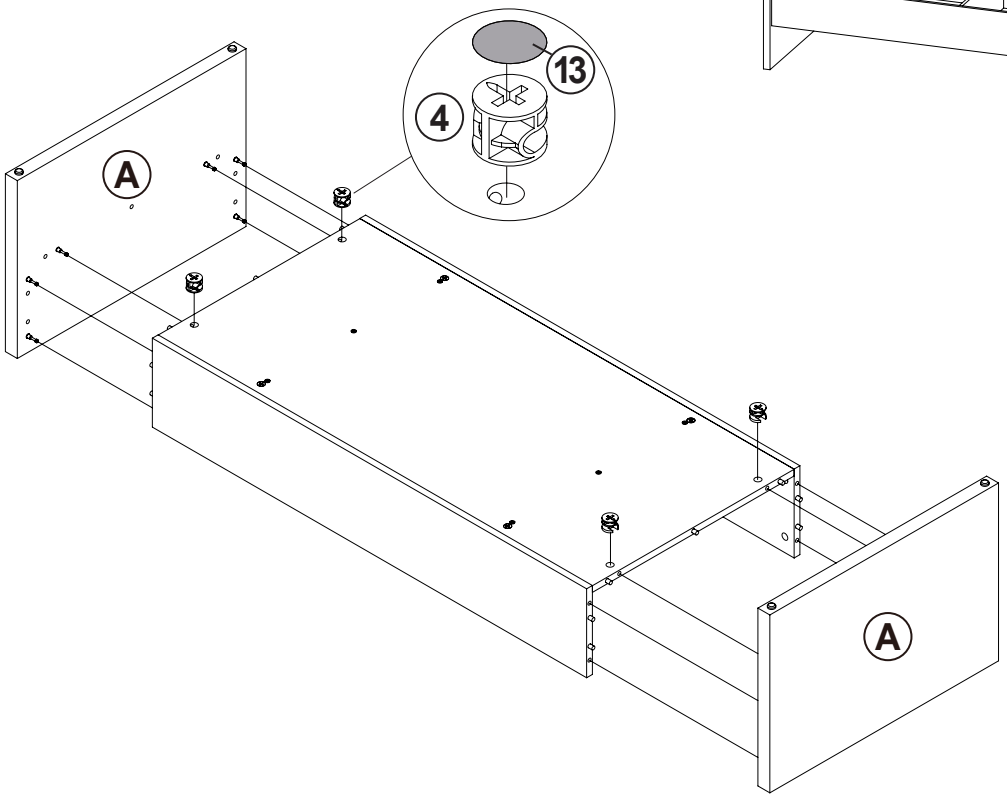

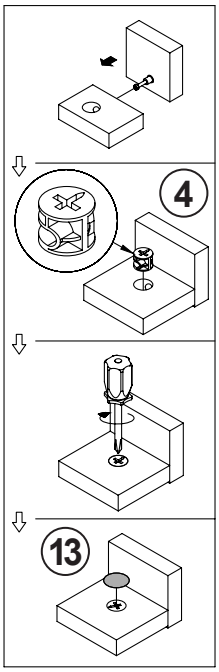

ITEM:**706358**

COASTER FINE FURNITURE

STEP 6

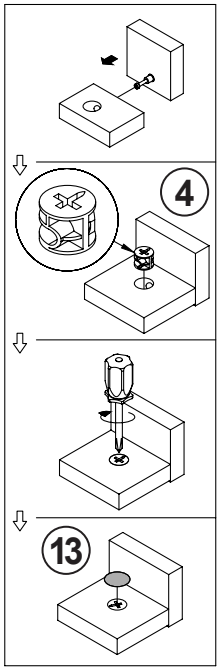

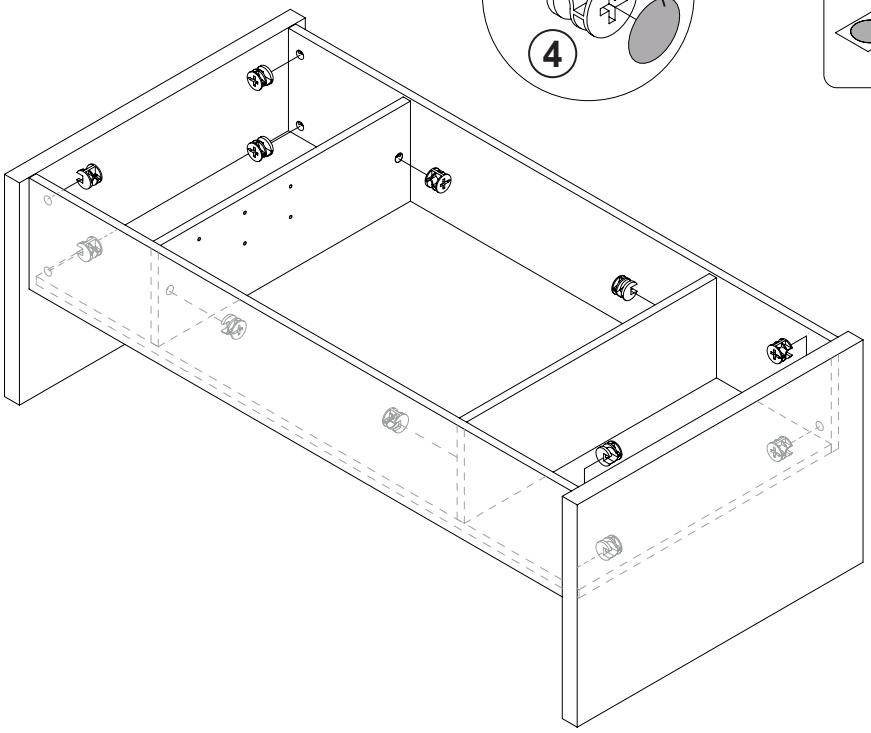

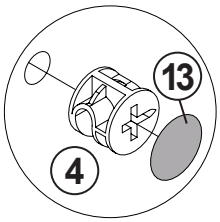





STEP 7

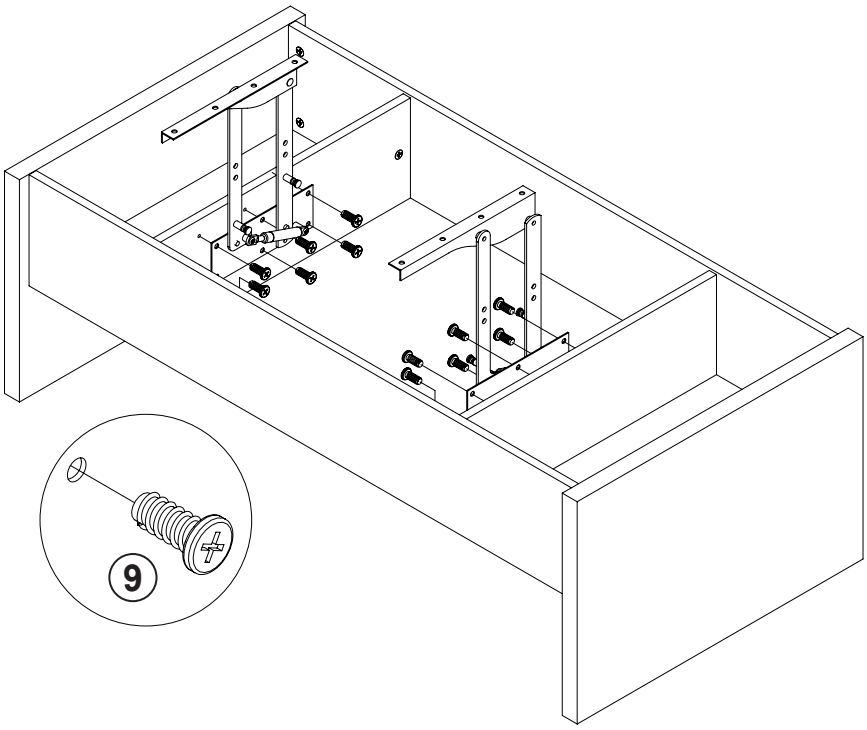





ITEM:**706358**

STEP 8



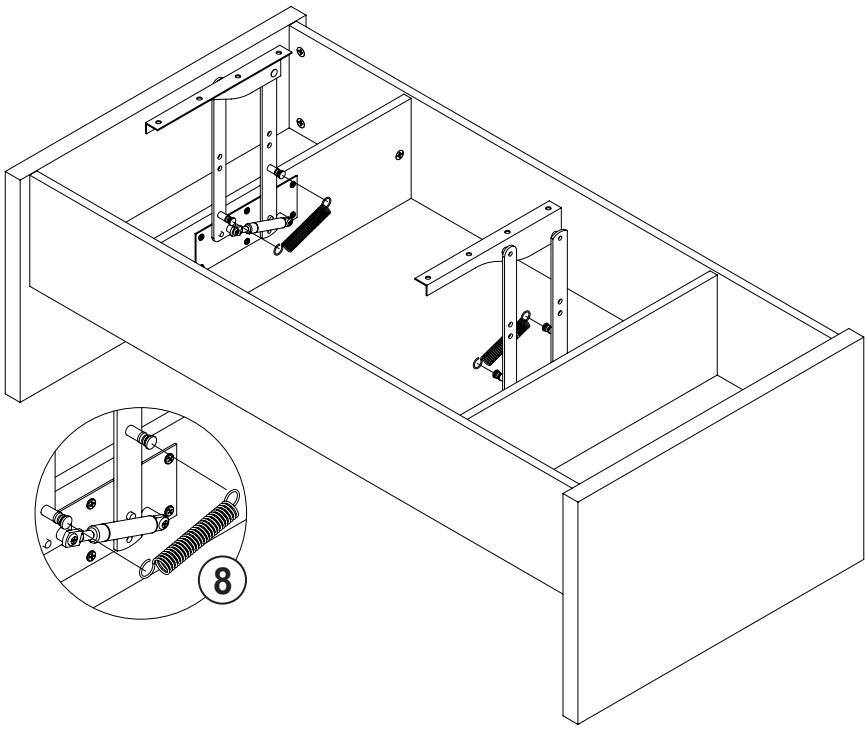

STEP 9





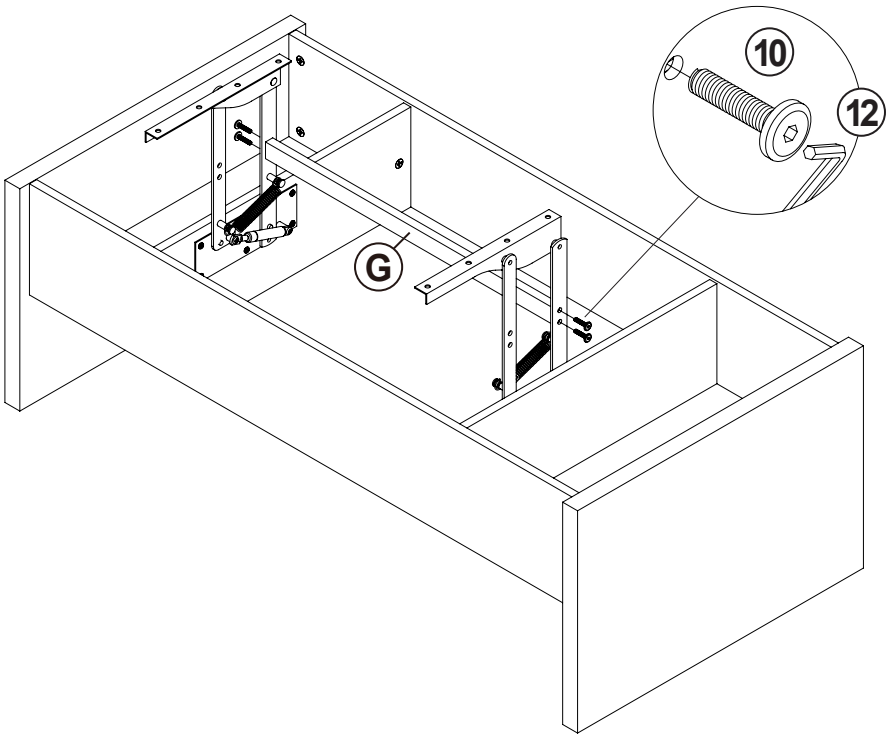

ITEM:**706358**

COASTER FINE FURNITURE

STEP 10

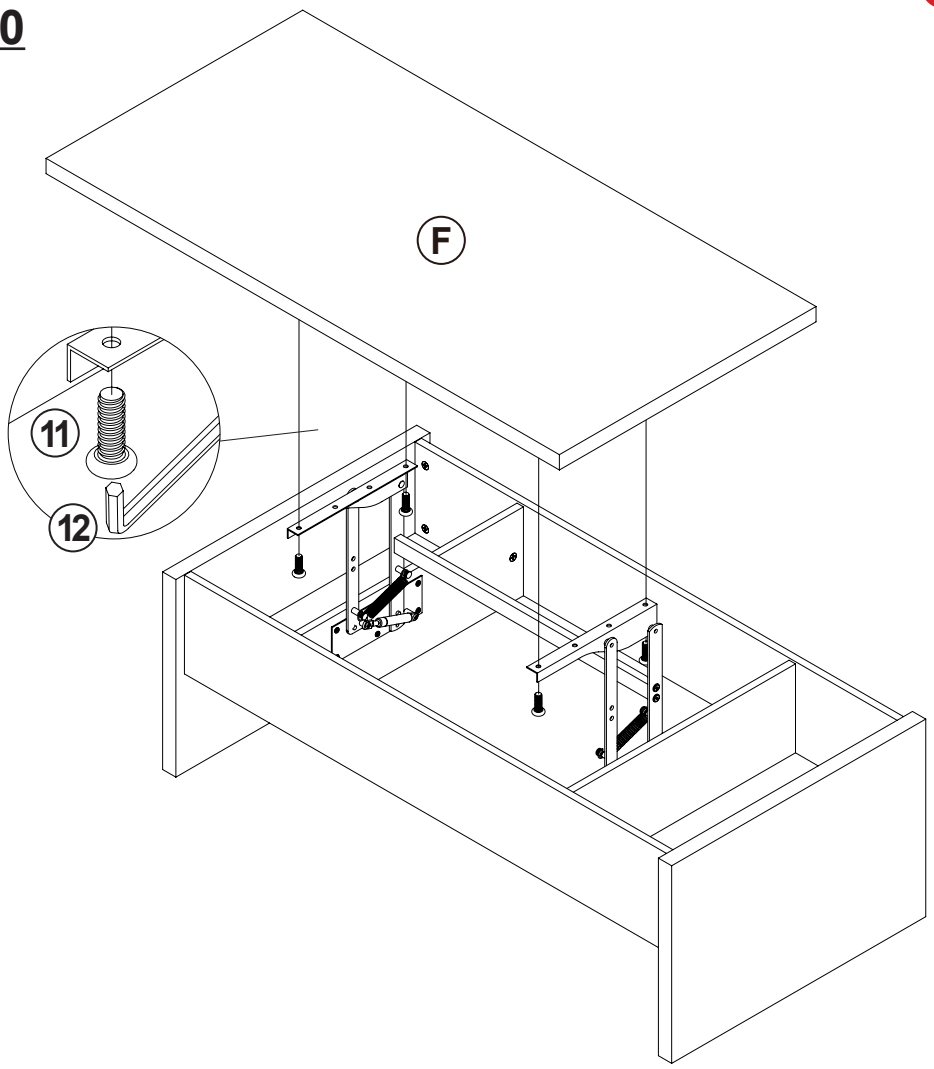





STEP 11

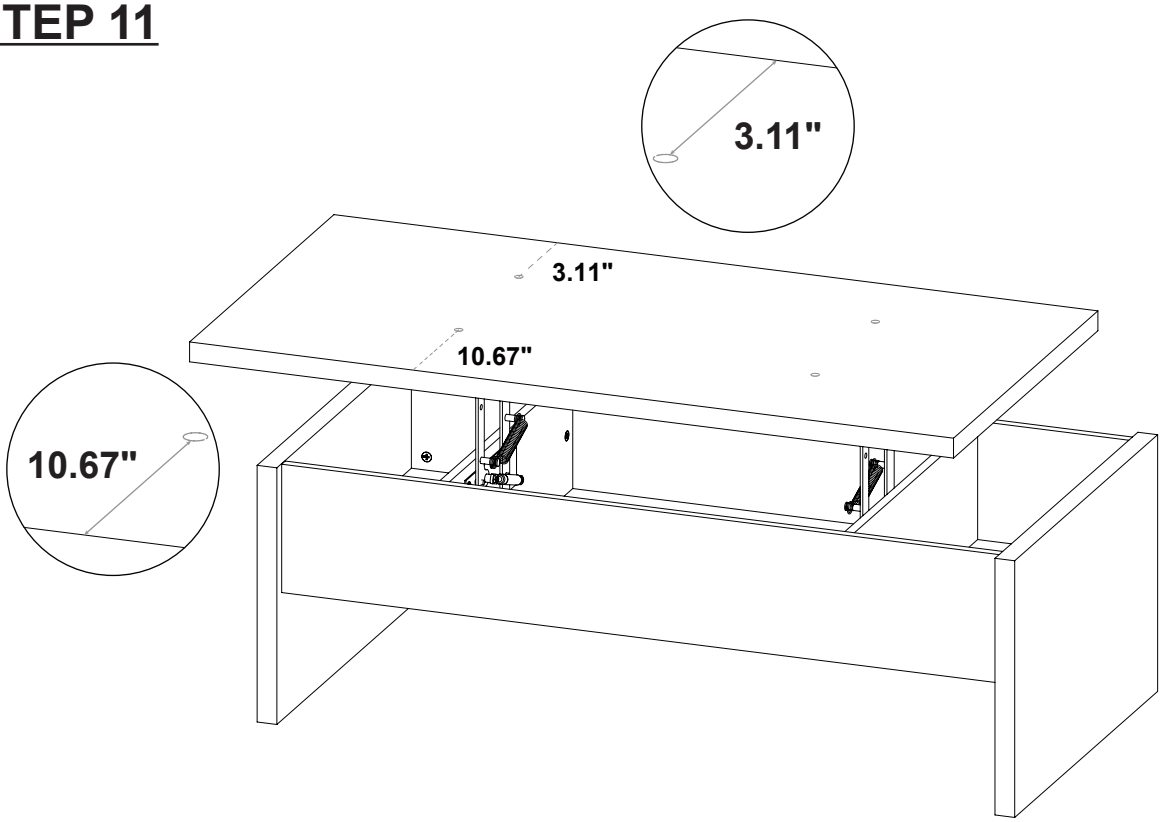

ITEM:**706358**

STEP 12

COMPLETE

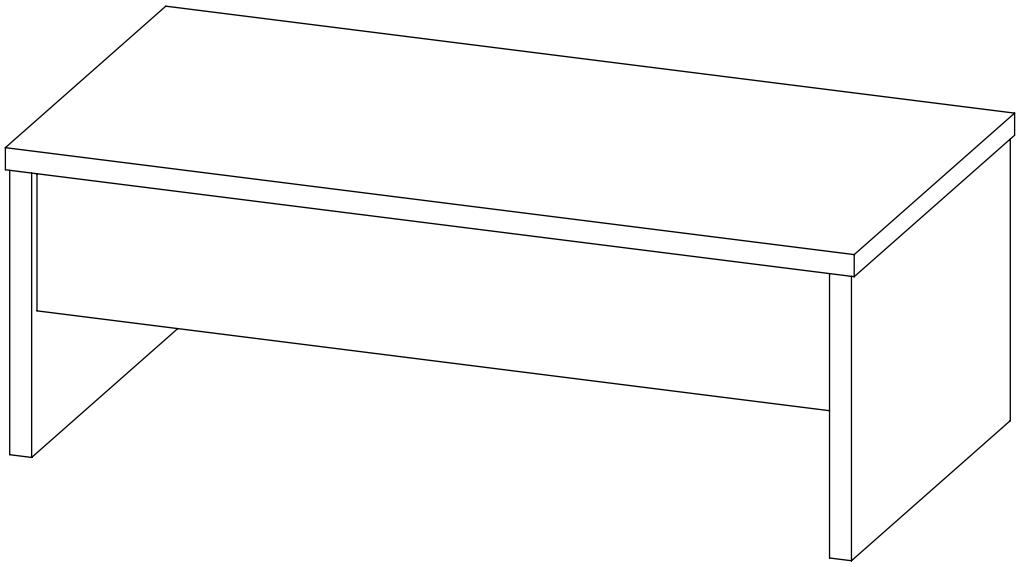

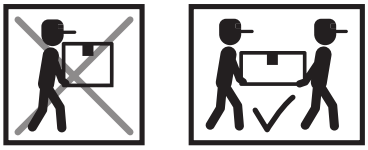

ITEM:**706358**

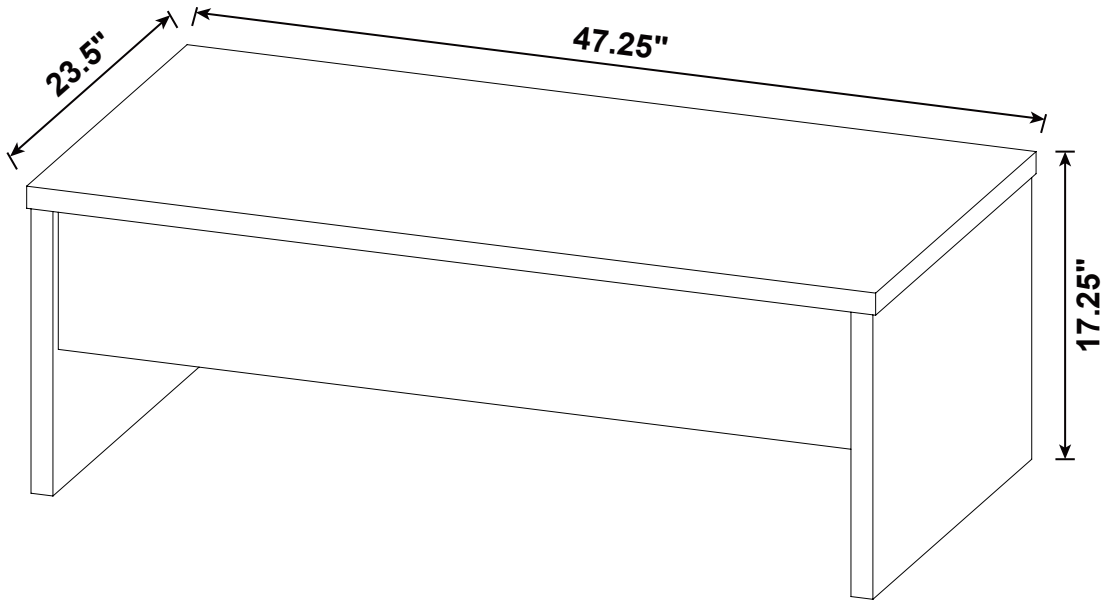

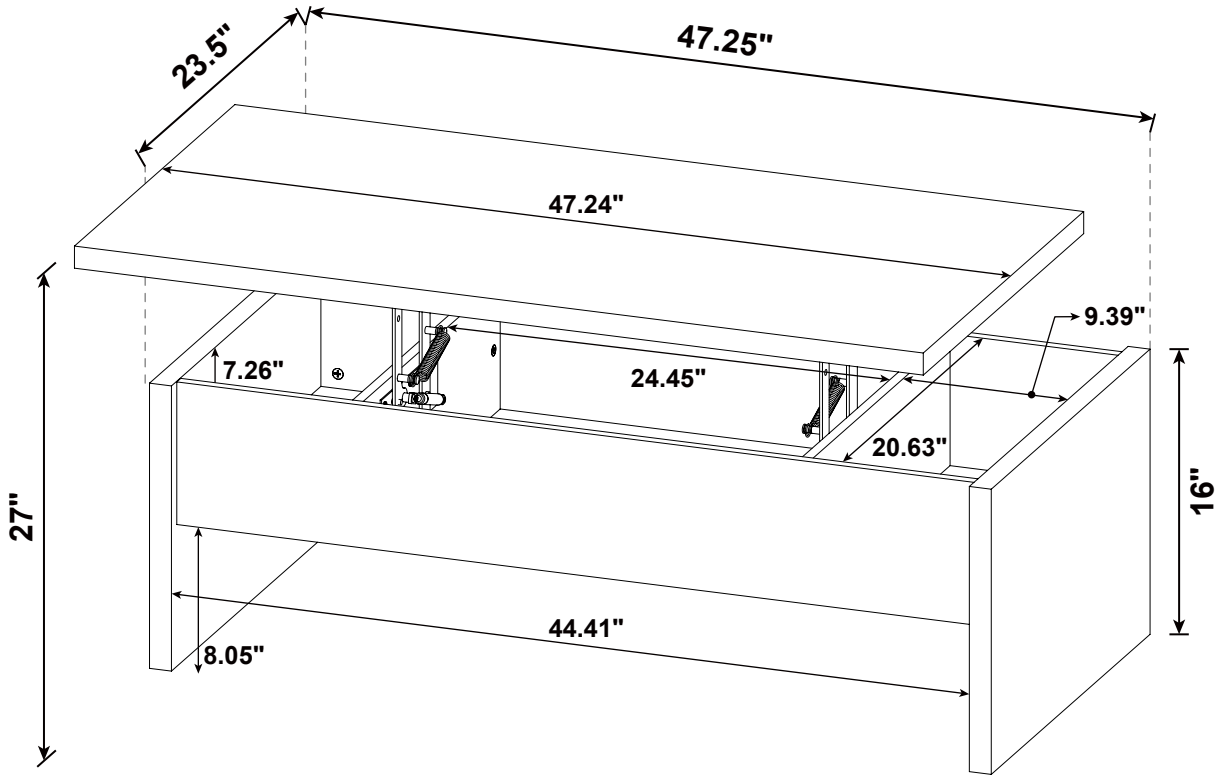

Note : Dimension tolerance ±5%