COASTER®
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

711008
COFFEE TABLE

REVISION 0 : 08/19/2026

ITEM:711008

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:




1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME	25 MINUTES

PARTS IDENTIFICATION

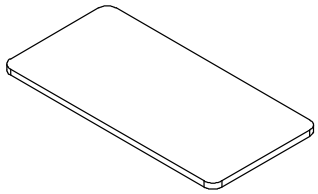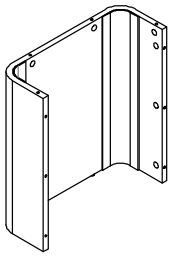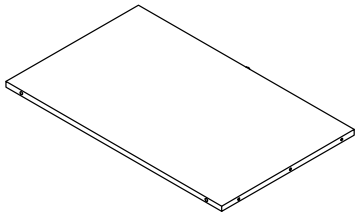
A	TOP		1PC
B	LEG FRAME 1		2PCS
C	LEG FRAME 2		2PCS

ITEM:711008


ASSEMBLY INSTRUCTIONS

Z

HARDWARE IDENTIFICATION

1	CAM-BOLT (38mm)		20PCS
2	CAM-LOCK (ϕ15mm)		20PCS
3	WOOD DOWEL (8 x 30mm)		4PCS
4	GLUE		1PC
5	ALLEN WRENCH (4mm)		1PC


STEP 1

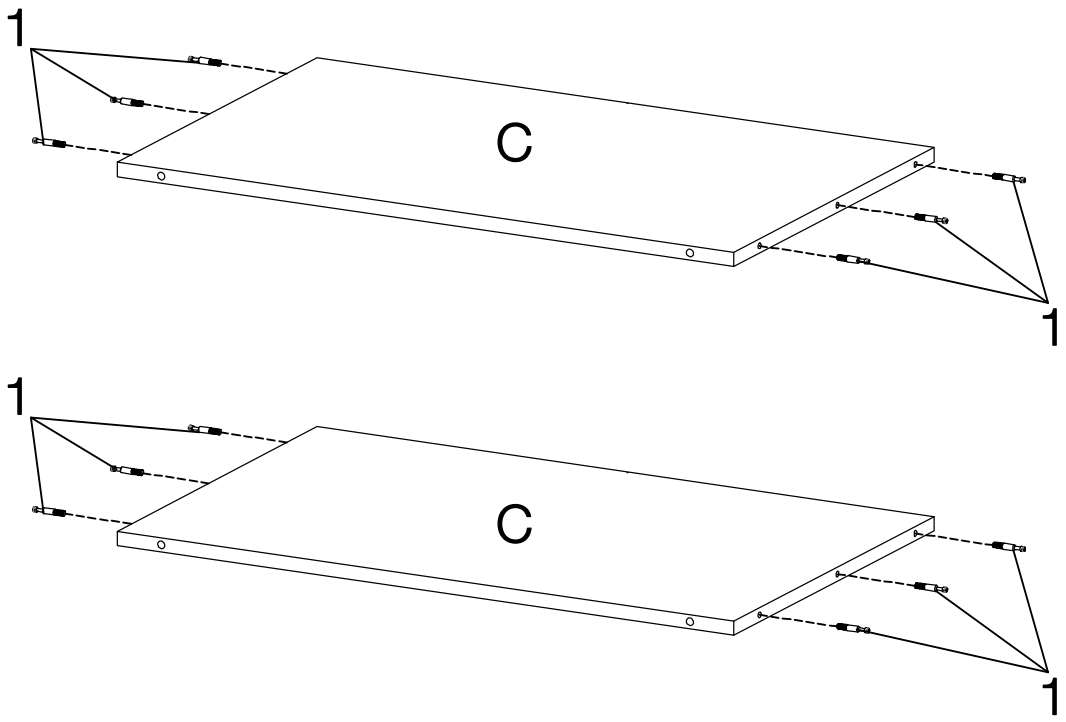


ITEM:711008

ASSEMBLY INSTRUCTIONS

STEP 2

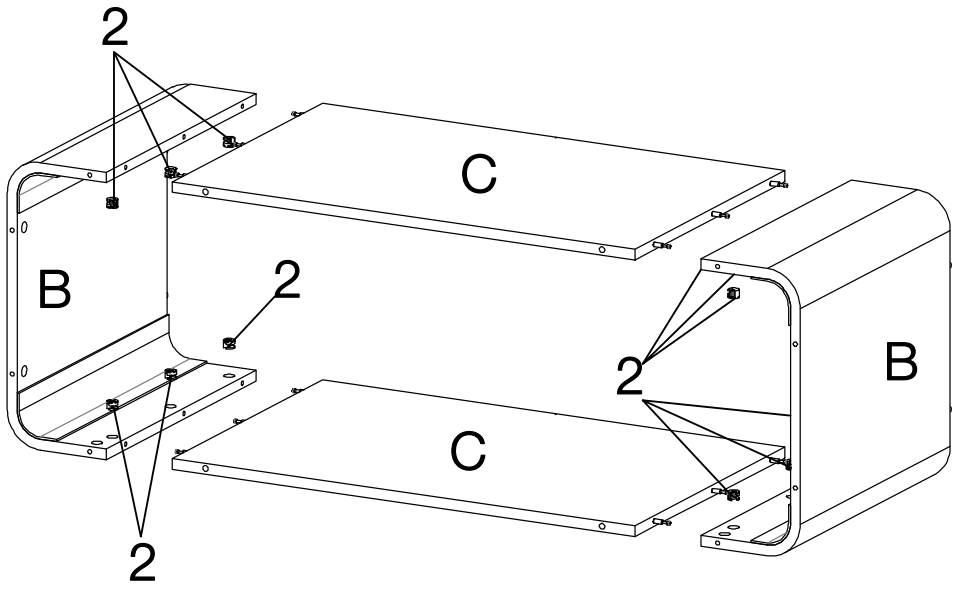


STEP 3

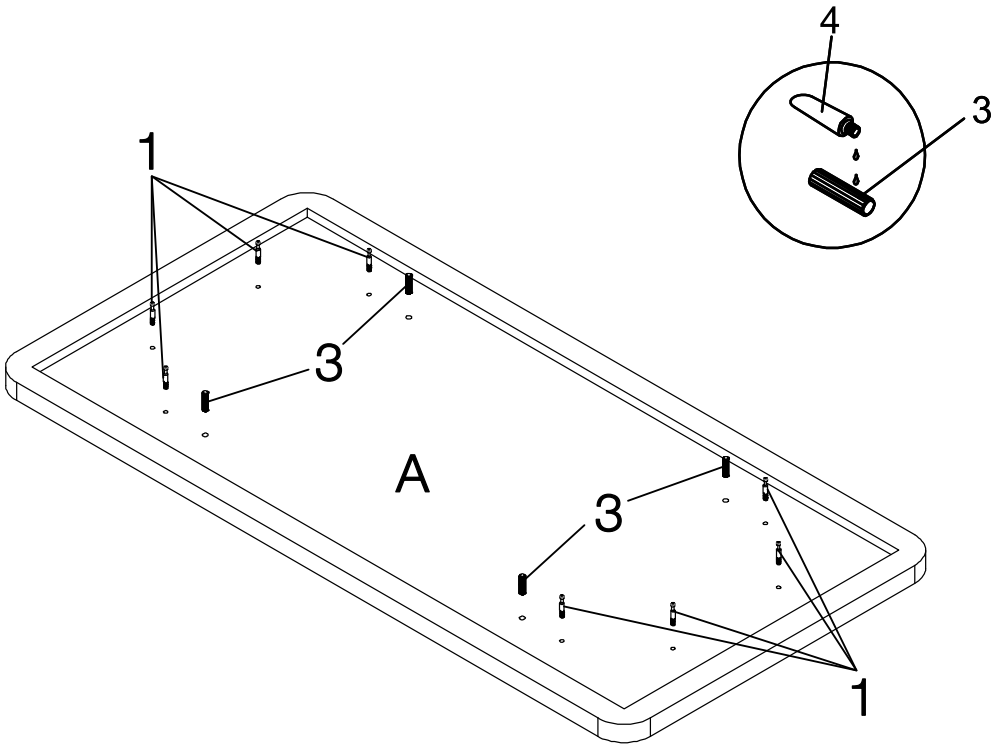

ITEM:711008


ASSEMBLY INSTRUCTIONS

STEP 4

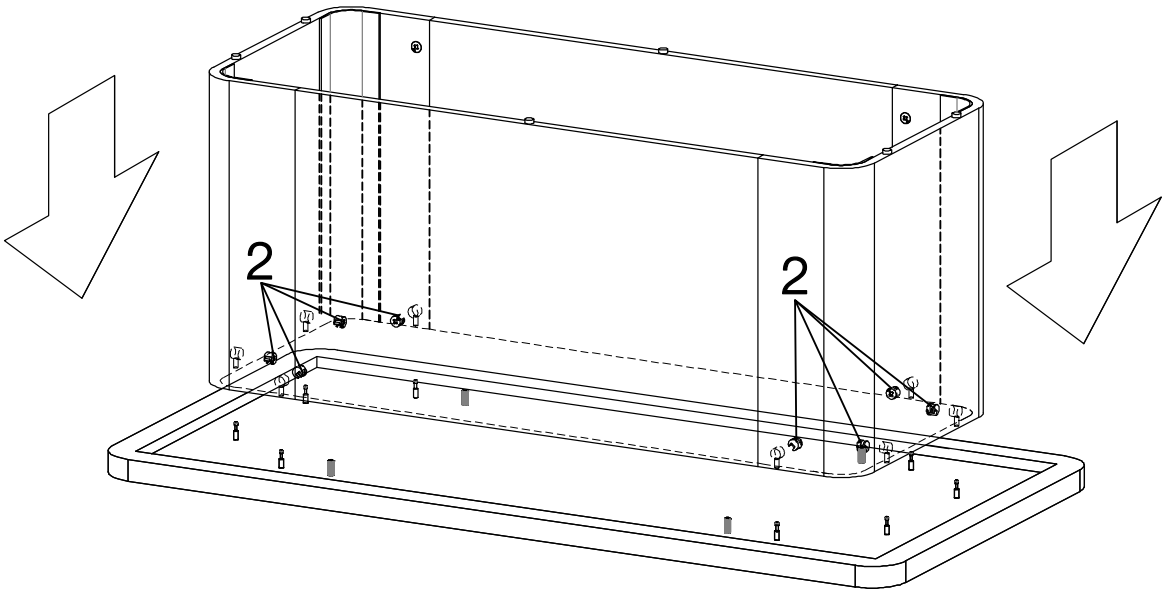


STEP 5

COMPLETE

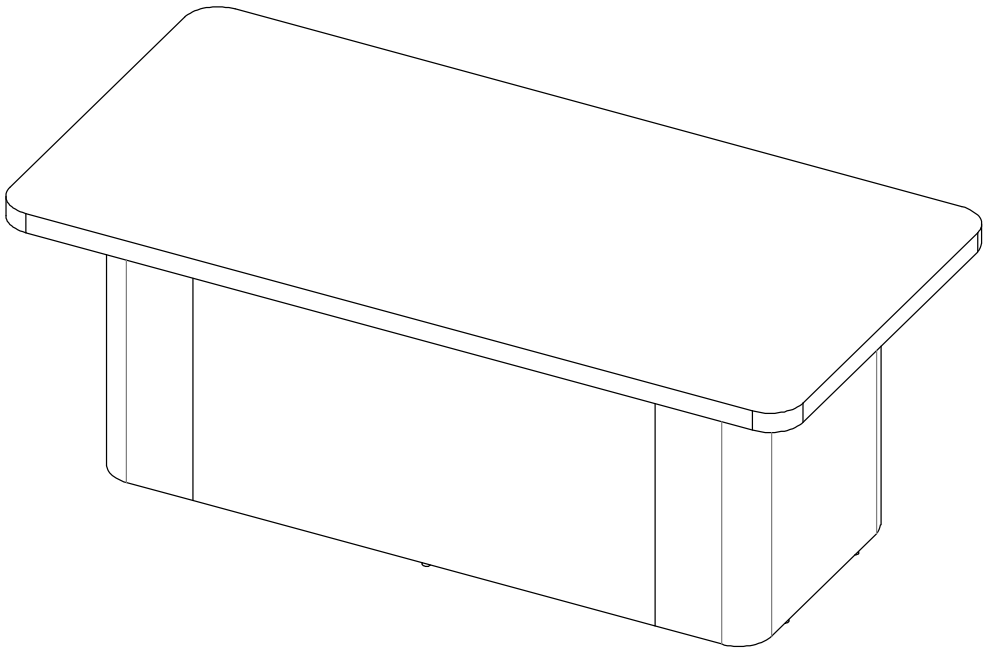

ITEM:711008

ASSEMBLY INSTRUCTIONS

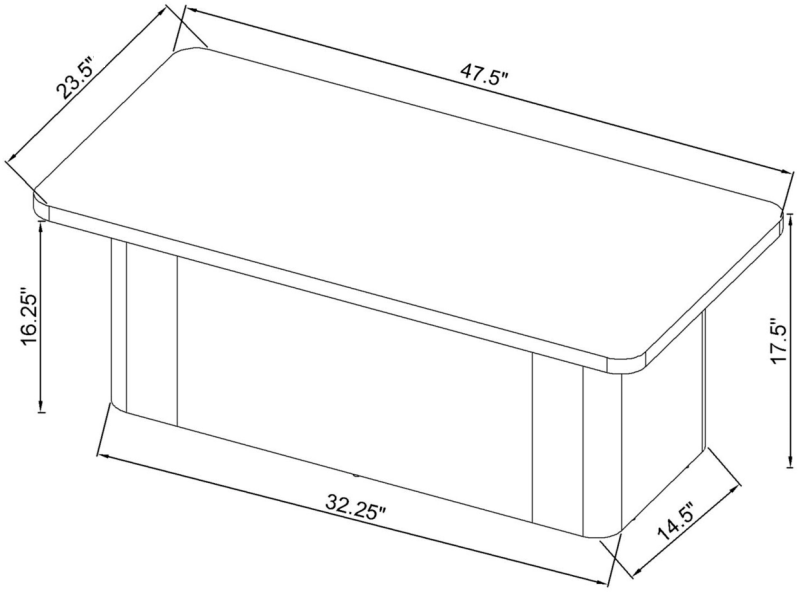

Note : Dimension tolerance ±5%