
COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

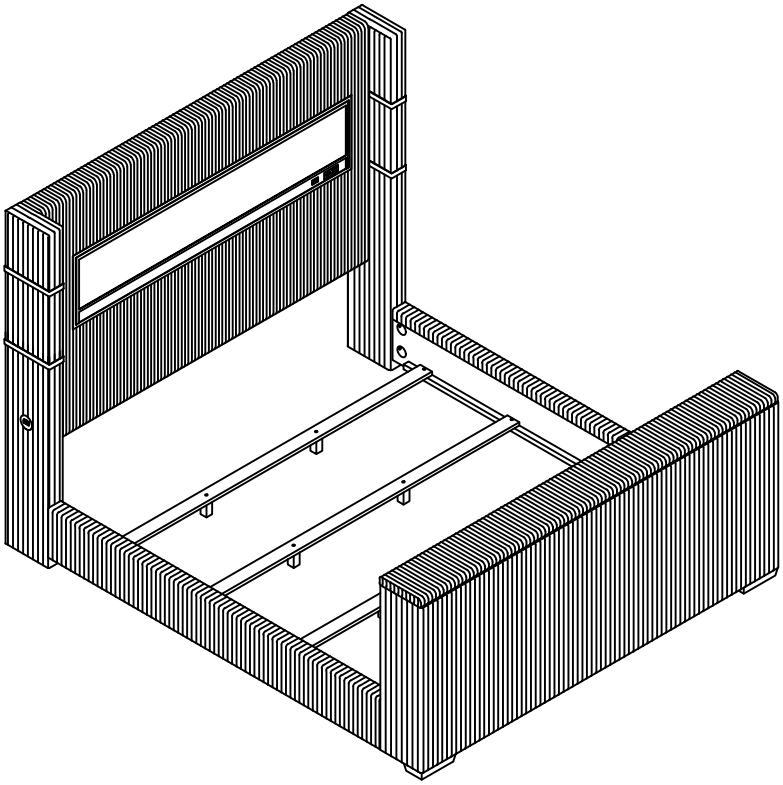

Fine Furniture for every stage of life

315868BLKKE(B1-B3)
Eastern King Bed

ITEM: 315868BLKKE(B1-B3)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.






ASSEMBLY TIME	15 MINUTES	TV MAX SIZE : 50"

PARTS IDENTIFICATION

B1 (BOX 1)

A	HEABOARD WITH FLAME BOX		1PC		
B	REMOTE CONTROL		1PC		
C	ADAPTER		1PC		


B2 (BOX 2)

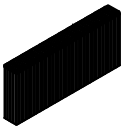D	FOOTBOARD PANEL WITH TV LIFT		1PC		
E	LEFT FOOTBOARD LEG WITH "L" LABEL		1PC		
F	RIGHT FOOTBOARD LEG WITH "R" LABEL		1PC		
G	REMOTE CONTROL		1PC		
H	TV MOUNT BRACKET WITH HARDWARE PACK		1SET		

B3 (BOX 3)

I	LEFT WING		1PC		
J	RIGHT WING		1PC		
K	BED RAIL		2PCS		
L	BED SLATS		4PCS		
M	BED SLAT SUPPORT WITH LEVELER		8PCS		

HB	315868BLKKE(B1&B3) FROM BOX 1 & BOX 3 HEADBOARD COMPLETE		1PC	FB	315868BLKKE(B2) FROM BOX 2 FOOTBOARD COMPLETE

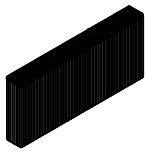

1PC

ITEM: 315868BLKKE(B1-B3)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B2(BOX 2) - HARDWARE PACK IS LOCATED IN 315868BLKKE(B2)

1	THREADED BOLT (Ø 5/16 " x 90mm - BLK)		14PCS
2	HEX NUT (Ø 5/16 " - BLK)		14PCS
3	CURVE WASHER (Ø 5/16" - BLK)		8PCS
4	LOCK WASHER (Ø 5/16" - BLK)		6PCS
5	FLAT WASHER (Ø 5/16 "-BLK)		6PCS
6	WRENCH (14mm - BLK)		1PC
7	SHORT FLAT HEAD SCREW (M4 x 30mm - BLK)		8PCS
8	LONG FLAT HEAD SCREW (M4 x 50mm - BLK)		8PCS

HARDWARE PACK FROM PART H FOR TV MOUNTING IN FOOTBOARD


ATTENTION : Hardware provided may not suitable for your TV.
Please check for size and fit compatibility prior to installing TV to rack.

9	BIG ALLEN WRENCH (M5 - BLK)		1PC
10	BIG BOLT (M8 x 20mm - BLK)		2PCS
11	SMALL ALLEN WRENCH (M4 - BLK)		1PC
12	SMALL BOLT (M6 x 20mm - BLK)		2PCS
13	LOCK WASHER (M8 - BLK)		2PCS
14	BIG FLAT WASHER (M8 - BLK)		2PCS

NOTE:
Phillips head screw driver is required in the assemply process; however, manufacturer does not provide this item.

ITEM: 315868BLKKE(B1-B3)

1-REMOTE CONTROL:

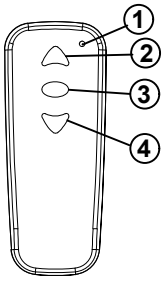


①. Indicator light: When the remote control sends a signal, the indicator light is on.
②. Up button: Press this button to make the main body rise.
③. Stop button: Press this button to stop the main body.
④. Down button: Press this button to make the main body descend.

The battery compartment is located on the back of the remote control.

1. Press and slide the battery cover to open.
2. Insert two 1.5V (AAA) batteries (included) ensuring the correct polarity (+ and -) is marked inside the battery compartment.
3. Close the battery cover.

*NOTE: The batteries must be removed if the product is not to be used for a long period of time.
When replacing the batteries, replace both batteries with new batteries of the same type at the same time.

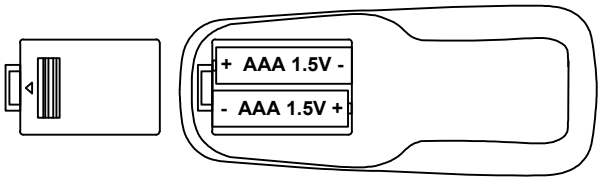

- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Nicad, Nimh, etc.)batteries.


Self-learning password function: (Each elevator has its own independent password. When replacing a new remote control, it needs to be paired once before it can be used)

1. Unplug the elevator control box and input the main power and wait for at least 1 Minutes.
2. Press the up/down button of the remote control with one hand, and turn on the control box with the other hand. Wait for about five seconds. The elevator will pair itself after receiving the signal from the remote control, and then the elevator will rise/lower.
3. After the self-learning code is successful, the elevator will be controlled by this remote control.

Note:** ***The maximum effective control distance of the remote control is 15 feet.

2-MAIN FUNCTION MENU:

1. This elevator can automatically rise and lower.
2. Remote control function.
3. 21V power output power supply.
4. Power output power supply.

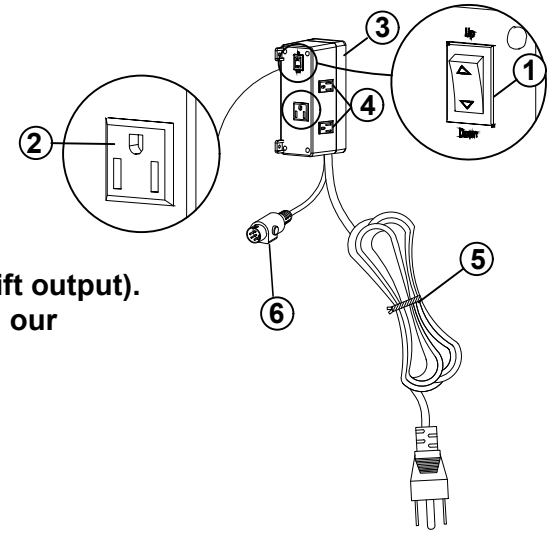


Control box:

①. Manually control the lift to rise and lower.
②. TV power supply interface (controlled by the lift output).
③. DC21V power interface (can only be used with our company's products).
④. Power supply output interface.
⑤. Power cord.
⑥. Control motor connection line.

ITEM: 315868BLKKE(B1-B3)


ASSEMBLY INSTRUCTIONS

STEP 1

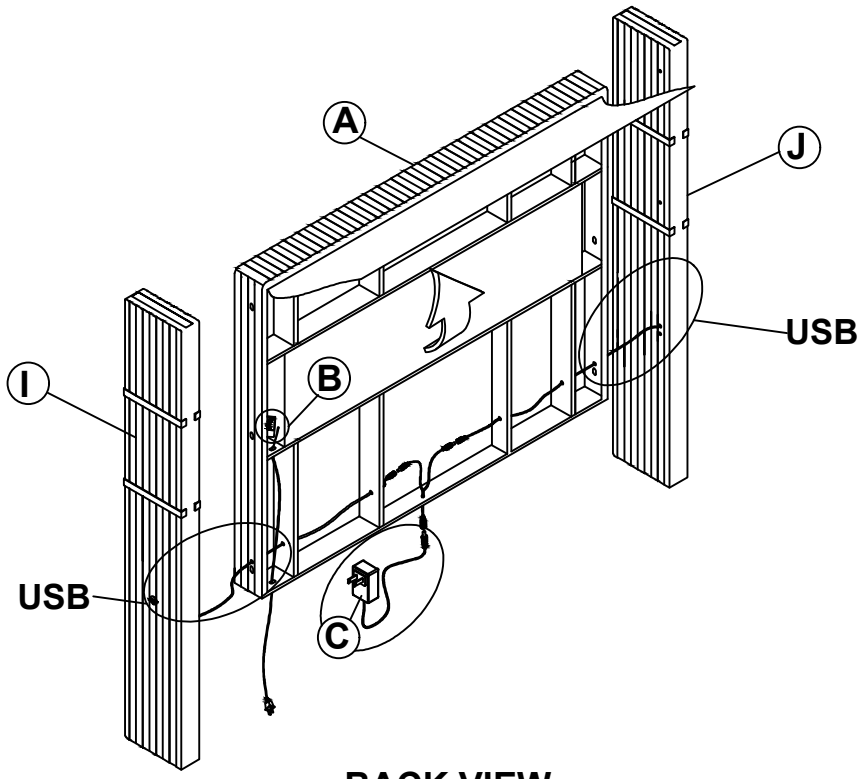


BACK VIEW

STEP 2

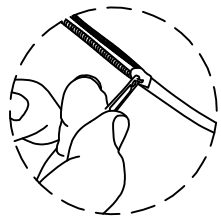

OPENING THE ZIPPER HERE FOR ASSEMBLY.


2.1

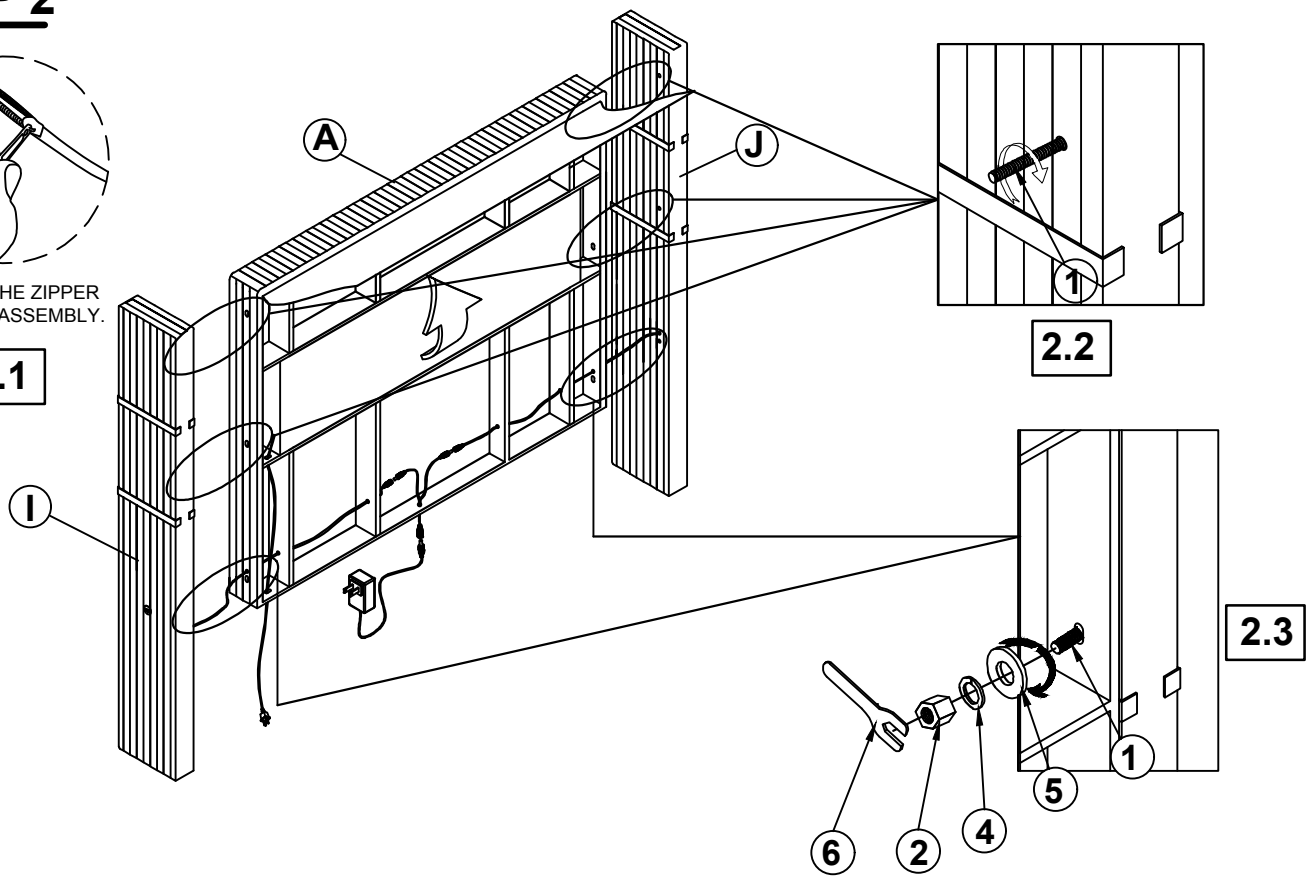


ITEM: **315868BLKKE(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 3

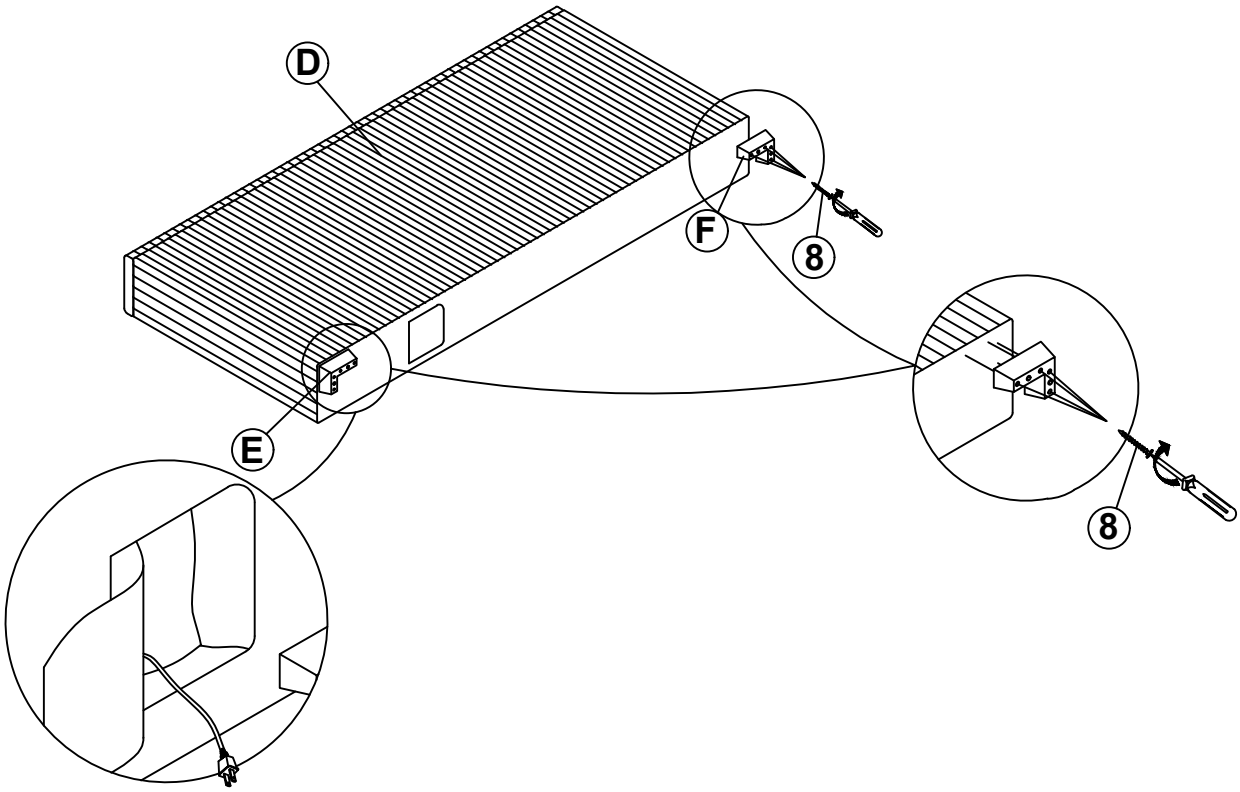


STEP 4

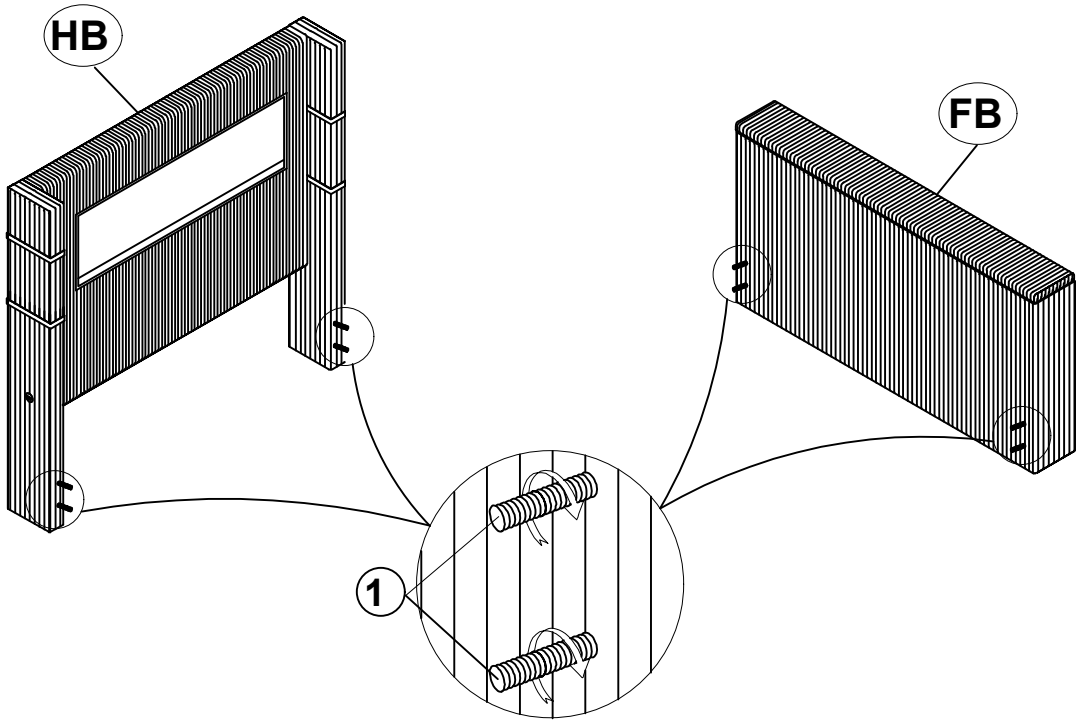


ITEM: 315868BLKKE(B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 5

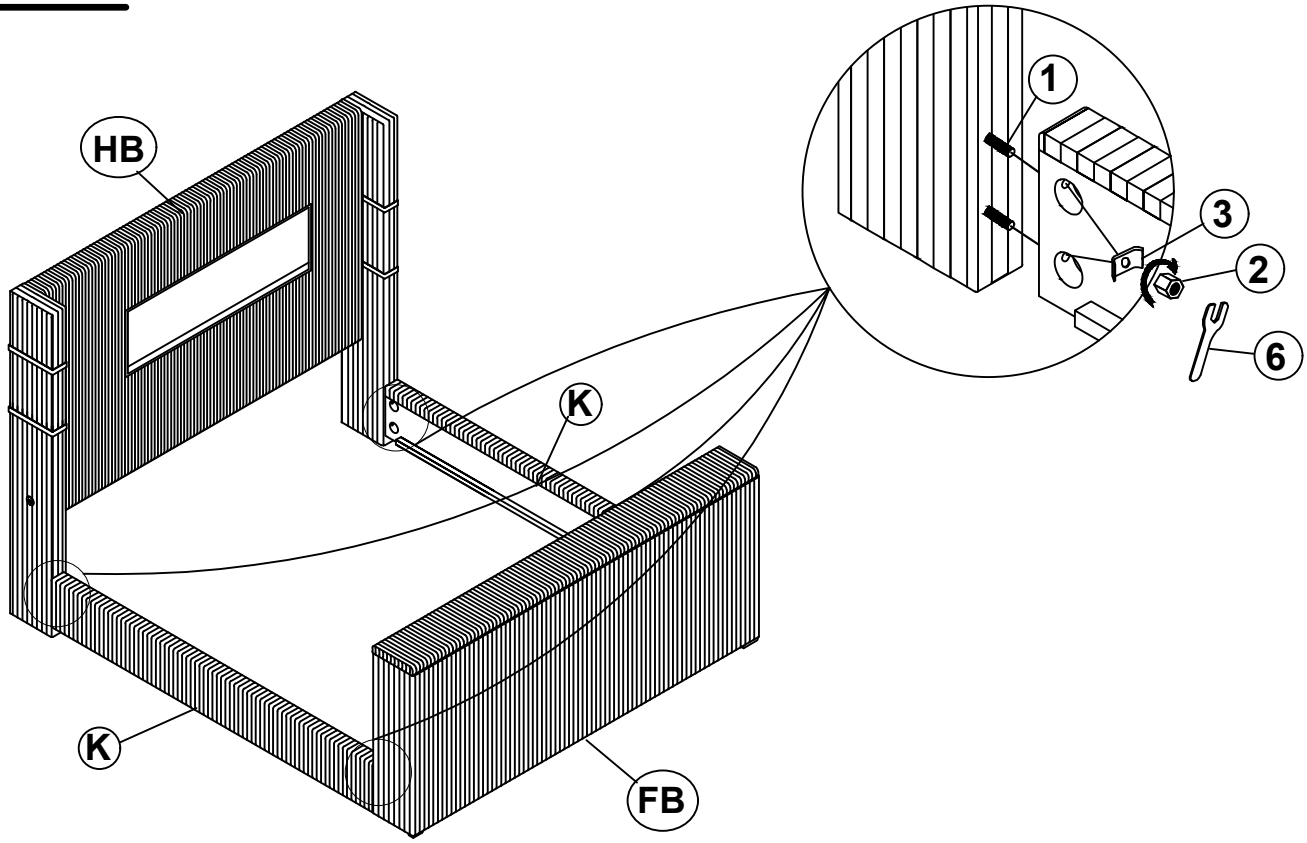

STEP 6

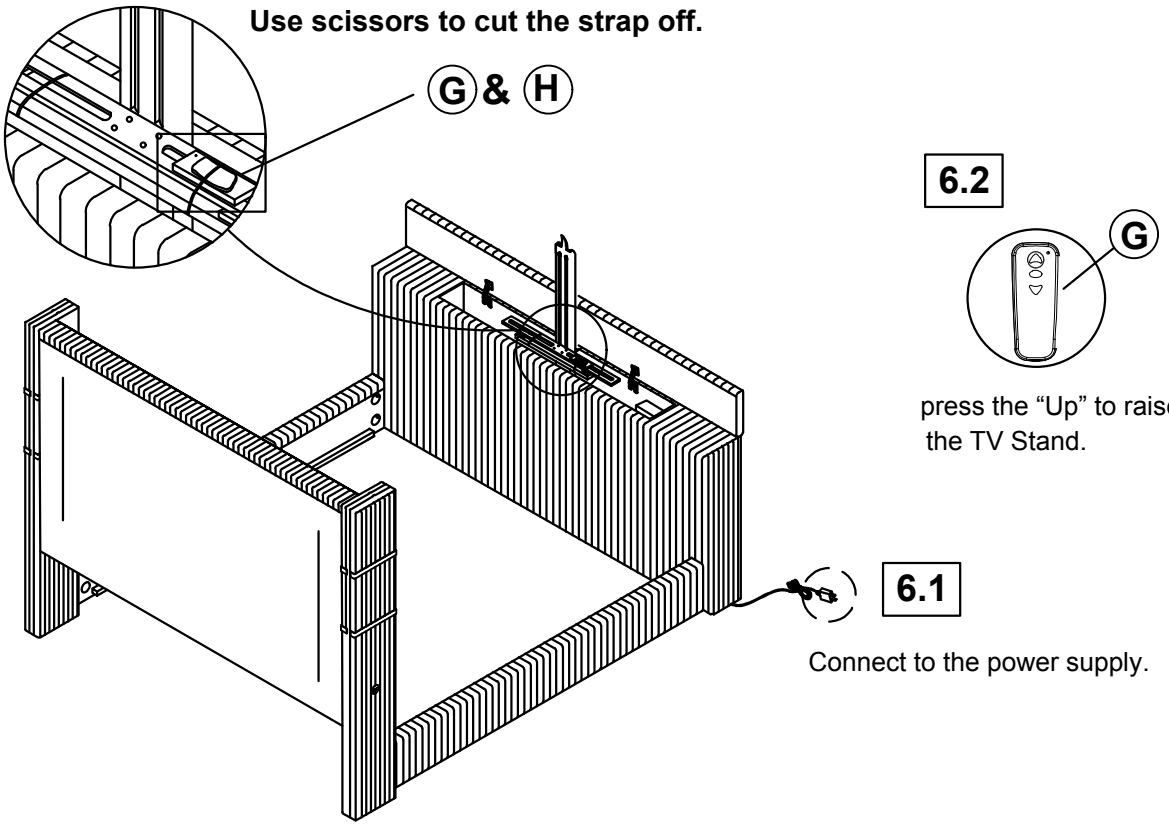


ITEM: 315868BLKKE(B1-B3)

ASSEMBLY INSTRUCTIONS


STEP 7

TV INSTALLATION

Pay Attention!
Suitable for TV 50 incher and below.

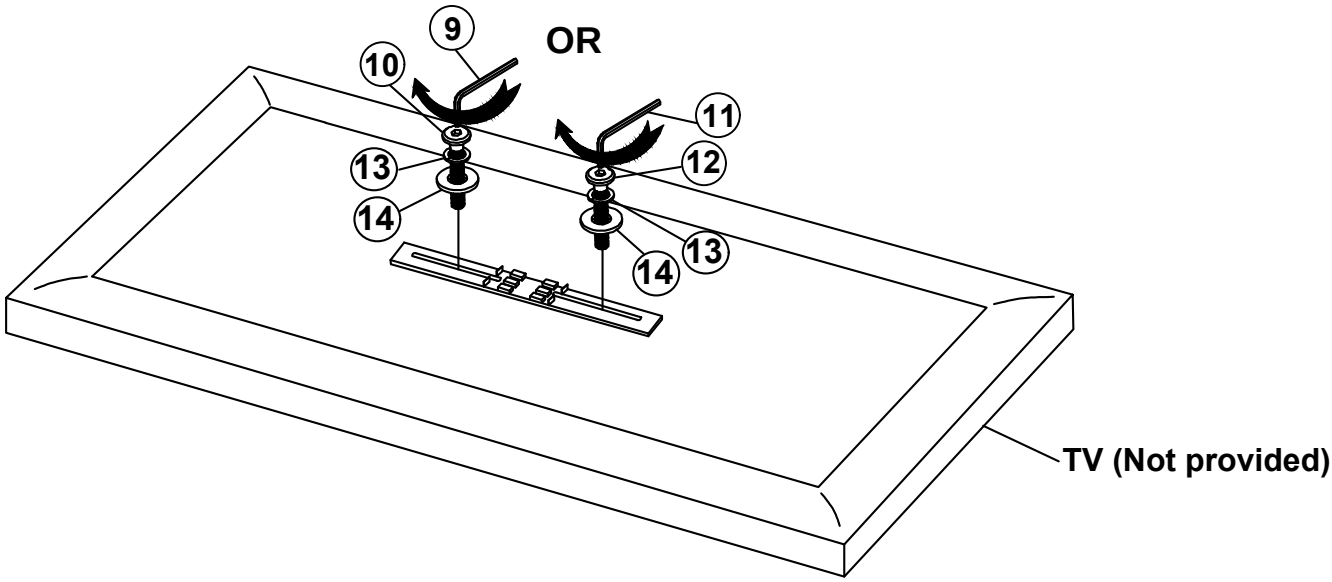


STEP 8

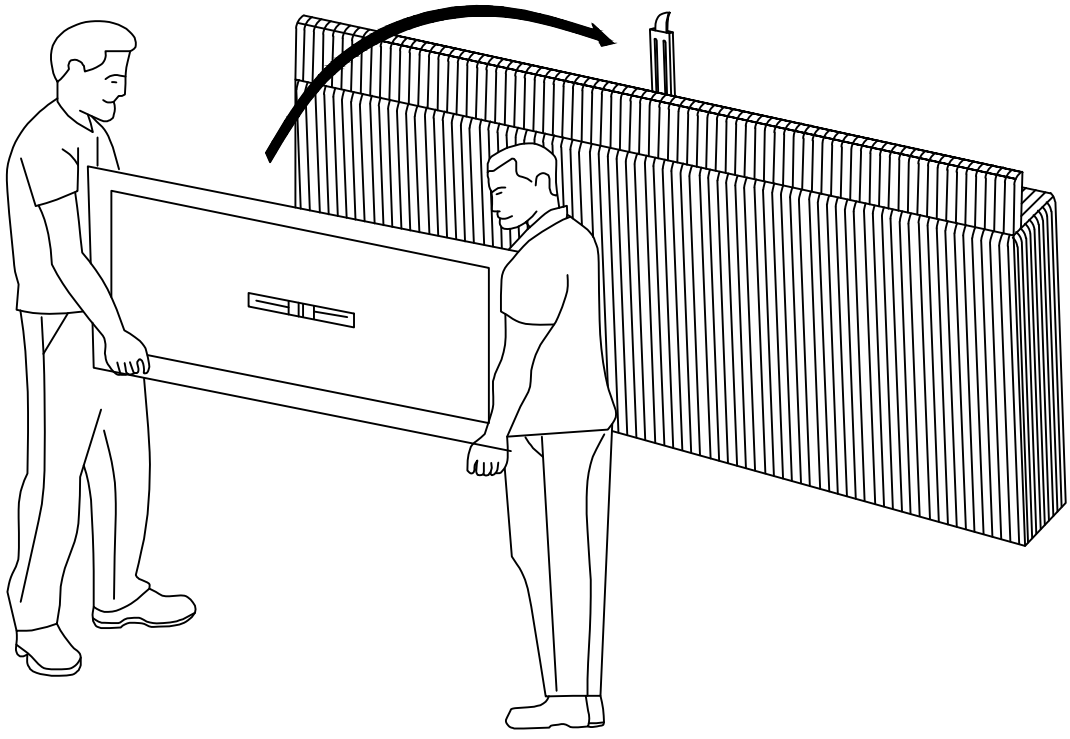


ITEM: **315868BLKKE(B1-B3)**

ASSEMBLY INSTRUCTIONS


STEP 9

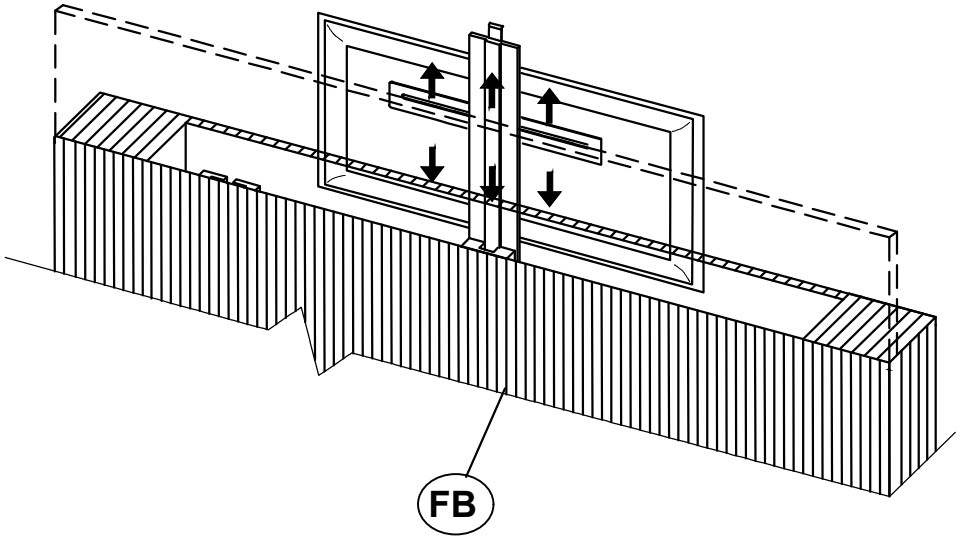


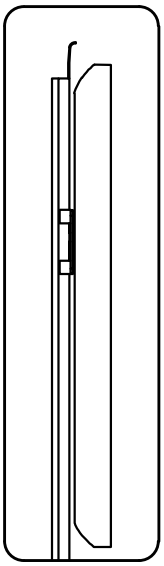

STEP 10


10.1 Connect to the TV power supply.

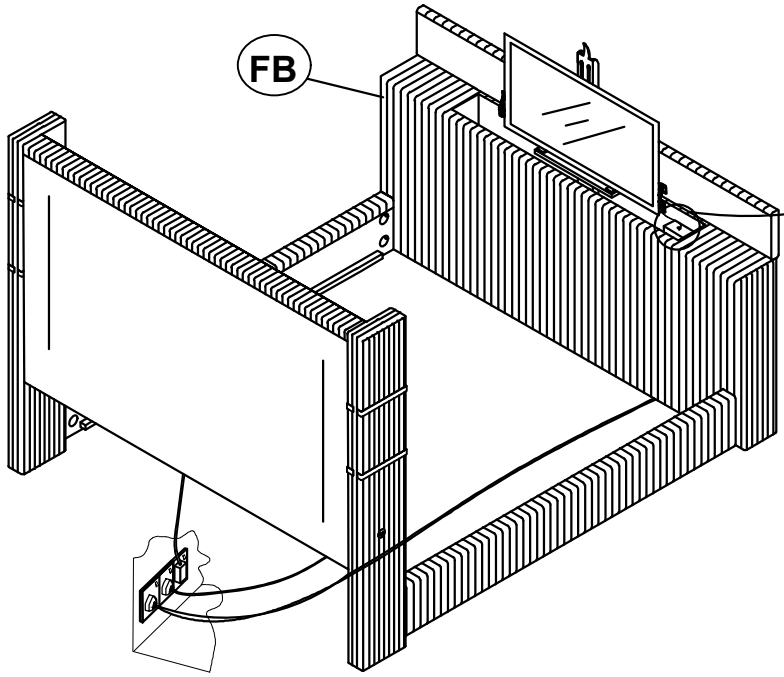

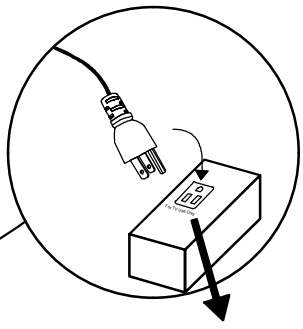

For TV Use Only

10.2

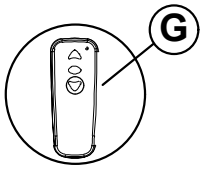


Press the “Down” to lower the TV Stand.


ITEM: **315868BLKKE(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 11

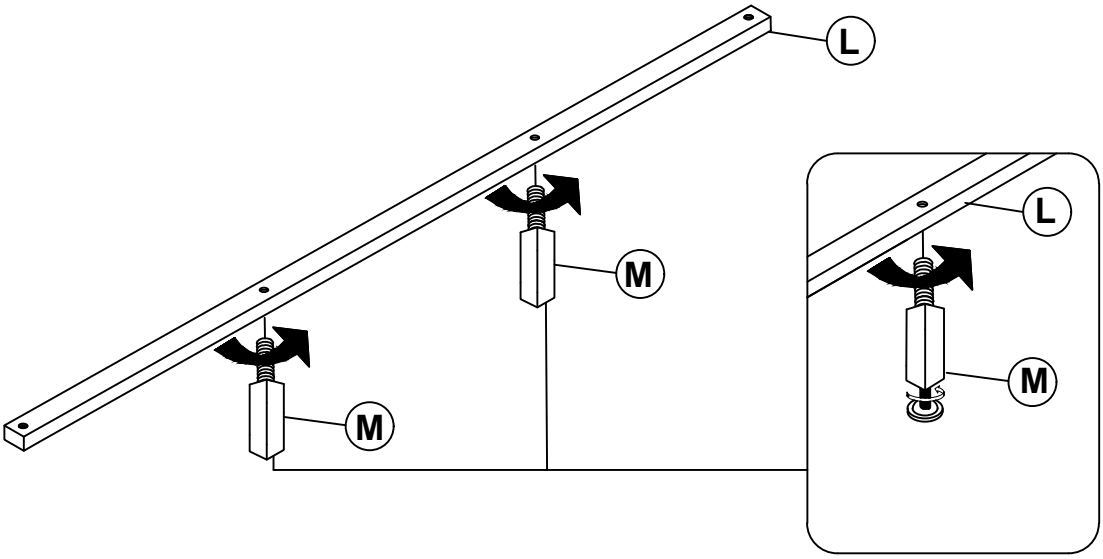


STEP 12

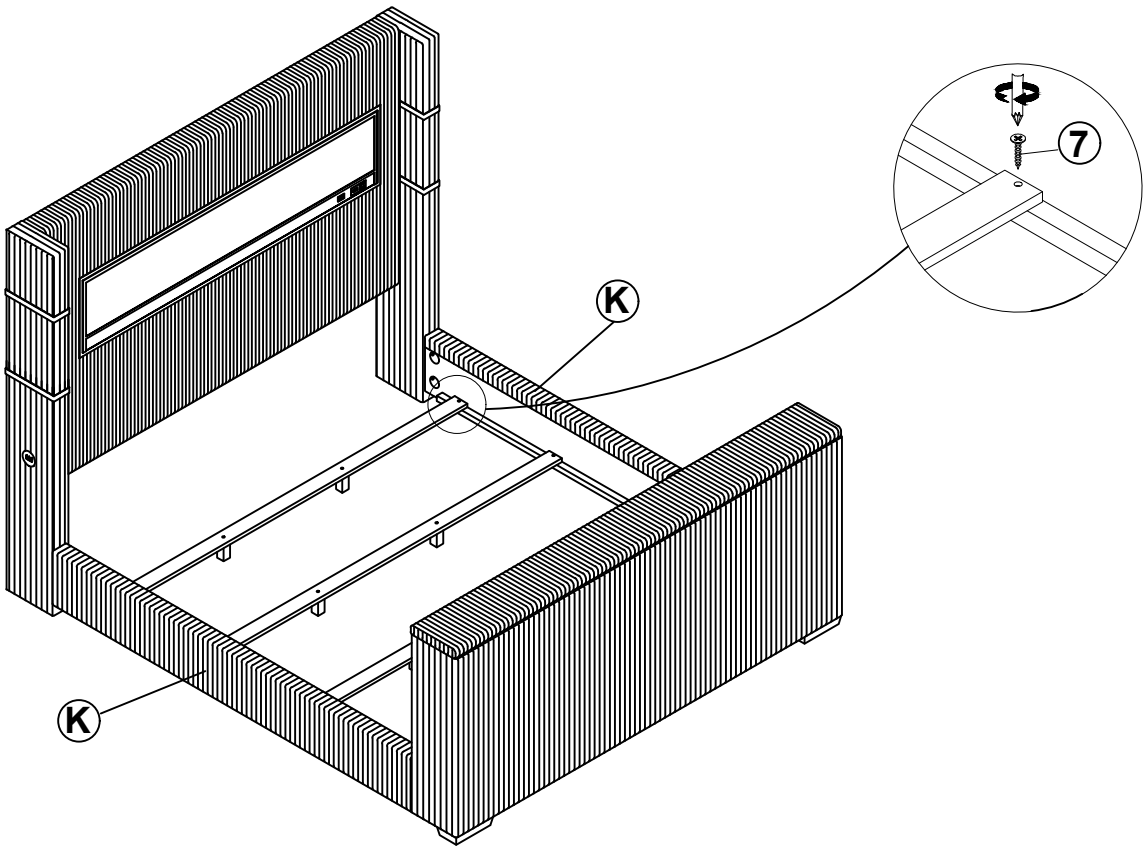

ITEM: **315868BLKKE(B1-B3)**


ASSEMBLY INSTRUCTIONS

STEP 13
COMPLETE

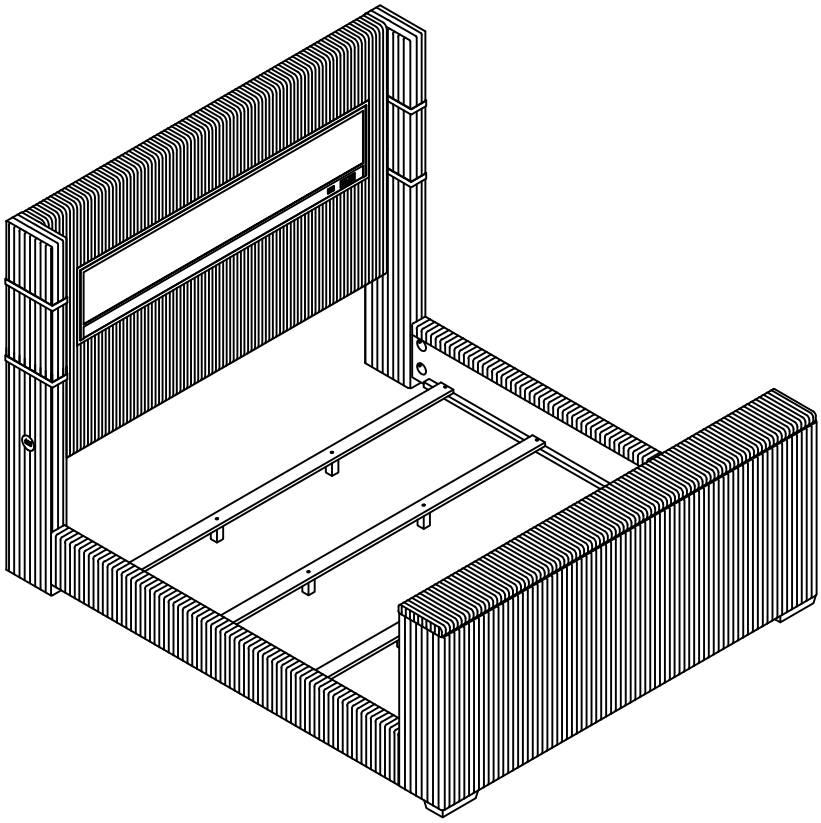

ITEM: 315868BLKKE(B1-B3)

Inner Size: 77.00"W X 81.00"D

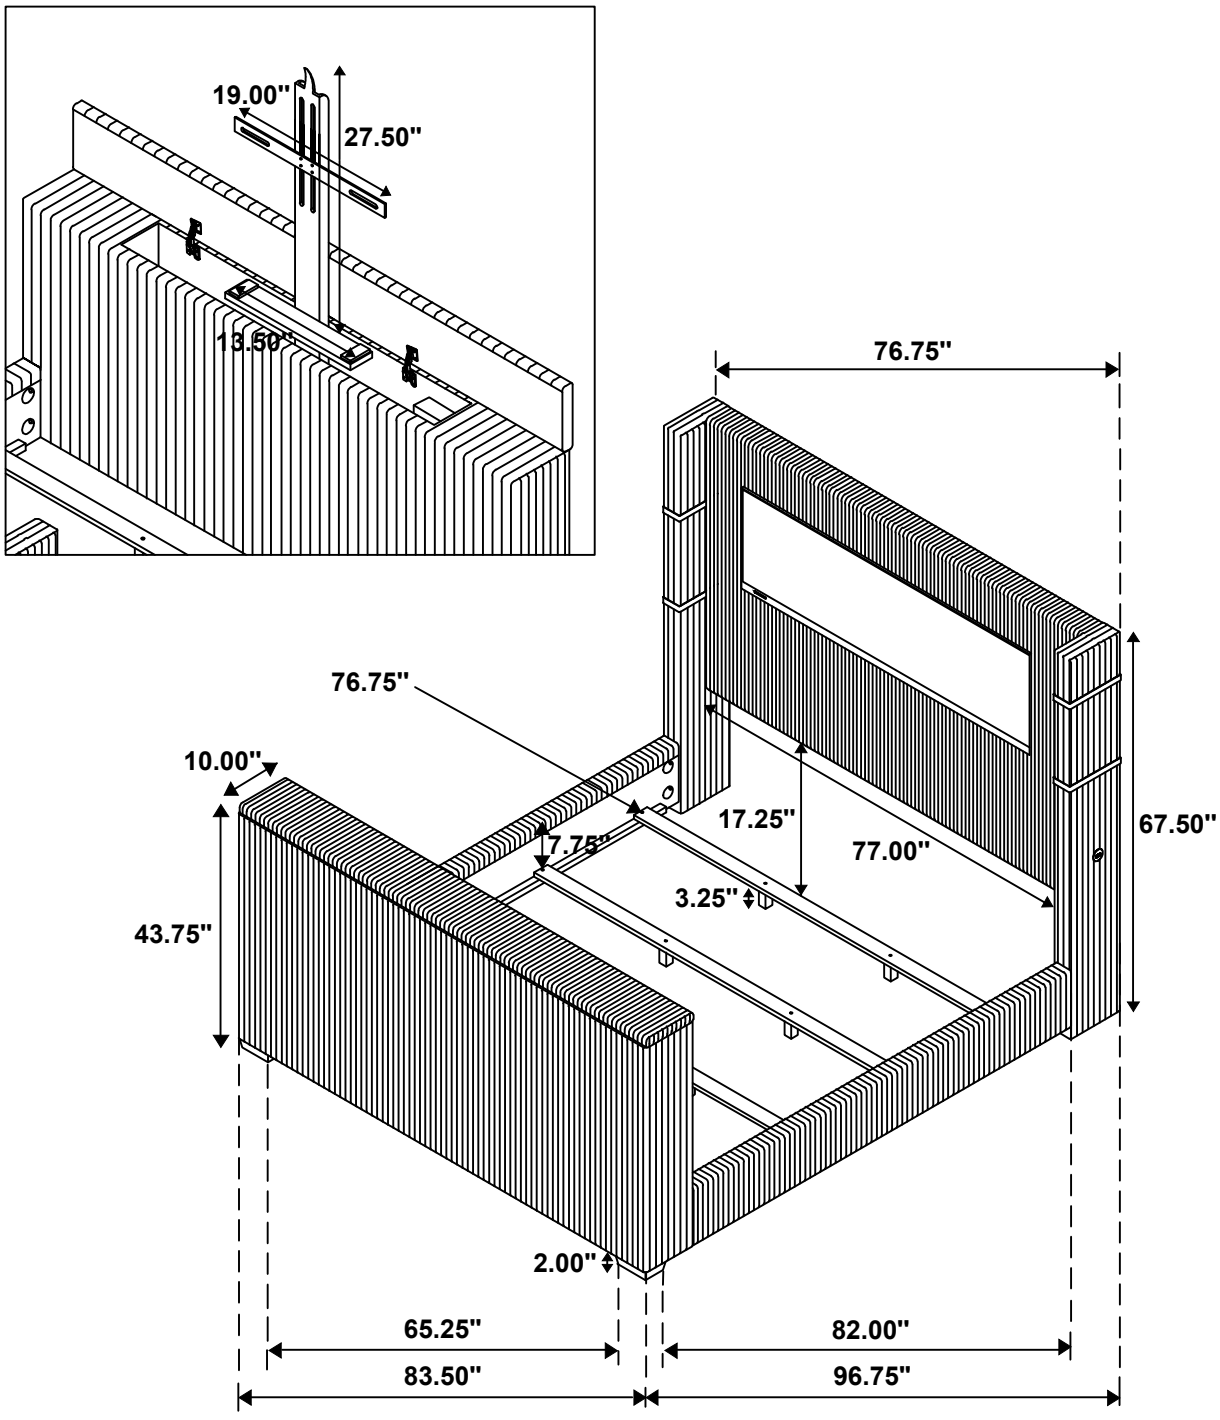

Note : Dimension tolerance ± 5%