ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

122180
Dining Table Base

REVISION 0 : 08/15/2019
REVISION 1 : 02/23/2023
REVISION 2 : 03/08/2024
REVISION 3 : 04/22/2024
REVISION 4 : 08/27/2025

ITEM: **122180**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME	15 MINUTES

PARTS IDENTIFICATION

AN	LEG SUPPORT FRAME		1PC
BN	LEG		4PCS
CN	DISC WITH BOLT		4SETS

HARDWARE IDENTIFICATION


1	BOLT (M6 x 60mm - RBW)		8PCS
2	LOCK WASHER (1/4" - RBW)		8PCS
3	FLAT WASHER (1/4" - RBW)		8PCS
4	ALLEN WRENCH (4mm - BLK)		1PC

ITEM: **122180**


COASTER FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 1

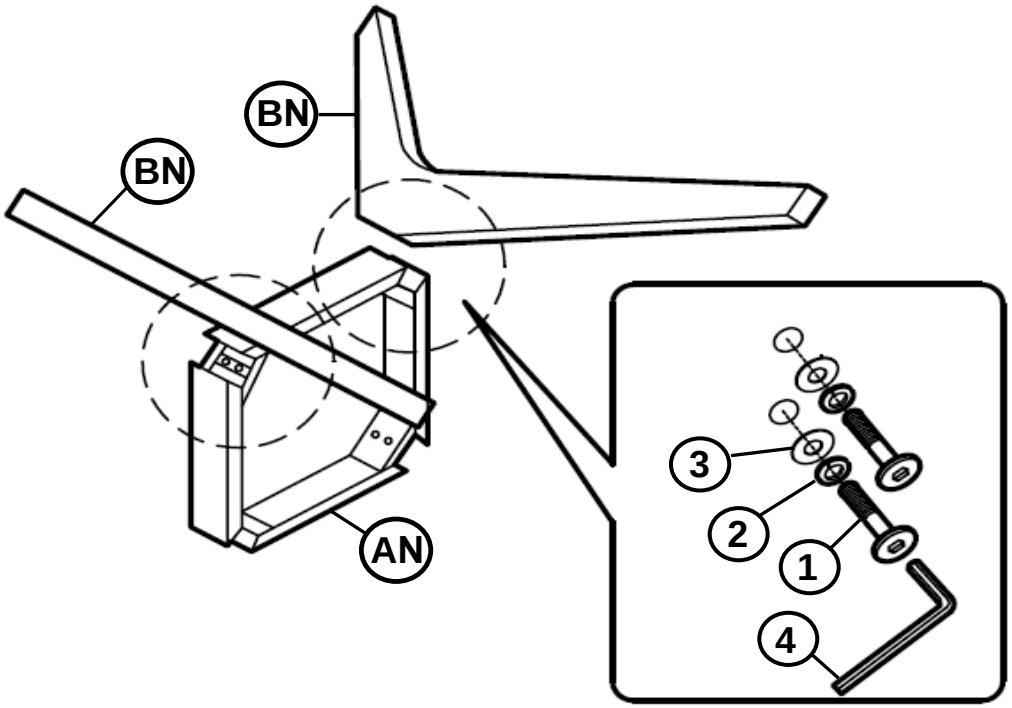

STEP 2

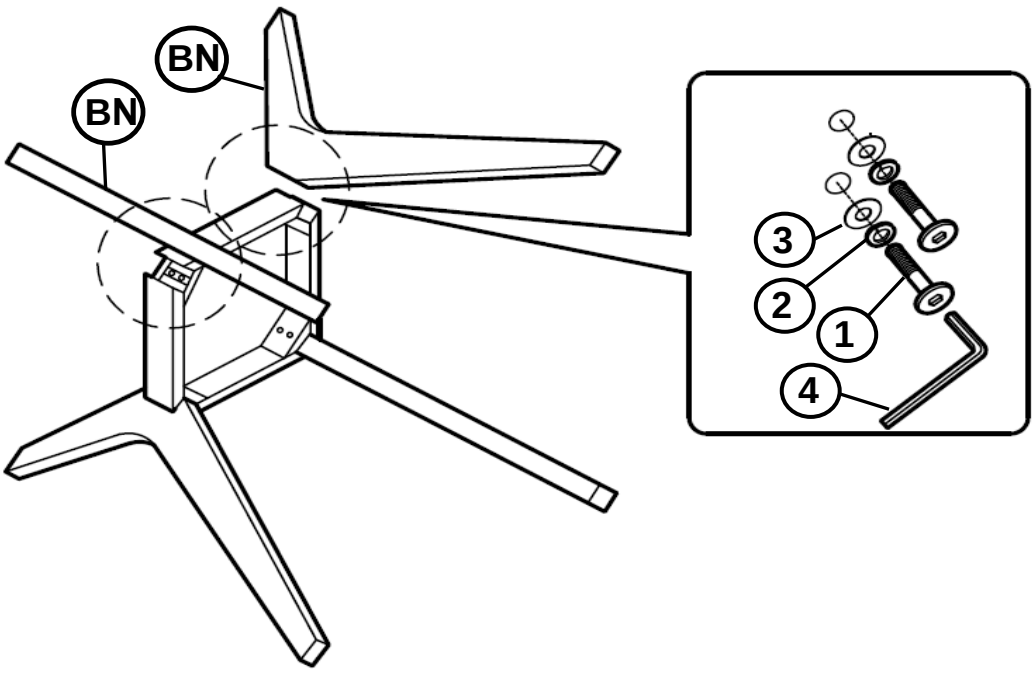


ITEM: **122180**


COASTER FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 3

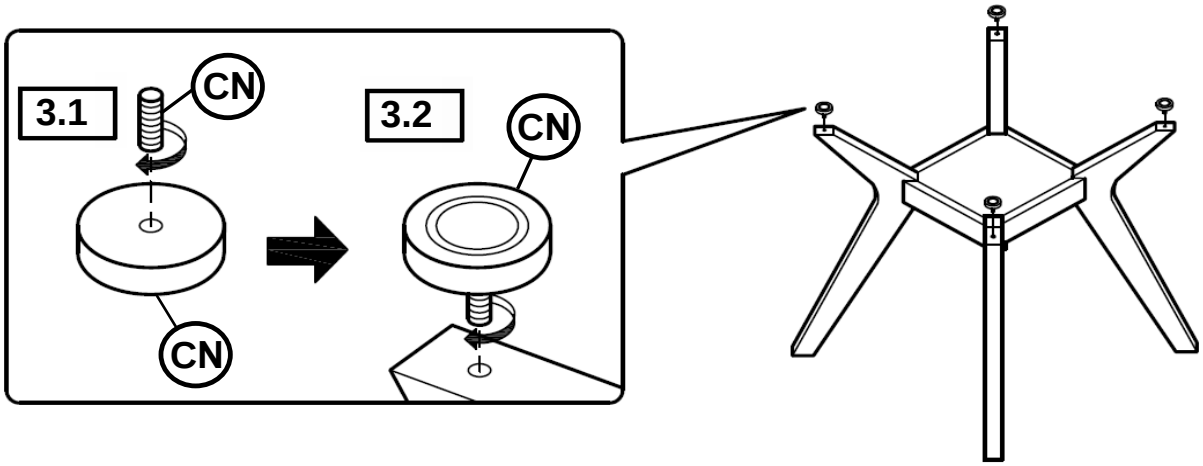


STEP 4

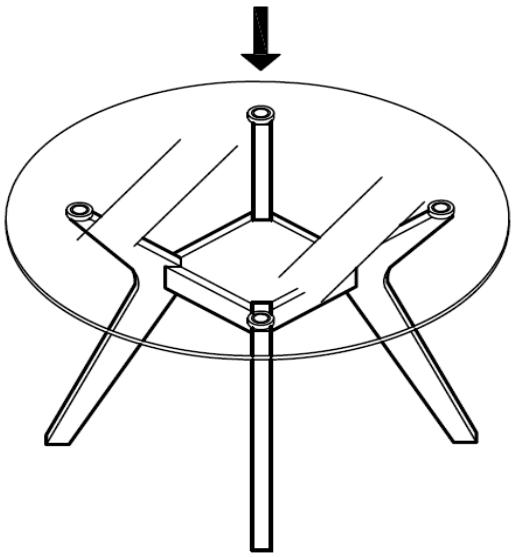

STEP 5


COMPLETE

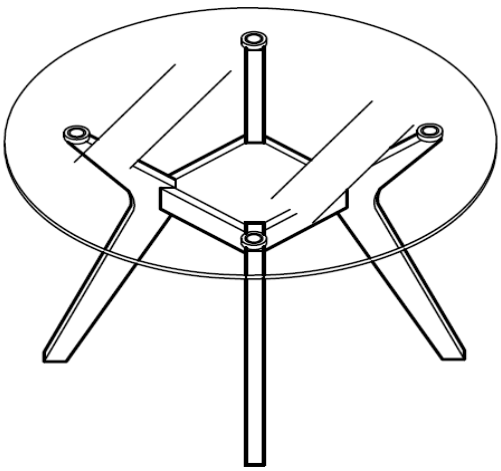

NOTE : GLASS TOP NOT INCLUDED



ITEM: **122180**

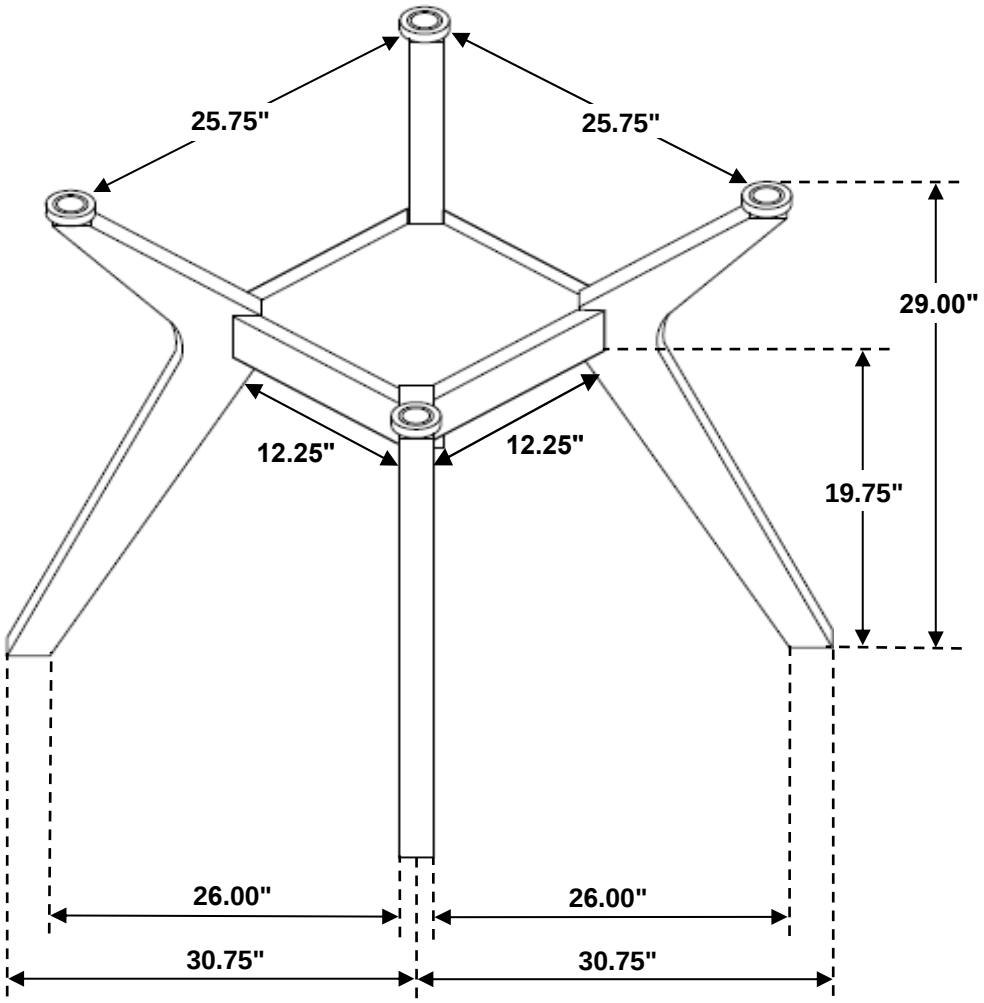

Note : Dimension tolerance ±5%