COASTER®
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

602261
MOTION SOFA

REVISION 0 : 05/17/2019
REVISION 1 : 01/ 09/2020

ITEM: 602261

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

Assembly Instruction

ASSEMBLY TIPS:
1.Remove hardware from box and sort by size.
2.Please check to see that all hardware and parts are present prior to start of assembly.
3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Warning !
1.Do not attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2.This product is for home use only and intended for commercial establishment.

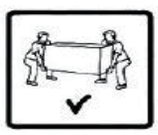

ASSEMBLY TIME PER UNIT:	15MINUTES

PARTS IDENTIFICATION

A	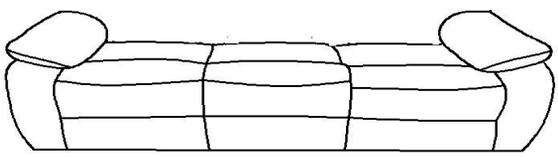	BASE	1PC
B	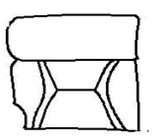	LEFT BACK	1PC
C		MIDDLE BACK	1PC
D	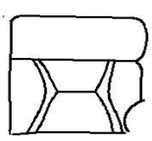	RIGHT BACK	1PC
E		LEFT EAR	1PC
F		RIGHT EAR	1PC

ITEM: 602261

ASSEMBLY INSTRUCTIONS

STEP 1

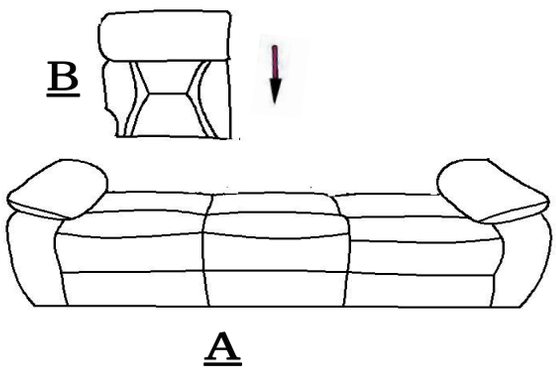

STEP2

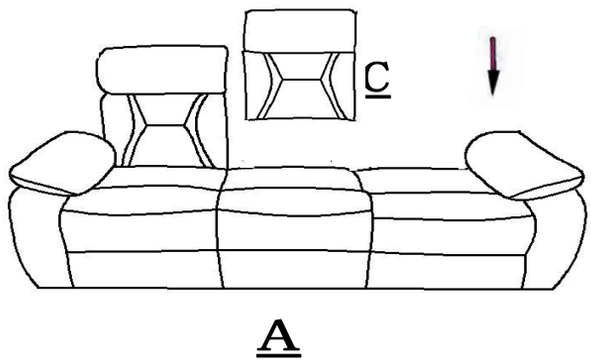

STEP 4

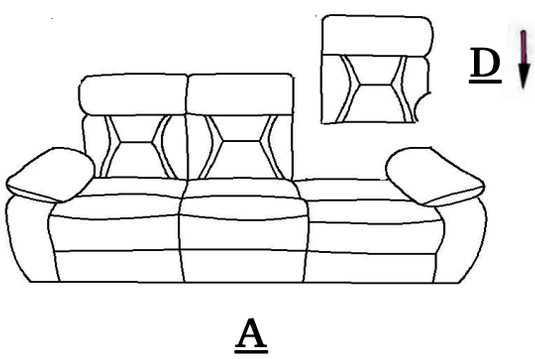

STEP 5

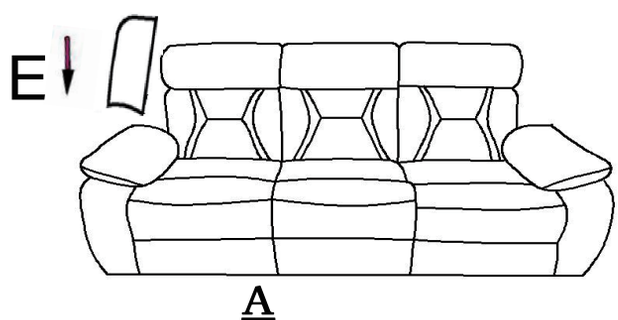

STEP5

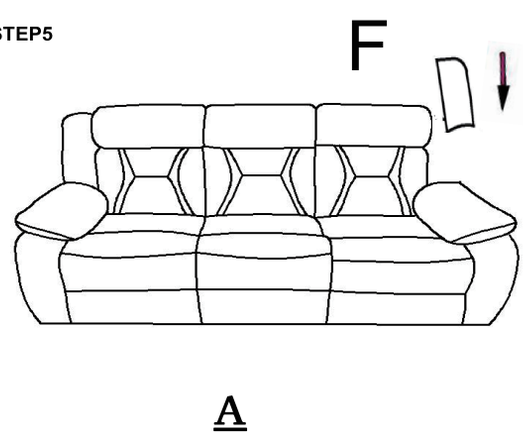

STEP6

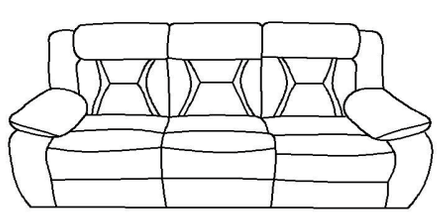

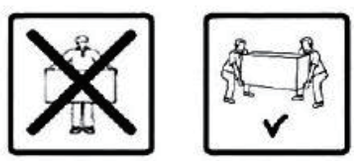

COASTERFURNITURE.COM

ITEM: 602261

ASSEMBLY INSTRUCTIONS

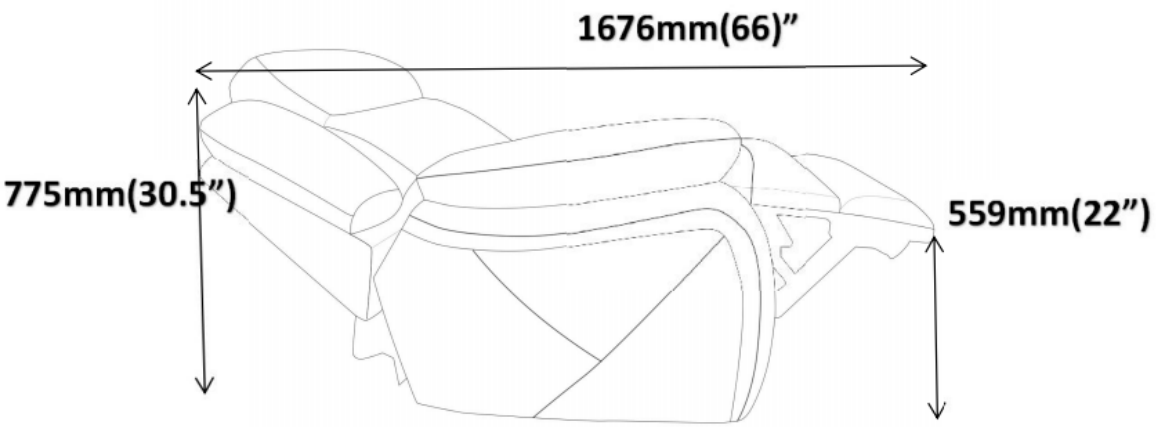

Note : Dimension tolerance ±5%

COASTER®
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

602262
MOTION LOVESEAT WITH CONSOLE

REVISION 0 : 05/17/2019

ITEM: 602262

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

Assembly Instruction

ASSEMBLY TIPS:
1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Warning !
1. Do not attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and intended for commercial establishment.

ASSEMBLY TIME PER UNIT:	15MINUTES

PARTS IDENTIFICATION

A	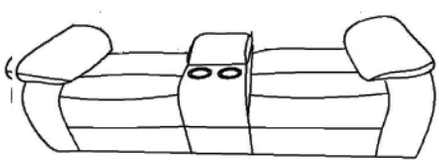	BASE	1PC
B		LEFT BACK	1PC
C		RIGHT BACK	1PC
D		LEFT EAR	1PC
E		RIGHT EAR	1PC
F		CONSOLE BACK	1PC

HARDWARE PACKAGE

1		BOLT	2PCS

ITEM: 602262

ASSEMBLY INSTRUCTIONS

STEP 1

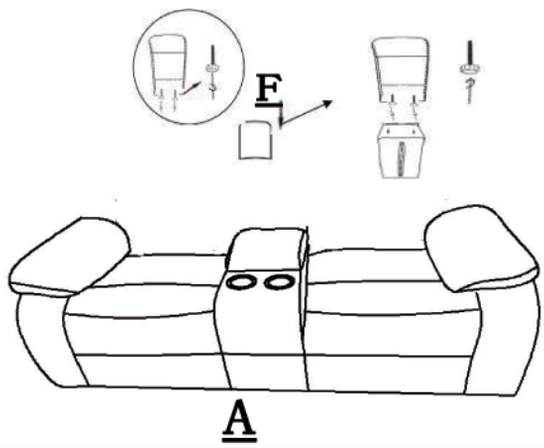

STEP 2

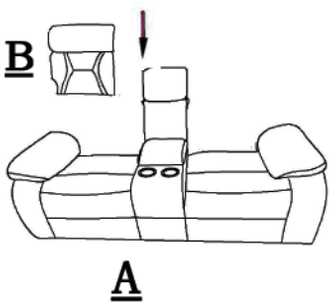

STEP3

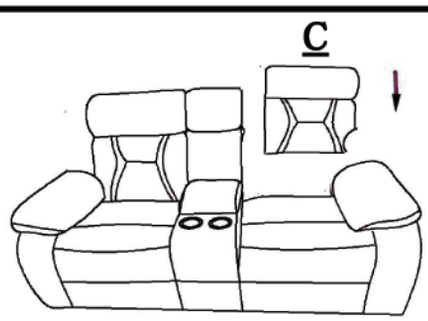

STEP4

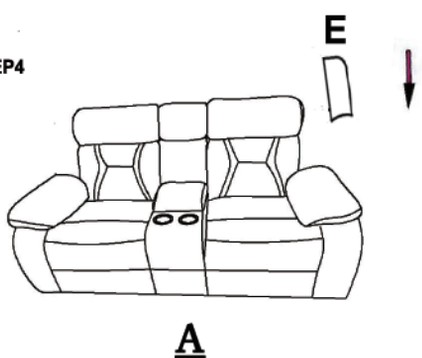
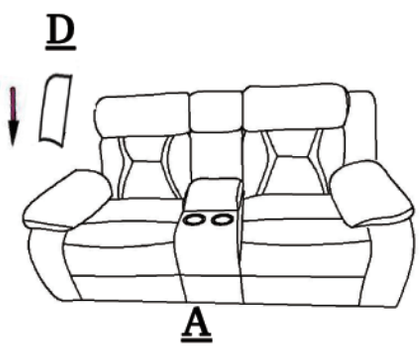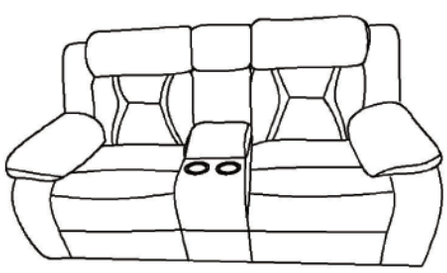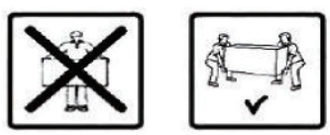
STEP5