ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

708067
END TABLE

COASTER®
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:
1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

⚠ **WARNING!**
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME	30 MINUTES

PARTS IDENTIFICATION

A	TOP		1 PC
B	SIDE PANEL		2 PCS
C	DIVIDER PANEL		2 PCS
D	BOTTOM PANEL		1 PC

HARDWARE IDENTIFICATION

Z

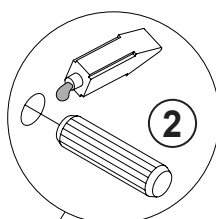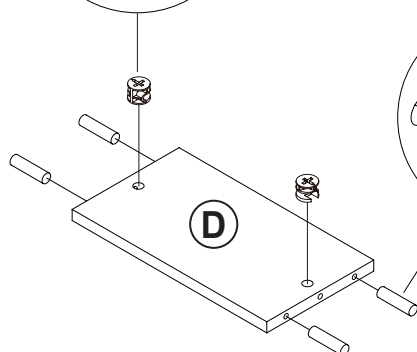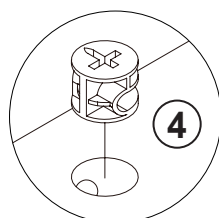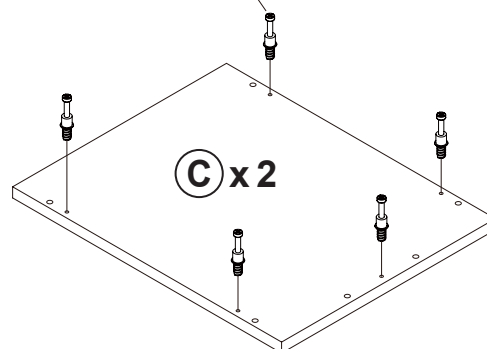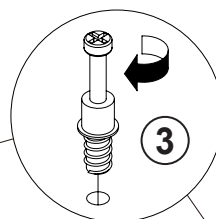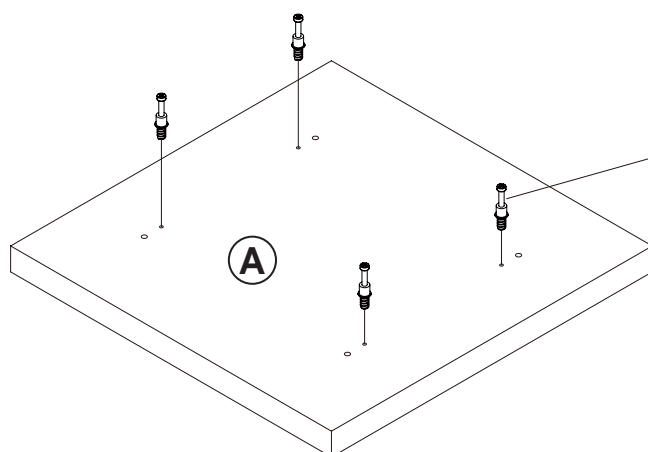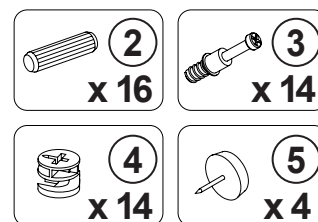| NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	4	CAM LOCK Ø15x12mm SR		14 PCS
2	WOODEN DOWEL Ø 8x30mm		16 PCS	5	PLASTIC FEET Ø15mm		4 PCS
3	CAM BOLT Ø7x35.5mm SR		14 PCS	6	STICKER Ø20mm		2 PCS

NOTE:
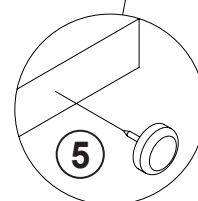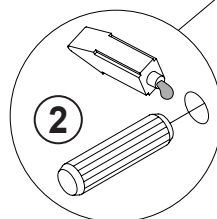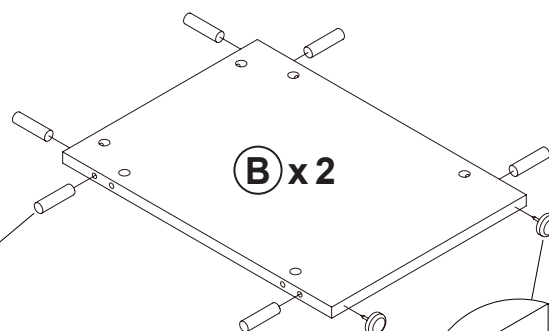**Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.**
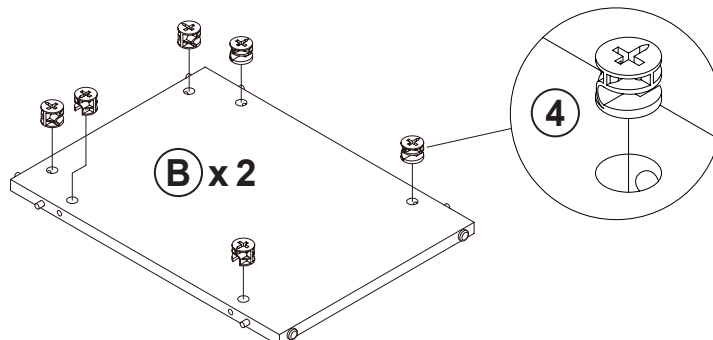
STEP 1

COASTER
FINE FURNITURE

| ② x 16 | ③ x 14 |
| ④ x 14 | ⑤ x 4 |

A

③

C x 2

④

Apply glue on all wooden dowels to ensure integrity of the structure.

D

②

B x 2

②

⑤
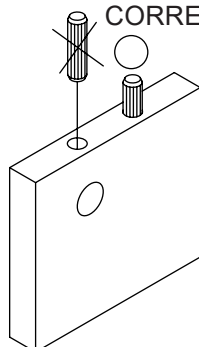
INCORRECT   CORRECT

B x 2

④

COASTERFURNITURE.COM

STEP 2
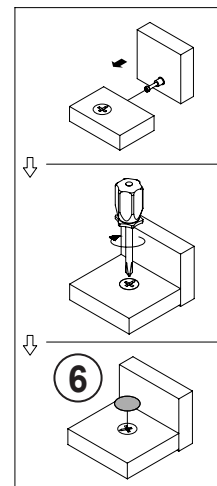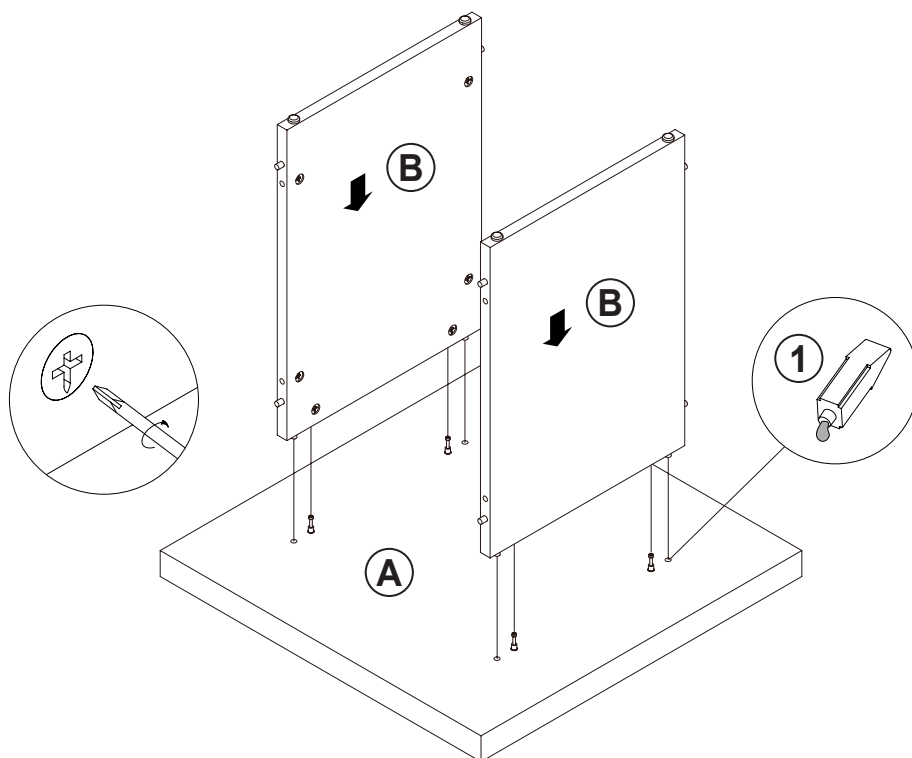
STEP 3

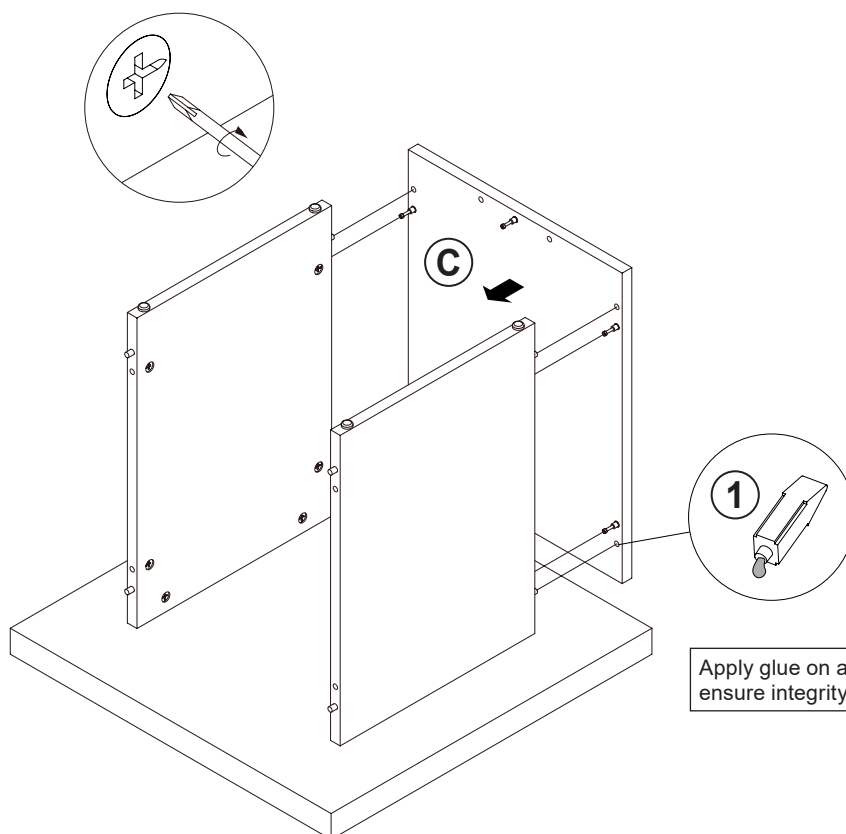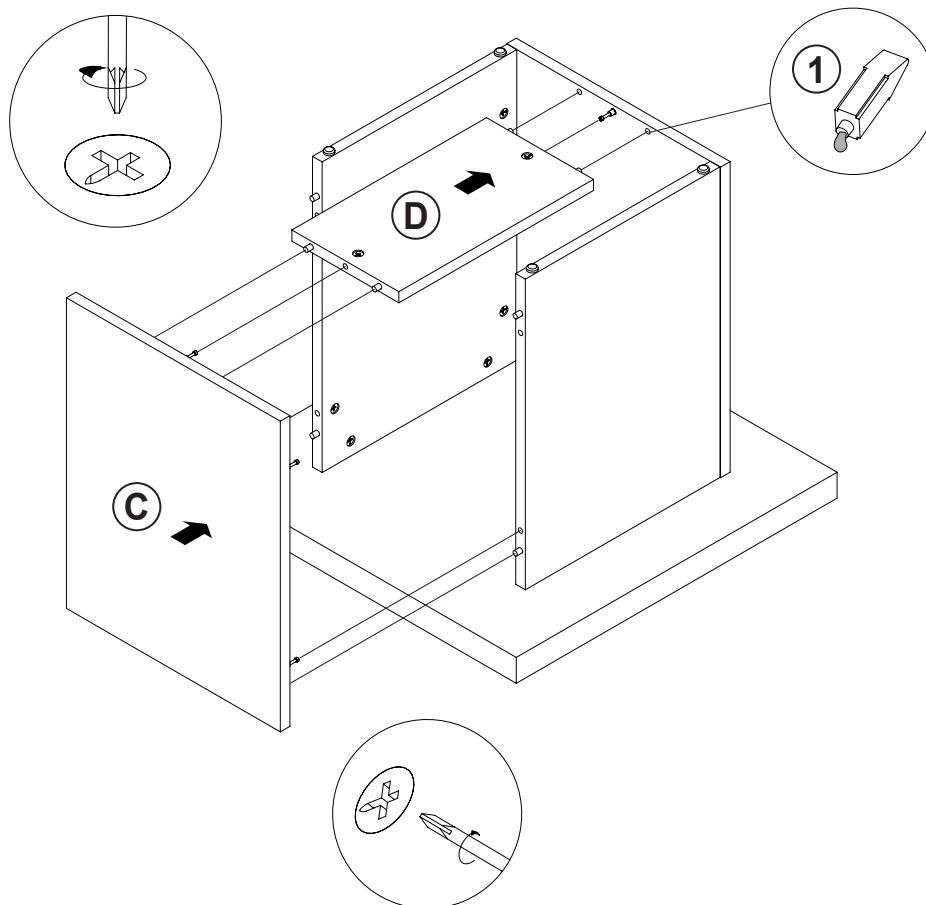Apply glue on all wooden dowels to ensure integrity of the structure.

COASTERFURNITURE.COM
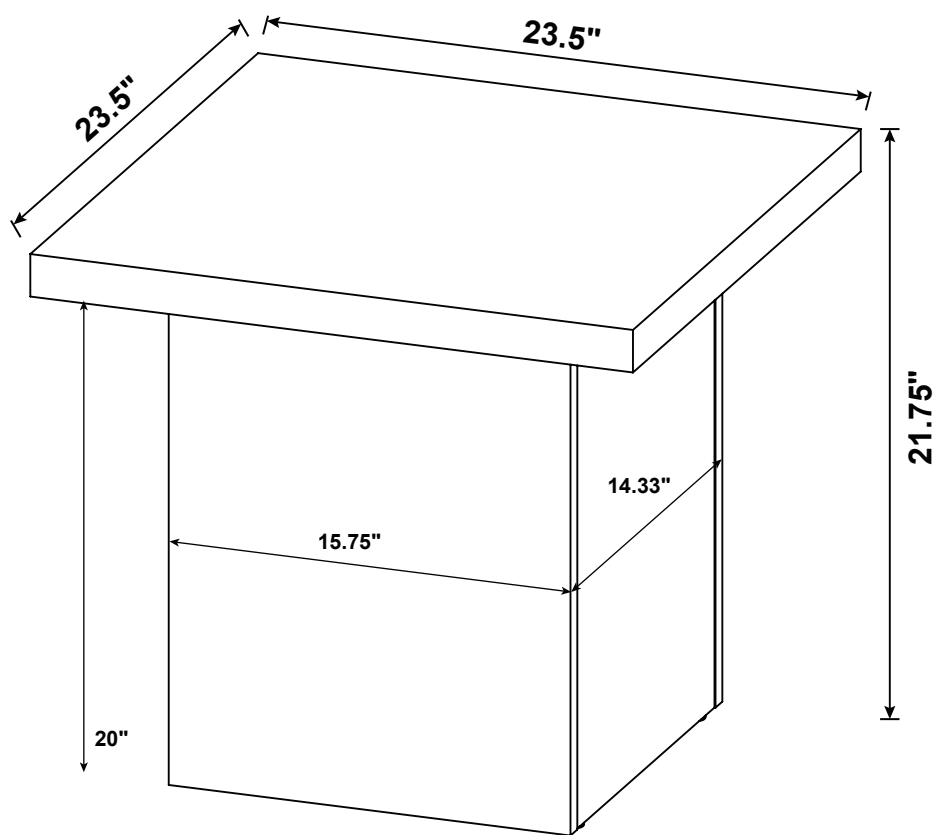
STEP 4

COASTER
FINE FURNITURE

6
x 4

D

C

1

STEP 5

COMPLETE

COASTERFURNITURE.COM

COASTER
FINE FURNITURE

23.5"

23.5"

23.5"

21.75"

14.33"

15.75"

20"

Note : Dimension tolerance ±5%

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:
1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.
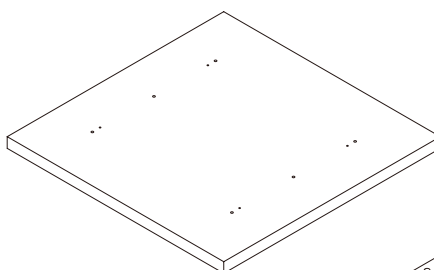
⚠ **WARNING!**
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
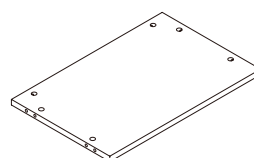
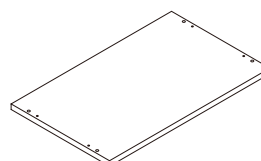| ASSEMBLY TIME | 30 MINUTES |

PARTS IDENTIFICATION

A	**TOP**		**1 PC**
B	**SIDE PANEL**		**2 PCS**
C	**DIVIDER PANEL**		**2 PCS**

HARDWARE IDENTIFICATION

Z

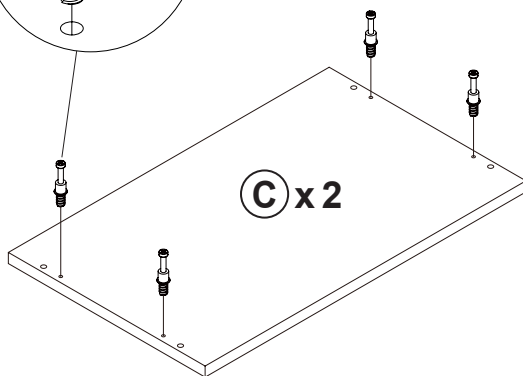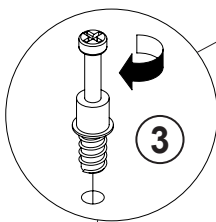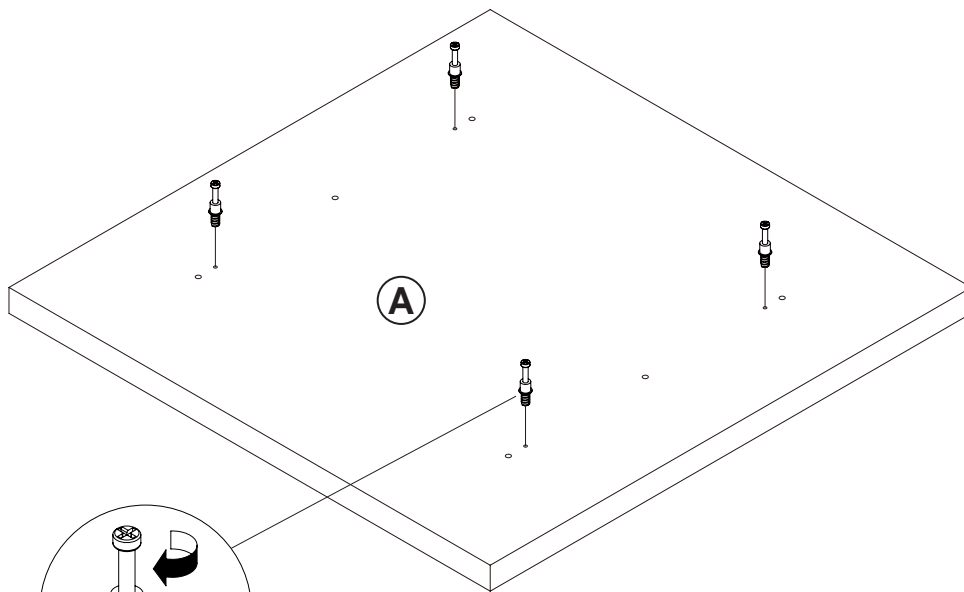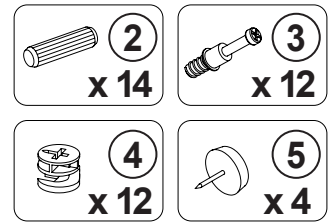| NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	4	CAM LOCK Ø15x12mm SR		12 PCS
2	WOODEN DOWEL Ø 8x30mm		14 PCS	5	PLASTIC FEET Ø15mm		4 PCS
3	CAM BOLT Ø7x35.5mm SR		12 PCS	6	STICKER Ø20mm		2 PCS

NOTE:
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

COASTERFURNITURE.COM

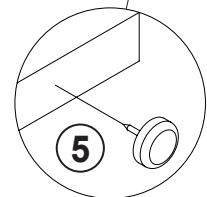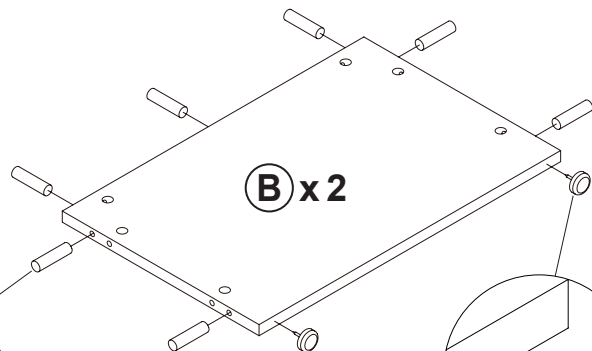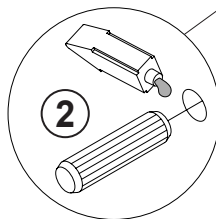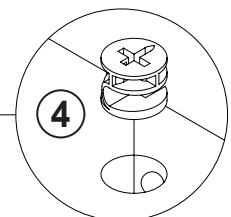# ITEM: **708068**

STEP 1

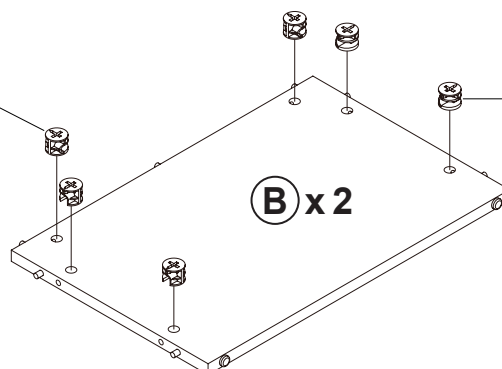|			
② x 14	③ x 12	④ x 12	⑤ x 4

A

③

C x 2

B x 2

Apply glue on all wooden dowels to ensure integrity of the structure.

②

⑤

INCORRECT
CORRECT

④

④

B x 2

B x 2

ITEM: **708068**

COASTER
FINE FURNITURE

STEP 2

6
x 4

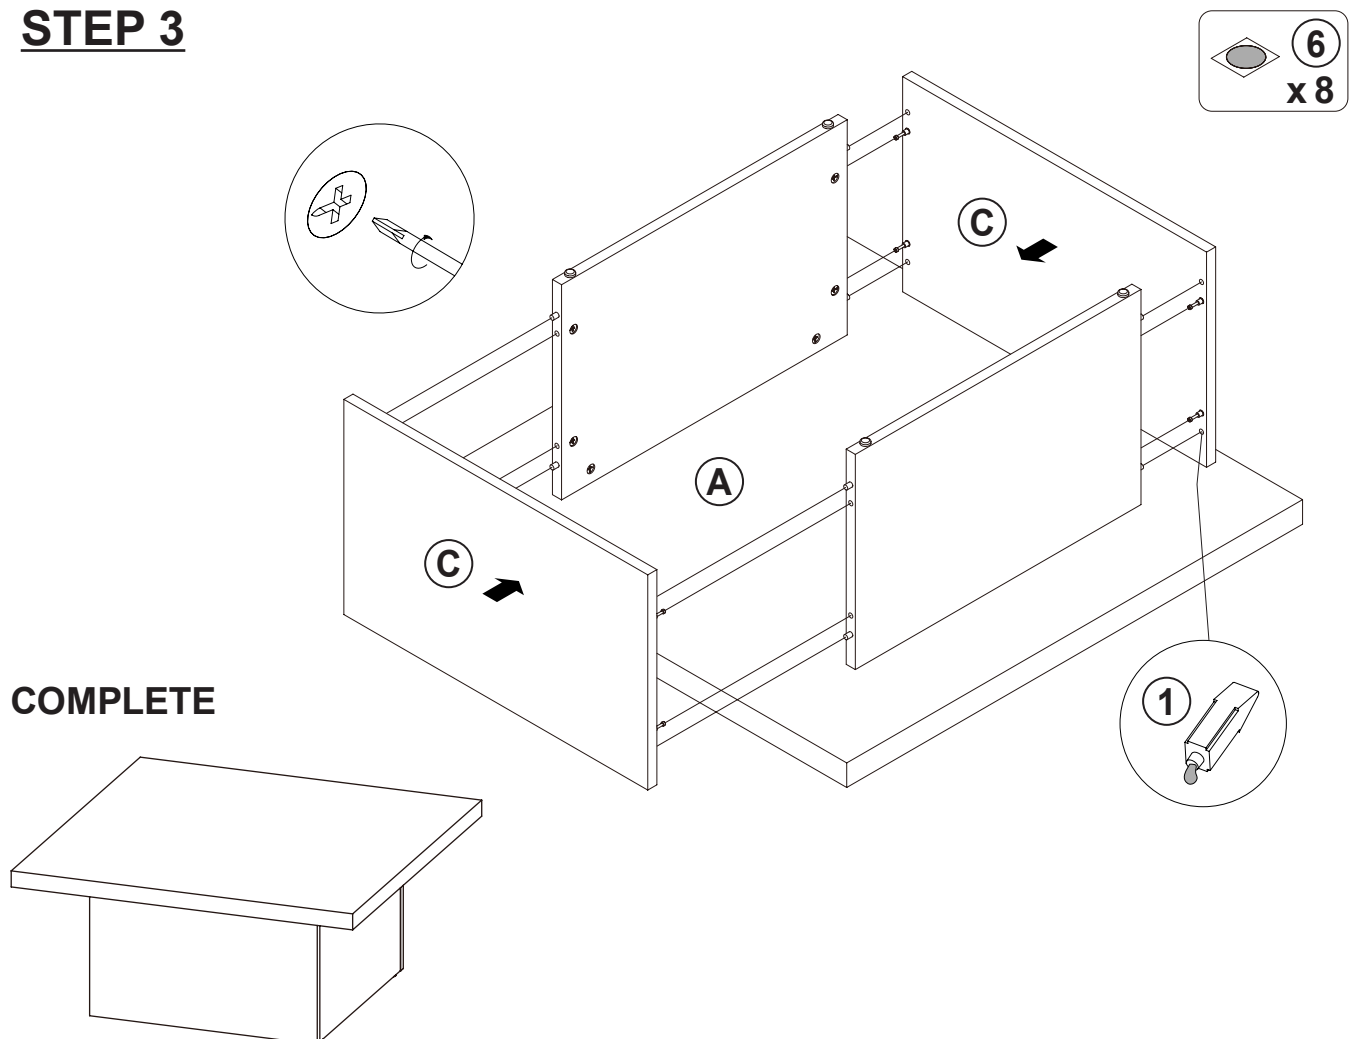Apply glue on all wooden dowels to ensure integrity of the structure.

A

B

B

1

6

STEP 3

6
x 8

C

A

C

1

COMPLETE

COASTERFURNITURE.COM

COASTER
FINE FURNITURE

35.5"

35.5"

16.25"

22.2"

23.62"

14.69"

Note : Dimension tolerance ±5%

COASTERFURNITURE.COM