COASTER®
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

723271
TV CONSOLE

COASTERFURNITURE.COM

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:
1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
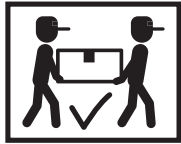
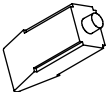| ASSEMBLY TIME | 40 MINUTES | MAX TV SIZE: 50" |

PARTS IDENTIFICATION
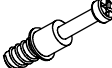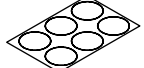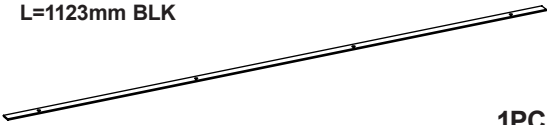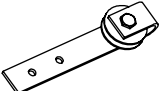
A	LEFT SIDE PANEL	1PC		H	MIDDLE BACK PANEL		1PC
B	RIGHT SIDE PANEL	1PC		I	LARGE ADJUSTABLE SHELF		1PC
C	DIVIDER PANEL	2PCS		J	SMALL ADJUSTABLE SHELF		2PCS
D	BOTTOM PANEL	1PC		K	LEFT DOOR		1PC
E	TOP PANEL	1PC		L	RIGHT DOOR		1PC
F	CROSS PANEL	1PC					
G	BACK PANEL	2PCS					

NOTE:
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

COASTERFURNITURE.COM

COASTER
FINE FURNITURE

Z
HARDWARE IDENTIFICATION

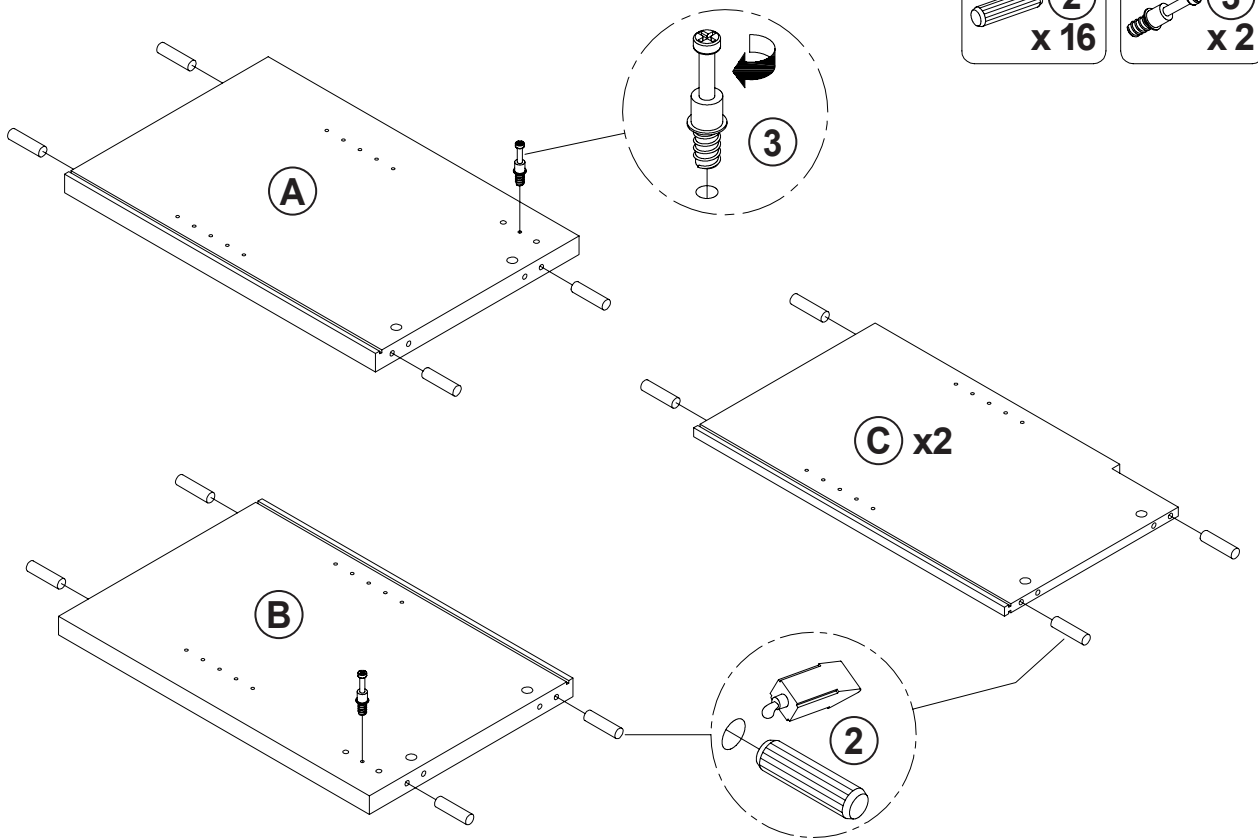| NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1PC	9	SHORT BOLT M6x20mm BLK		8PCS
2	WOODEN DOWEL ⌀8x30mm		22PCS	10	ALLEN WRENCH 4mm SR		1PC
3	CAM BOLT ⌀7x35.5mm SR		13PCS	11	STICKER ⌀20mm		3PCS
4	CAM LOCK ⌀15xl2mm SR		13PCS	12	FOOT ⌀35xH19mm		6PCS
5	BOLT ⌀9.5x55mm SR		8PCS	13	TRACK BAR L=1123mm BLK		1PC
6	PIN FOR ADJUSTABLE SHELF ⌀4.9x8mm SR		12PCS				
7	PIN FOR DOOR ⌀5.8x25mm BLK		2PCS	14	TRACK SPACER ⌀25x25mm BLK		4PCS
8	LONG BOLT M6x44mm BLK		4PCS	15	ROLLER ⌀40.5x160mm BLK		4PCS

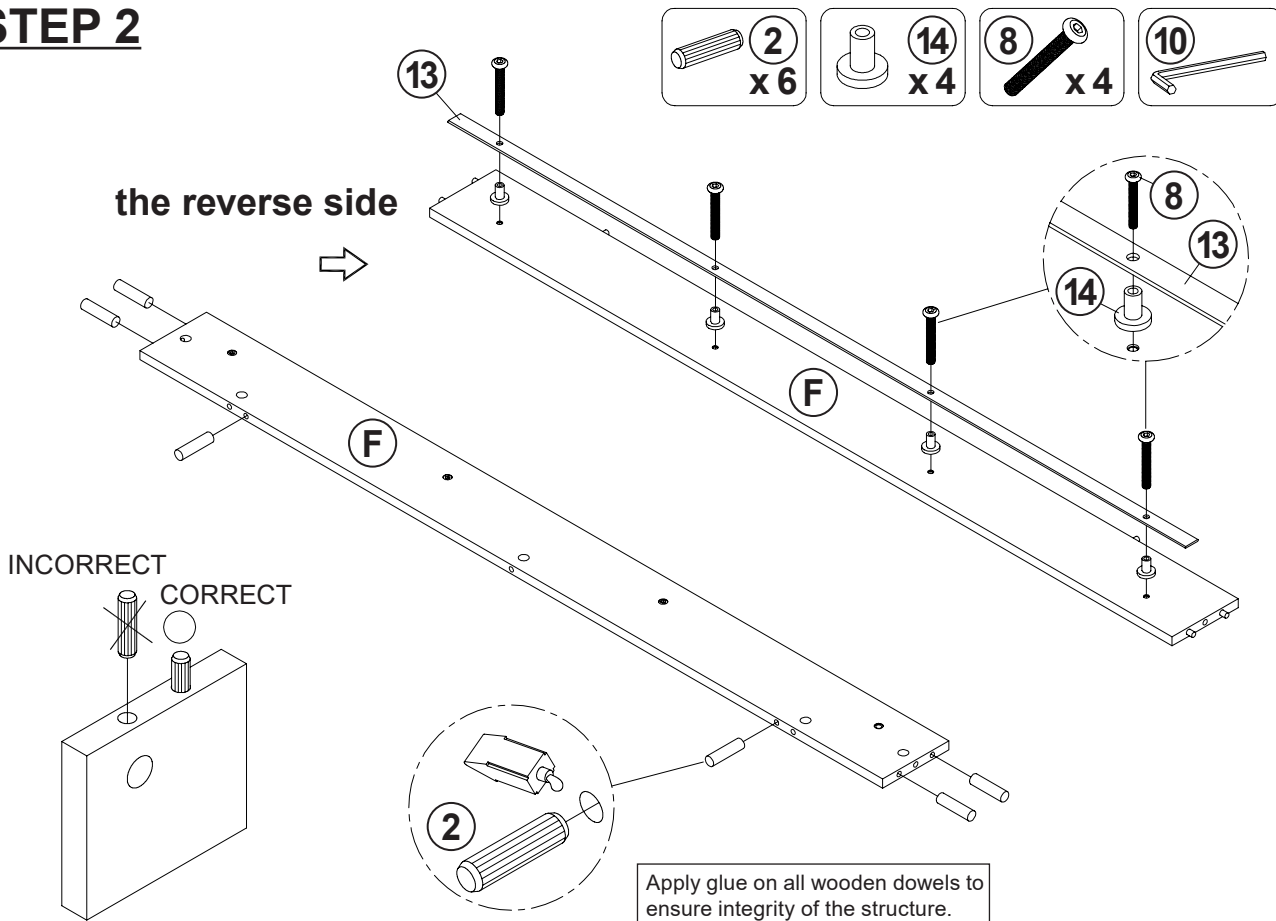**Z12,Z13,Z14,Zl5 not included in blister packaging.**

NOTE:
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

COASTERFURNITURE.COM

COASTER
FINE FURNITURE

STEP 1

| 2 x 16 | 3 x 2 |

A

C x2

B

2

STEP 2

| 2 x 6 | 14 x 4 | 8 x 4 | 10 |

13

the reverse side

8

13

14

F

F

F

INCORRECT   CORRECT

2

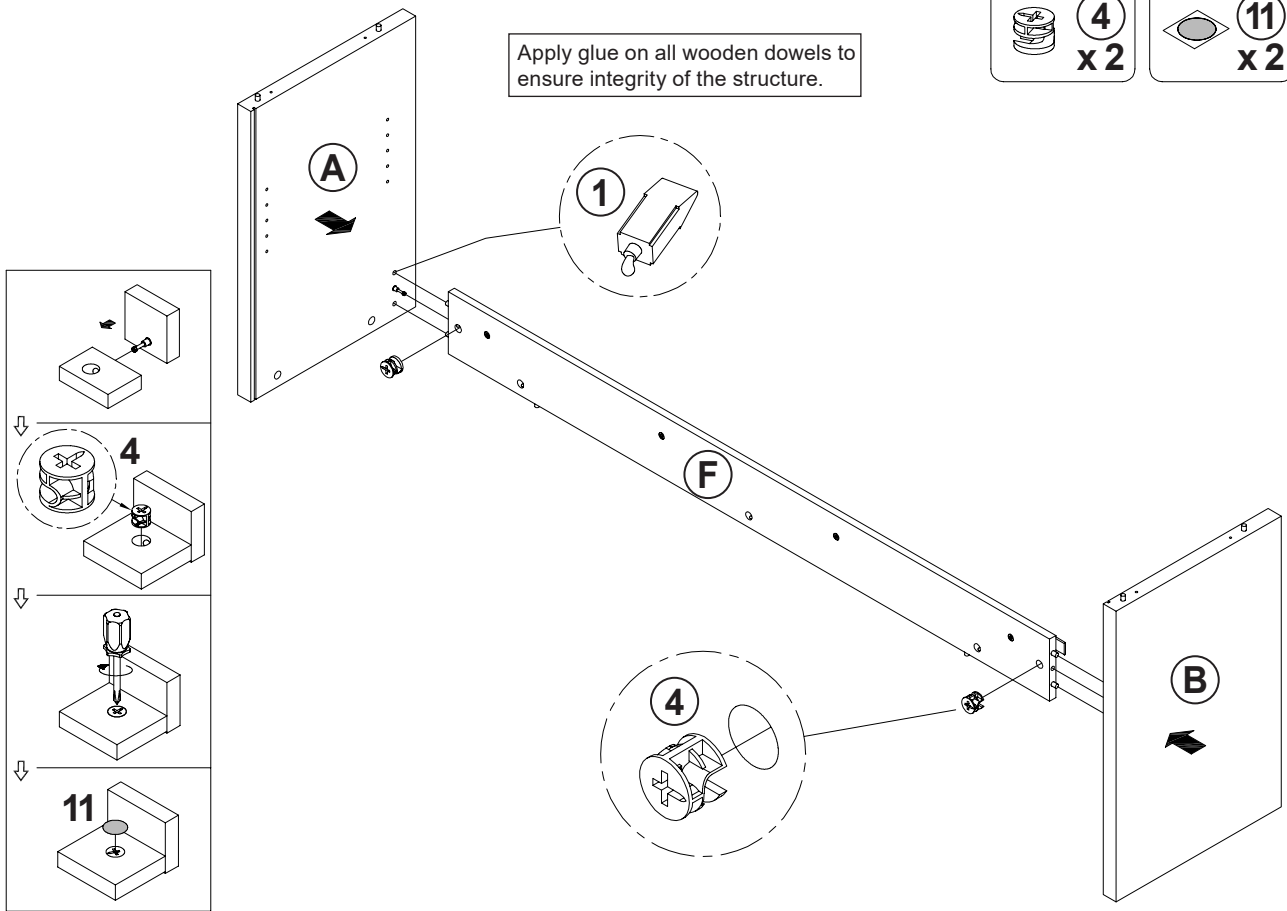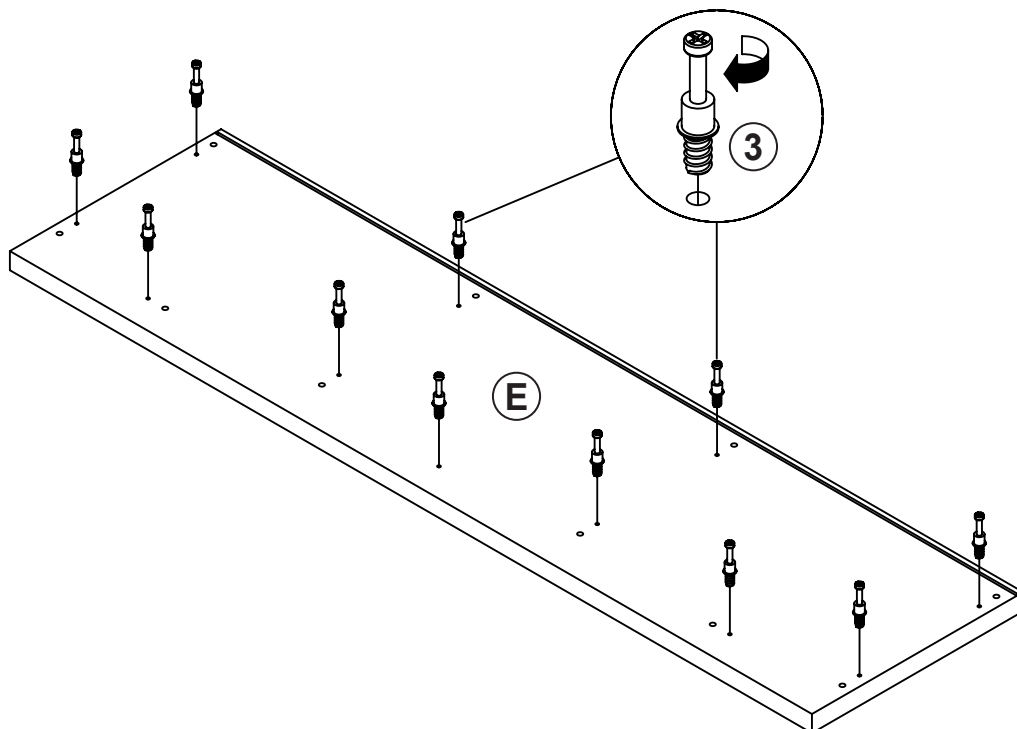Apply glue on all wooden dowels to ensure integrity of the structure.

COASTER
FINE FURNITURE

STEP 3

Apply glue on all wooden dowels to ensure integrity of the structure.

④ x 2   ⑪ x 2

A

①

4

11

F

4

B

STEP 4

③ x 11

③

E

COASTER
FINE FURNITURE

STEP 5
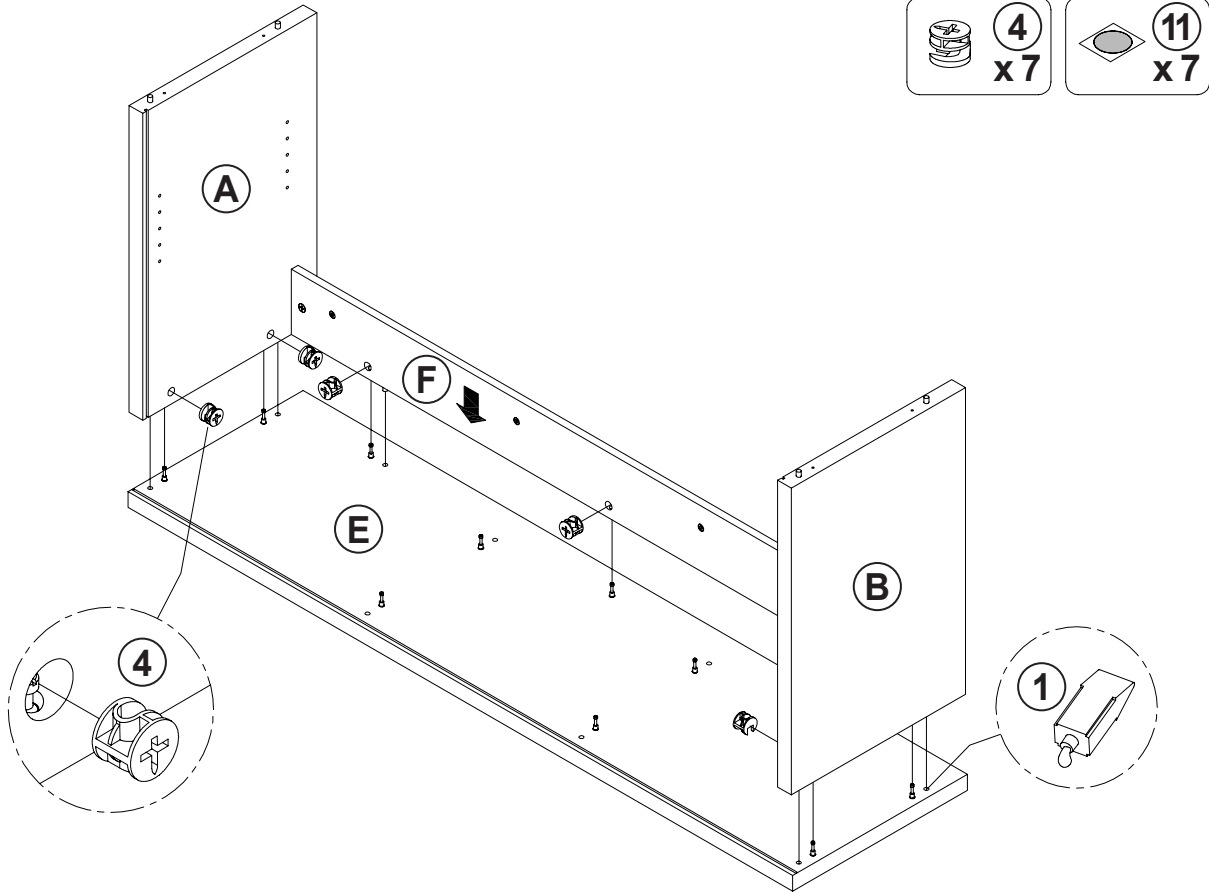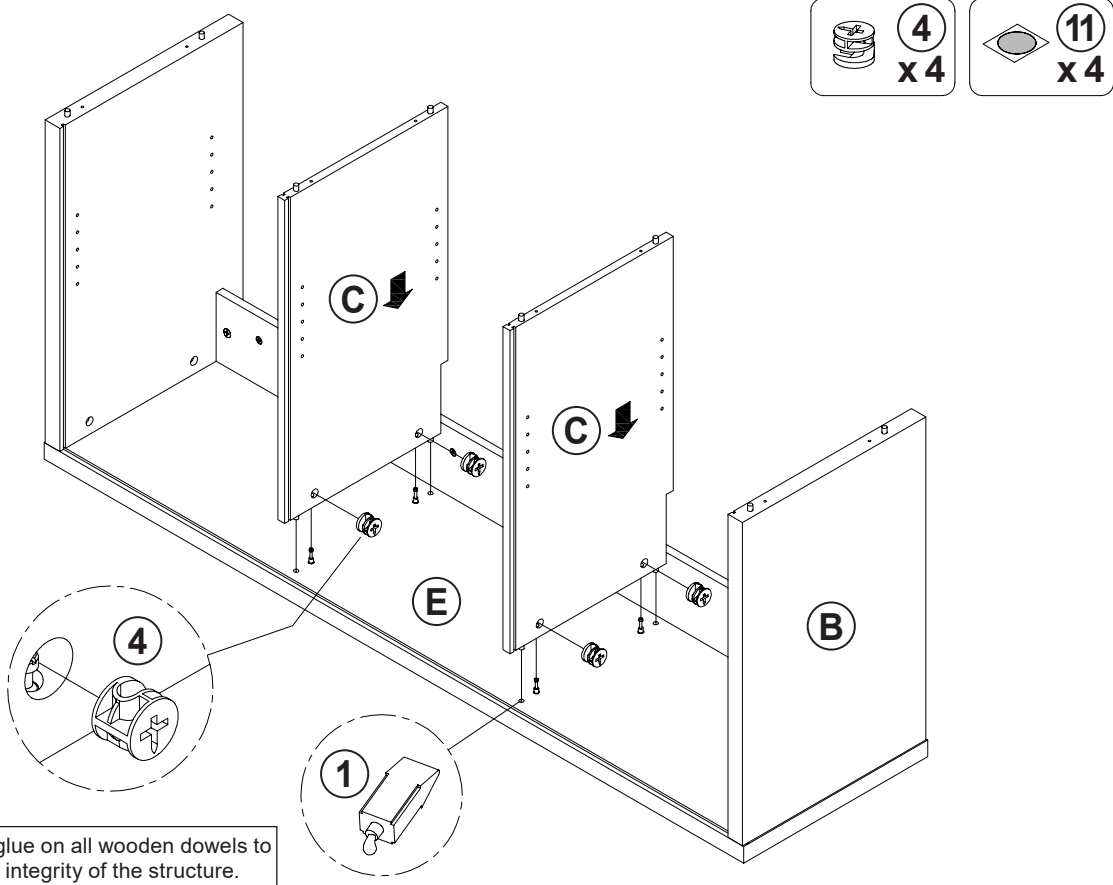
④ x 7   ⑪ x 7

A

F

E

④

B

①

STEP 6

④ x 4   ⑪ x 4

C

C

④

E

B

①

Apply glue on all wooden dowels to
ensure integrity of the structure.

COASTERFURNITURE.COM

COASTER®
FINE FURNITURE

STEP 7

STEP 8

5 | x8
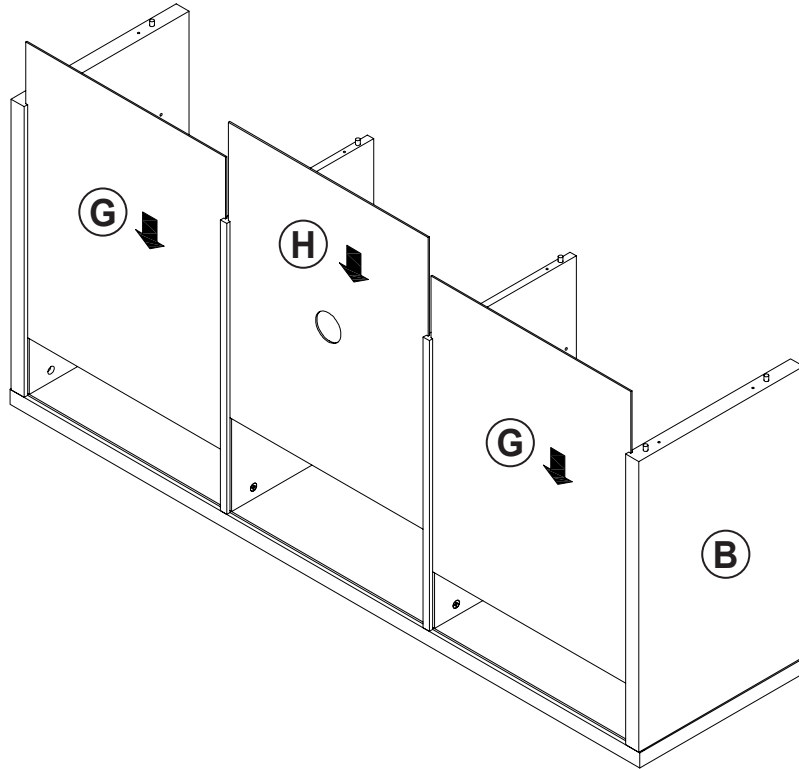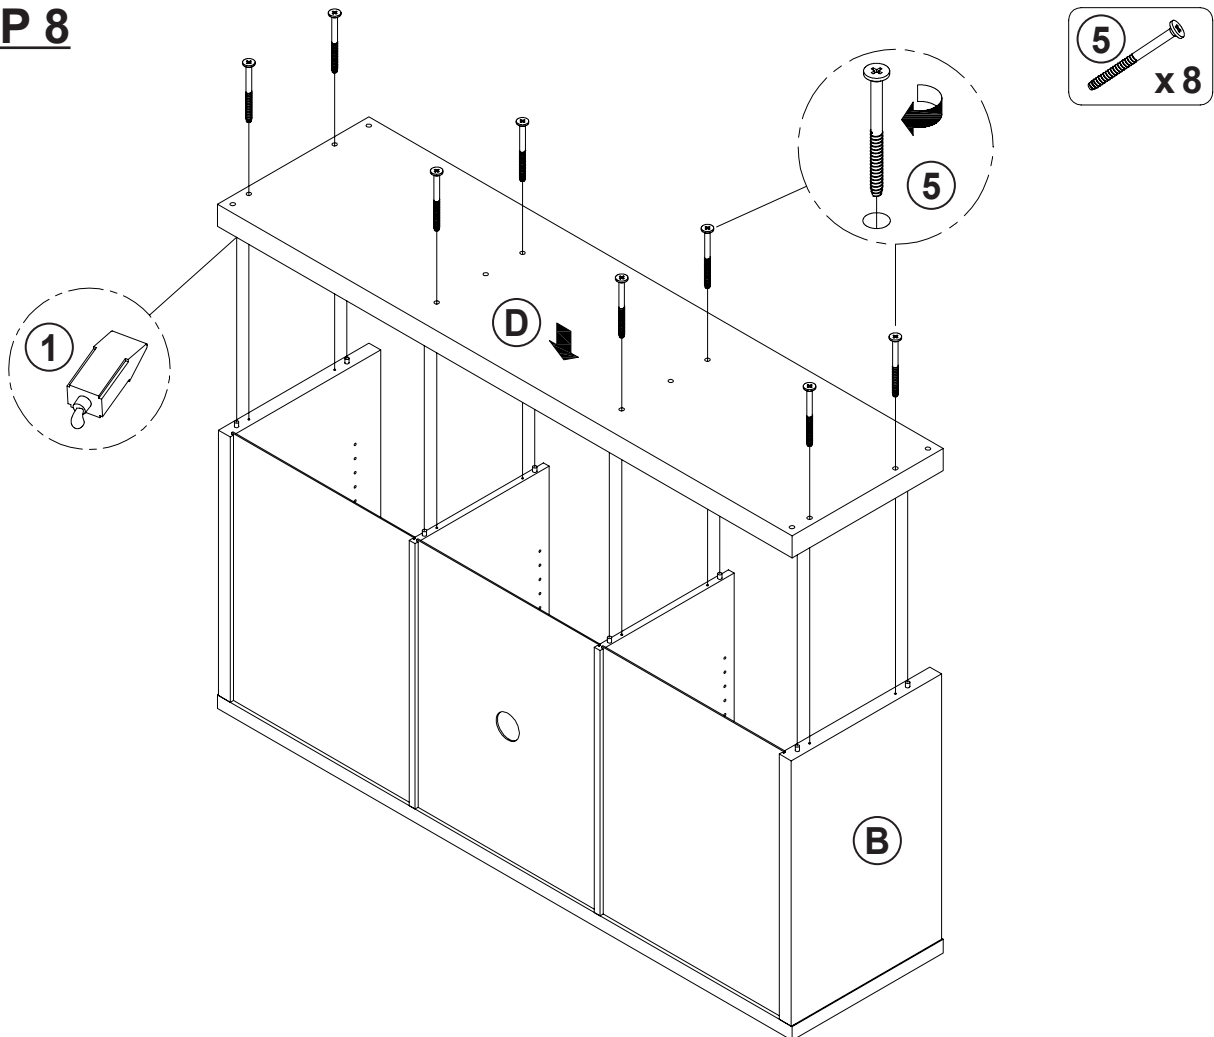
COASTER
FINE FURNITURE

STEP 9

⑫ x6

Ⓓ

⑫

STEP 10

⑥ x12 ⑦ x2

Ⓙ Ⓘ Ⓙ

Ⓓ

⑥

⑦

COASTERFURNITURE.COM

STEP 11

STEP 12

COASTERFURNITURE.COM

STEP 13

STEP 14
COMPLETE

ITEM: **723271**

15.5"

47.25"

27.5"

14.09"

19.53"

44.61"

13.5"

13.5"

12.99"

7.76"

12.6"

8.39"

12.99"

16.38"

9.61"

9.61"

18.58"

15.12"

9.61"
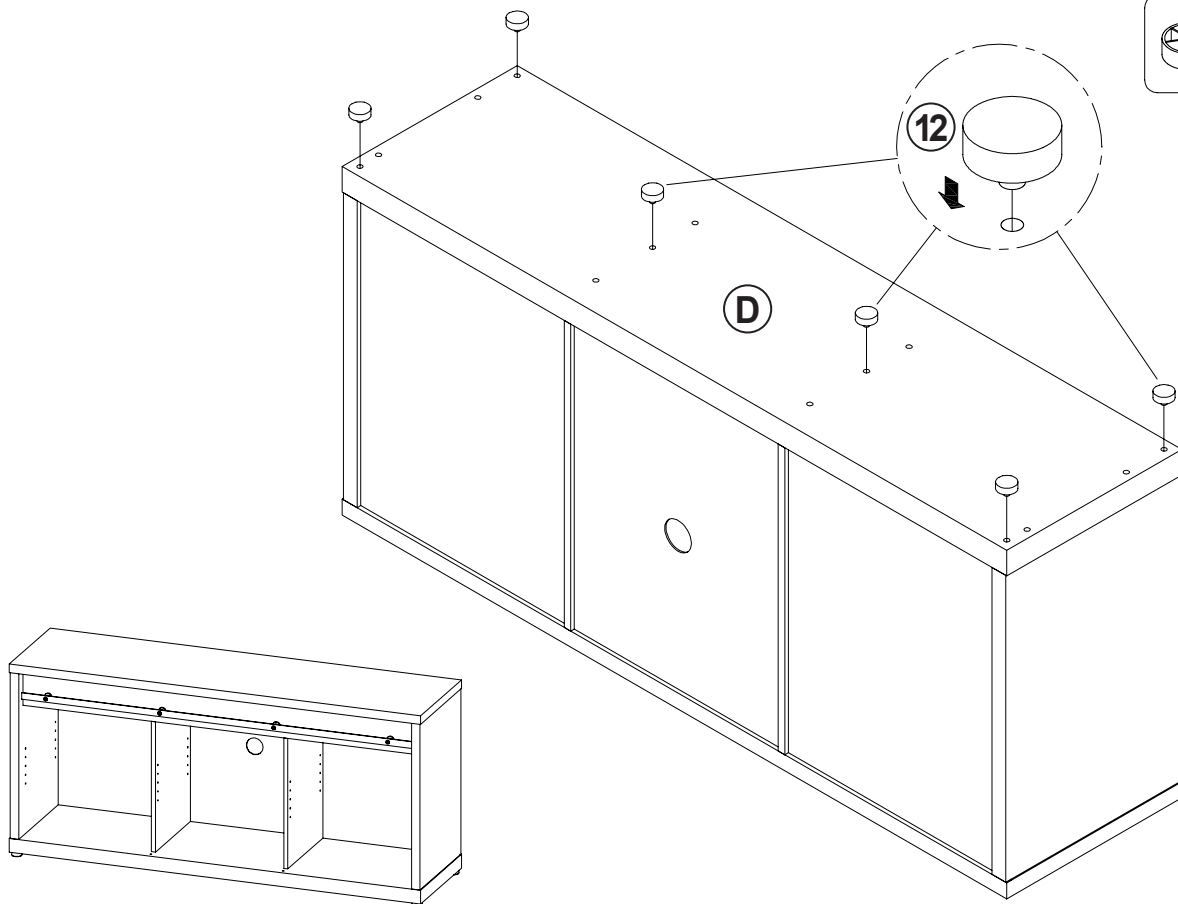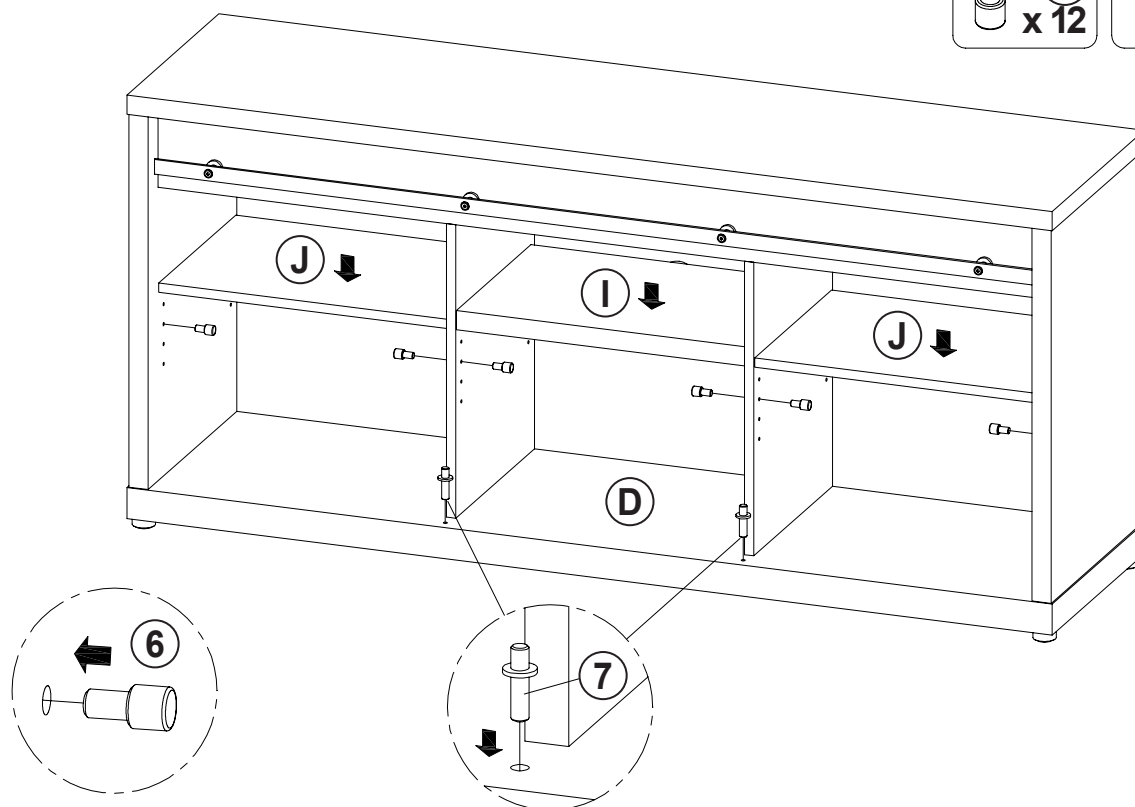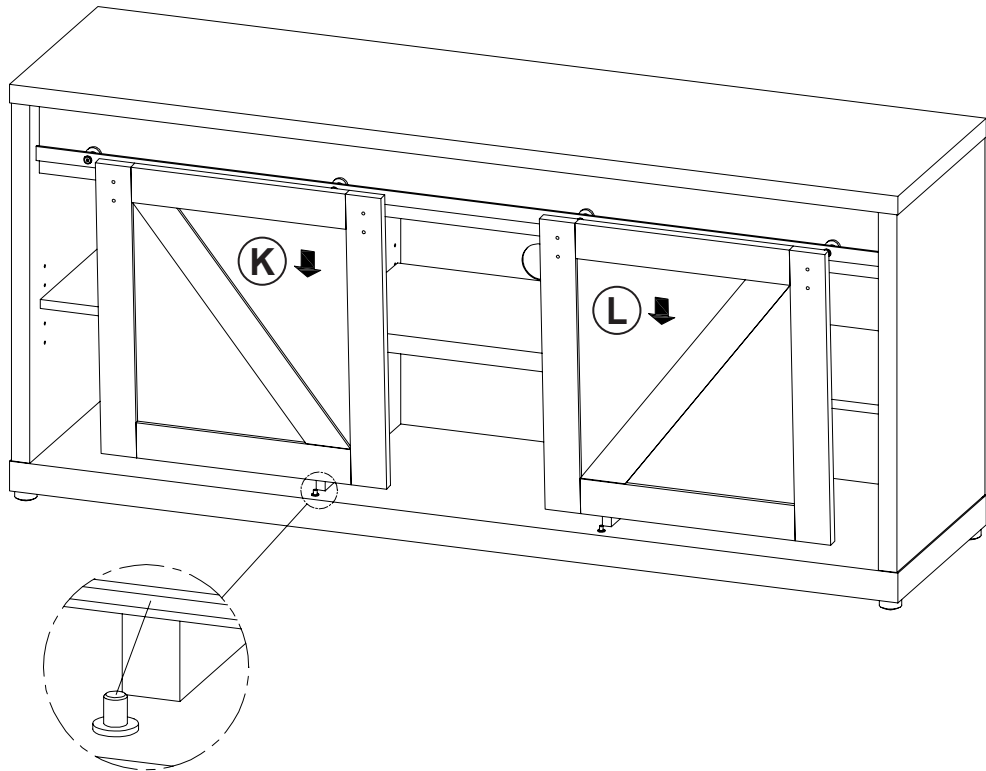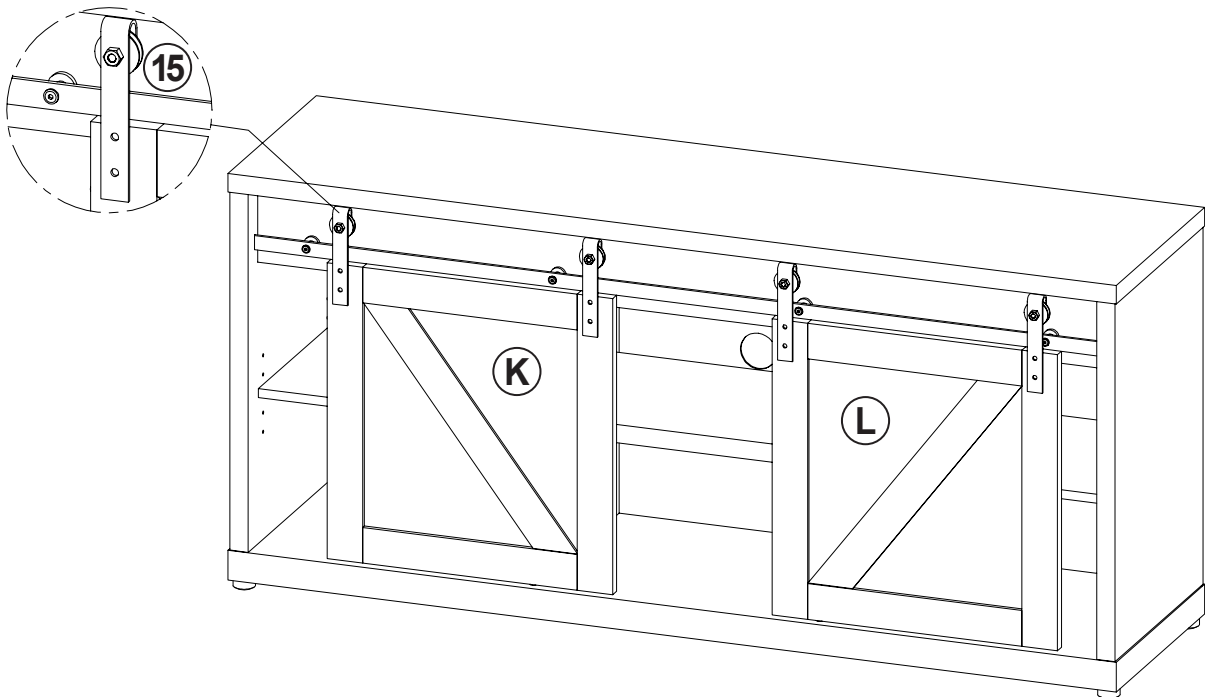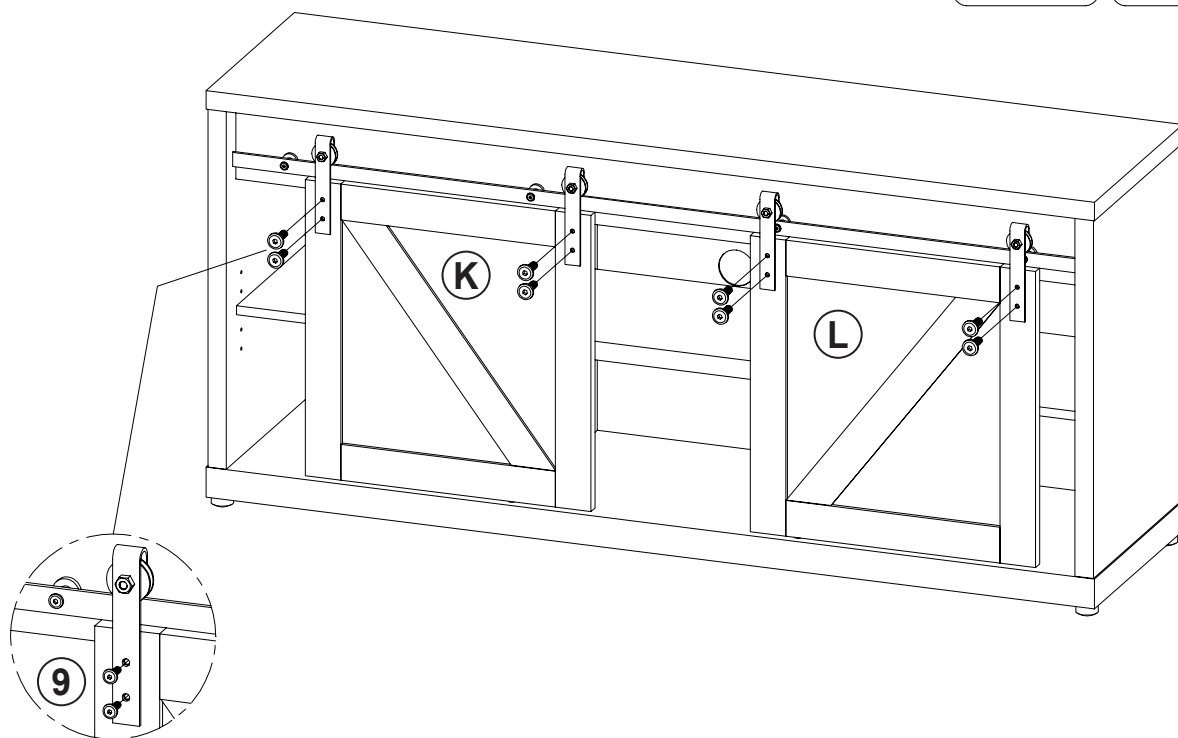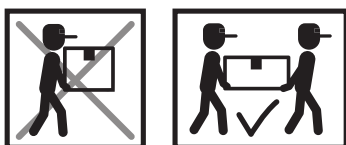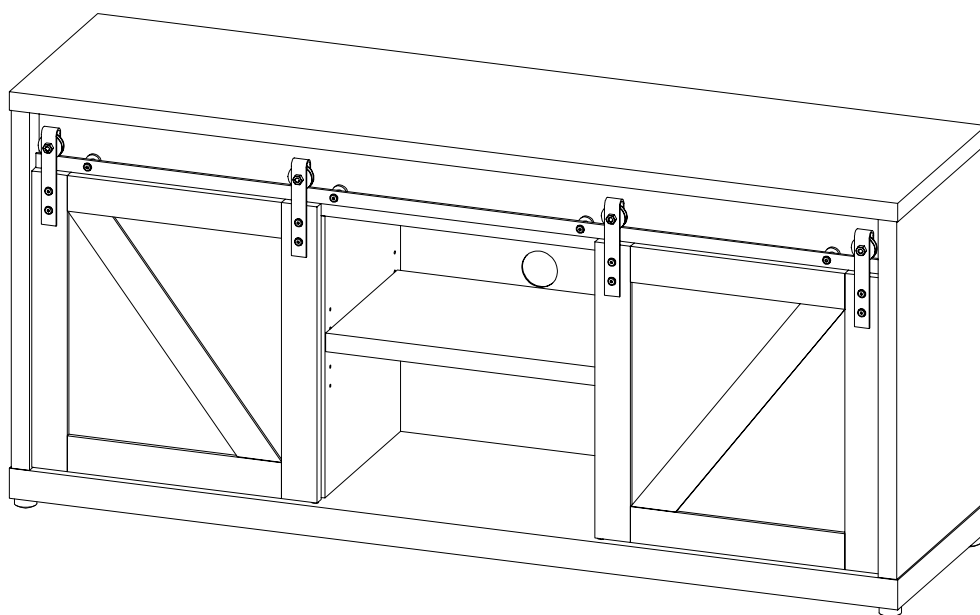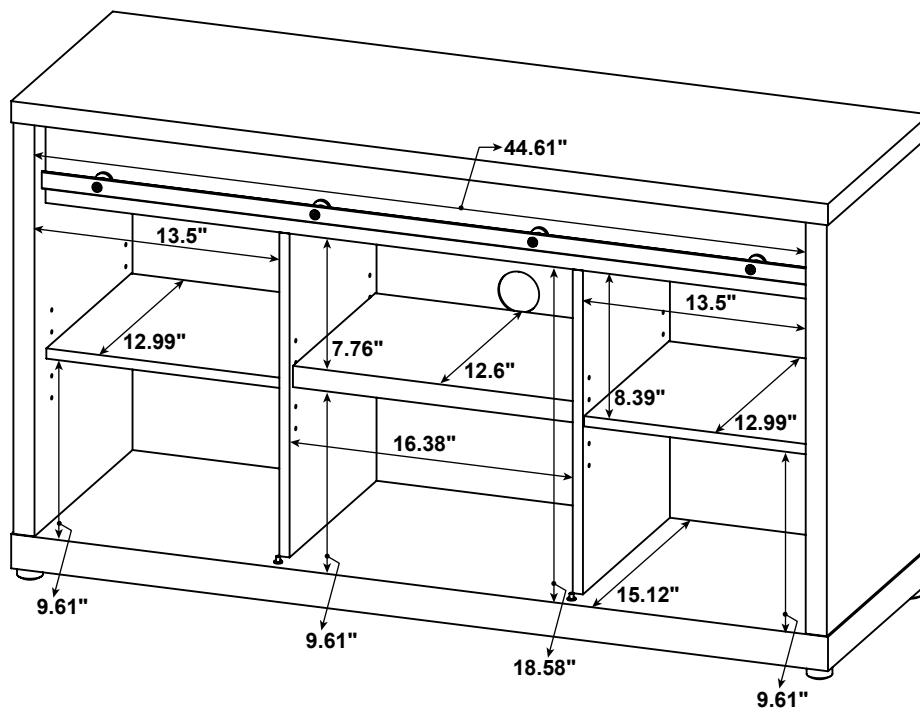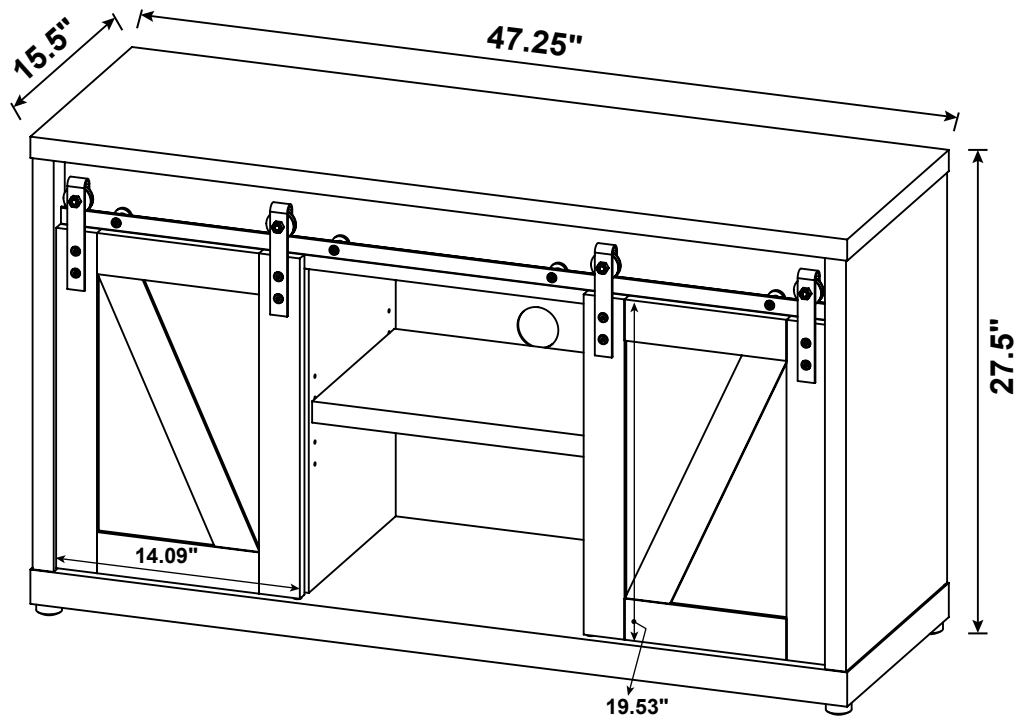
Note : Dimension tolerance ±5%