COASTER®
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

182355
BAR UNIT

REVISION 0 : 09/13/2023

ITEM:182355

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

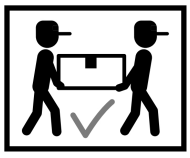

ASSEMBLY TIME | 99 MINUTES

PARTS IDENTIFICATION

A	TOP PANEL WITH LIGHT STRIP	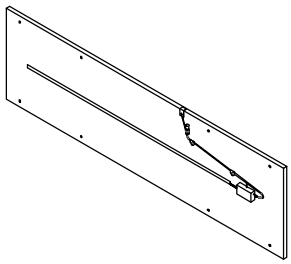	1PC
B	MIDDLE PANEL	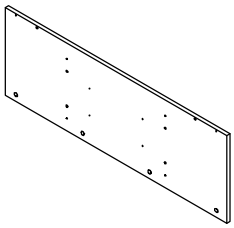	1PC
C	BACK RIGHT PANEL		1PC
D	BACK LEFT PANEL		1PC
E	MIDDLE RIGHT PANEL		1PC

ITEM:182355

ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION

F	MIDDLE LEFT PANEL		1PC
G	BOTTOM PANEL	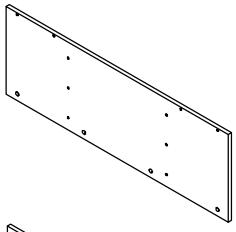	1PC
H	FRONT PANEL	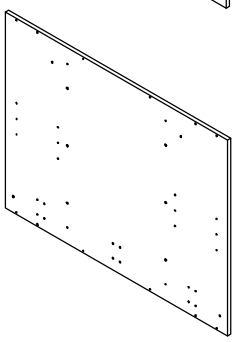	1PC
I	MIDDLE SHELF		1PC
J	LEFT AND RIGHT SHELF		2PCS
K	BACK RIGHT FRAME	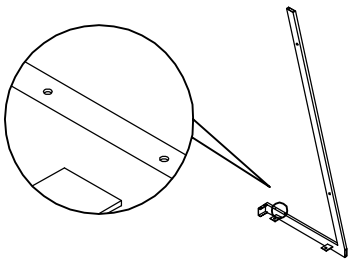	1PC

ITEM:182355

ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION

L	BACK LEFT FRAME	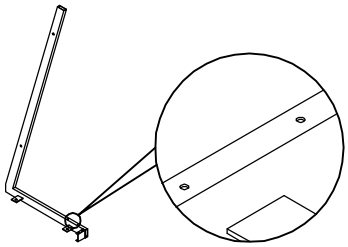	1PC
M	FRONT RIGHT FRAME	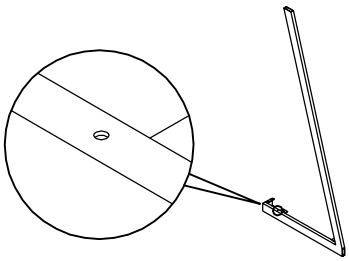	1PC
N	FRONT LEFT FRAME	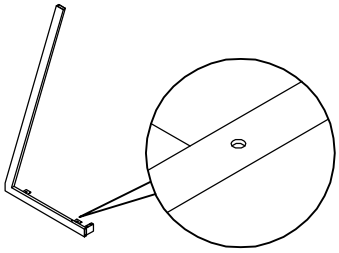	1PC
O	TOP CROSSBAR		2PCS
P	FOOTREST BAR	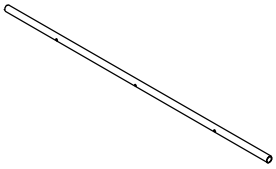	1PC
Q	BOTTOM LEG SUPPORT		3PCS

ITEM:182355

ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION

R	GLASS HOLDER	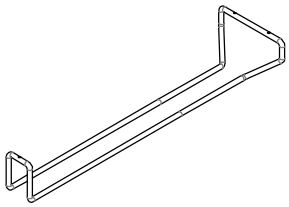	2PCS
S	STEEL GUARD	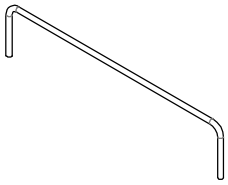	4PCS
T	BOTTLE RACK	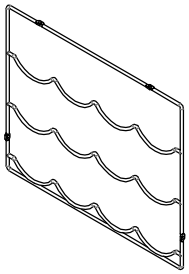	2PCS
U	BOTTLE RACK METAL	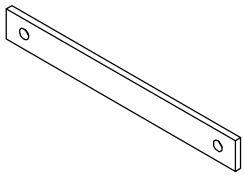	2PCS
V	POWER CORD	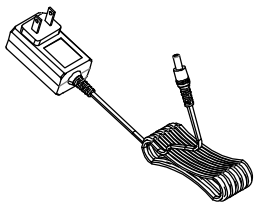	1PC
A1	POWER CORD CLAMP		3PCS

ITEM:182355

ASSEMBLY INSTRUCTIONS

Z

HARDWARE IDENTIFICATION

1	CAM BOLT (38mm)		22PCS
2	CAM LOCK (ϕ15mm)		22PCS
3	WOOD DOWEL (8 x 30mm)		22PCS
4	LONG BOLT (ϕ8 x 38mm)		10PCS
5	SMALL SCREW (3.5 x 12mm)		4PCS
6	SHORT BOLT (1/4" x 12mm SR)		31PCS
7	SMALL BOLT (1/4" x 21mm SR)		8PCS
8	SMALL BOLT (3/16" x 12mm)		10PCS
9	NUT		4PCS
10	SHELF BOLT		12PCS
11	CAP (20 x 20mm BLK)		3PCS
12	BOTTOM CAP (13 x 38mm BLK)		4PCS
13	TOP CAP (13 x 38mm SR)		8PCS
14	ROUND CAP (ϕ21mm SR)		2PCS
15	STICKER		12PCS
16	GLUE		1PC
17	ALLEN WRENCH (4mm)		1PC
18	HEXAGONAL KEY		1PC

ITEM:182355

ASSEMBLY INSTRUCTIONS

STEP 1

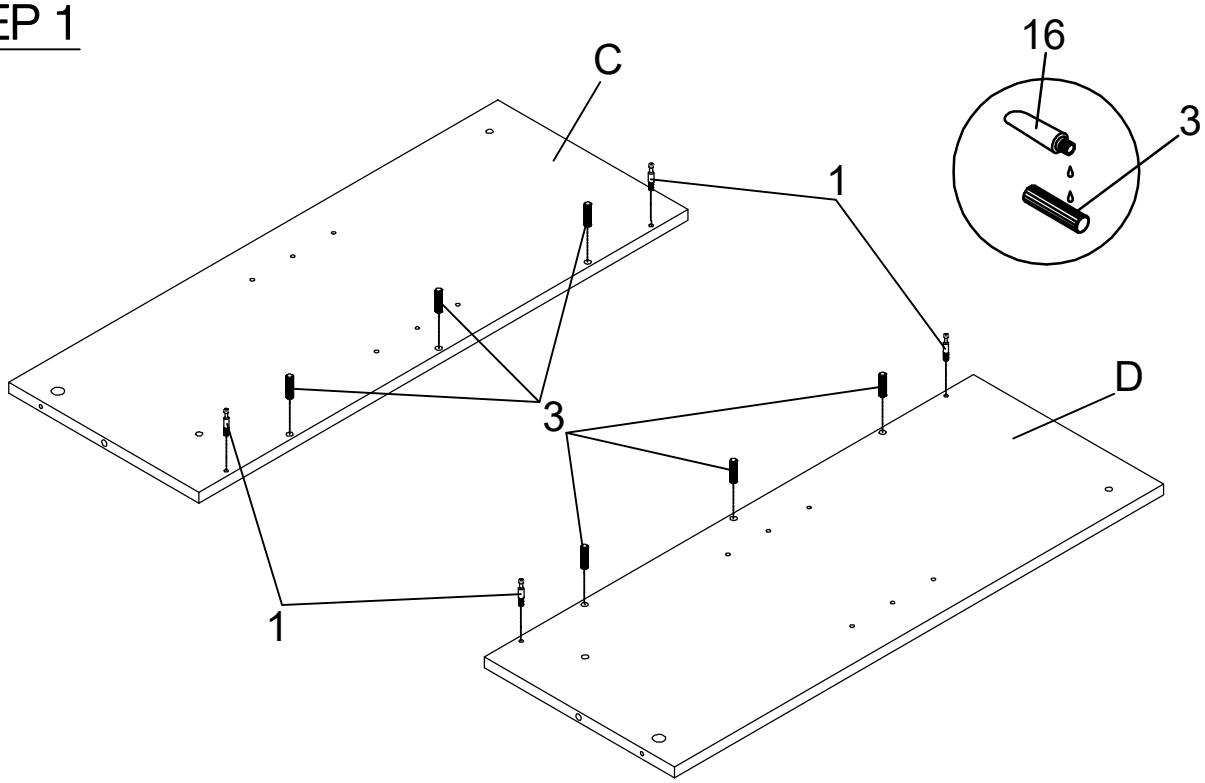

STEP 2

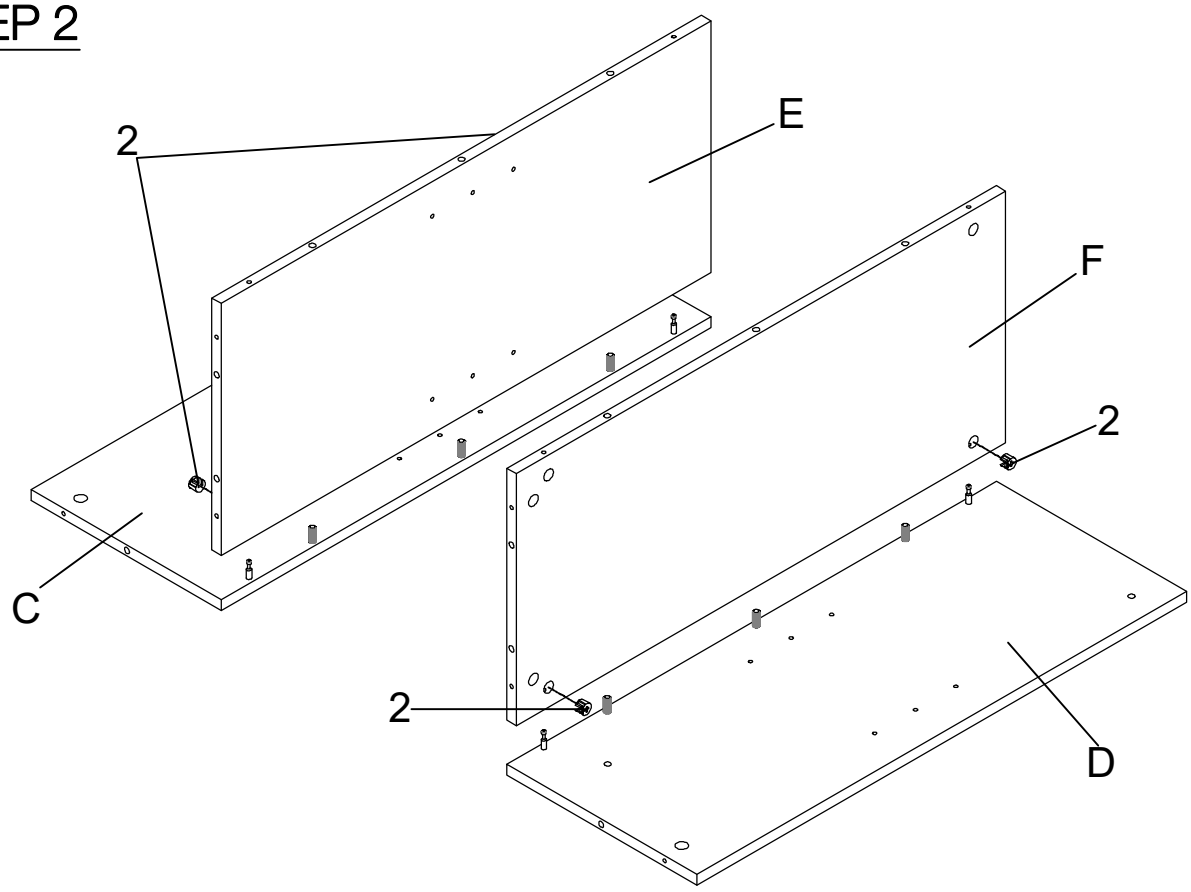

ITEM:182355

ASSEMBLY INSTRUCTIONS

STEP 3

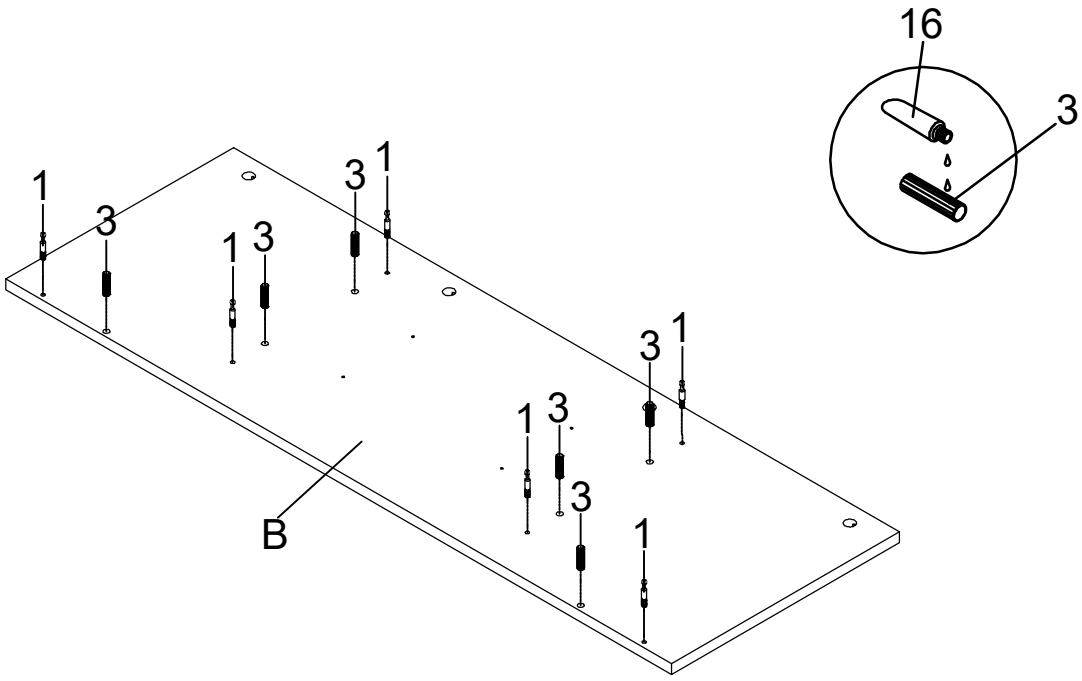

STEP 4

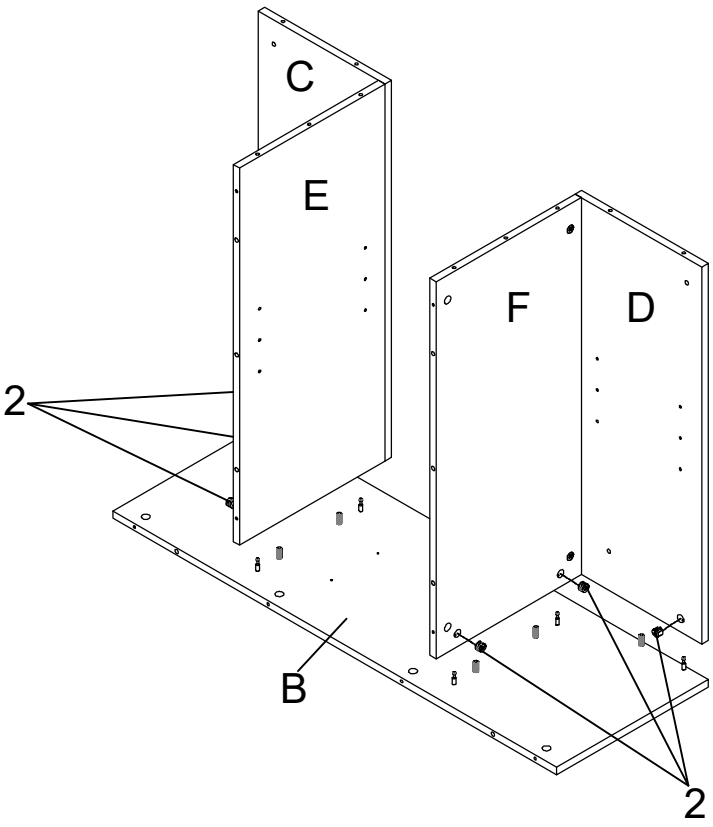

ITEM:182355

ASSEMBLY INSTRUCTIONS

STEP 5

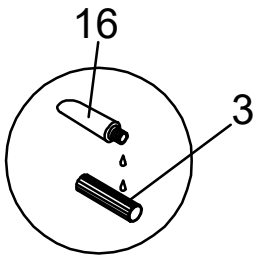

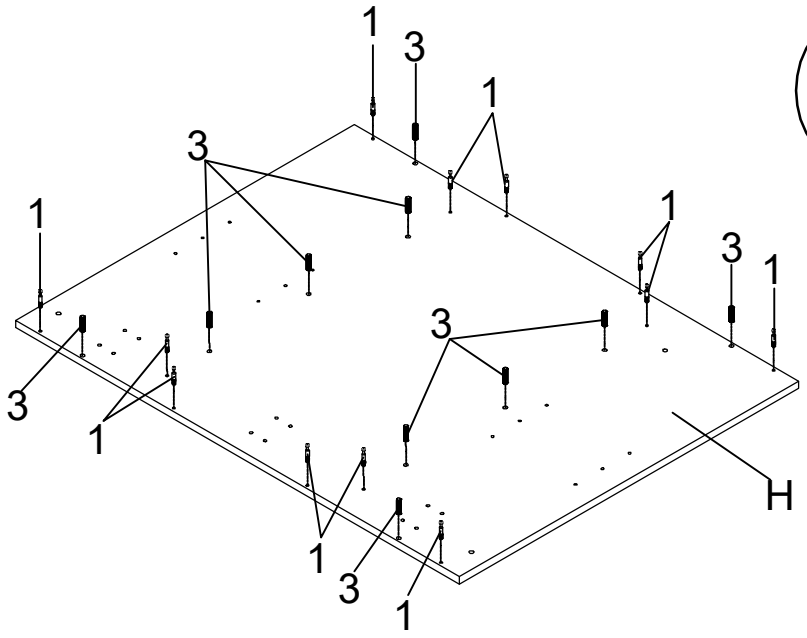

STEP 6

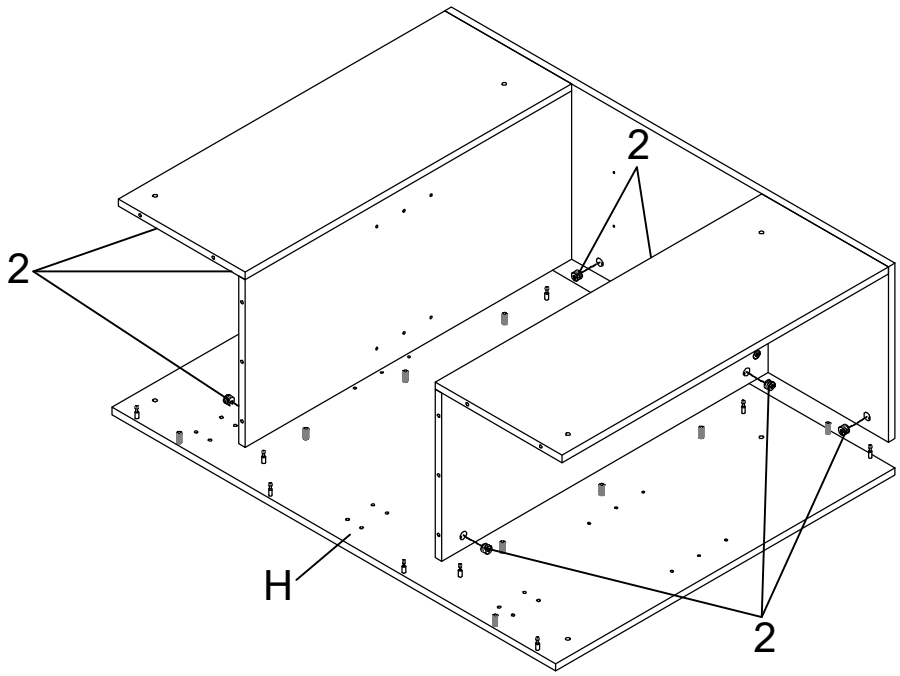

ITEM:182355

ASSEMBLY INSTRUCTIONS

STEP 7

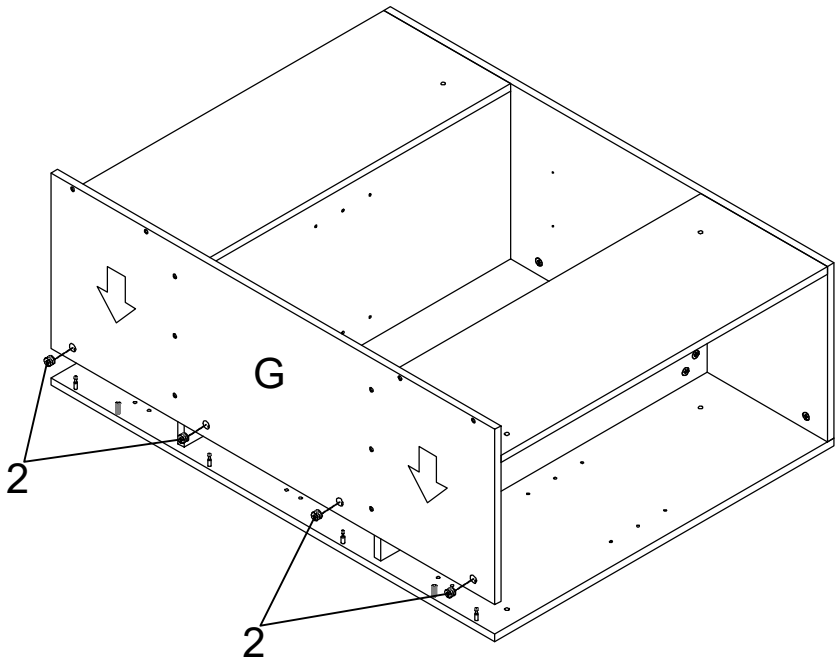

STEP 8

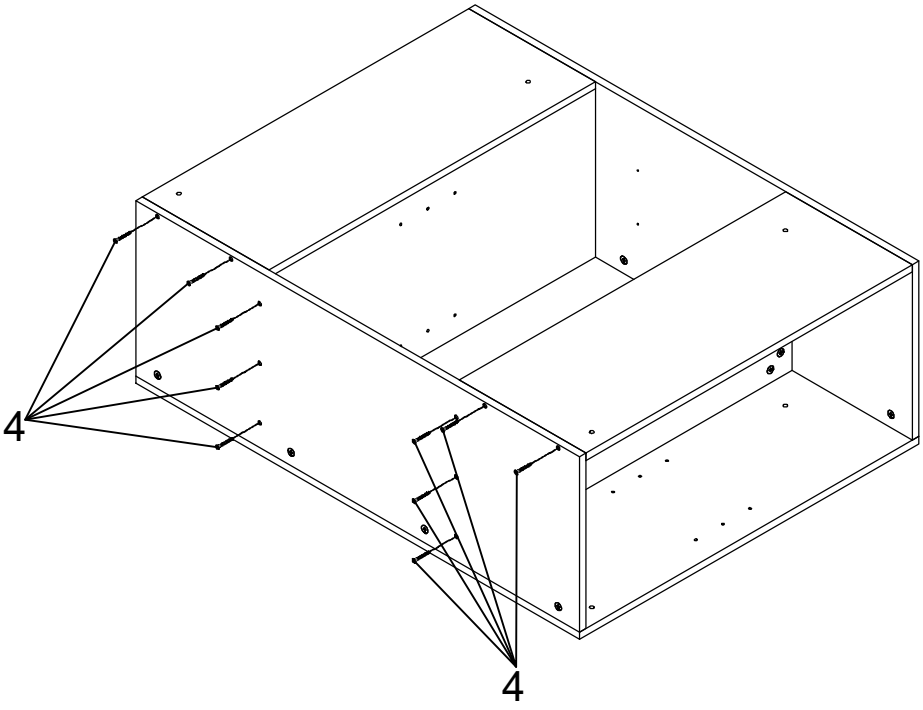

ITEM:182355

ASSEMBLY INSTRUCTIONS

STEP 9

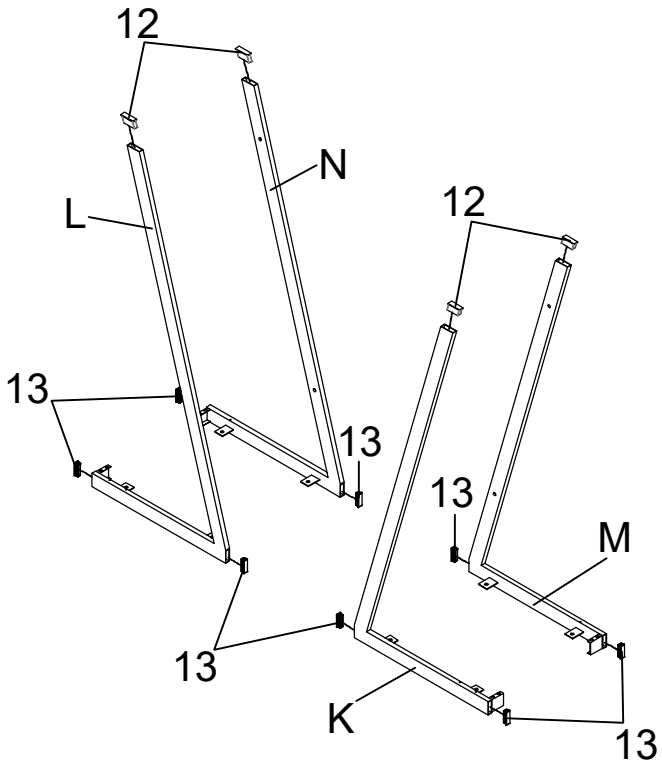

STEP 10

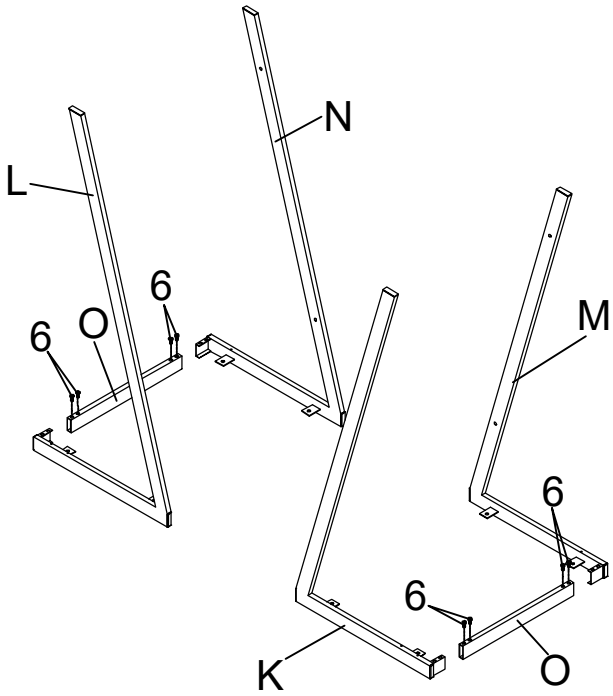

ITEM:182355

ASSEMBLY INSTRUCTIONS

STEP 11

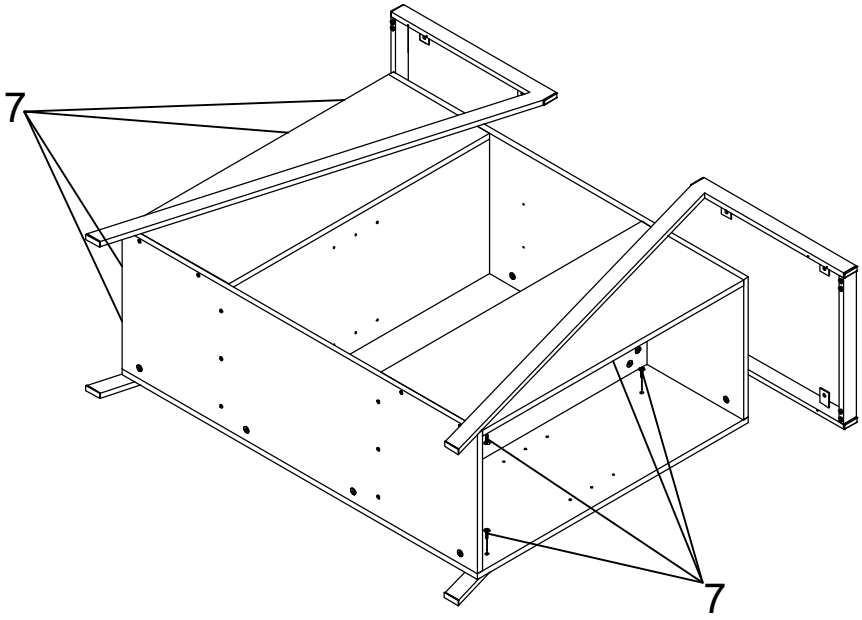

STEP 12

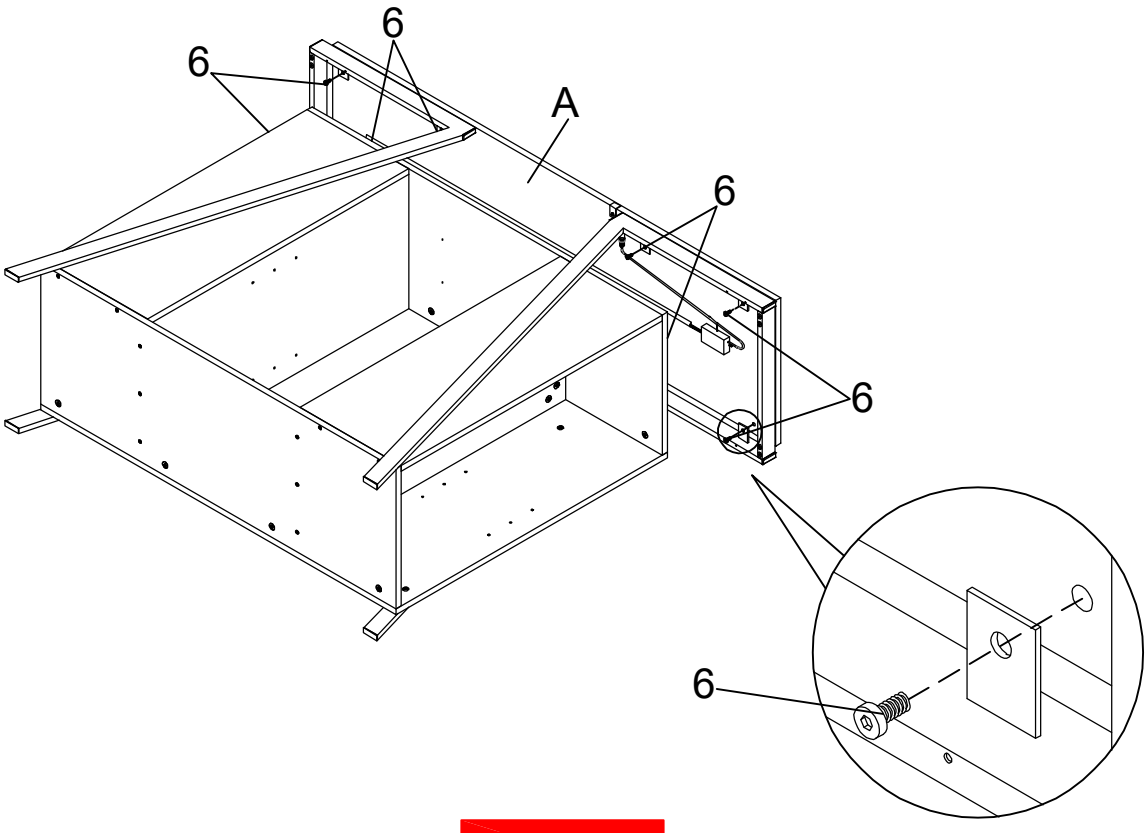

ITEM:182355

ASSEMBLY INSTRUCTIONS

STEP 13

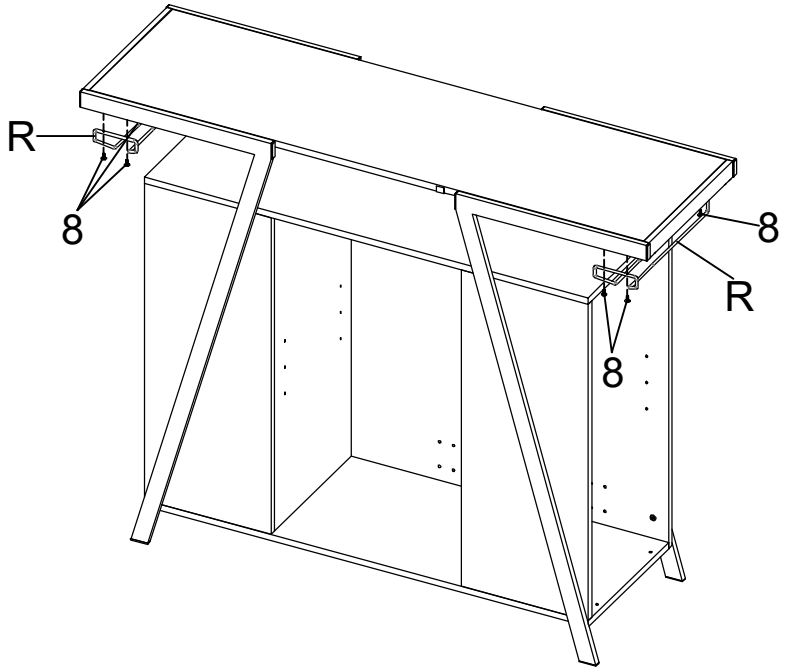

STEP 14

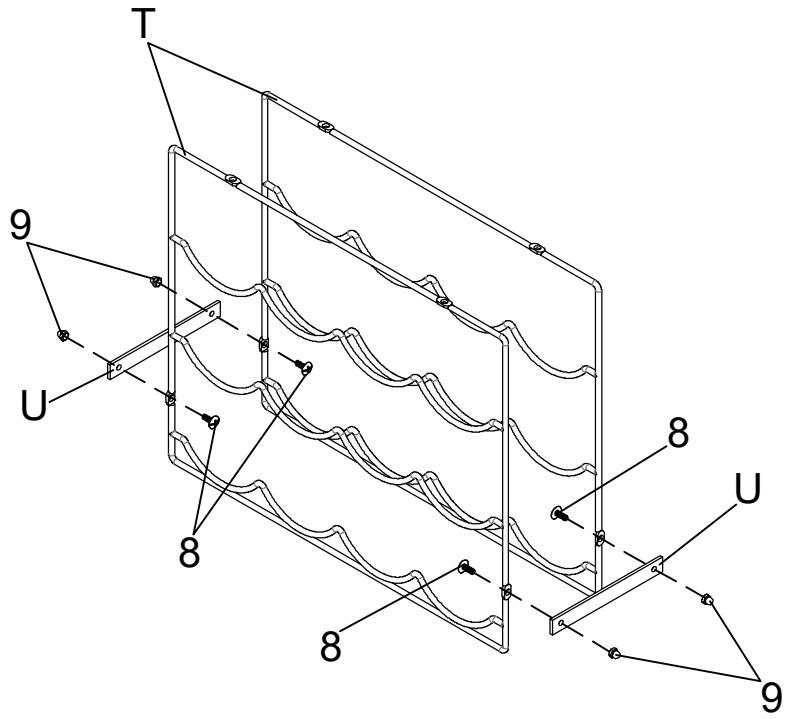

ITEM:182355

ASSEMBLY INSTRUCTIONS

STEP 15

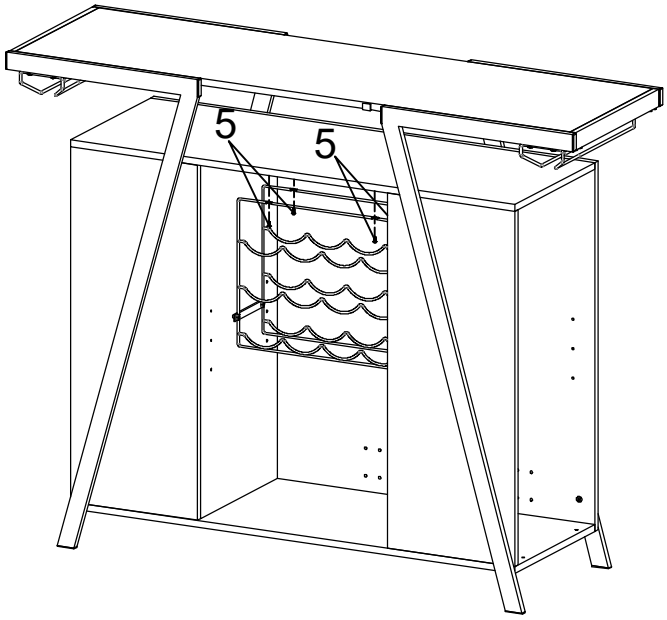

STEP 16

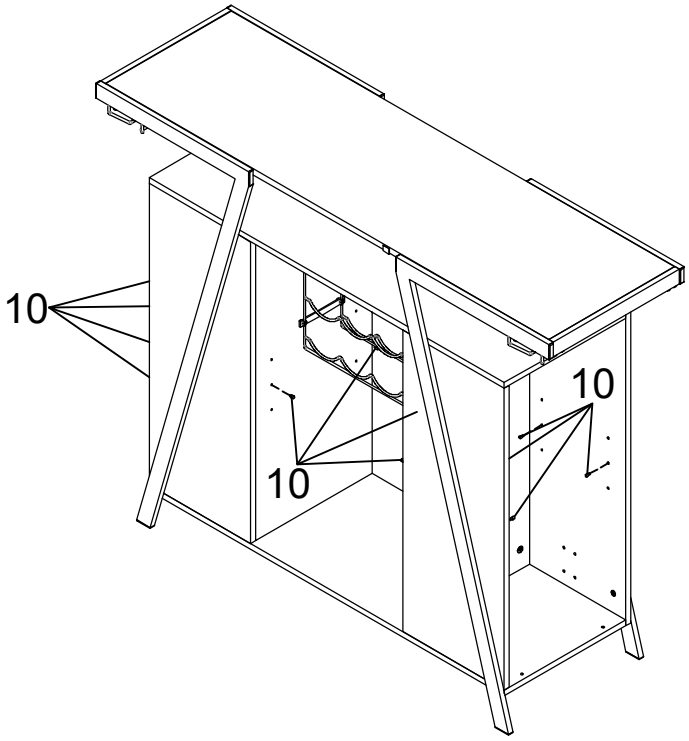

ITEM:182355

ASSEMBLY INSTRUCTIONS

STEP 17

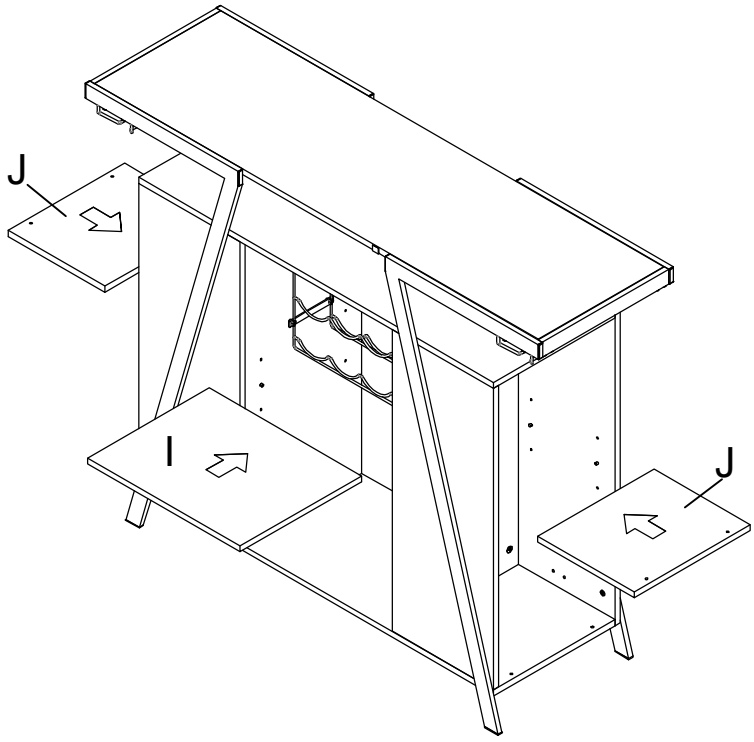

STEP 18

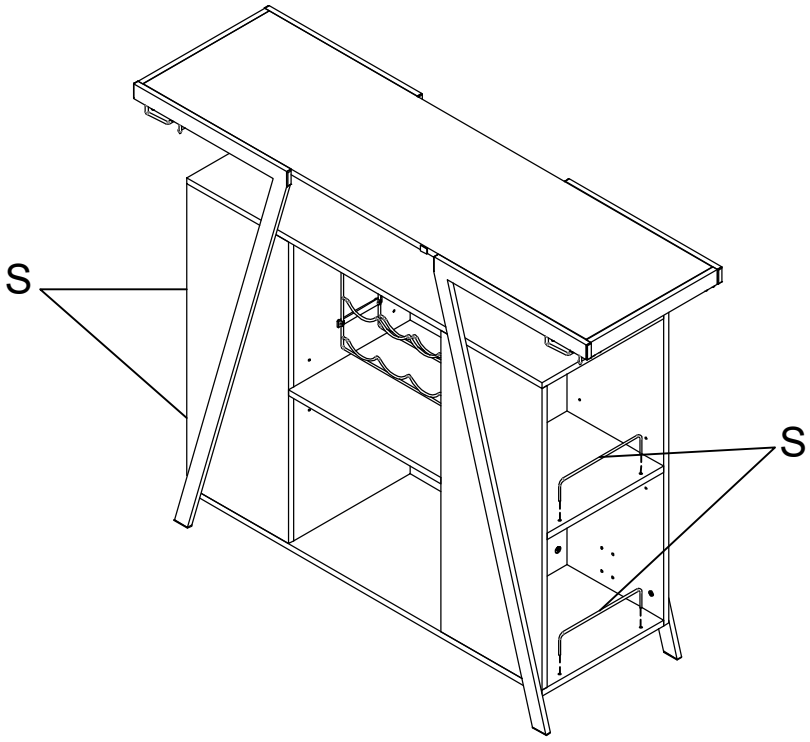

ITEM:182355

ASSEMBLY INSTRUCTIONS

STEP 19

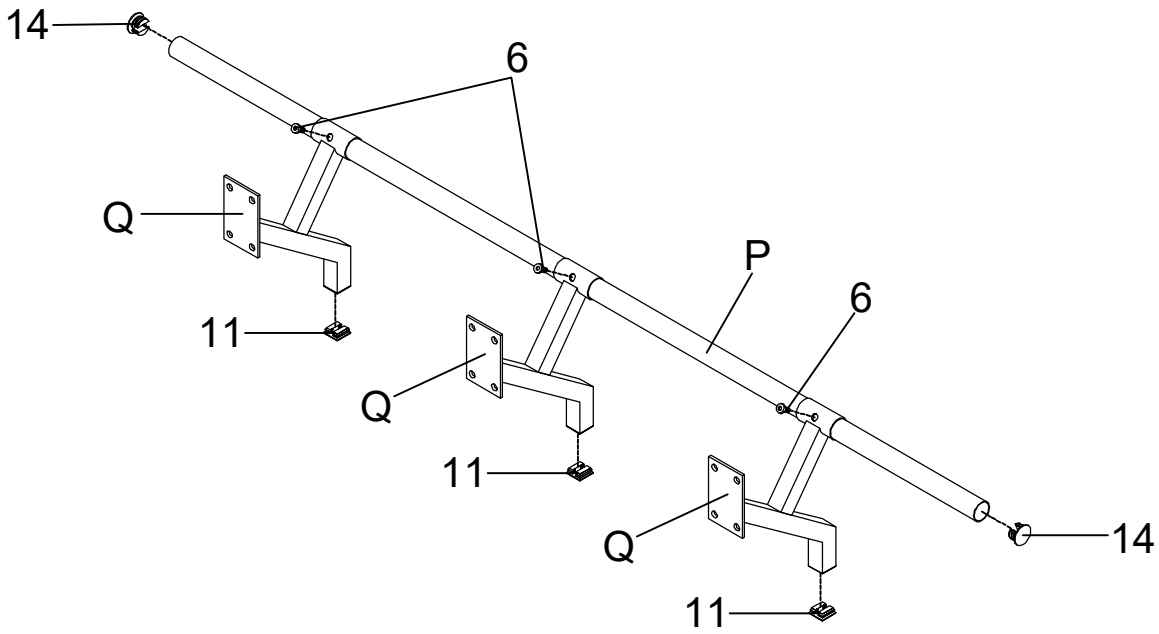

STEP 20

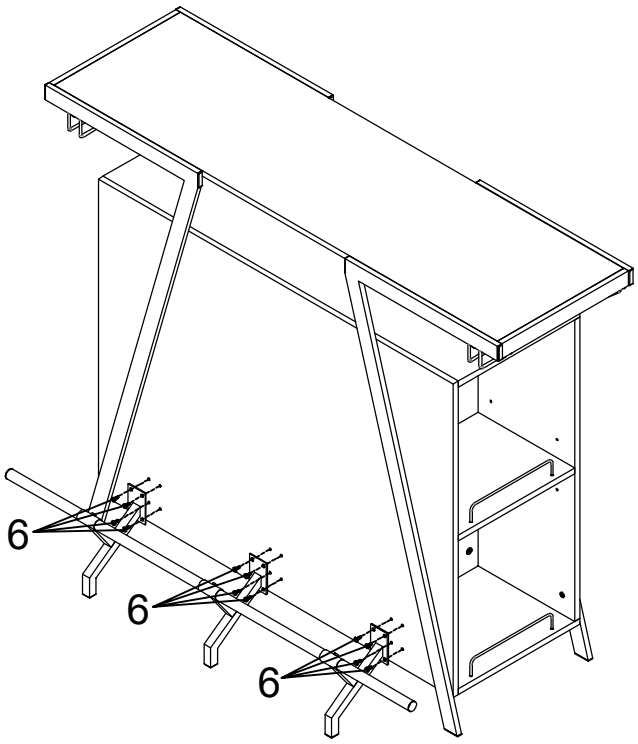

ITEM:182355

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

STEP 21

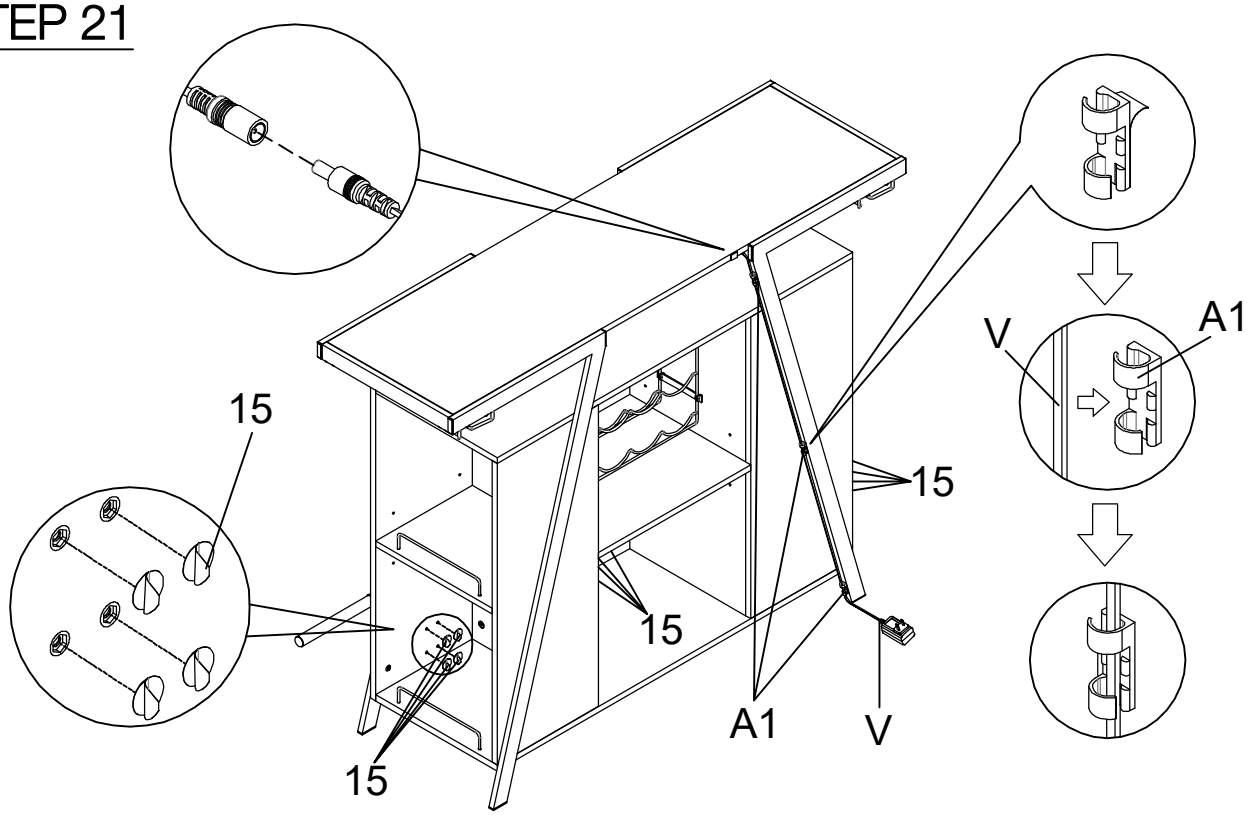

STEP 22
COMPLETE

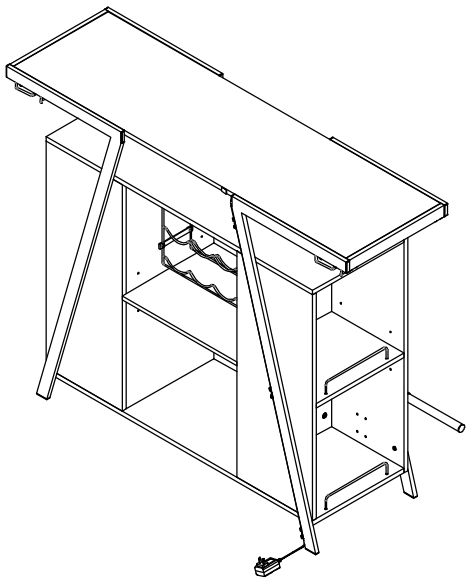

LED light operation guide

- Connect the power source using the provided cable
- Touch the metal plate to activate the LED lights
- Color Mode-Light blue purple, orange, red, yellow, green, light blue, dark blue, and purple
- Press once to change color
- Long Press to adjust the brightness
- Continue cycle through for twinkle light speed

ITEM:182355
ASSEMBLY INSTRUCTIONS

Product Size : 1327 X 540 X 1060 H (MM)
Product Size : 52.25" X 21.25" X 41.5"

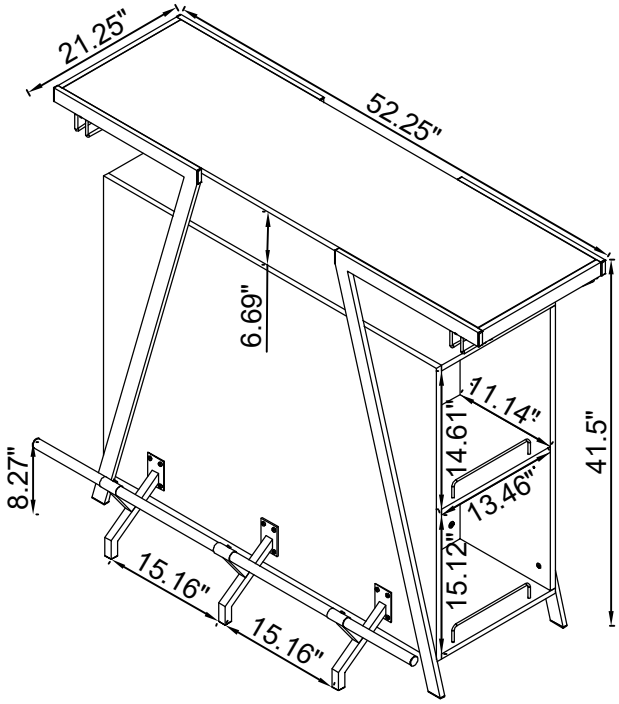

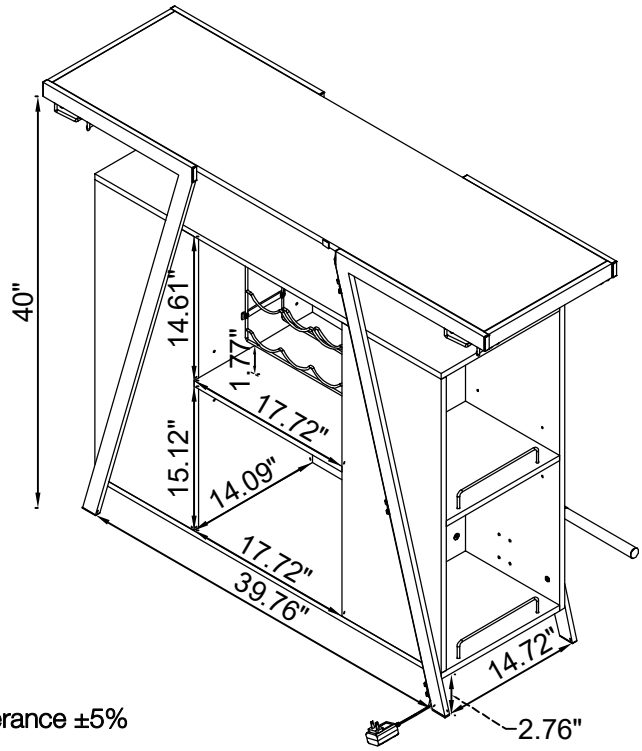

Note : Dimension tolerance ±5%