



ASSEMBLY INSTRUCTIONS *COASTER FINE FURNITURE*



Fine Furniture for every stage of life

108112
Side Chair

ITEM: **108112**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!





1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.










ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

| | | | |
|---|--------------|--|------|
| A | BACK FRAME |  | 1PC |
| B | SEAT FRAME |  | 1PC |
| C | FRONT LEG |  | 2PCS |
| D | SEAT CUSHION |  | 1PC |

HARDWARE IDENTIFICATION

| | | | |
|---|--------------------------------------|--|-------|
| 1 | ALLEN WRENCH (M4 x 65mm - BLK) |  | 1PC |
| 2 | LONG BOLT (M6 x 80mm - BLK) |  | 4PCS |
| 3 | MEDIUM BOLT (M6 x 60mm - BLK) |  | 4PCS |
| 4 | SHORT BOLT (M6 x 35mm - BLK) |  | 3PCS |
| 5 | LOCK WASHER (M6 x 11 x 1.5 - BLK) |  | 11PCS |
| 6 | FLAT WASHER (M6 x 19 x 1.0 - BLK) |  | 11PCS |
| 7 | FLAT HEAD SCREW (M4 x 30mm - BLK) |  | 4PCS |

NOTE:

Quantities shown are for one chair.


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **108112**




ASSEMBLY INSTRUCTIONS

STEP 1

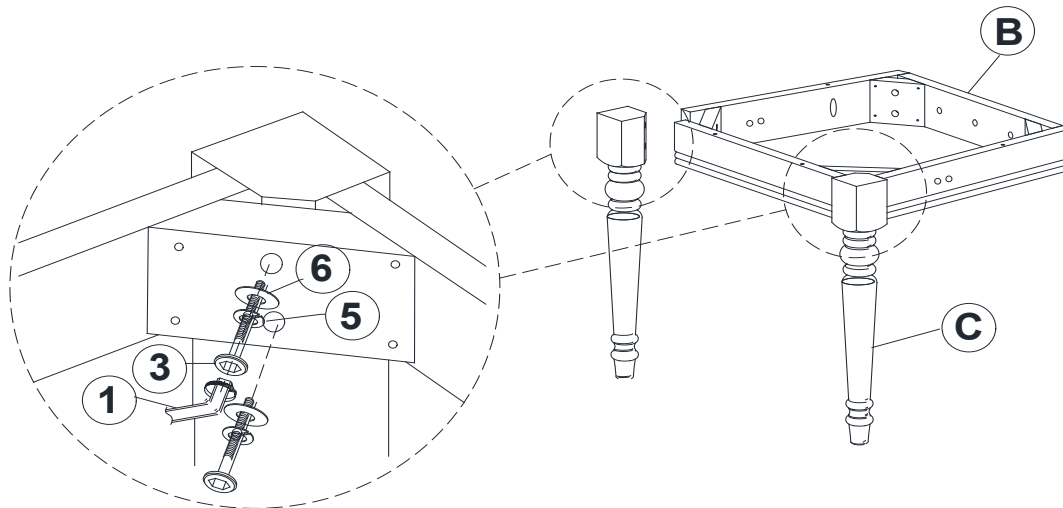

STEP 2

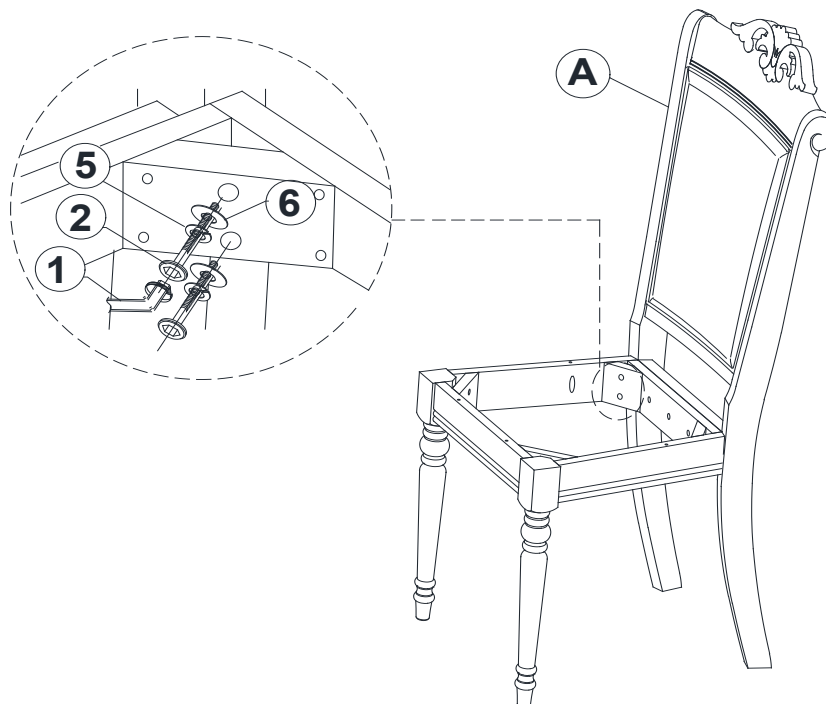


ITEM: **108112**




ASSEMBLY INSTRUCTIONS

STEP 3

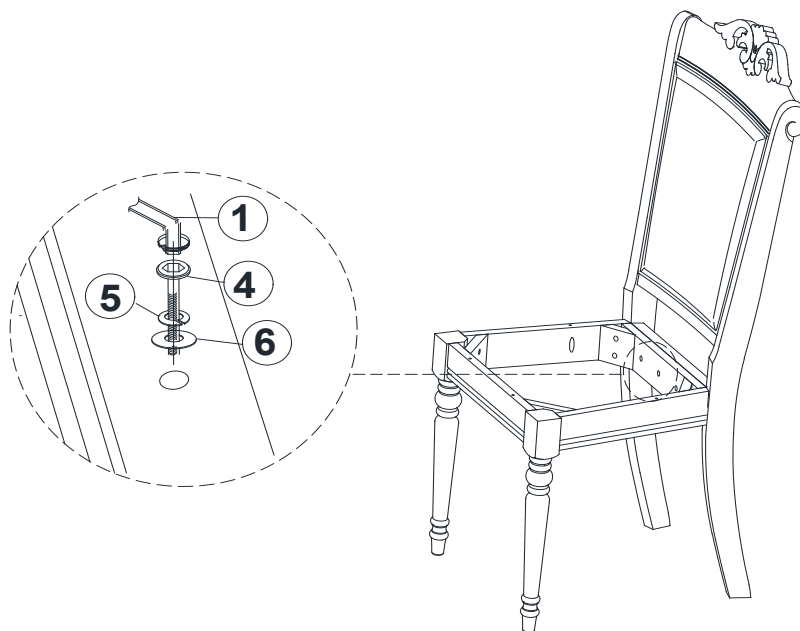


STEP 4

COMPLETE

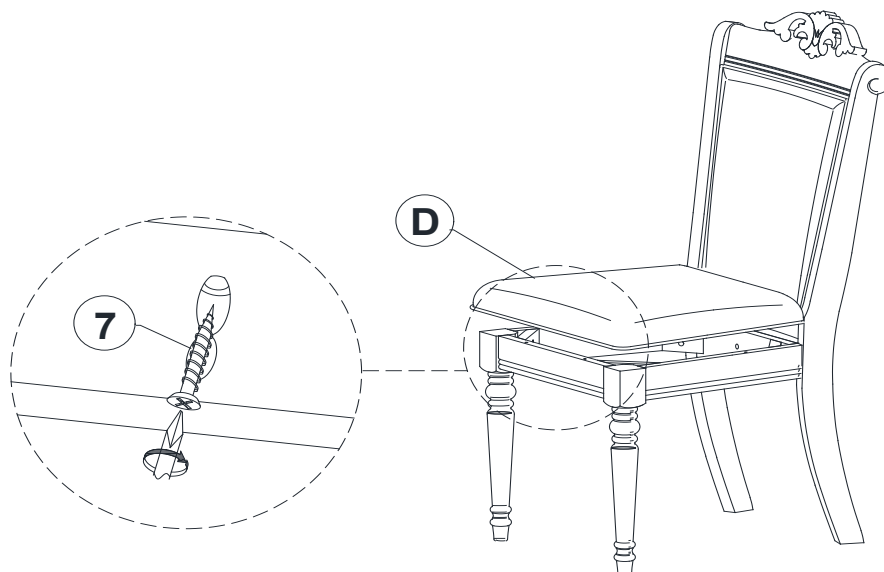

ITEM: **108112**

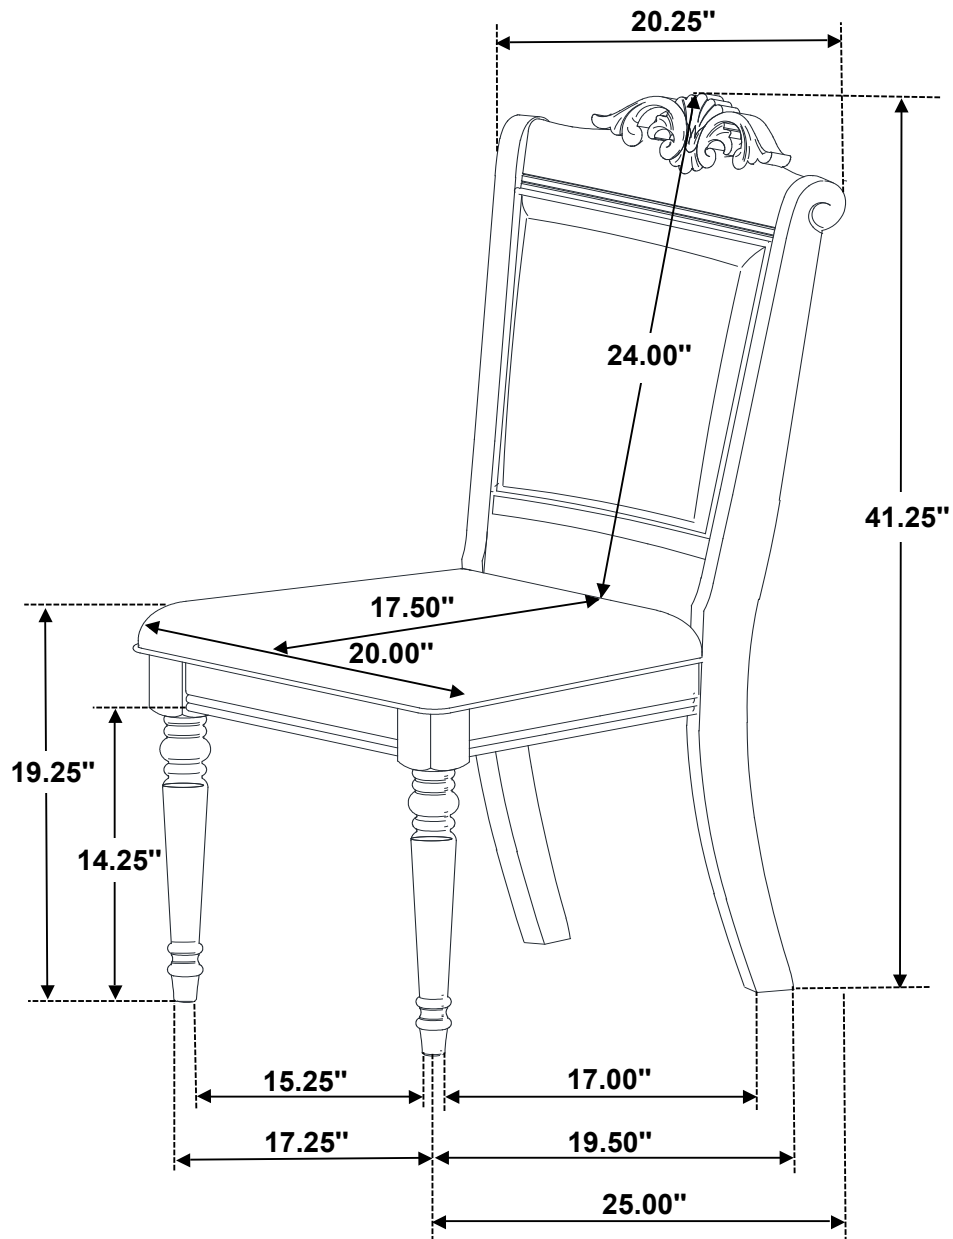

Note : Dimension tolerance $\pm 5\%$